Seem® 1 Acoustic Louver

ASM1CS | ASM1CBS | AUSM1S

AirCore® Technology | ID™ Technology





BEFORE YOU BEGIN

- Configurations are run specific, please consult factory drawings before beginning installation.
- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF



POWER ON

COMPONENT KEY

FOCAL POINT

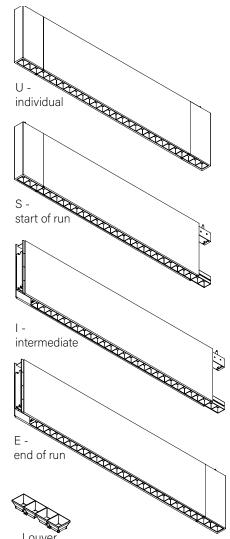

SHIPPED INSTALLED



Access Cover Screw (72026)

SHIPPED IN HARDWARE BAG









#1 PHILLIPS DRIVER BIT NECESSARY FOR INSTALLATION OF JOINED RUNS


FOR ALTERNATE CEILING INSTALLATIONS SEE PAGES 3-4


INDIVIDUAL UNITS CANNOT BE JOINED IN THE FIELD


UNITS CANNOT BE CUT TO LENGTH IN THE FIELD

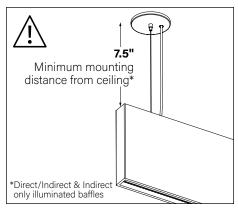


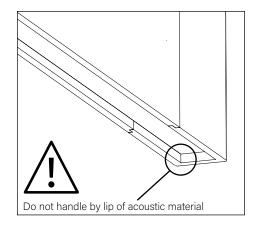


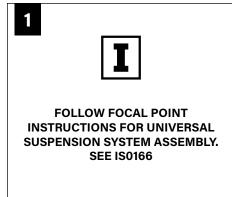


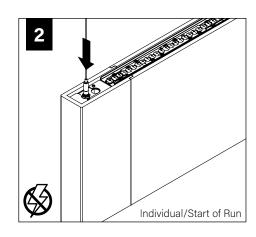

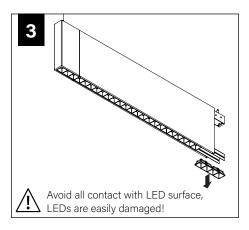


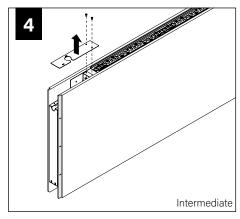


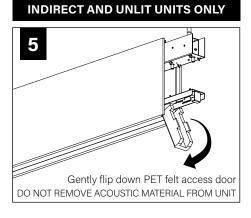


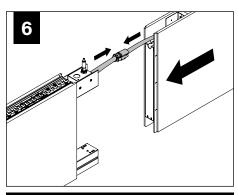



MAKE ELECTRICAL CONNECTION

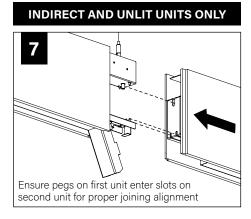


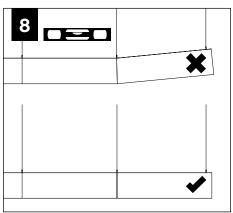


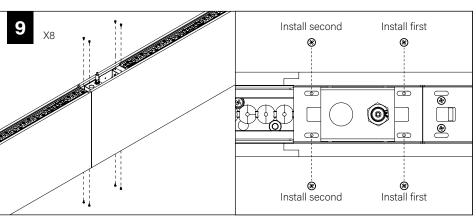


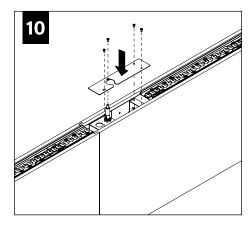


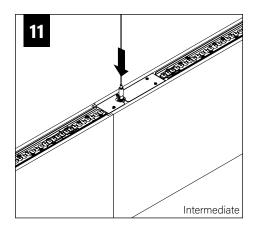

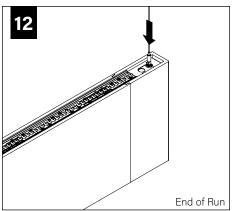


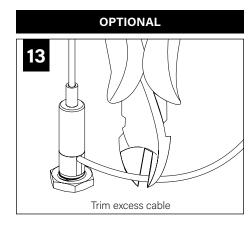


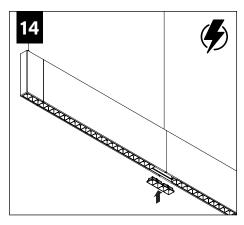


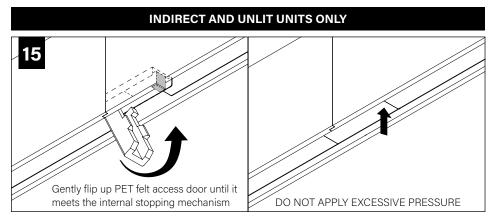


CEILING STRUT INSTALLATION

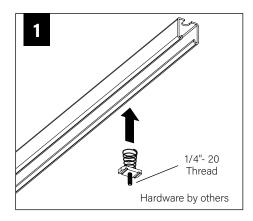


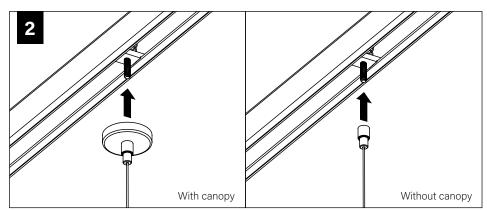


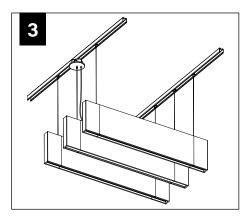

DRYWALL/HARD SURFACE CEILING INSTALLATION

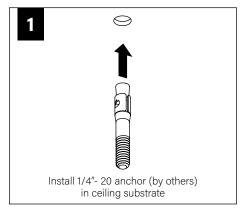


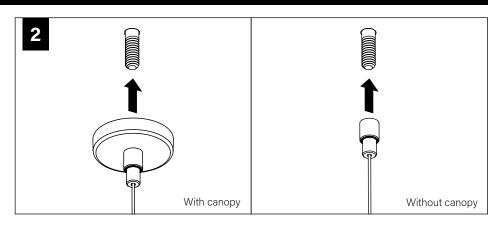


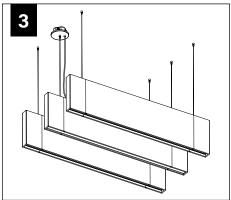


GRID CEILING INSTALLATION



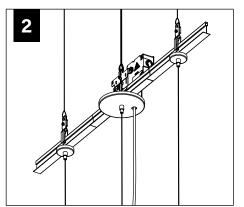


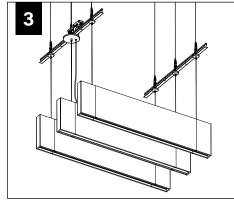


DRIVER SERVICE

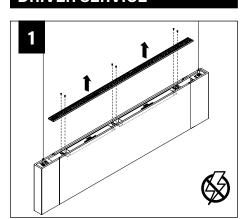

LOUVER OPTIC WITH ID+™ TECHNOLOGY INSTALLATION

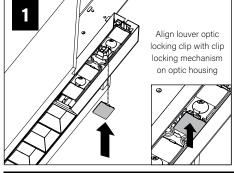

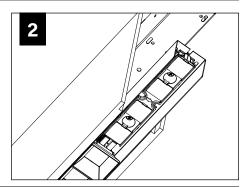

OPTIC COMPONENTS ARE DIRECTIONALLY SENSITIVE. IF A LOUVER OPTIC BECOMES DISLODGED, IT MUST BE REINSTALLED IN THE CORRECT ORIENTATION TO OPERATE PROPERLY.