# id+4.5" & 6" square housing

FLC44D | FLC44W | FLC66D | FLC66W

 


 


## LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING. ALL GRID LUMINAIRES MUST BE SECURED TO STRUCTURE ABOVE.



NON-EMERGENCY - THERMALLY PROTECTED, NON-IC





BAR HANGERS SOLD SEPARATELY

KEY





 







SEE ADDITIONAL INSTRUCTIONS

EMERGENCY - INTEGRAL TEST SWITCH



FLC44D | FLC44W

 

CP - EMERGENCY/NON-EMERGENCY

FLC44D | FLC44W


FLC66D | FLC66W


FLC44D | FLC44W | FLC66D | FLC66W







TO SET CEILING THICKNESS SEE FOCAL POINT INSTRUCTION SHEET IS0586

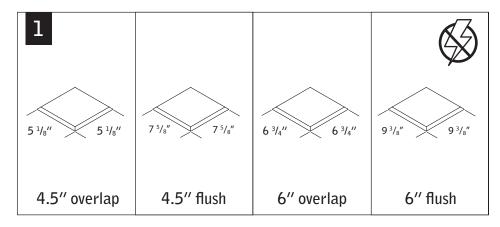

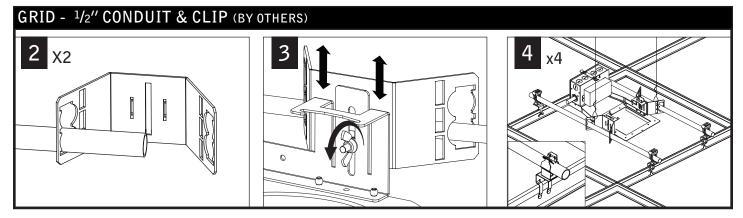

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation). To prevent electrical shock, disconnect electrical supply before installation or servicing.

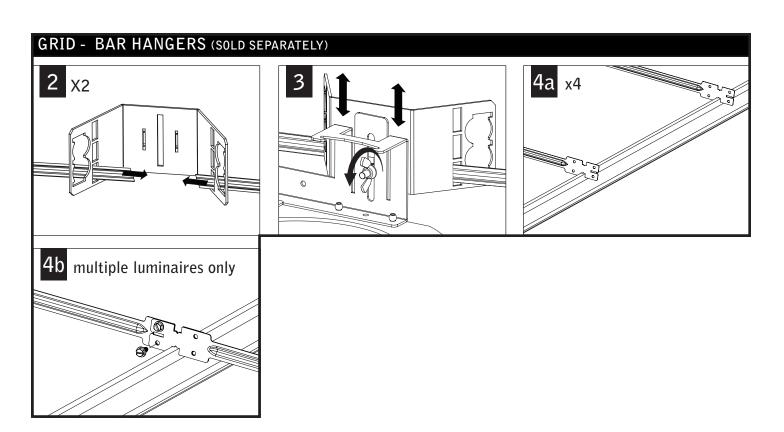


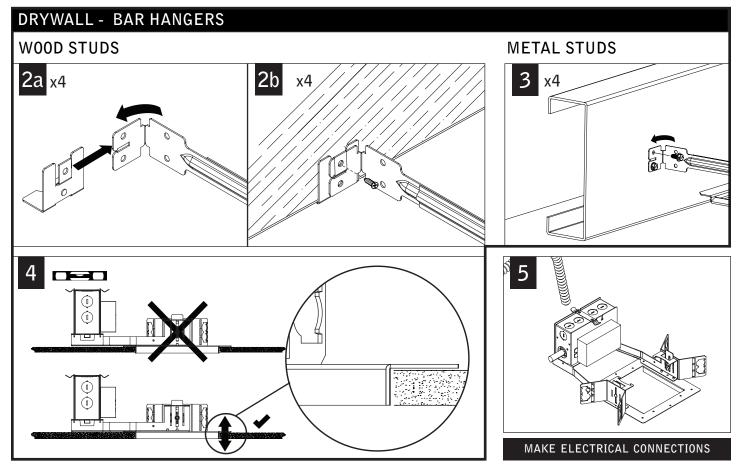



Fixtures must be installed by a qualified electrician (check with local and national codes for proper installation).

To prevent electrical shock, disconnect electrical supply before installation or servicing.


### **FLUSHTRIM MUD-IN**

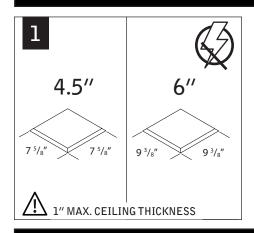


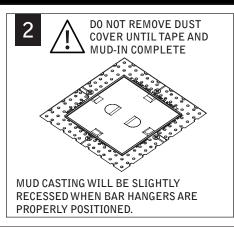


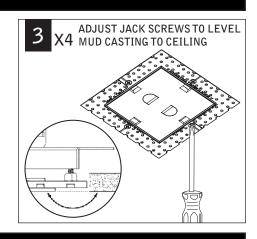

#### **EMERGENCY - INTEGRAL TEST SWITCH**

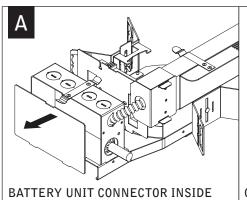

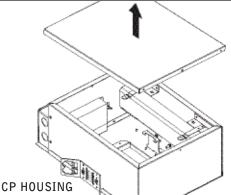

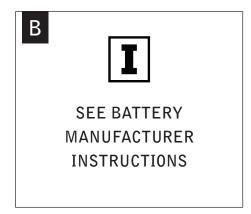






FOR EMERGENCY INTEGRAL
TEST SWITCH INSTALLATION
SEE FOCAL POINT
INSTRUCTION SHEET IS0586



DO NOT MATE CONNECTOR
UNTIL INSTALLATION
IS COMPLETE AND A.C.
POWER IS SUPPLIED

#### **DRIVER SERVICE**

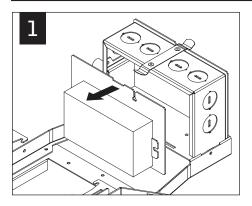

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings. The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.