

# Score™ 2 Suspended

FSC2S | FSC2BS | Remote Power



FOCAL POINT®



## BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

## INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



 
POWER OFF



POWER ON

## COMPONENT KEY

### FOCAL POINT

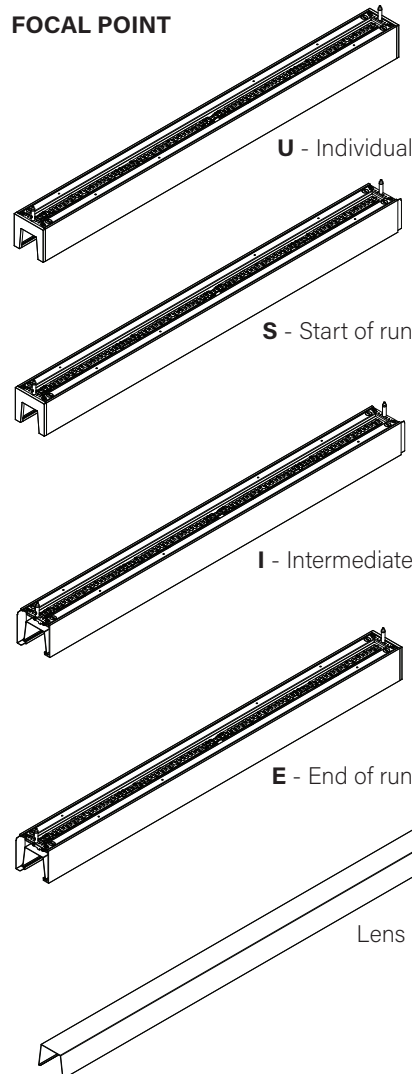


### SHIPPED INSTALLED



Light Blocker Bracket  
(A72120-01)
 
### SHIPPED IN PARTS BAG




Joiner Bracket  
(A72280-01)




Joiner Bracket  
Assembly Screw  
(72010)

### REMOTE POWER

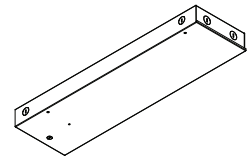 

Remote Box

 


Grid Bracket  
(A72466-01)




Grid Bracket Screw  
(72029)

## REMOTE POWER ROW MOUNTING

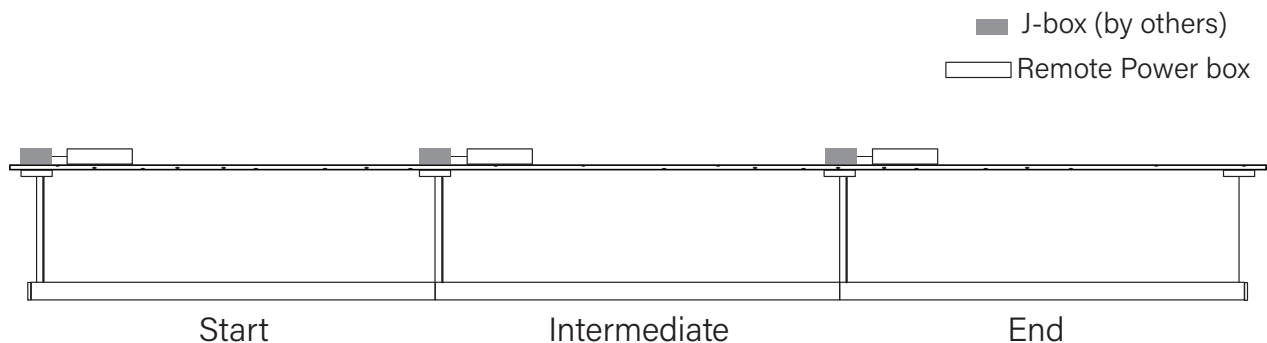 


# REMOTE BOX - SURFACE MOUNT

 1

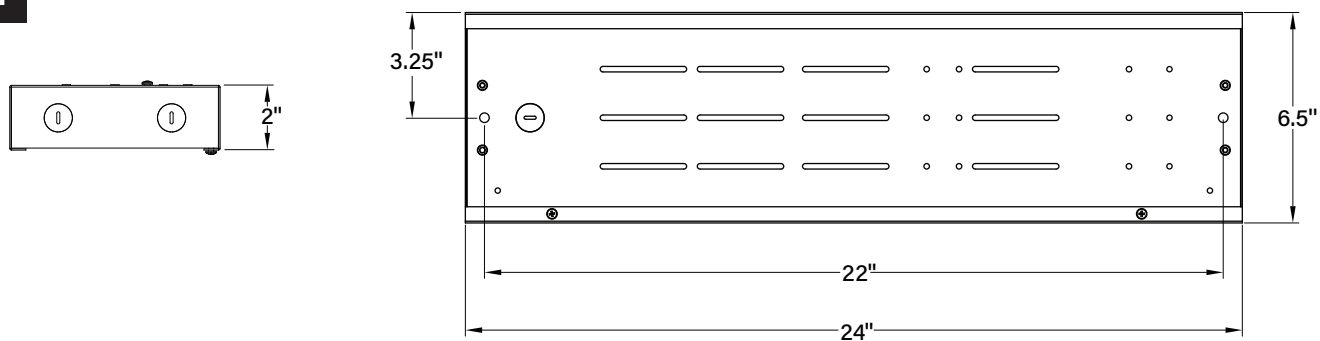


CONSULT TABLE ON PAGE 5 FOR MAXIMUM DRIVER-TO-J-BOX WIRE LENGTH

 
2

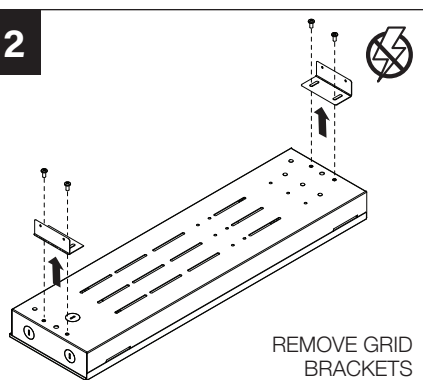


3

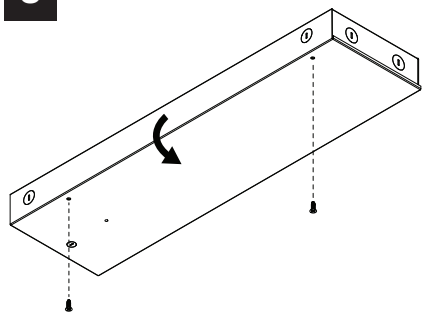 


4

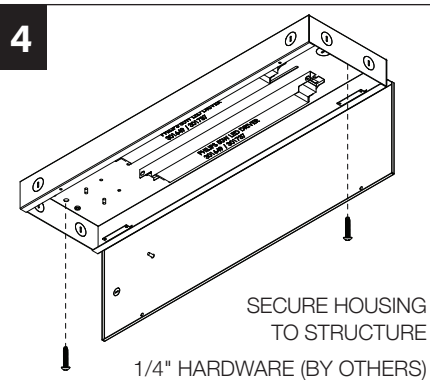 


5

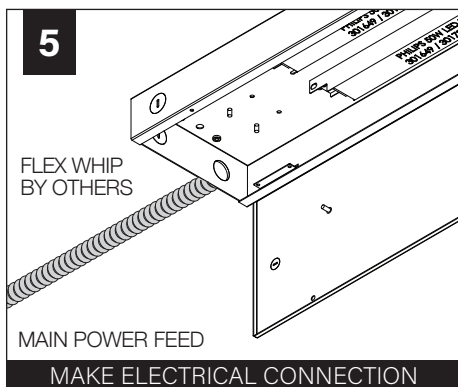 


6

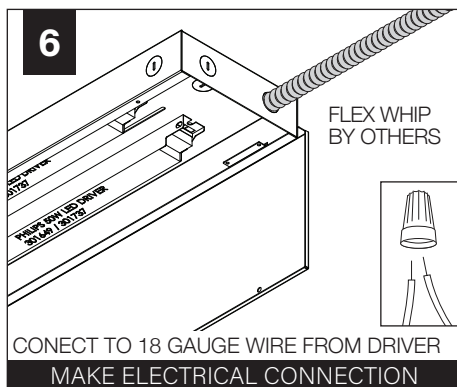 

7

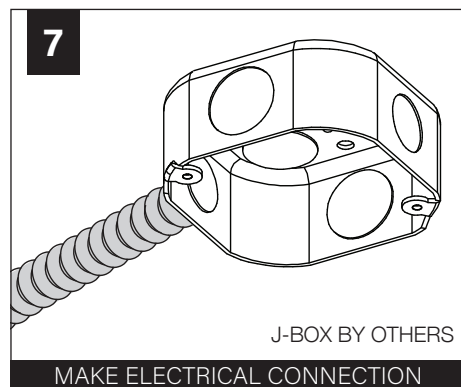 


8

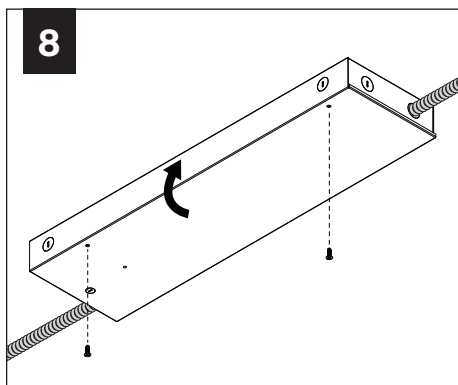 


## DRIVER SERVICE

 1

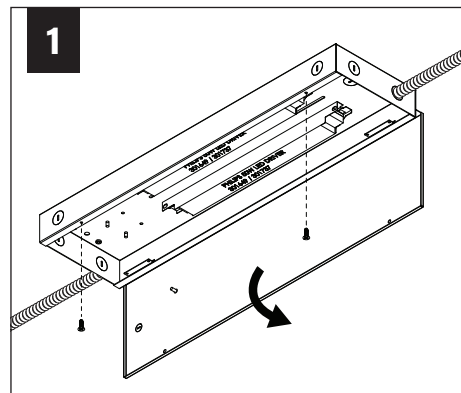


## REMOTE BOX - GRID

 1




CONSULT TABLE ON PAGE 5 FOR MAXIMUM DRIVER-TO-J-BOX WIRE LENGTH

 
2

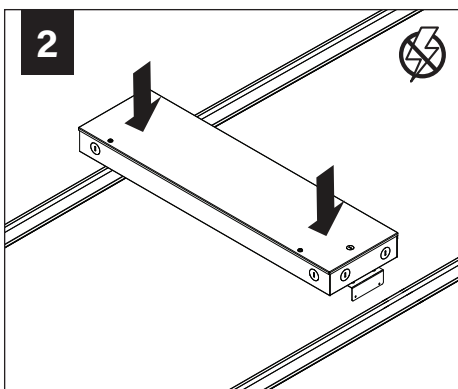


3

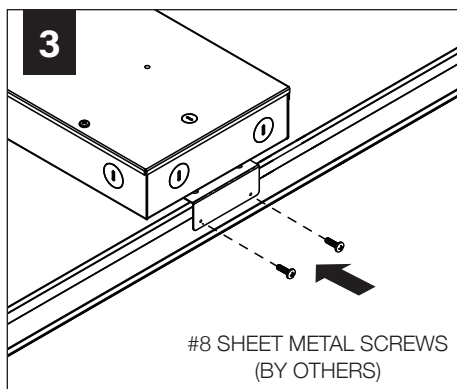 


4

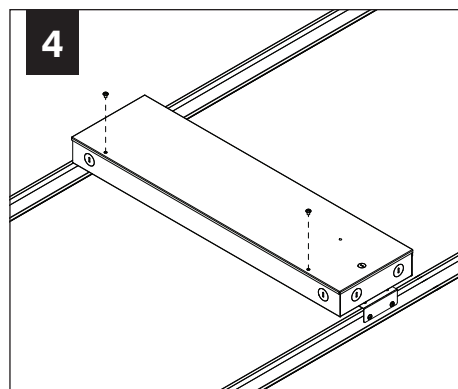 


5

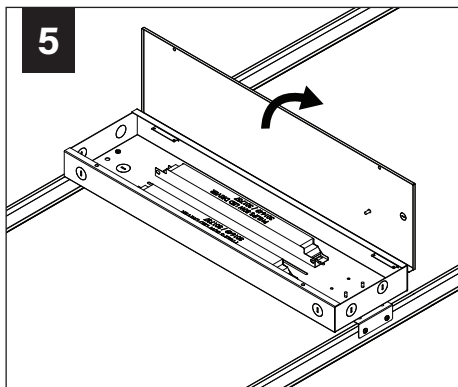 


6

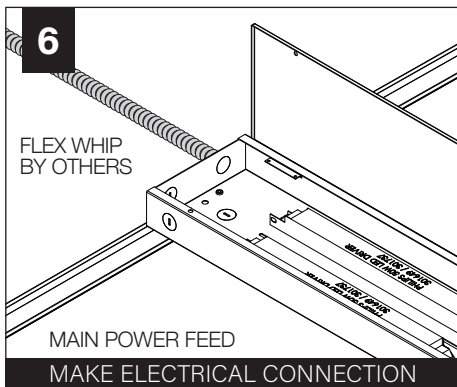 


7

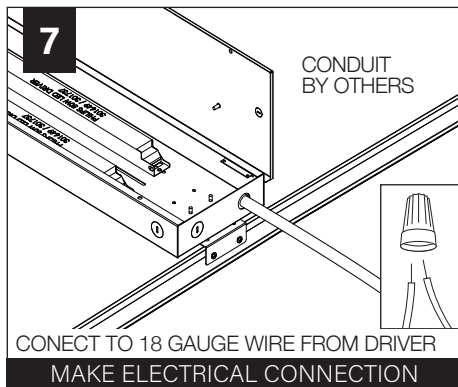 

8

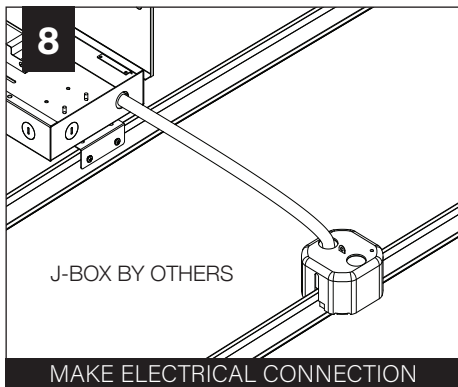 


9

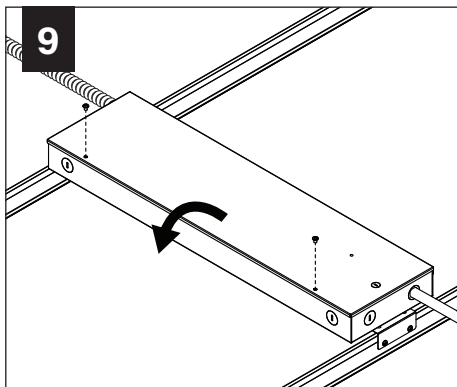 

## DRIVER SERVICE

 1

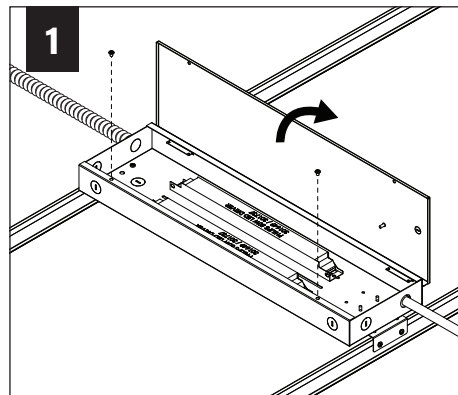




## INDIVIDUAL INSTALLATIONS FOLLOW STEPS 1-3

1




Follow Focal Point instructions for  
Universal Suspension System assembly.  
**See ISO166**

 2

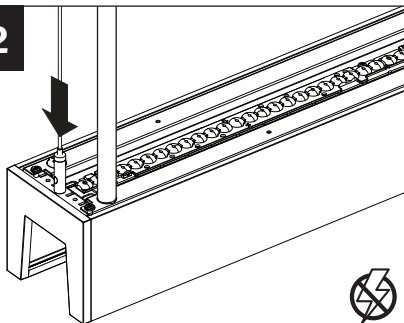


Two cable grippers each for individual and  
start, one for intermediate and end housings.

 3

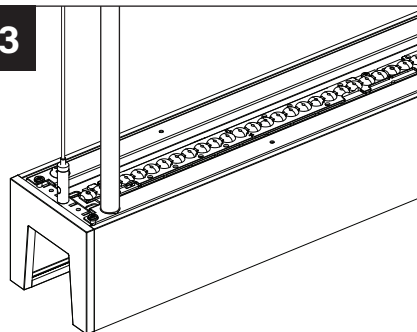


MAKE ELECTRICAL CONNECTION

 4

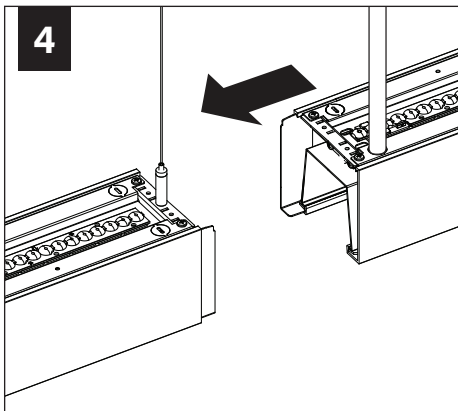


5

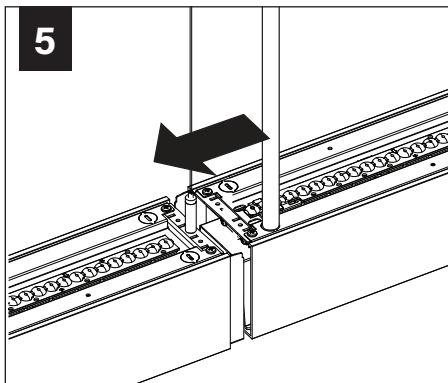 

MAKE ELECTRICAL CONNECTION

 6

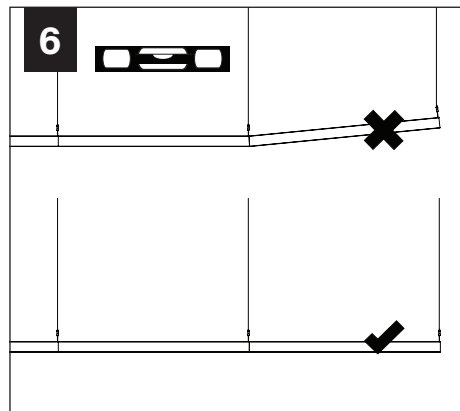


7


x2



 DO NOT  
OVERTIGHTEN

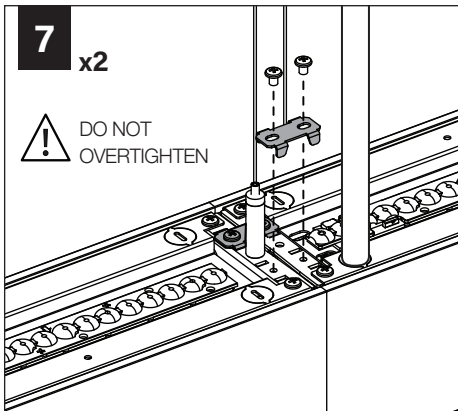

8

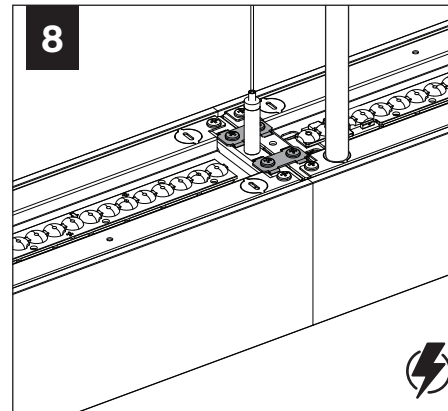 

| MAXIMUM DRIVER-TO-J-BOX WIRE LENGTH |                              |            |             |             |             |
|-------------------------------------|------------------------------|------------|-------------|-------------|-------------|
| Wire Guage                          | Maximum Remote Distance (ft) |            |             |             |             |
|                                     | 5-23W*                       | 23-45W     | 45-68W      | 68-90W      | 90-113W     |
|                                     | 100-500mA                    | 501-1000mA | 1001-1500mA | 1501-2000mA | 2001-2500mA |
| 18 AWG                              | 139                          | 60         | 34          | 21          | 13          |
| 16 AWG                              | 220                          | 96         | 54          | 34          | 21          |
| 14 AWG                              | 351                          | 153        | 86          | 53          | 34          |
| 12 AWG                              | 557                          | 242        | 138         | 85          | 54          |

Currents listed are driver output currents. Power listed is input power of driver. Use either output current or power to determine remote wiring length.