

Seem® 1 Point Source

Surface Mount | FSM1DS-SM

PL Preferred Light
Experience BETTER COLOR



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON

PRODUCT ID LOCATION

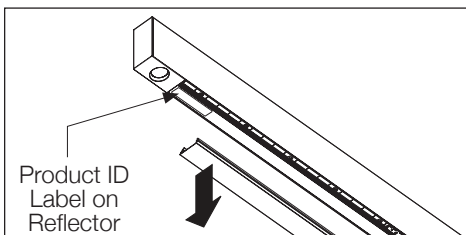


COMPONENT KEY

FOCAL POINT

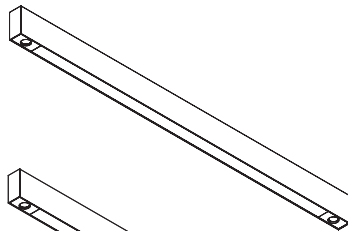


U - Individual

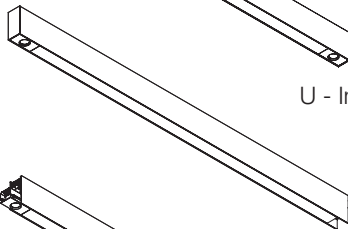


S - Start of Run



I - Intermediate

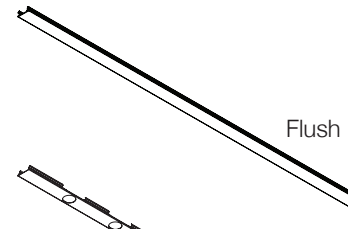

E - End of Run

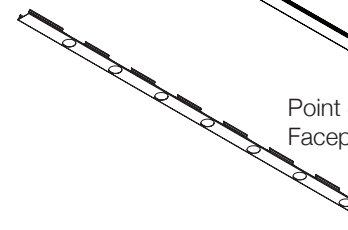


Flush Lens



Point Source Only
Faceplate


SHIPPED INSTALLED

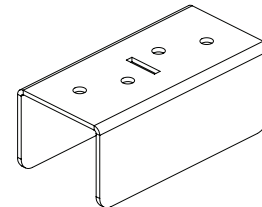

Joiner Bracket
(A37351-01)



Screw
(700192)

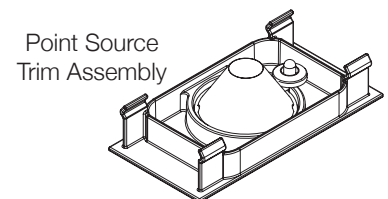


POINT SOURCE TRIM ASSEMBLY SHIPS INSTALLED IN SOME, BUT NOT ALL INSTANCES. COMPLETE INSTALL OF RUN PRIOR TO TRIM ASSEMBLY INSTALLATION.

SHIPPED IN HARDWARE BAG









Mounting Screw
(72007)
(2 per luminaire)








MOUNTING

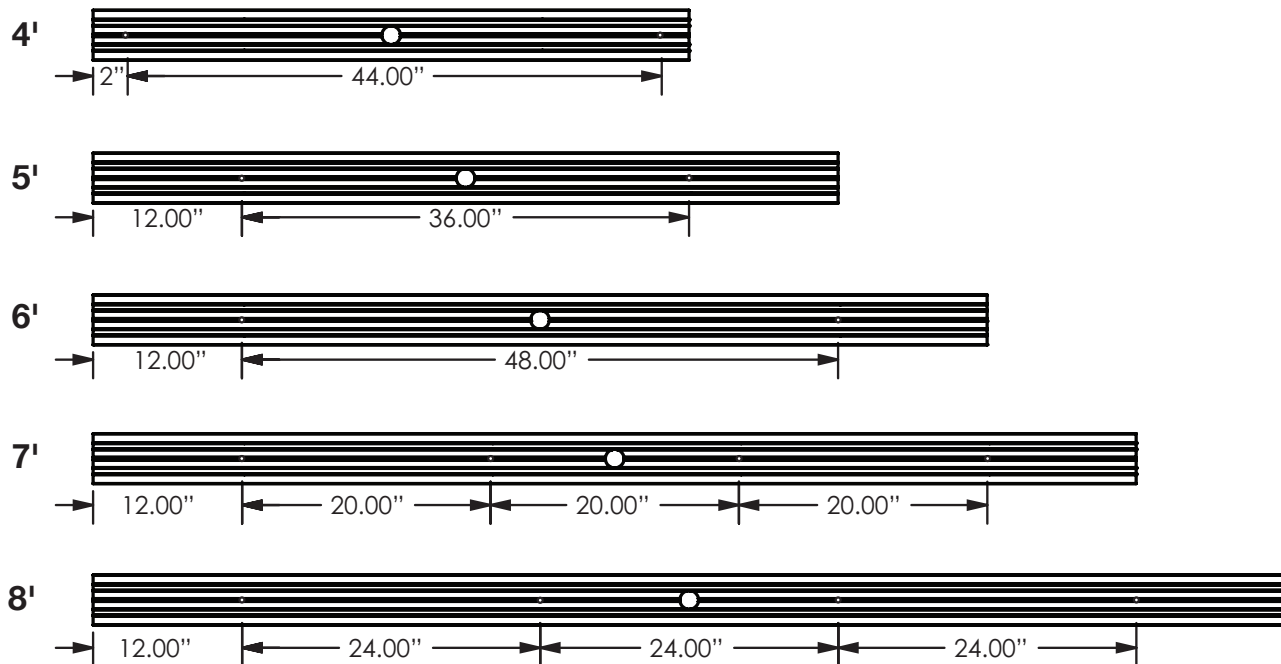



Feed location is always centered in housing, with the exception of the 2' housing. Use single device cover or single gang handy box and mounting hardware (by others)

⚠️ INDIVIDUAL INSTALLATIONS FOLLOW STEPS 1, 3, 6, 8 & 9

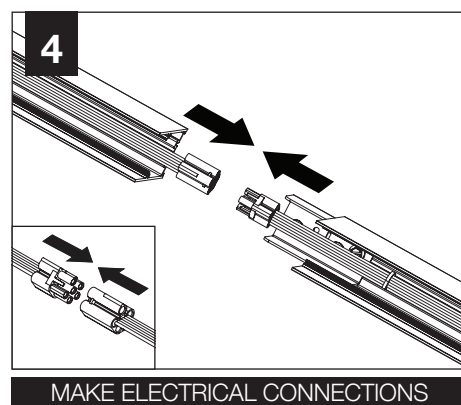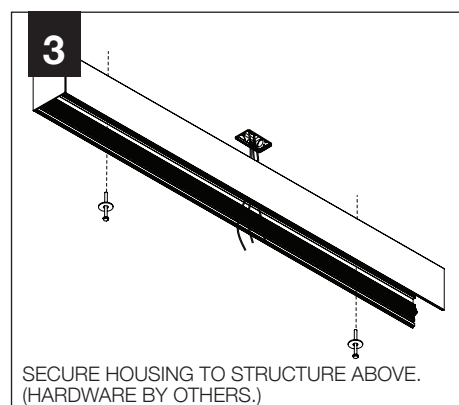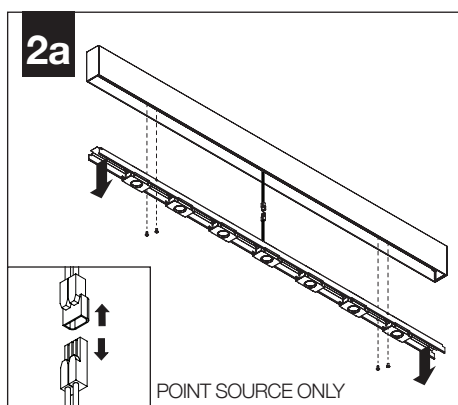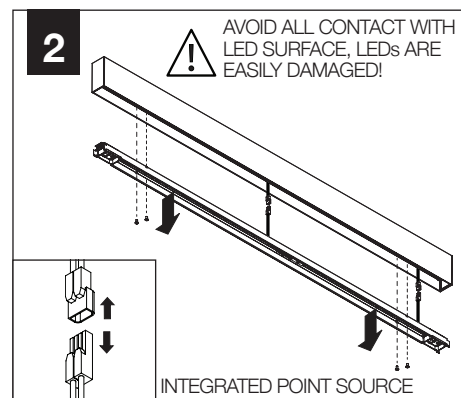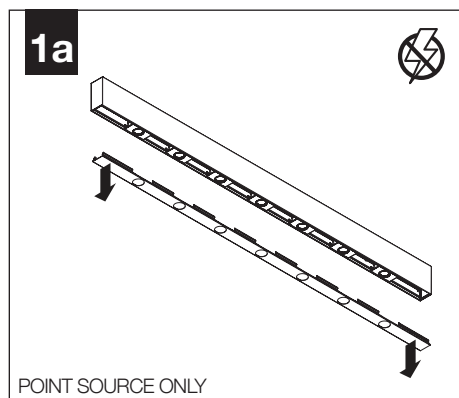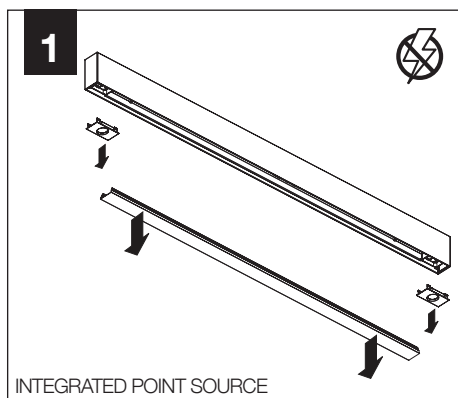

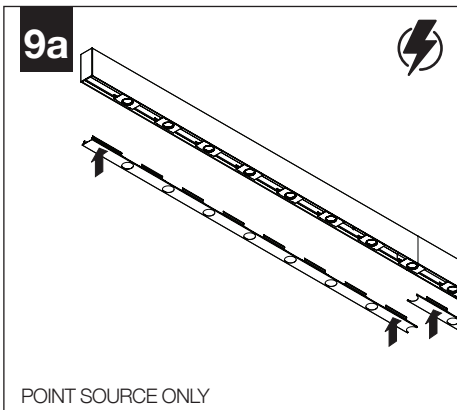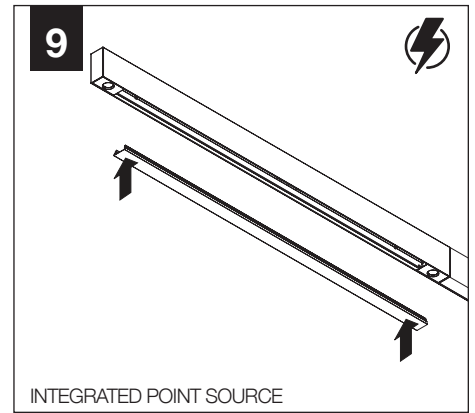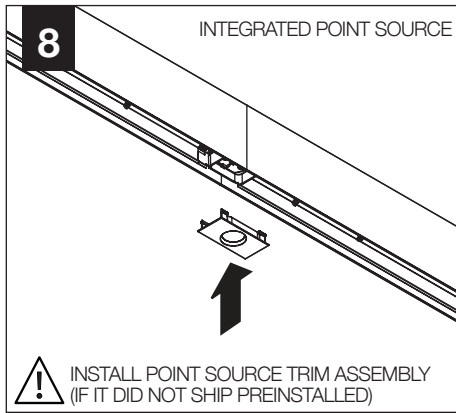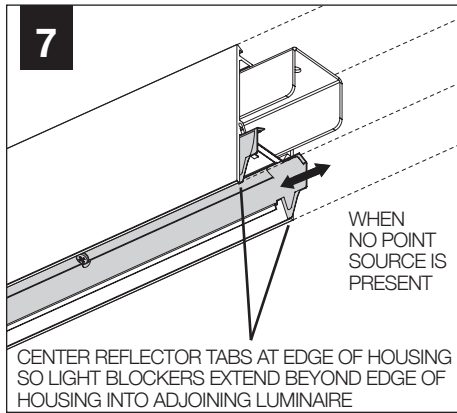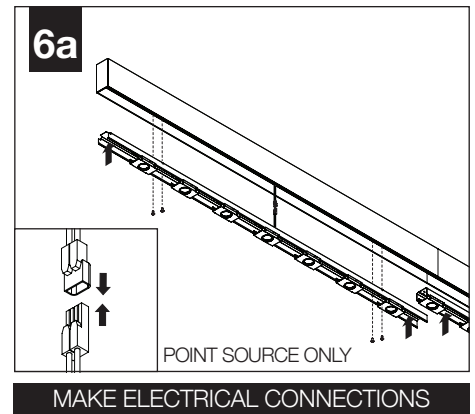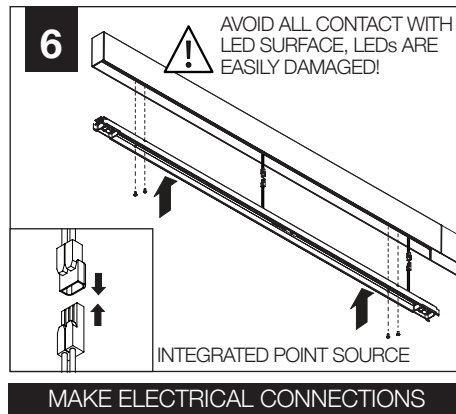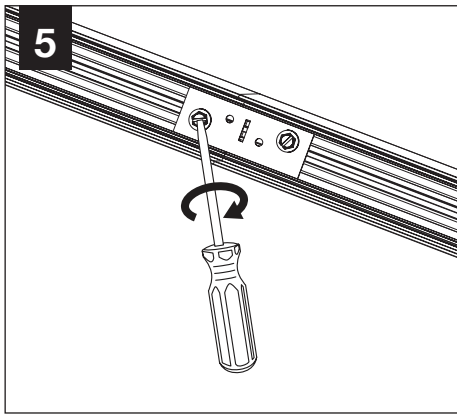

DRIVER SERVICE - INTEGRATED POINT SOURCE

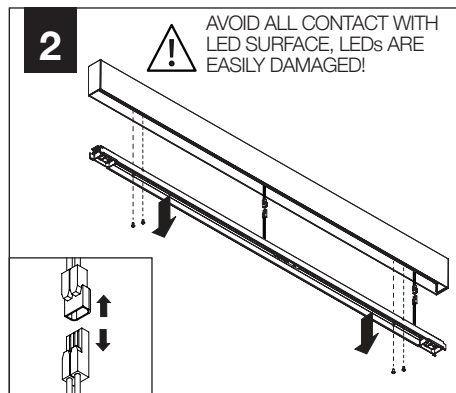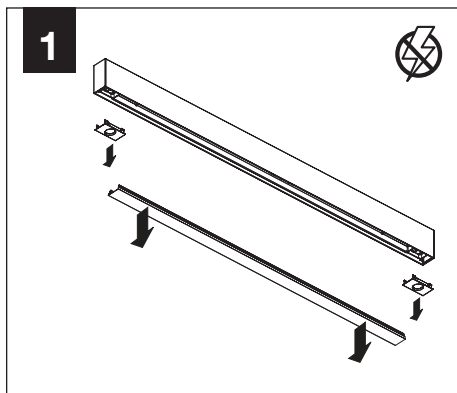

DRIVER SERVICE - POINT SOURCE ONLY

