

Seem® 4 LED Asymmetric

FSM4ALS-FFL-SM | Surface Mount



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF



POWER ON

FOCAL POINT


U - Individual Unit

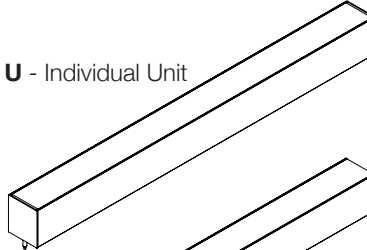


E - End Of Run



S - Start of Run

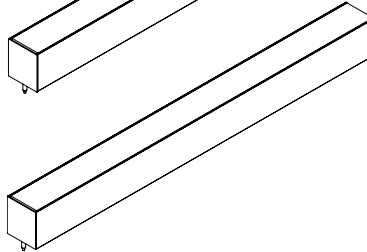

I - Intermediate

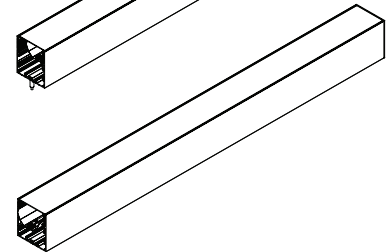

CONFIGURATIONS ARE RUN SPECIFIC, CONSULT FACTORY DRAWINGS BEFORE BEGINNING INSTALLATION.

PARTS LIST

 
SHIPPED IN HARDWARE BAG



Reflector Screw (70008)
(6-32 X 5/16 Pan-Head Machine Screw)



Cable Gripper
(73014) &
Nylon Nut
(70044)



Lens Tool
(A09052-02)
(Affixed To Housing.
One Per Run)

 
SHIPPED INSTALLED




Joiner Pin
(W5687)



Joiner
Bracket
(18338)




Lens End Piece
(A08904)

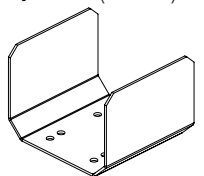












Joiner Bracket
(11849)

MOUNTING

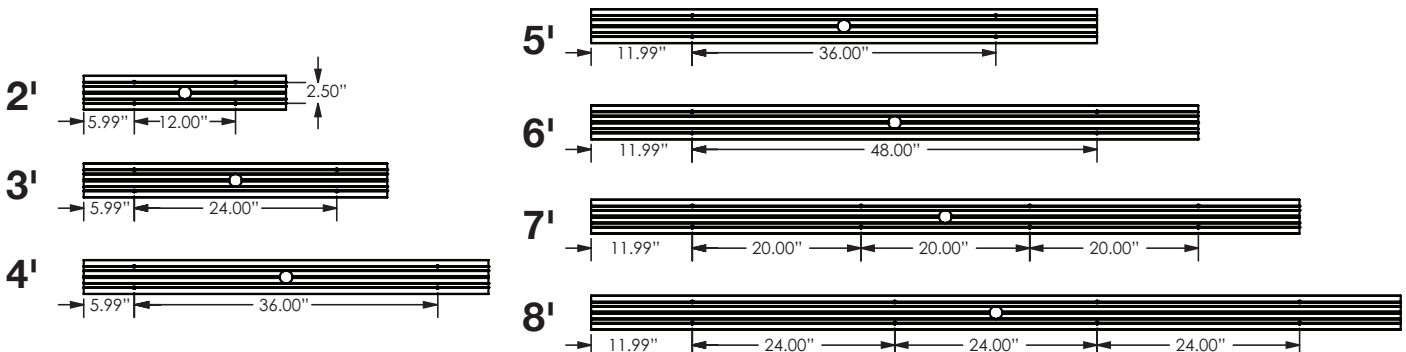

FEED LOCATION IS ALWAYS CENTERED IN HOUSING, WITH THE EXCEPTION OF THE 2' HOUSING. USE SINGLE DEVICE COVER OR SINGLE GANG HANDY BOX AND MOUNTING HARDWARE (BY OTHERS)

! INDIVIDUAL UNITS FOLLOW STEPS 1, 2, 3, 7, 8a, 9 & 10

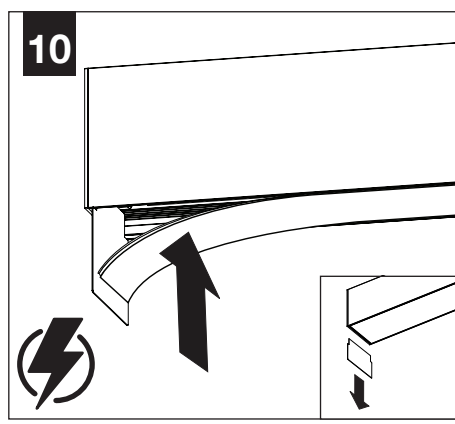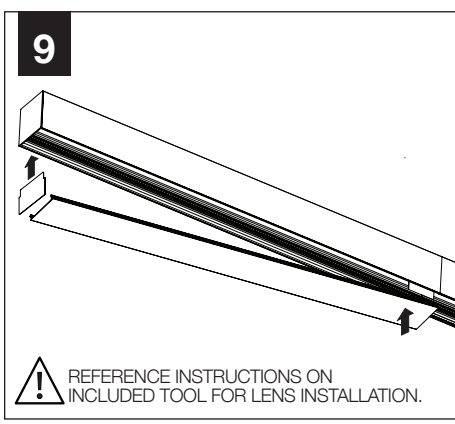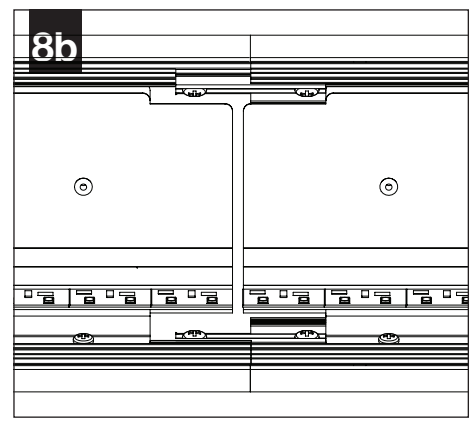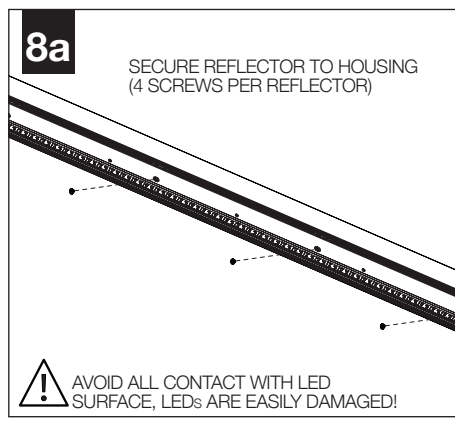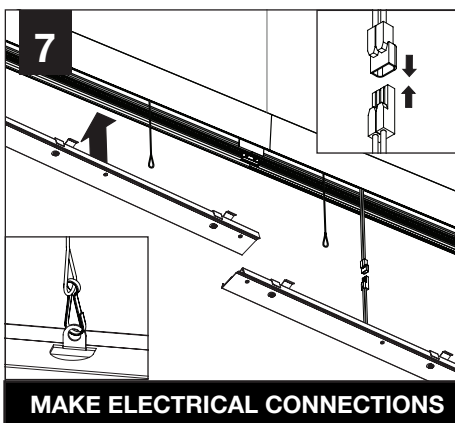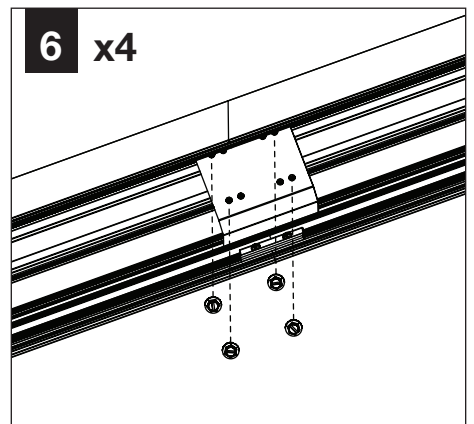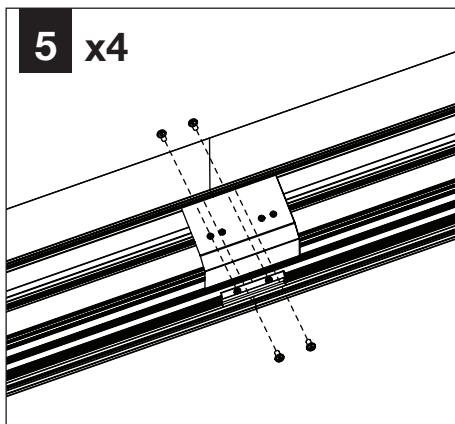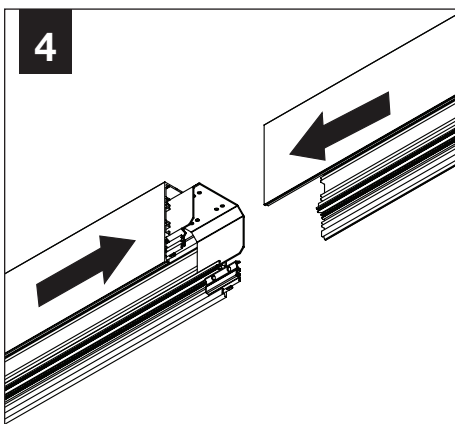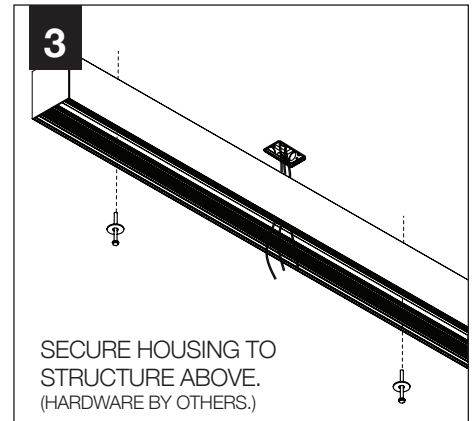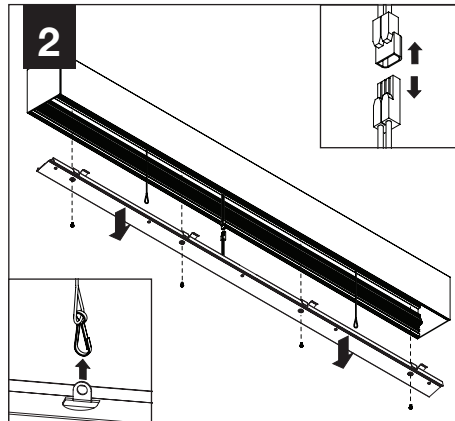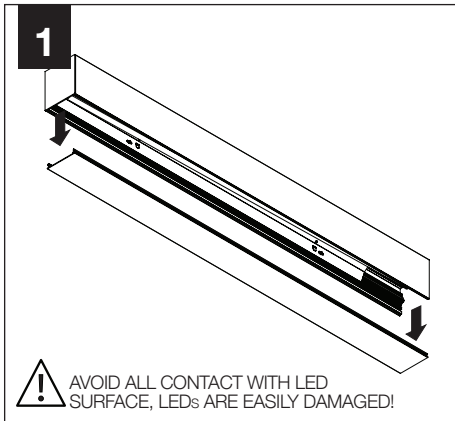

EMERGENCY

I

SEE BATTERY MANUFACTURER INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT: 18.39'

DRIVER SERVICE

