

id[®] led 6" round housing - downlight


FL6D




**LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING.
ALL GRID LUMINAIRES MUST BE SECURED TO STRUCTURE ABOVE.**



NON-EMERGENCY

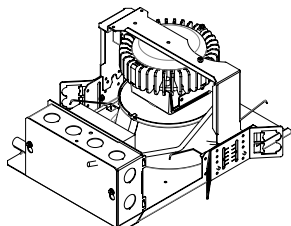

OPTIONAL - BAR HANGERS SOLD SEPARATELY

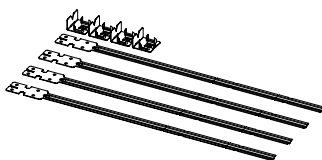

KEY



POWER OFF



POWER ON



LEVEL




ATTENTION




SEE ADDITIONAL INSTRUCTIONS


EMERGENCY - INTEGRAL TEST SWITCH

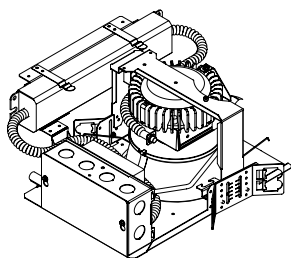

EMERGENCY - REMOTE TEST SWITCH

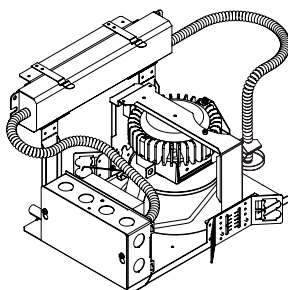

1

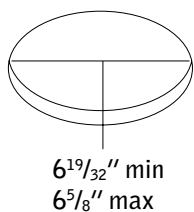


6 19/32" min
6 5/8" max




GRID - 1/2" CONDUIT & CLIP (BY OTHERS)

2 x2

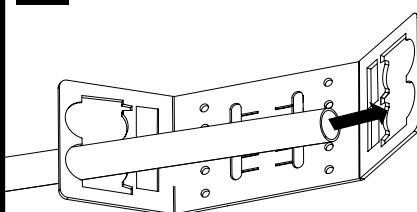


3 x4

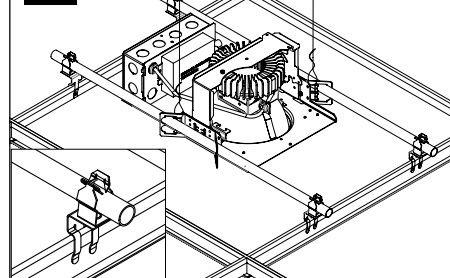


GRID - BAR HANGERS (SOLD SEPARATELY)


2 x2

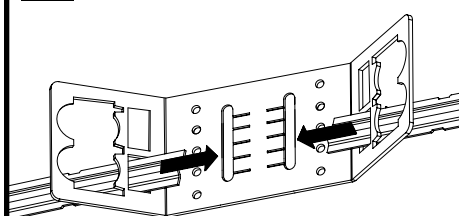

3a x4

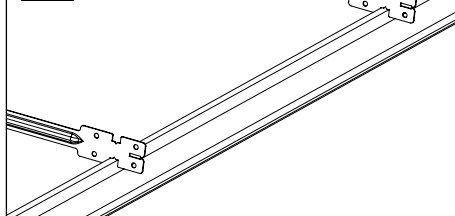


3b multiple luminaires only

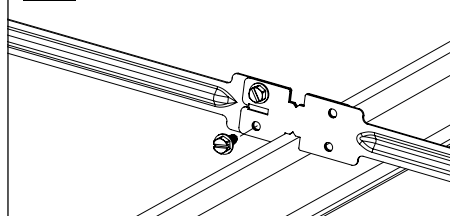

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.


DRYWALL - BAR HANGERS (SOLD SEPARATELY)

2 x2

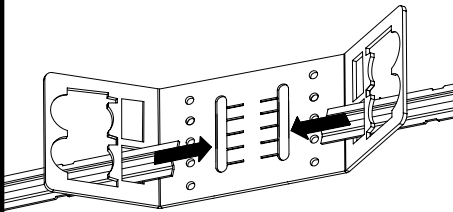


WOOD STUDS

3a x4

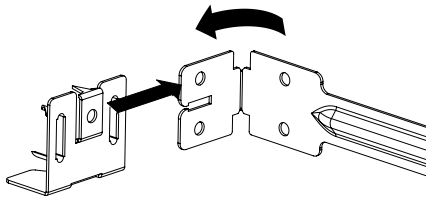


3b x4


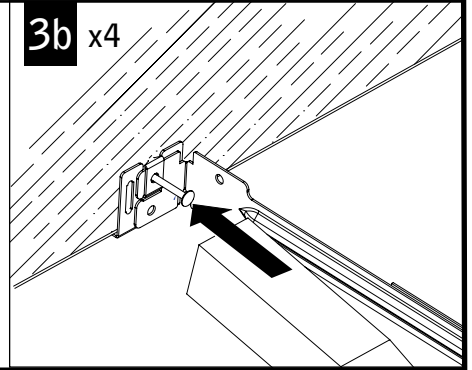


METAL STUDS


3 x4

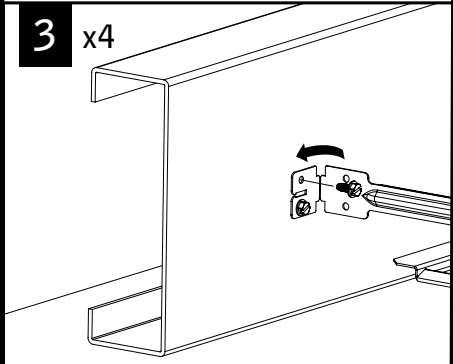

4

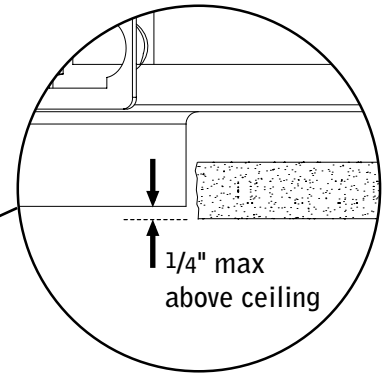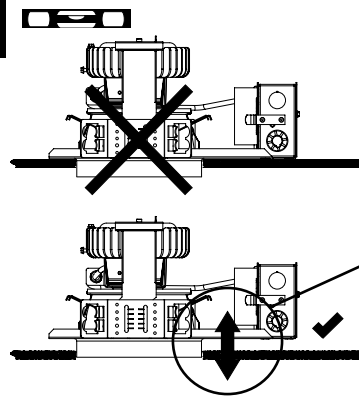


5

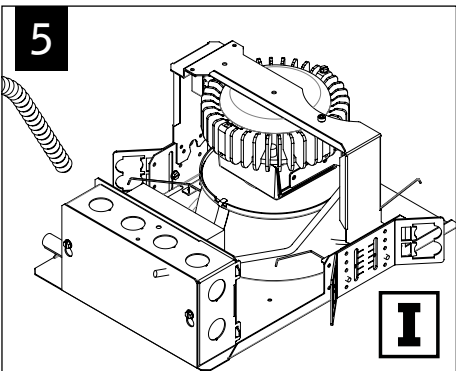


MAKE ELECTRICAL CONNECTIONS

EMERGENCY


A

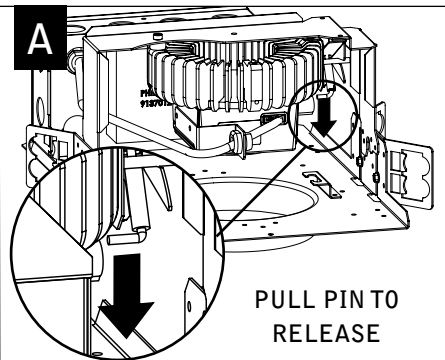

B

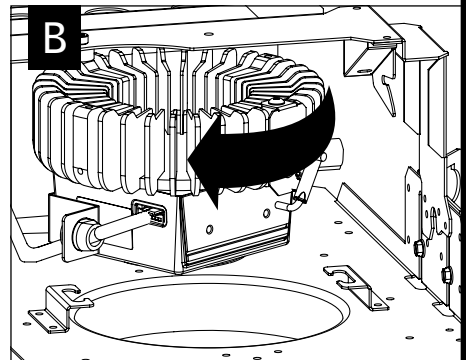

C

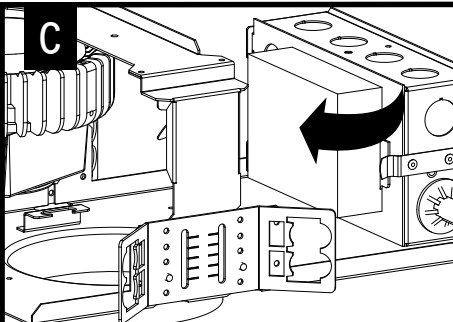

BATTERY UNIT CONNECTOR INSIDE

D



SEE BATTERY
MANUFACTURER
INSTRUCTIONS




DO NOT MATE CONNECTOR
UNTIL INSTALLATION
IS COMPLETE AND A.C.
POWER IS SUPPLIED

Fixtures must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.


EMERGENCY - REMOTE TEST SWITCH ONLY

E



RELEASE
INDICATOR
FROM BRACKET
PRIOR TO
INSTALLATION

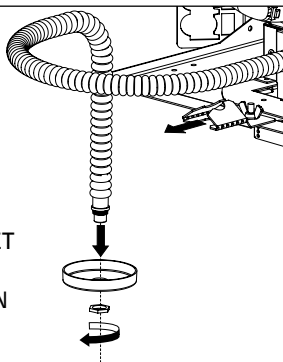

F

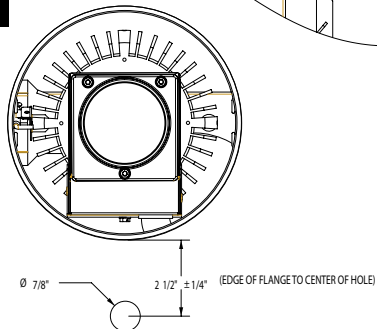


G

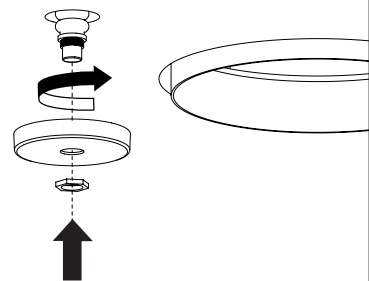

H

ADJUST INDICATOR UNTIL
CANOPY IS FLUSH WITH CEILING

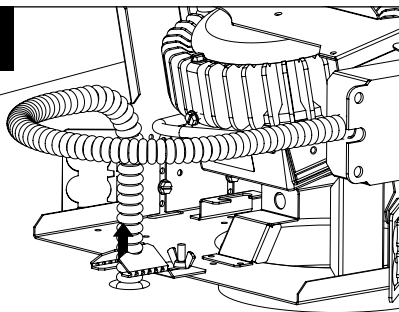

LIGHT MODULE SERVICE




NOTE:
3MM HEX KEY REQUIRED

1


REMOVE TRIM
SEE TRIM REMOVAL ON
FOCAL POINT INSTRUCTION
SHEET IS0288

2

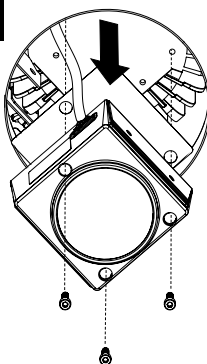


KEEP
THERMAL
PAD FOR
REINSTALL


3

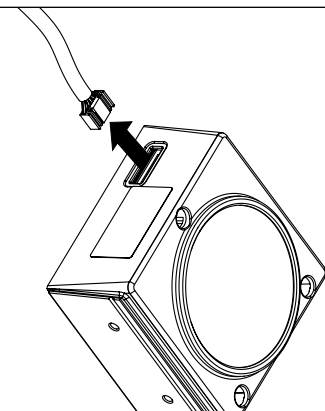

4

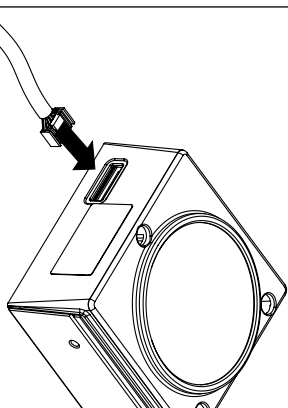

5

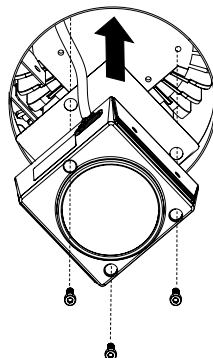

REPLACE
THERMAL
PAD


Fixtures must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

DRIVER SERVICE


1

REMOVE TRIM
SEE TRIM REMOVAL ON
FOCAL POINT INSTRUCTION
SHEET IS0288


2

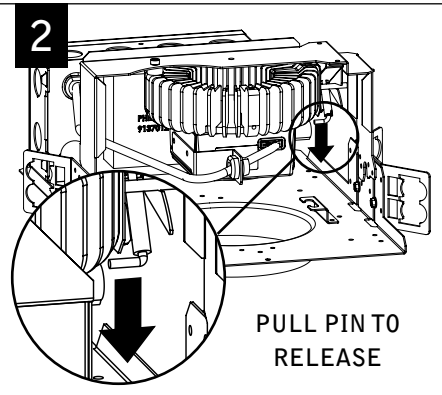


3

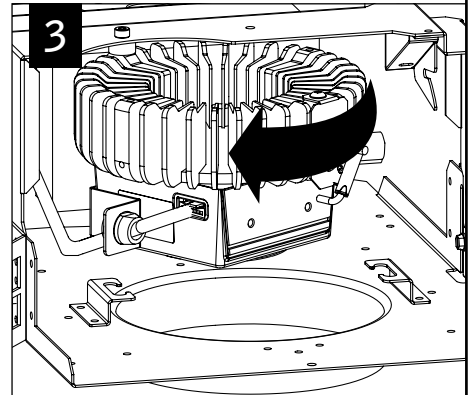

4

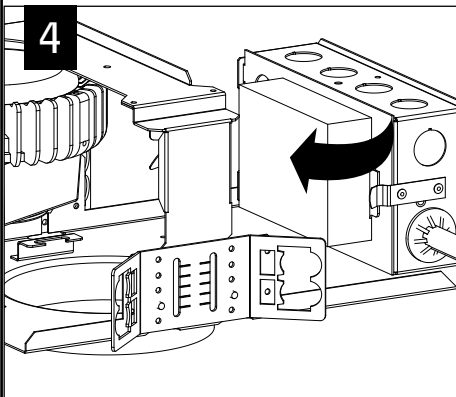

WIRING DIAGRAM

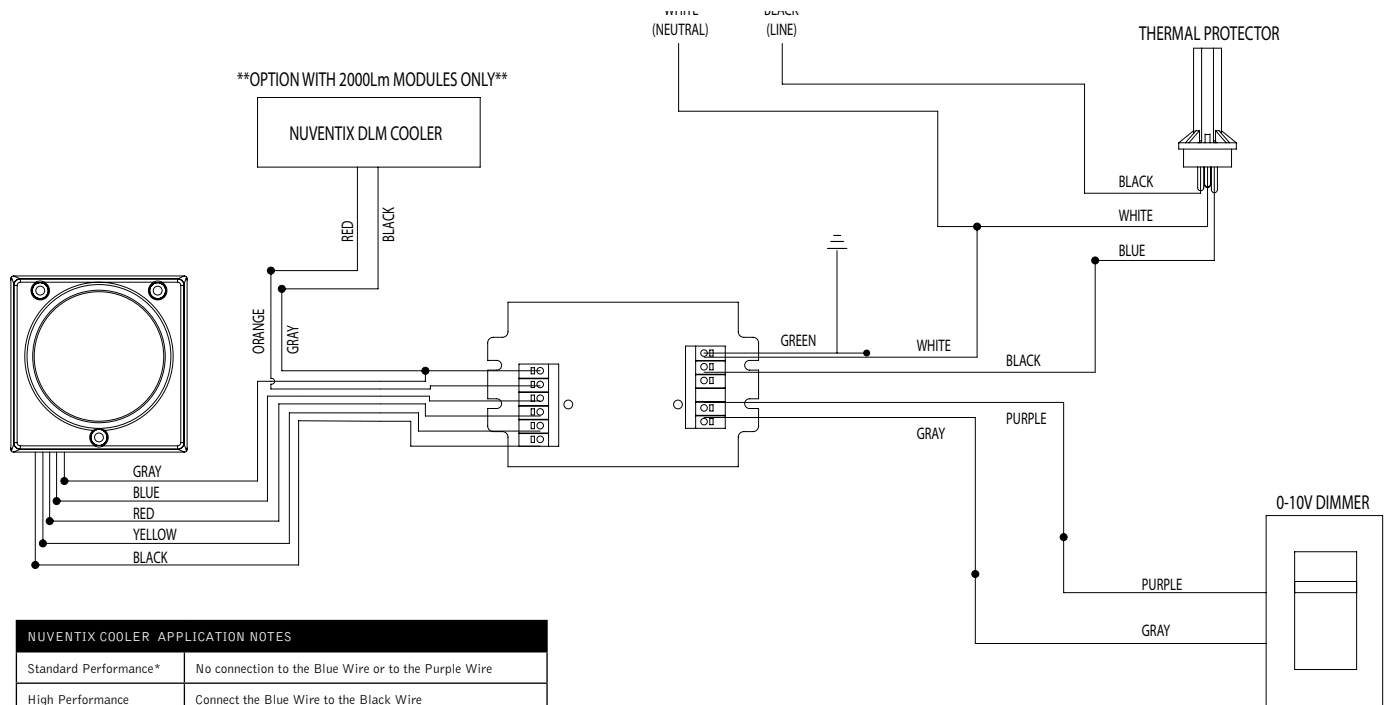

* Default Setting Level if control not used

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings. The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.