



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY




HANDLING & CLEANING


- Always handle with clean white gloves (provided).
- Use can of compressed air to remove dust and debris from shade and dust cover.
- Use lint roller to gently lift any remaining debris from shade.
- Lightly wipe dust cover with damp cloth. Do not leave excess moisture on surface.

COMPONENT KEY


ACOUSTIC SHADES

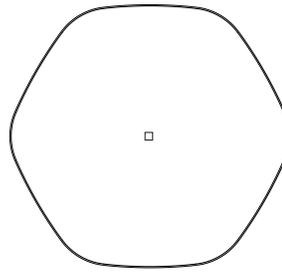


27" Shade

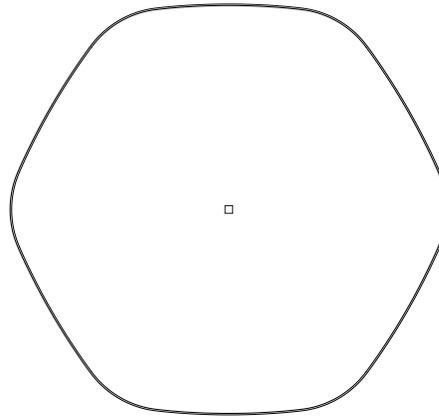

42" Shade

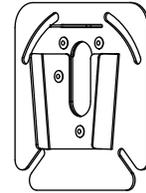

J-box Mounting Bracket

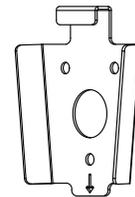

Shade Mounting Bracket




Shade Mounting Bracket Screws (PN 72023)


LIGHT ENGINE



REMOTE POWER BOX

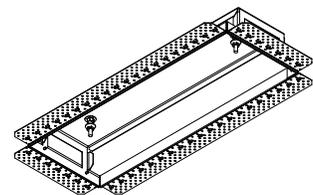





MUD-IN CHASIS

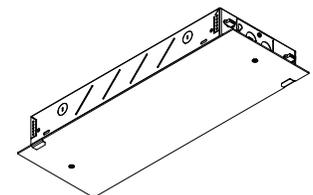





MUD-IN REMOTE POWER BOX










J-BOX

4" OCTAGONAL J-BOX REQUIRED

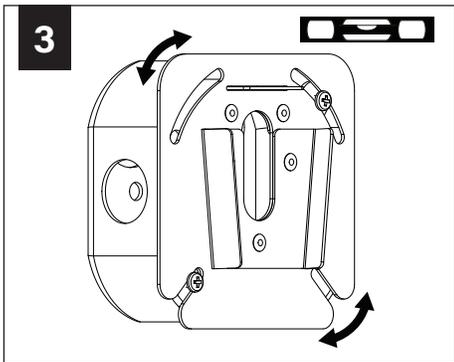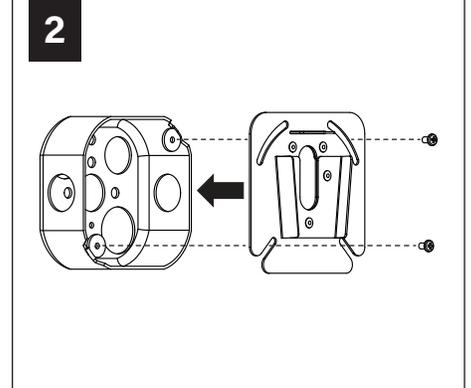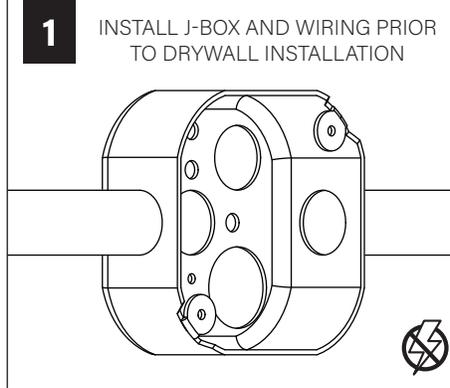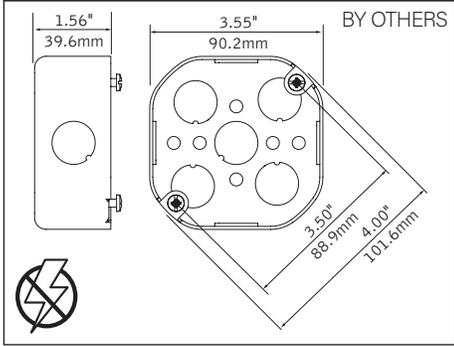

REMOTE POWER BOX - MUD-IN DRYWALL

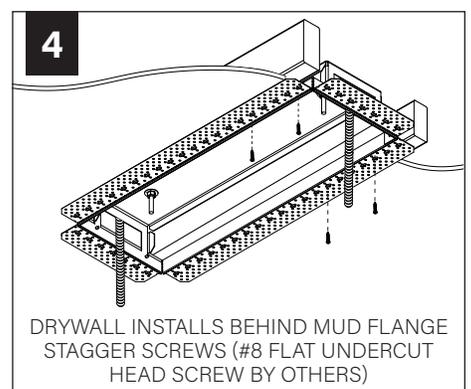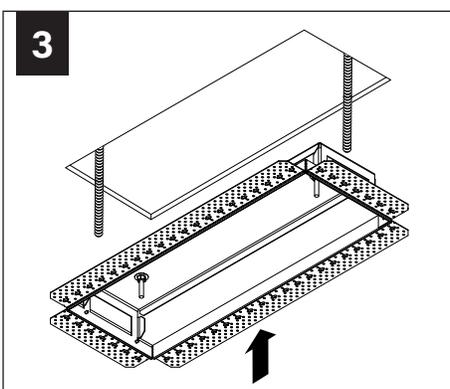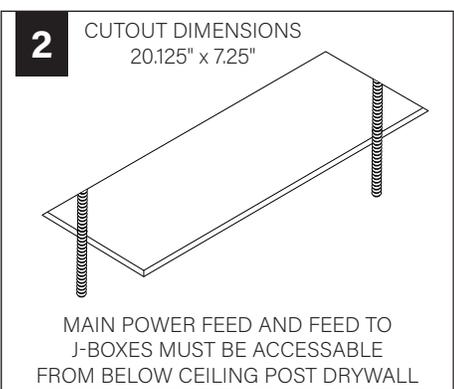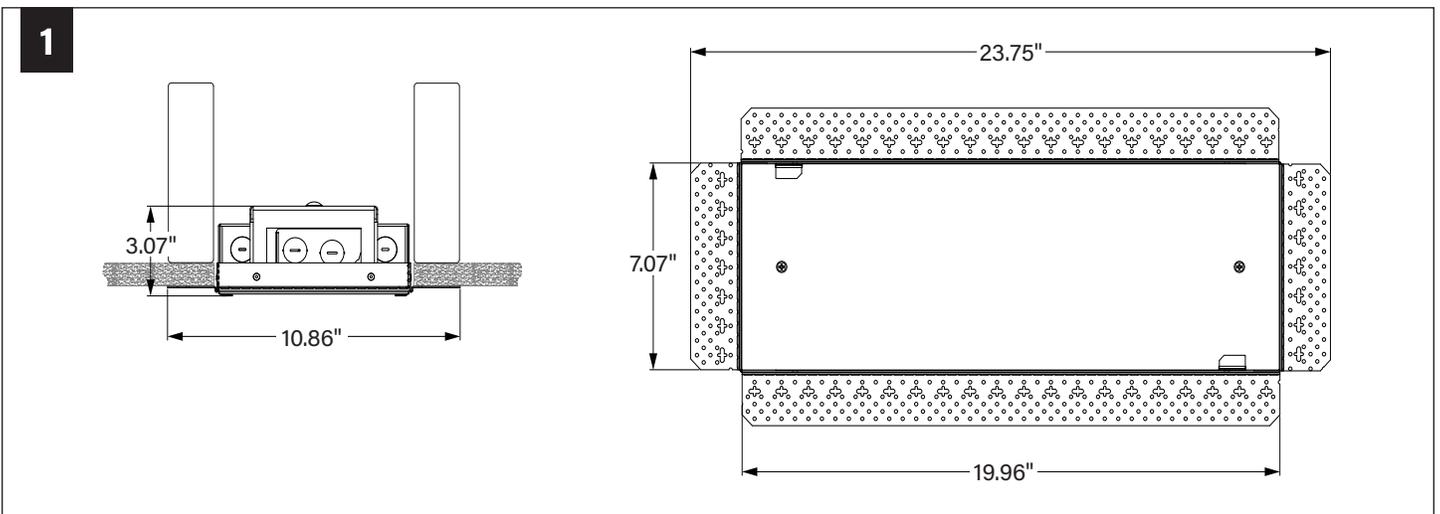

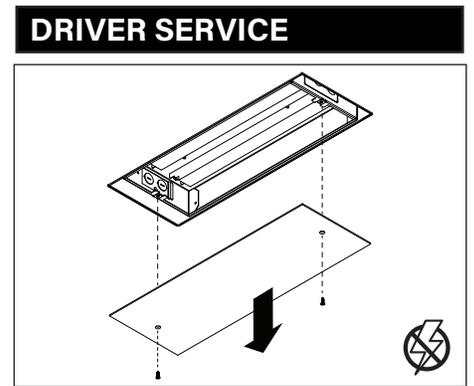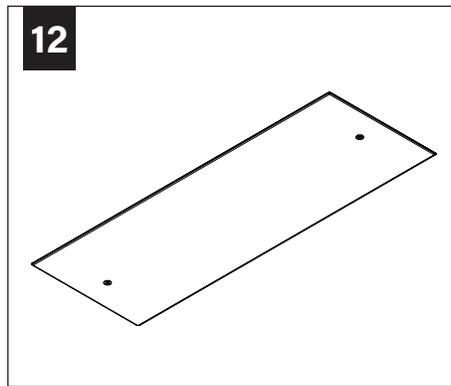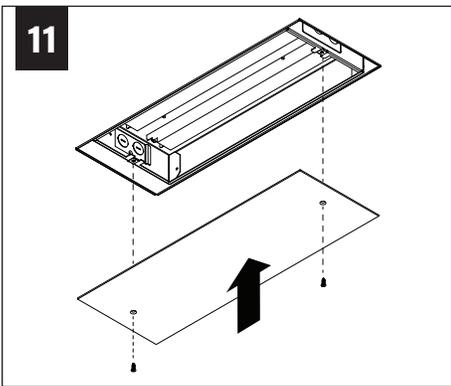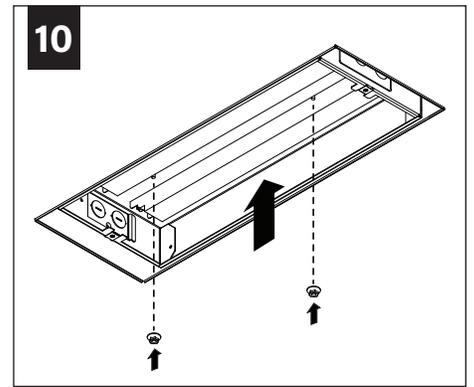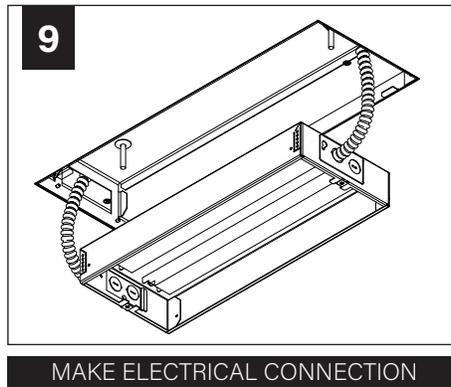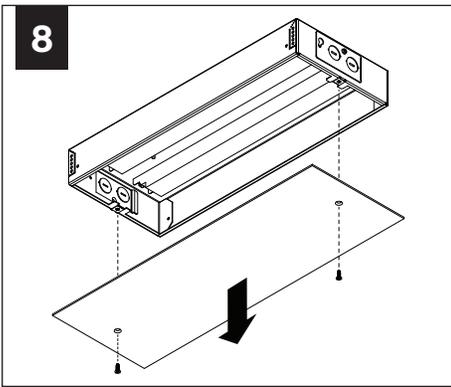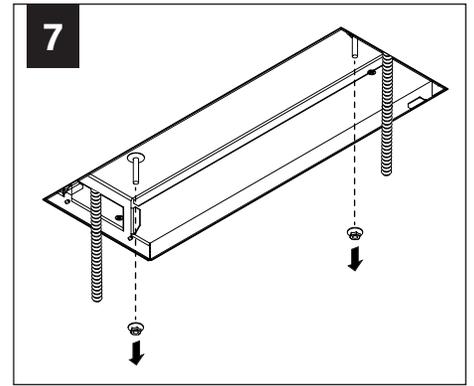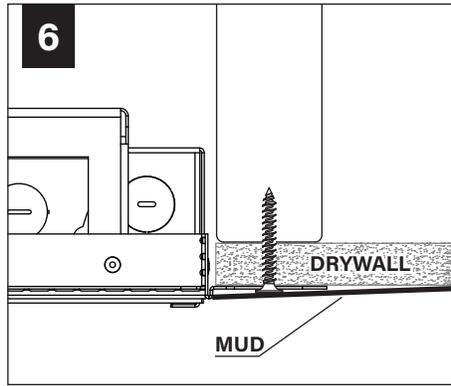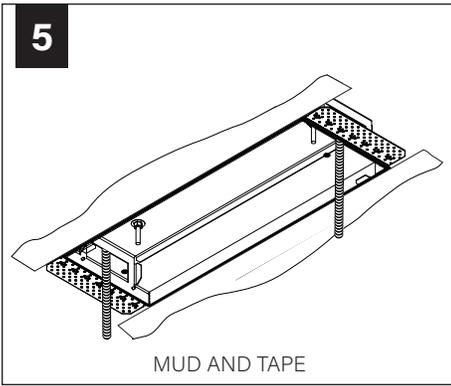

ACOUSTIC SHADE AND LED MODULE

