Seem[®] 1 & Seem[®] 2 Acoustic

ASM1S | ASM1BS | AUSM1S | ASM2S | ASM2BS | AUSM2S | ASM2IS

AirCore Technology





BEFORE YOU BEGIN

- Configurations are run specific, please consult factory drawings before beginning installation.
- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

Naturals

- Common pattern repetition may be observed in individual products.
- Make efforts to evaluate product patterning during installation process.
- Product can be repositioned or rotated when possible to resolve instances of pattern repetition.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF



POWER ON

COMPONENT KEY

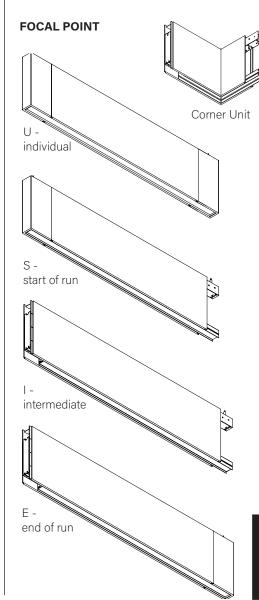

SHIPPED INSTALLED



Access Cover Screw (72026)

SHIPPED IN HARDWARE BAG



Seem 1 Acoustic Joiner Screw (700295)



Seem 2 Acoustic Joiner Screw (72026)

INDIVIDUAL INSTALLATIONS FOLLOW STEPS 1, 2, 8, 12 & 13




#1 PHILLIPS DRIVER BIT NECESSARY FOR INSTALLATION OF SEEM 1 ACOUSTIC JOINED RUNS

#2 PHILLIPS DRIVER BIT NECESSARY FOR INSTALLATION OF SEEM 2 ACOUSTIC JOINED RUNS

FOR CORNER INSTALLATION SEE PAGES 3-5


FOR ALTERNATE CEILING INSTALLATIONS SEE PAGES 5-6
INDIVIDUAL UNITS CANNOT BE JOINED IN THE FIELD

UNITS CANNOT BE CUT TO LENGTH IN THE FIELD

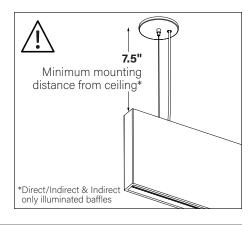



PRODUCT HANDLING



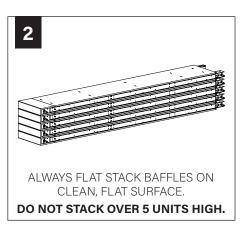





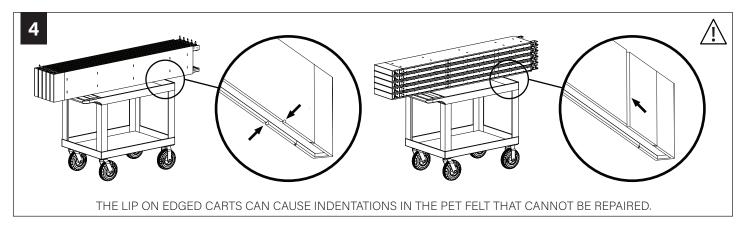


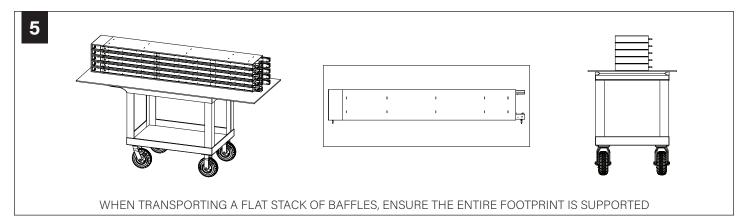


PRODUCT INSTALLATION

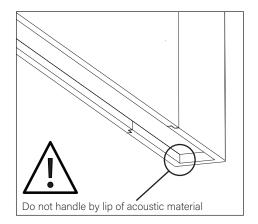


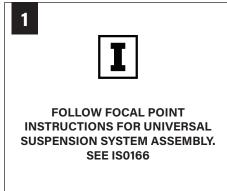


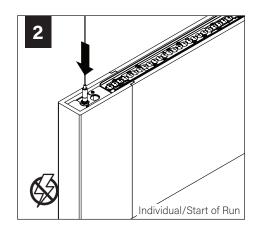




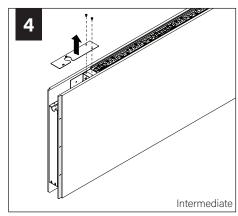


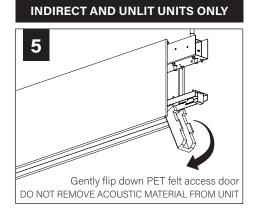


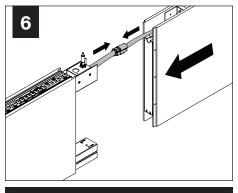





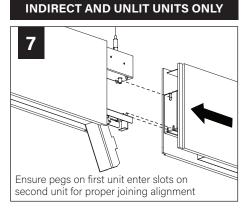


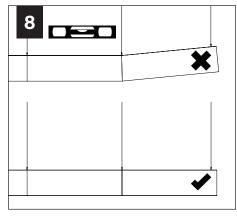


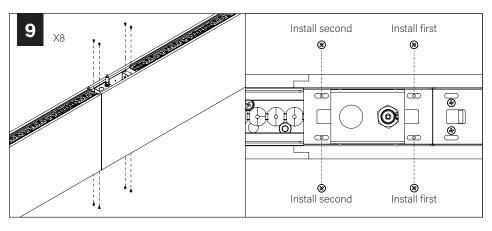


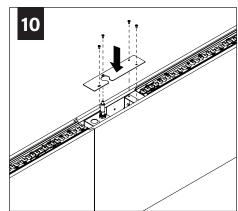


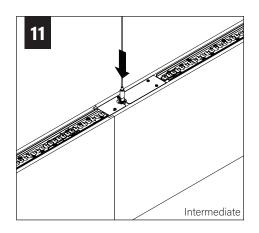

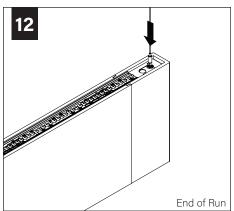


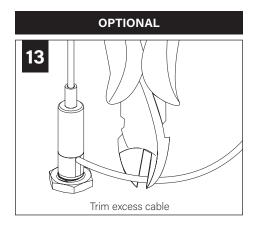


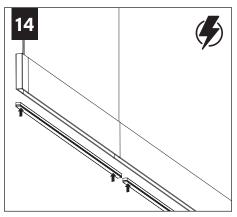

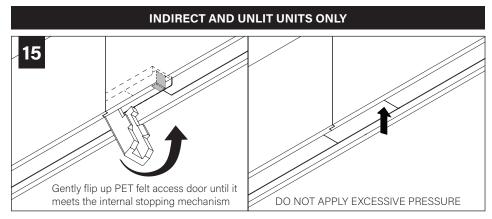



CORNER INSTALLATION

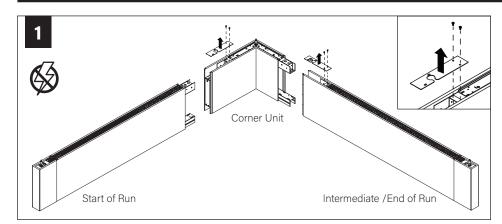

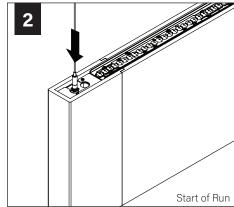


INDIRECT AND UNLIT UNITS ONLY

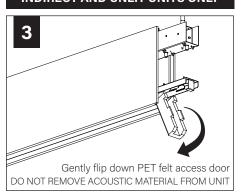


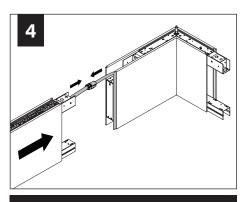



MAKE ELECTRICAL CONNECTION


INDIRECT AND UNLIT UNITS ONLY

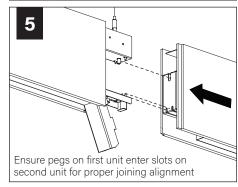


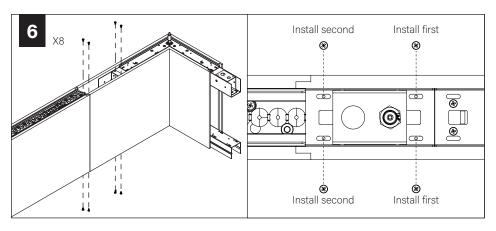


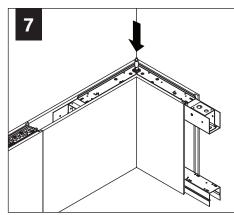


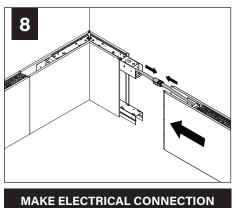


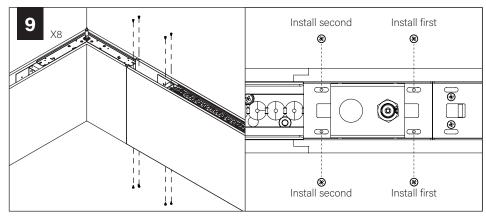


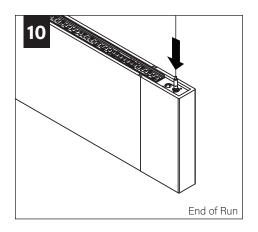

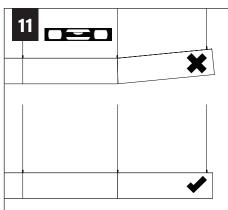

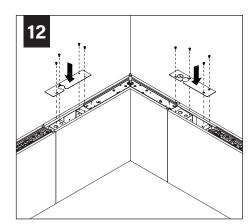


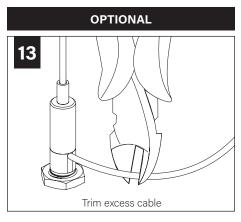

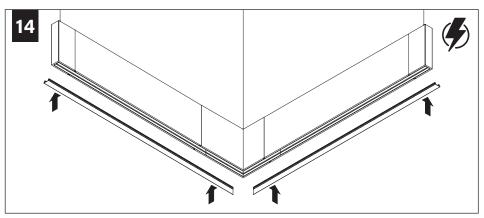



Gently flip up PET felt access door until it meets the internal stopping mechanism DO NOT APPLY EXCESSIVE PRESSURE


DRIVER SERVICE

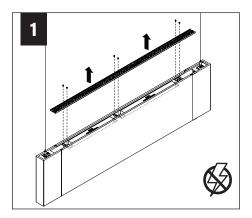


CEILING STRUT INSTALLATION

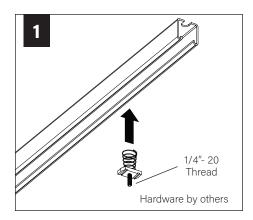


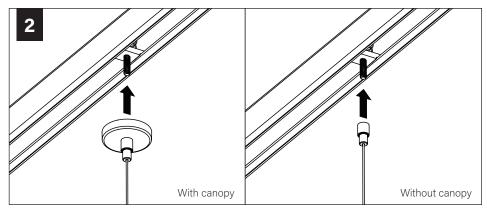


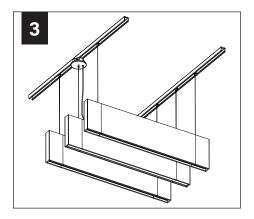

DRYWALL/HARD SURFACE CEILING INSTALLATION

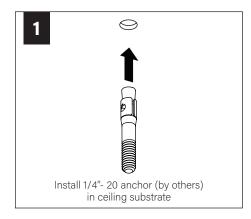

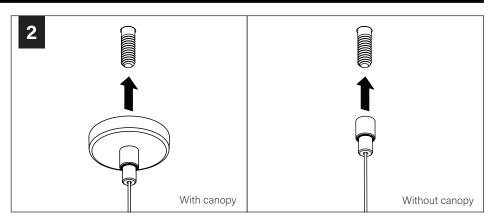

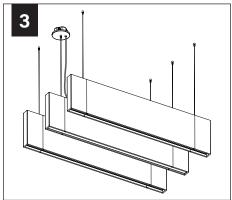

GRID CEILING INSTALLATION



