

# ID+ 2.5" Square Trimless Housing

FLC22D | FLC22W



FOCAL POINT®



## BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.





**LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING.  
ALL GRID LUMINAIRE MUST BE SECURED TO STRUCTURE ABOVE.**

## COMPONENT KEY


**NON-EMERGENCY**  
THERMALLY PROTECTED, NON-IC



**OPTIONAL**  
BAR HANGERS SOLD SEPARATELY

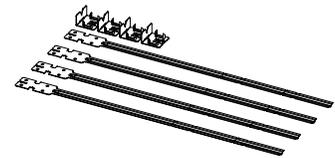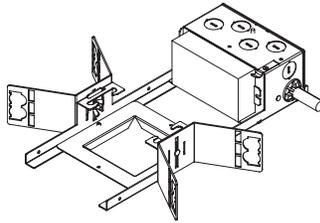

IC/CP

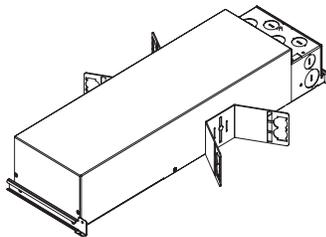

## INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON




## WALL WASH ORIENTATION

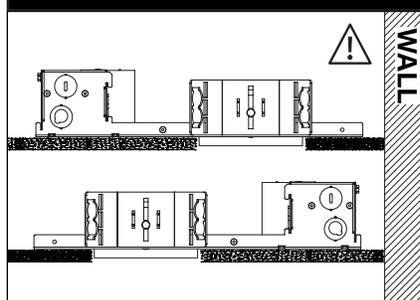

**KEEP SHADED AREA FREE FROM OBSTRUCTION ABOVE CEILING**






DNS - SHORT CONE  
DSS - SUPER SHORT CONE

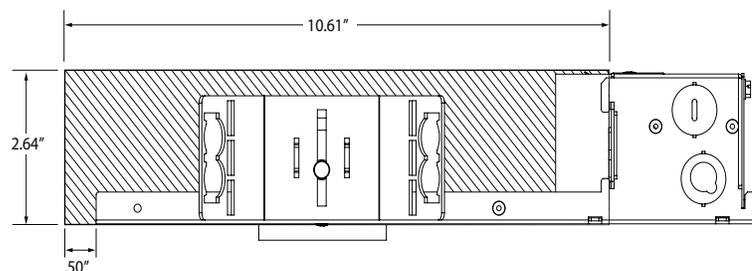

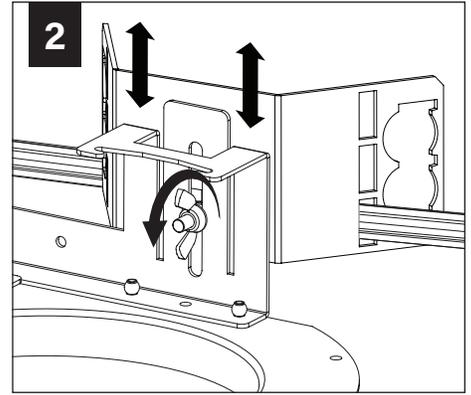
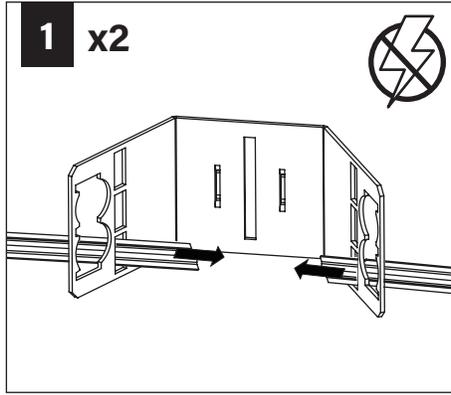
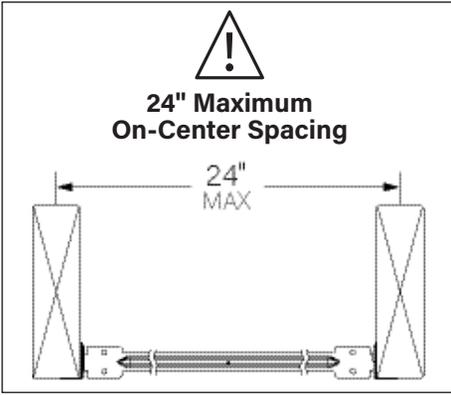







**WOOD STUDS**

**METAL STUDS**

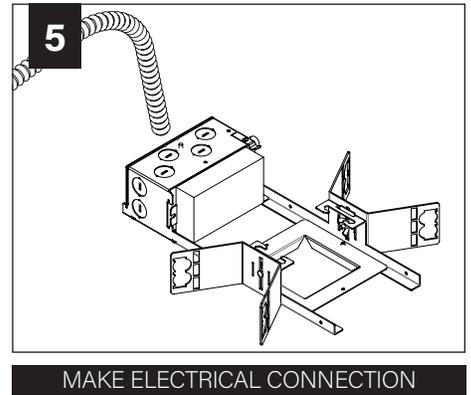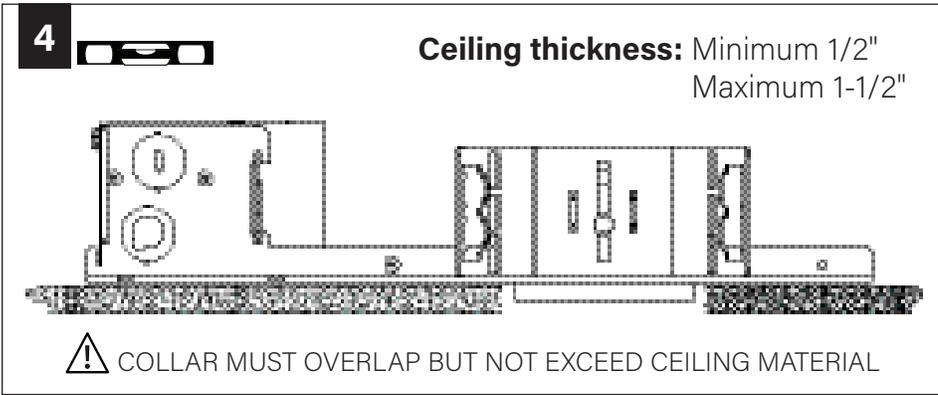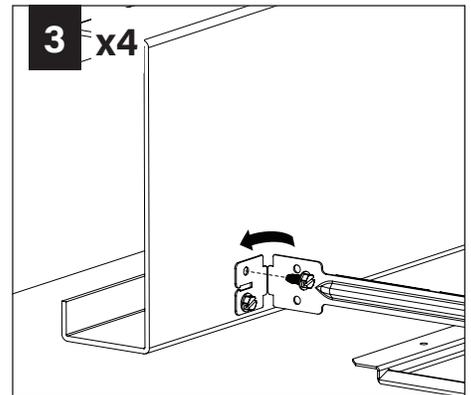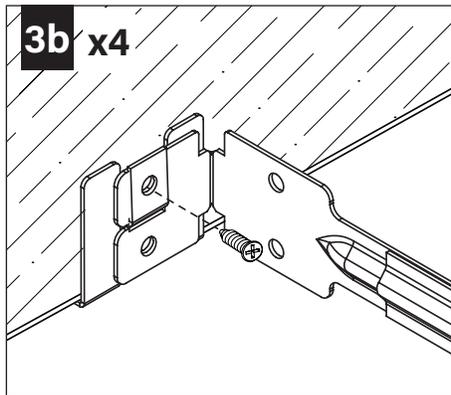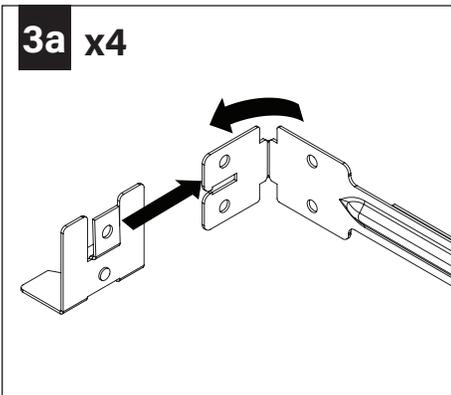












**MUD-IN**

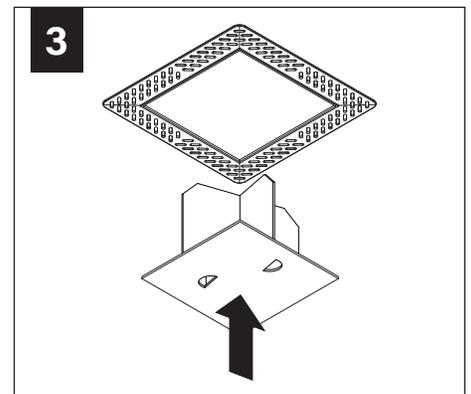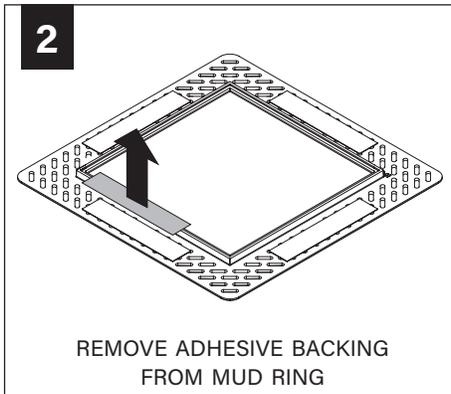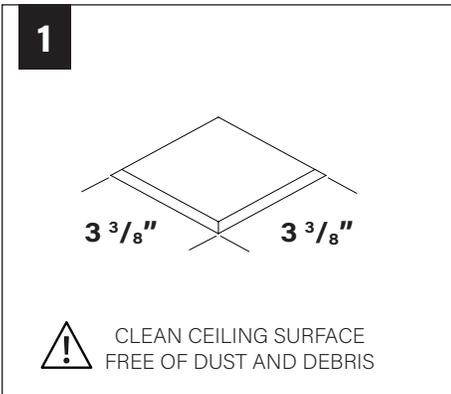

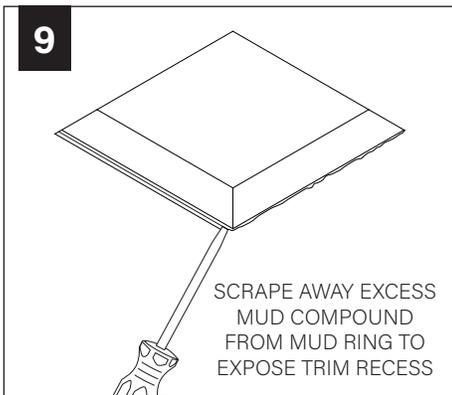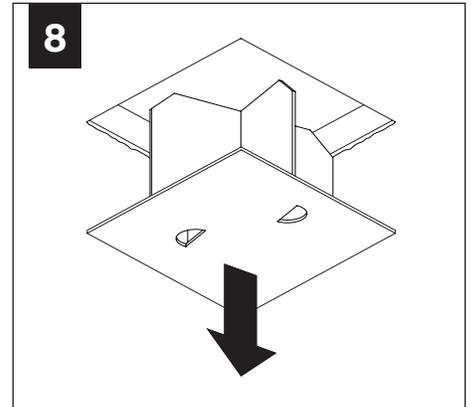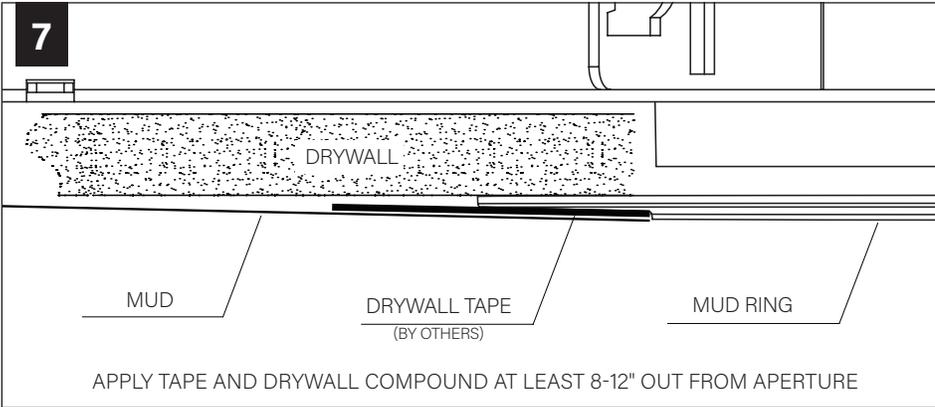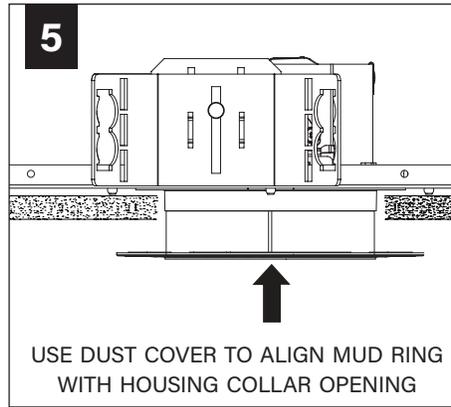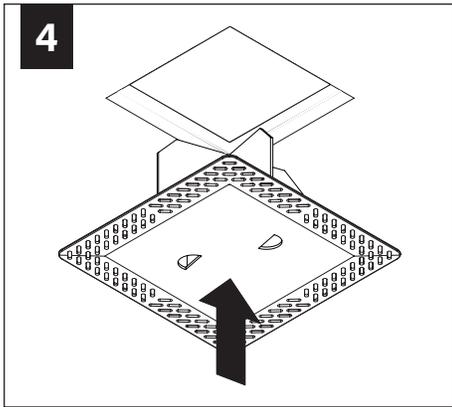

## WOOD CEILING

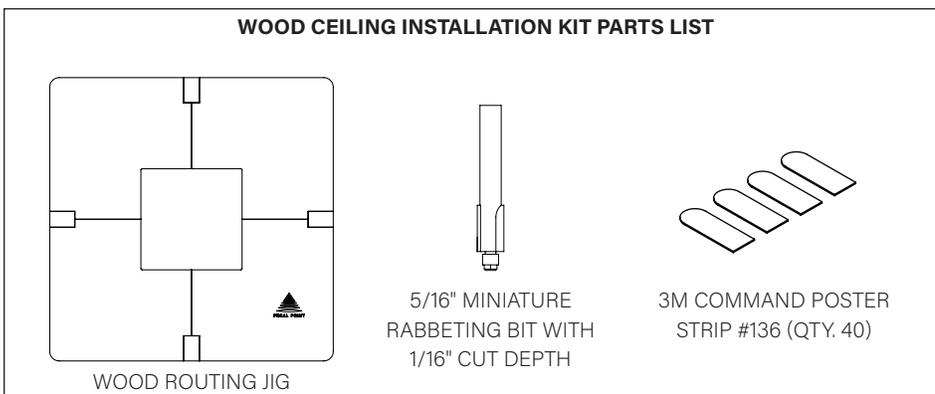

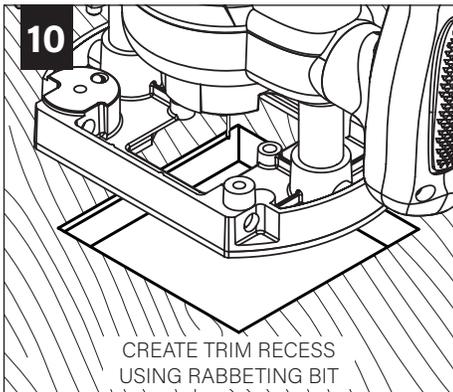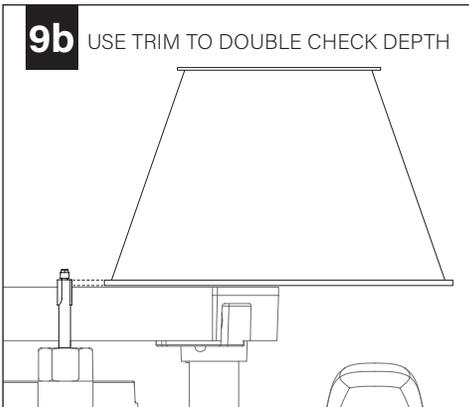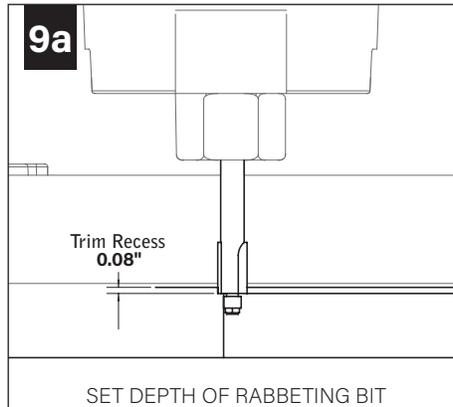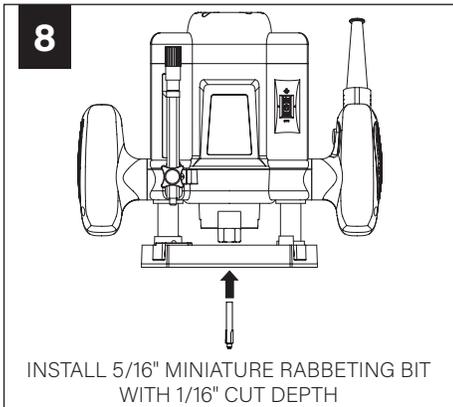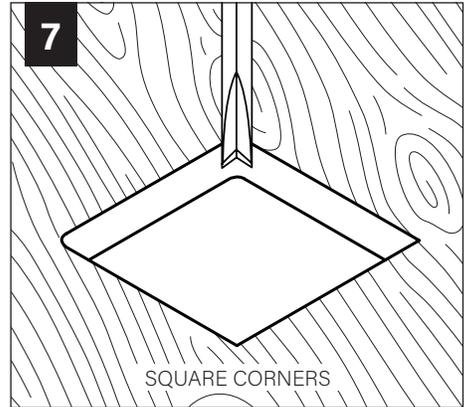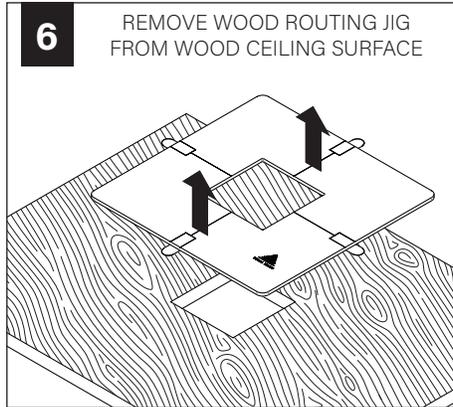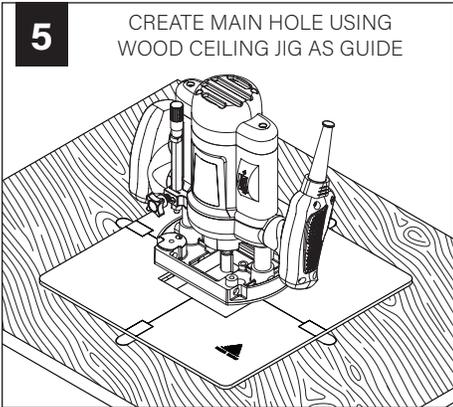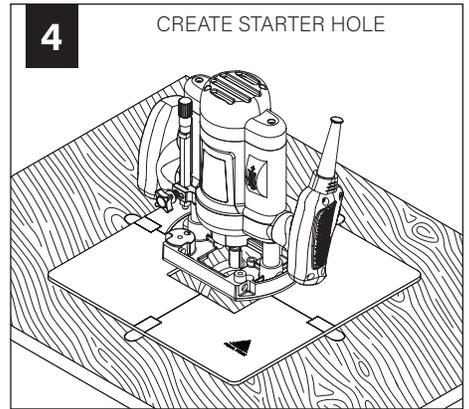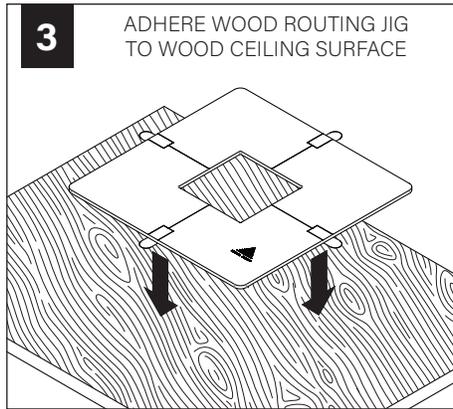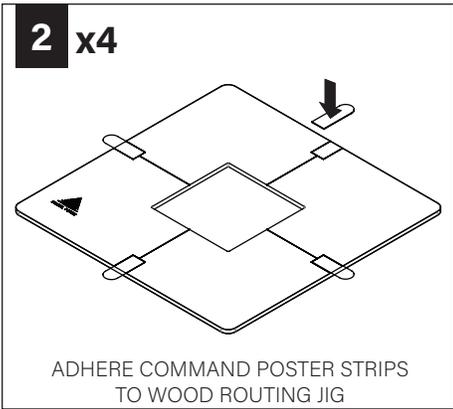

## DRIVER SERVICE



**TO PREVENT ELECTRICAL SHOCK,  
DISCONNECT ELECTRICAL SUPPLY  
BEFORE SERVICING**

