

METRO PENDANT ROUND

SAFETY AND INSTALLATION INSTRUCTIONS

FIXTURES MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN (CHECK WITH LOCAL AND NATIONAL CODES FOR PROPER INSTALLATION). TO PREVENT ELECTRICAL SHOCK, DISCONNECT ELECTRICAL SUPPLY BEFORE INSTALLATION OR SERVICING.

1. READ ALL INSTRUCTIONS PRIOR TO INSTALLATION.
2. DISCONNECT ELECTRICAL POWER BEFORE SERVICING LUMINAIRE.
3. TO AVOID DAMAGE, KEEP LUMINAIRE IN ORIGINAL CARTON.
4. DO NOT PLACE HEAVY OBJECTS ON CARTONS.

TOOLS AND MATERIALS REQUIRED (by others)

1. Slotted screw driver
2. Phillips screw driver (#1, #2)
(magnetic tip recommended)
3. Pliers
4. Wire nuts

UNIT DESCRIPTION

FMEP26 (26" METRO PENDANT)


Dimensions: 26" dia x 2.7" high

Weight: 20-25 lbs


FMEP34 (34" METRO PENDANT)

Dimensions: 34" dia x 2.8" high


Weight: 30-35 lbs

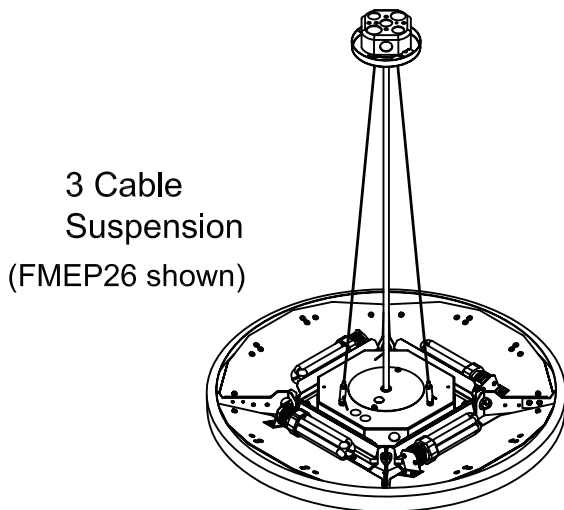

3 Cable
Suspension
(FMEP26 shown)

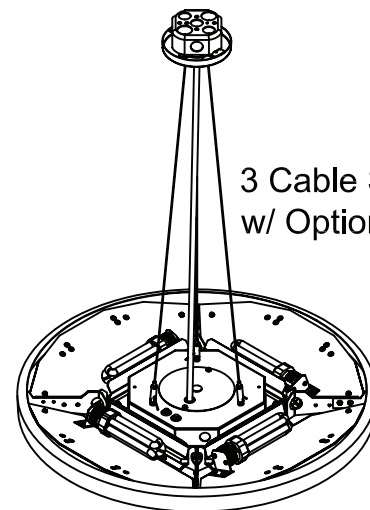

3 Cable Suspension
w/ Optional EM

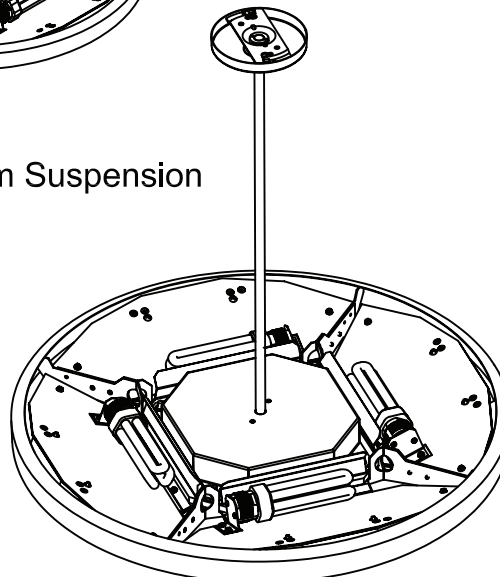

Stem Suspension



EMERGENCY:

SEE BATTERY
MANUFACTURER
INSTRUCTIONS

EMERGENCY MAXIMUM
MOUNTING HEIGHT: 8.00'

CONTRACTOR IS RESPONSIBLE FOR ADEQUATELY REINFORCING WALLS AND/OR CEILINGS TO SUPPORT FIXTURE WEIGHT. FOCAL POINT, L.L.C. ACCEPTS NO RESPONSIBILITY FOR INADEQUATELY REINFORCED WALLS AND/OR CEILINGS.

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FOCAL POINT LLC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF FOCAL POINT LLC IS PROHIBITED.

2016 © FOCAL POINT LLC



FOCAL POINT®

INSTALLATION GUIDE NO.

IS0207

DWG. NO.

REV. E


EMERGENCY BATTERY EQUIPPED MODELS:

TO ACTIVATE EMERGENCY BATTERY PACK, FOLLOW INSTRUCTION BELOW AFTER INSTALLATION IS COMPLETE AND A.C. POWER IS SUPPLIED.


FMEP26: REMOVE WIRING ACCESS COVER, PLUG IN CONNECTORS INSIDE WIRING COMPARTMENT

FMEP34: REMOVE REFLECTOR WITH TEST SWITCH AND STATUS LIGHT, PLUG IN CONNECTORS UNDER REFLECTOR

FMEP26

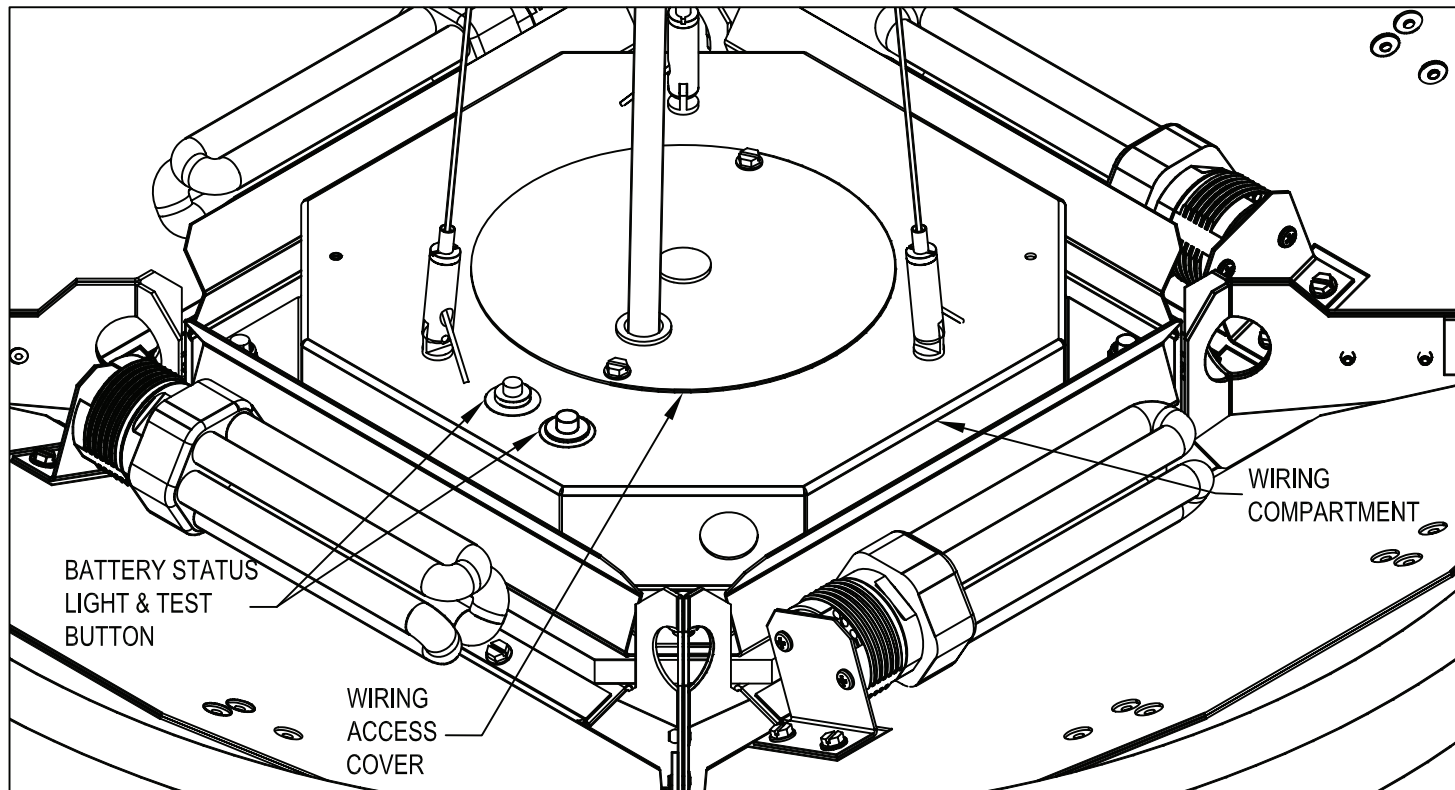


FMEP34

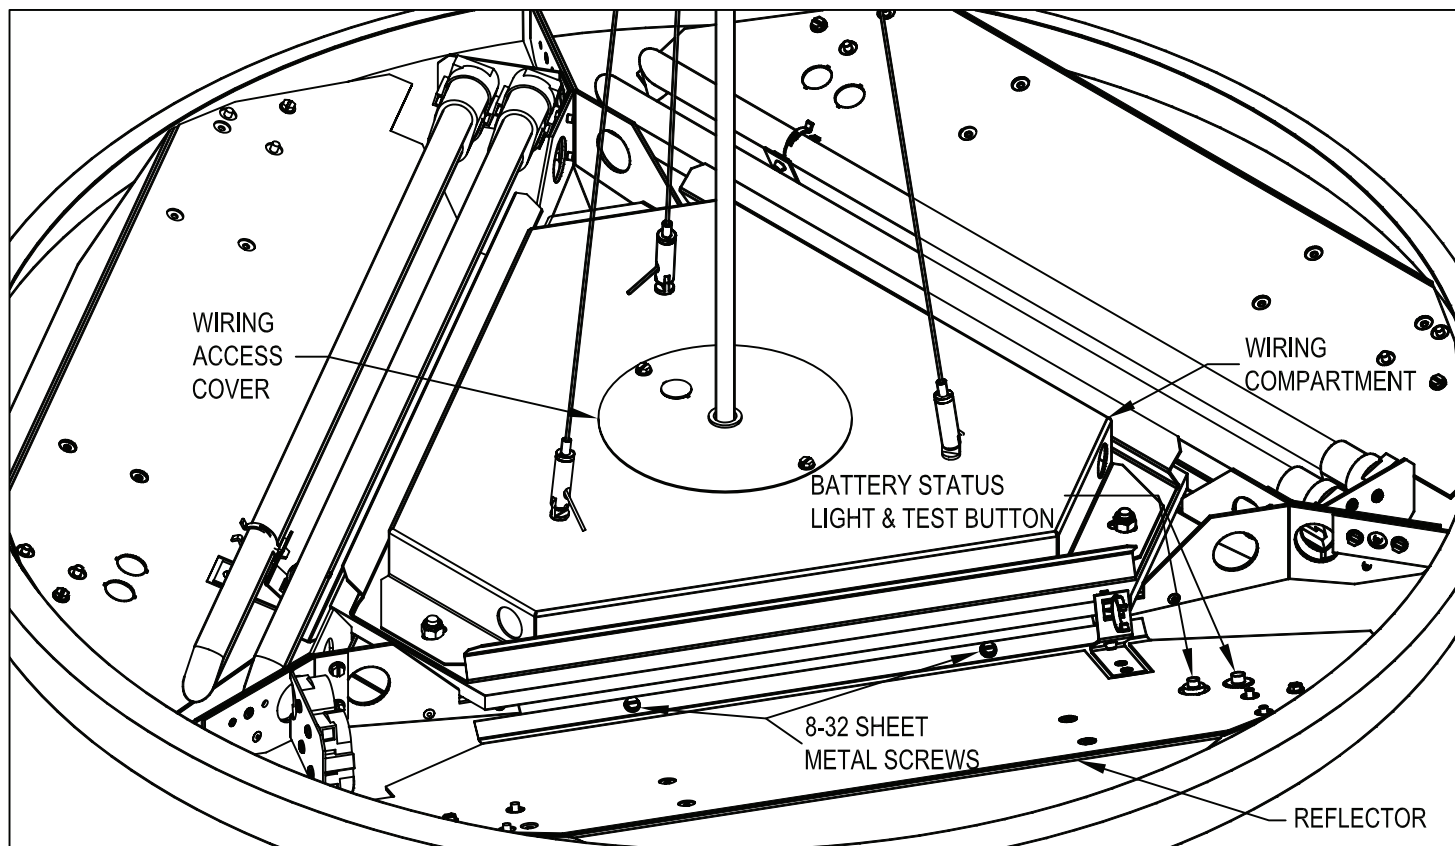


AIRCRAFT CABLE SUSPENSION

1

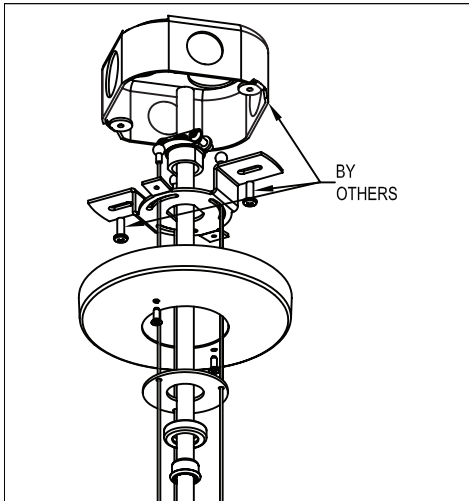

MAKE ELECTRICAL CONNECTIONS AND INSTALL CANOPY ASSEMBLY AS SHOWN.


2

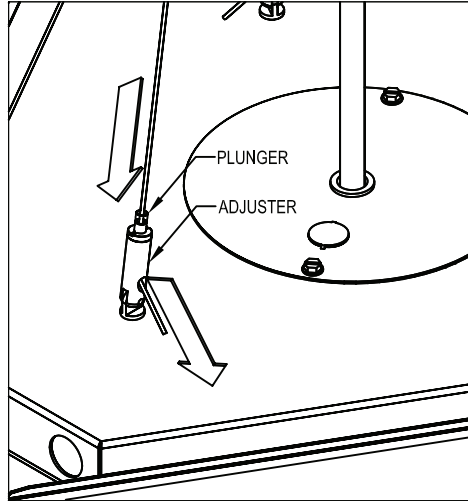

TO ADJUST MOUNTING HEIGHT, DEPRESS PLUNGER ON ADJUSTER WHILE SUPPORTING LUMINAIRE. TRIM EXCESS CABLE AT ADJUSTER END.


STEM SUSPENSION

1

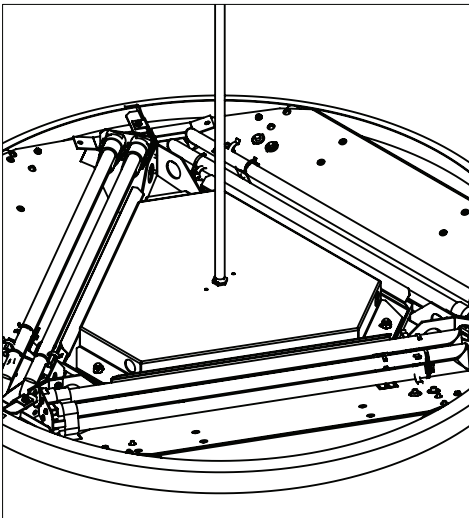


ATTACH THE STEM TO THE POWER MODULE COVER. DO NOT OVER TIGHTEN STEM, THIS MAY CAUSE PINCHED WIRES.

2

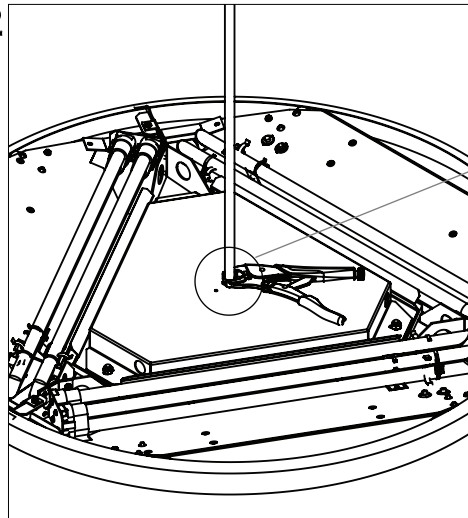


USING PLIERS, SECURELY TIGHTEN LOCK NUT. STEM MUST BE SECURELY TIGHTENED AND UNABLE TO SPIN LOOSE.

3

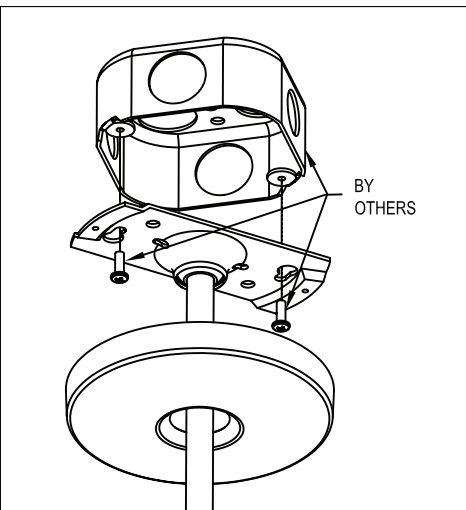

MAKE ELECTRICAL CONNECTIONS AND INSTALL CANOPY ASSEMBLY AS SHOWN.

4

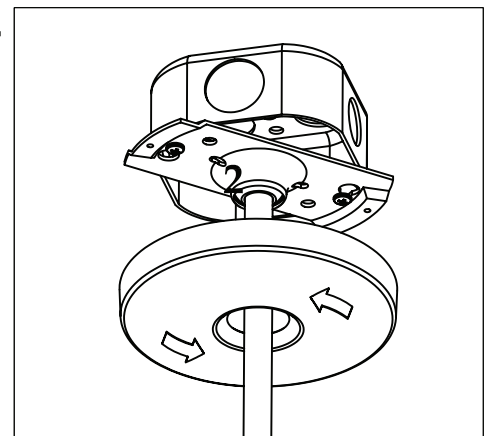

TURN AND LOCK CANOPY TO COMPLETE INSTALLATION.