$\begin{array}{c} \text{Skydome}^{\scriptscriptstyle\mathsf{TM}} \, \text{suspended} \\ \text{FSD-22|33|44} \end{array}$









STEM MOUNT SEE PAGE TWO FOR ADDITIONAL MOUNTING INSTRUCTIONS.

KEY




POWER OFF





POWER ON



ATTENTION

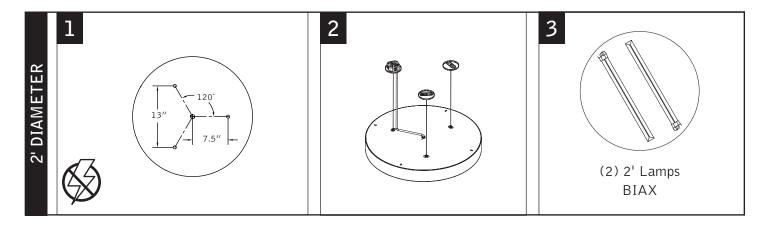


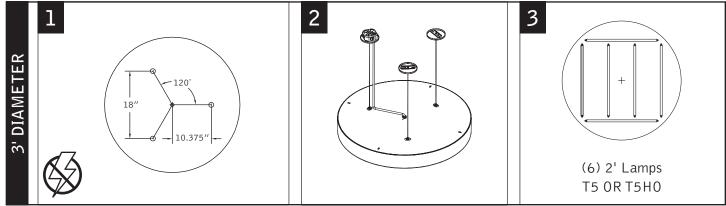

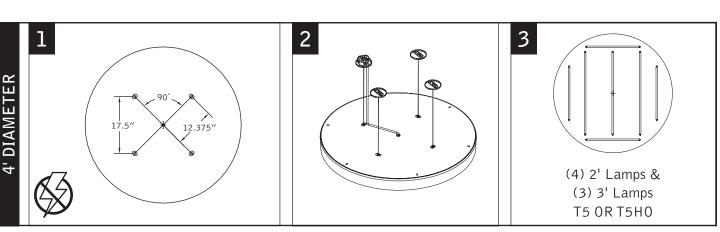


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).


To prevent electrical shock, disconnect electrical supply before installation or servicing.

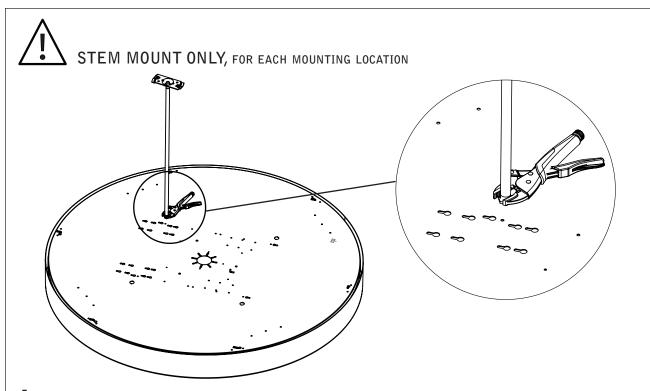



- ${f 1.}$ ATTACH THE STEM TO COVER. DO NOT OVER TIGHTEN STEM, THIS MAY CAUSE PINCHED WIRES.
- 2. USING PLIERS, SECURELY TIGHTEN LOCK NUT. STEM MUST BE SECURELY TIGHTENED AND UNABLE TO SPIN LOOSE.

BALLAST SERVICE

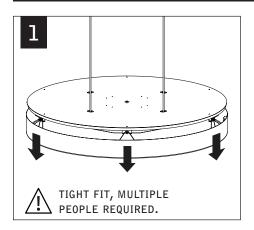

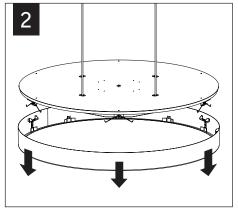

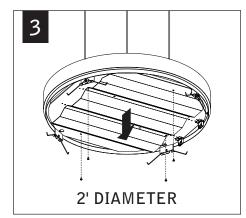

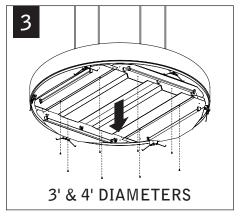

Contractor is responsible for adequately reinforcing walls and/or ceilings to support luminaire weight. Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings. The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.