

SKY 4X4 DRYWALL CEILING

SAFETY AND INSTALLATION INSTRUCTIONS

FIXTURES MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN (CHECK WITH LOCAL AND NATIONAL CODES FOR PROPER INSTALLATION). TO PREVENT ELECTRICAL SHOCK, DISCONNECT ELECTRICAL SUPPLY BEFORE INSTALLATION OR SERVICING.

1. READ ALL INSTRUCTIONS PRIOR TO INSTALLATION.
2. DISCONNECT ELECTRICAL POWER BEFORE SERVICING FIXTURES.
3. RECOMMENDED CLEARANCE ABOVE CEILING JOIST IS 24".
4. FIXTURE OPENING MUST BE FRAMED WITH 2x6 OR 2x8 STUDS TO ADEQUATELY SUPPORT FIXTURE WEIGHT.
5. FIXTURE SUPPORT BRACKETS TO BE TIED TO BUILDING STRUCTURE FROM ABOVE USING 1/4" DIAMETER THREADED RODS.
6. FIXTURE MUST BE INSTALLED BEFORE DRYWALL CEILING.

-UNIT DESCRIPTION-

FSK44 (SKY) FIXTURE



QTY: 1

Dimensions: 47.7" x 47.7" x 9.0" high

Weight: 83 lbs

-PARTS SUPPLIED WITH FIXTURE- DRYWALL MOUNTING KIT (FRAME/4X4-KIT-A)

1. SUPPORT BRACKETS QTY: 2
2. MOUNTING HARDWARE (WING NUTS, WASHERS, SCREWS)
3. FRAME KIT

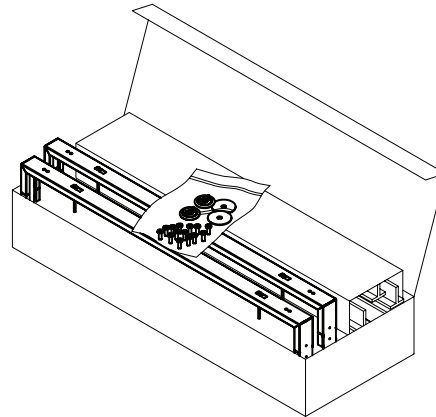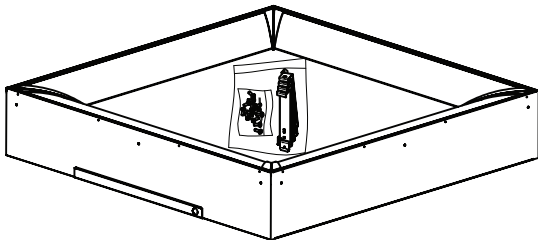

TOOLS AND MATERIALS REQUIRED, BY OTHERS

1. Slotted screw driver
2. Phillips screw driver
3. Pliers
4. Wire nuts
5. 1/4" diameter threaded rods and nuts



EMERGENCY:

SEE BATTERY
MANUFACTURER
INSTRUCTIONS

EMERGENCY MAXIMUM
MOUNTING HEIGHT: 8.00'

CONTRACTOR IS RESPONSIBLE FOR ADEQUATELY REINFORCING WALLS AND/OR CEILINGS TO SUPPORT FIXTURE WEIGHT. FOCAL POINT, L.L.C. ACCEPTS NO RESPONSIBILITY FOR INADEQUATELY REINFORCED WALLS AND/OR CEILINGS.

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FOCAL POINT LLC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF FOCAL POINT LLC IS PROHIBITED.

2016 © FOCAL POINT LLC



FOCAL POINT®


INSTALLATION GUIDE NO.

IS0194


DWG. NO.

REV. E


INSTALLATION GUIDE

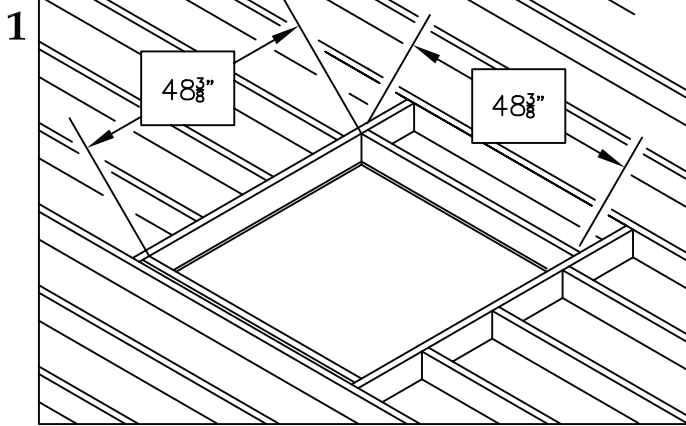


FRAME THE OPENING TO $48 \frac{3}{8} \pm \frac{1}{8}$ " SQUARE USING 2X6 OR 2X8 STUDS.

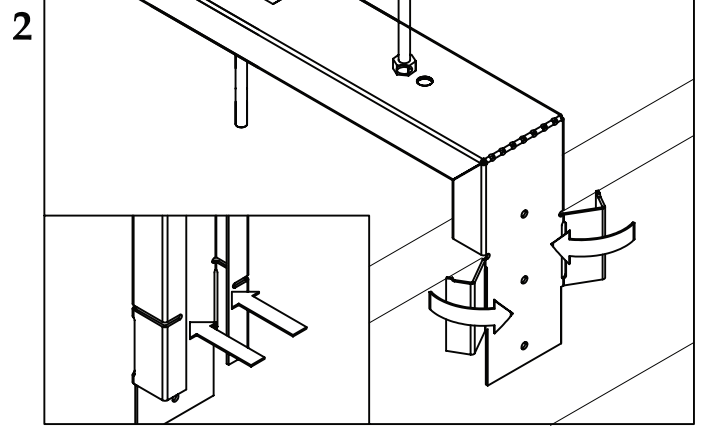


FOR PROPER PLACEMENT OF SUPPORT BRACKET IN CASE OF **2X8 FRAME**, BREAK WEBBING ON SUPPORT BRACKET AND BEND FLANGES BACKWARD. FOR **2X6 FRAME**, USE SUPPORT BRACKET AS SUPPLIED.

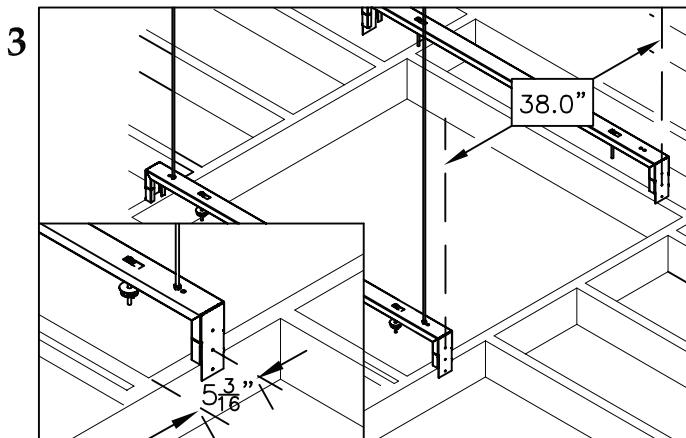


PLACE SUPPORT BRACKET OVER THE OPENING $5 \frac{3}{16}$ " FROM INSIDE EDGE OF OPENING TO CENTER OF BRACKET (SEE INSET) AND SECOND BRACKET 38" O.C FROM THE FIRST BRACKET. FASTEN TO FRAME WITH DRYWALL SCREWS. SECURE SUPPORT BRACKETS TO BUILDING STRUCTURE ABOVE WITH THREADED RODS.

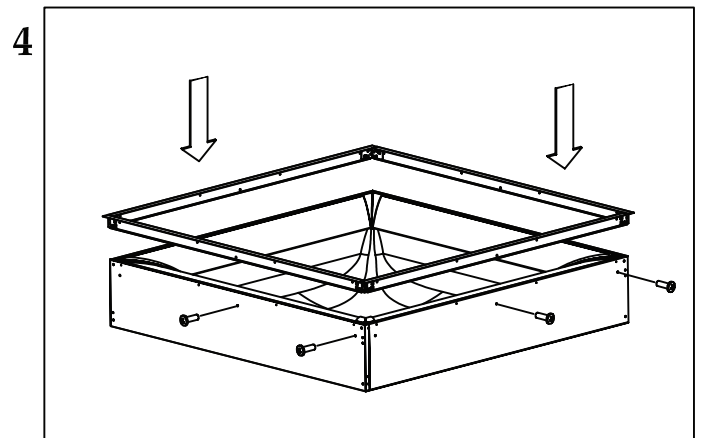

ASSEMBLE THE FLANGE KIT PER INSTRUCTION SHEET IS160. PLACE THE FIXTURE ON FLAT SURFACE WITH SHIELD SIDE UP. PLACE THE FLANGE KIT OVER FIXTURE AND FASTEN WITH #6 SCREWS.

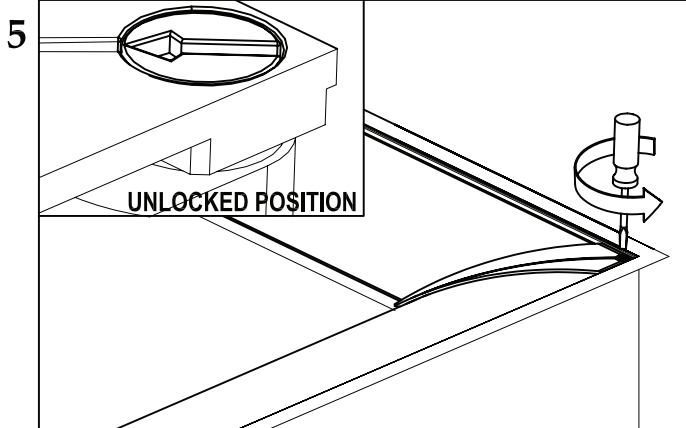


RELEASE SHIELD BY INSERTING SLOTTED SCREW DRIVER INTO RECESSED ARROW ON CORNER CASTING AND ROTATE 180° SO THAT ARROW POINTS TO GROOVE ON CASTING (UNLOCKED POSITION).

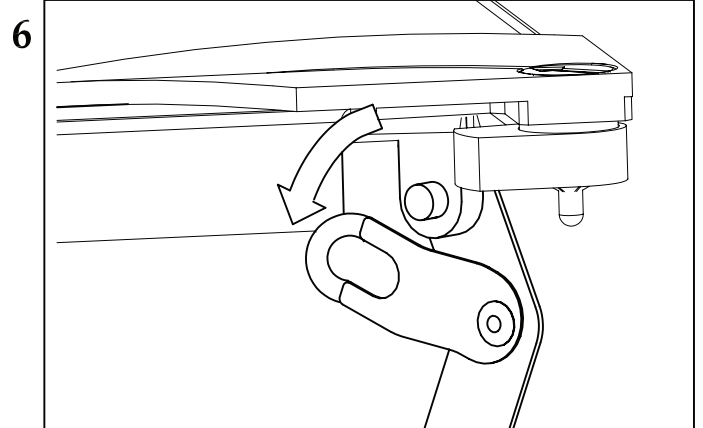


TO REMOVE SHIELD ASSEMBLY, LIFT CLASP OFF OF PIN AND ROTATE TO RELEASE. DETACH HINGE FROM SHIELD ASSEMBLY BY SLIDING PIN OUT OF HOLE ON CASTING. REPEAT ON ALL 4 CORNERS.

7

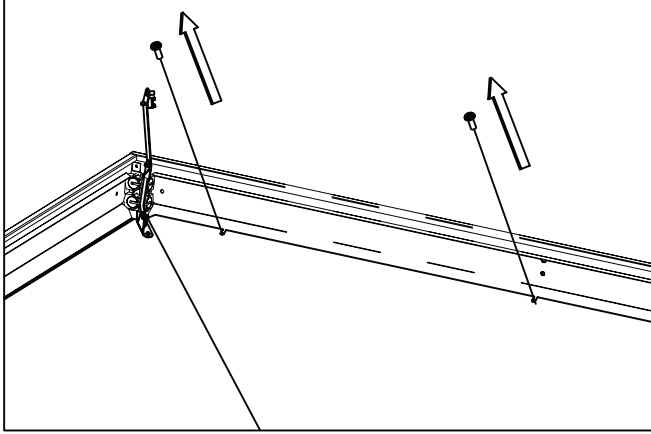


REMOVE 9 SCREWS HOLDING REFLECTOR.

8

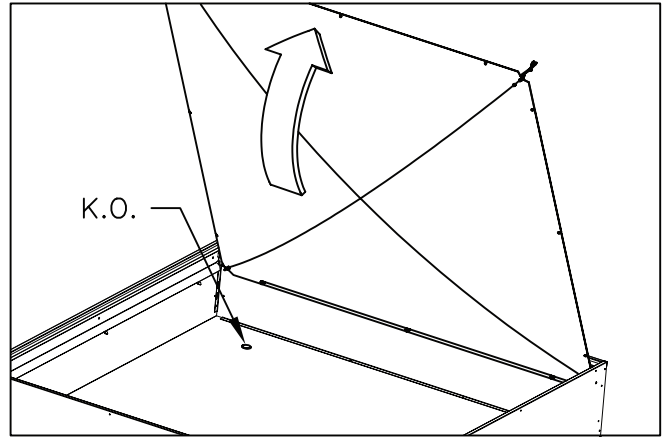


LIFT REFLECTOR ASSEMBLY OUT OF FIXTURE.
REMOVE 4 MOUNTING HOLE KNOCK-OUTS ON TOP
SURFACE OF FIXTURE.

9

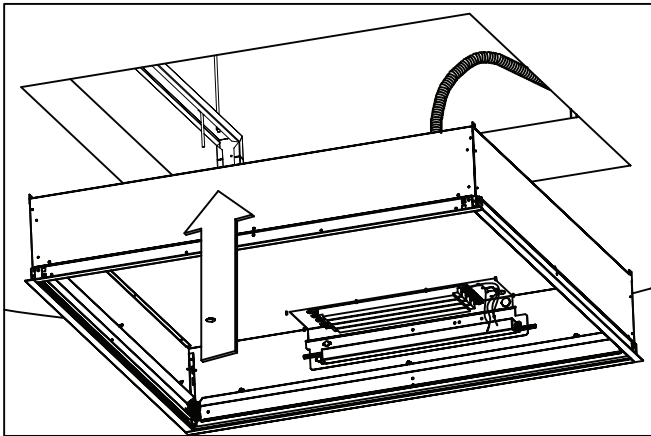

REMOVE THE KNOCK OUT ON BALLAST TRAY AND
MAKE ELECTRICAL CONNECTION TO FIXTURE. LIFT
FIXTURE AND ALIGN MOUNTING HOLES WITH
SCREWS ON SUPPORT BRACKETS. SLIDE FIXTURE
INTO THE CEILING OPENING.


10

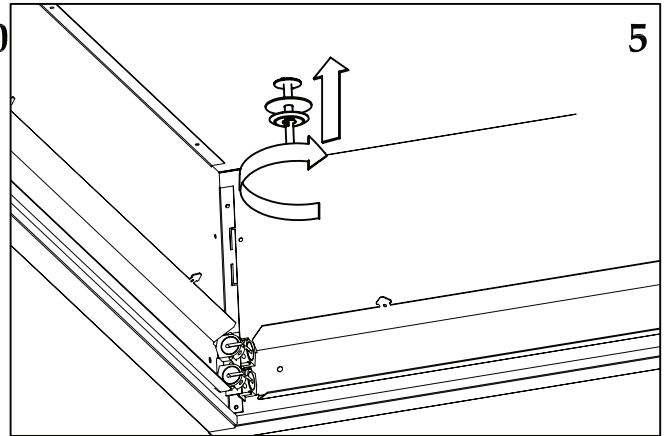

SUPPORTING FIXTURE AGAINST THE CEILING, SLIDE
WASHER OVER SCREW AND FASTEN WITH WING
NUT. REPEAT AT ALL 4 SCREW LOCATIONS.


5

11

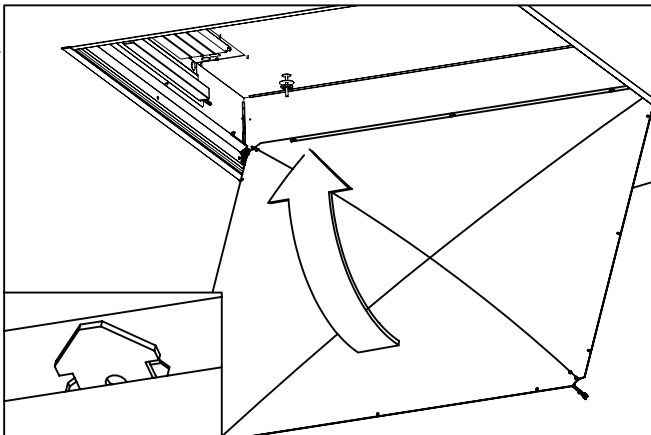

TO REPLACE REFLECTOR, INSERT TABS ON FIXTURE
THROUGH OPENINGS ON REFLECTOR. SWING
REFLECTOR UP INTO HOUSING. WHILE
SUPPORTING THE REFLECTOR, REPLACE 9 SCREWS
REMOVED AT STEP 7.

12

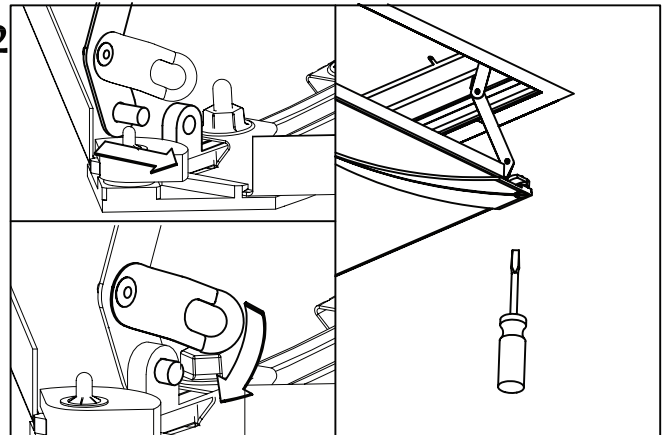

TO REINSTALL SHIELD ASSEMBLY, SLIDE PIN INTO
HOLE IN CASTING. LIFT UP CLASP AND SWING OVER
PIN. REPEAT ON ALL 4 CORNERS. CLOSE SHIELD
ASSEMBLY AND RETURN ALL CORNER CASTINGS TO
LOCKED POSITION.

