

Seem® 2 LED Perimeter

FSM2PR-XFF | MUD-IN DRYWALL



FOCAL POINT®

BEFORE YOU BEGIN


- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY


-  **ATTENTION**
-  **SEE ADDITIONAL INSTRUCTIONS**
-  **POWER OFF**
-  **POWER ON**

COMPONENT KEY

FOCAL POINT

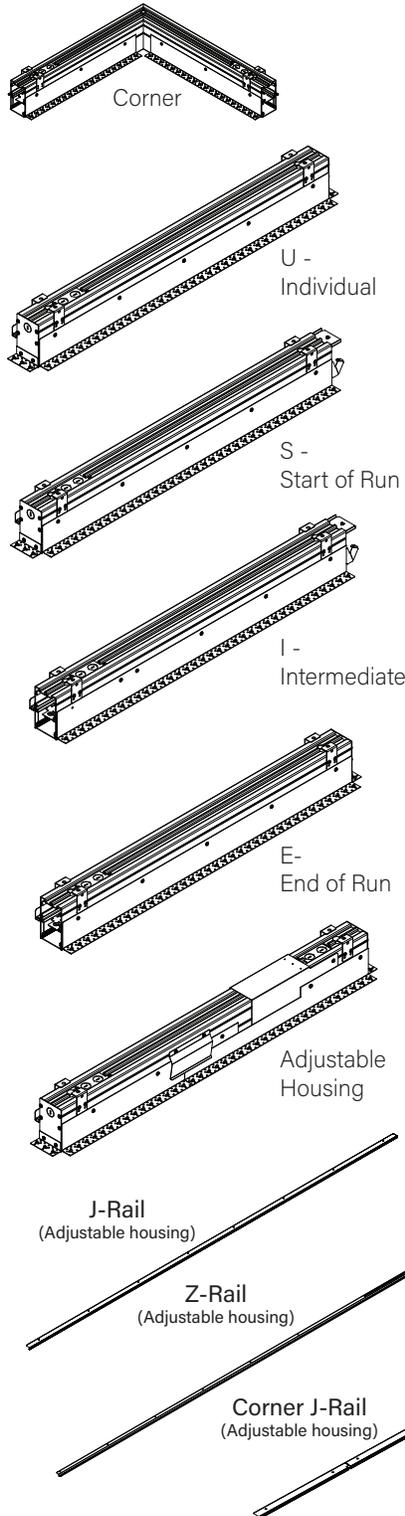

PARTS SHIPPED INSTALLED




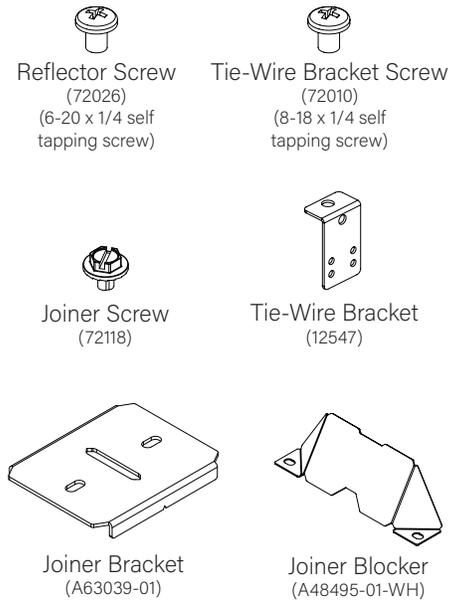















FOCAL POINT RECOMMENDS
STARTING WITH CORNER
INSTALLATION IF APPLICABLE

BASIC INSTALLATION, STEPS 1-16
ADJUSTABLE HOUSING, PAGE 5
CORNERS, PAGE 5-6








WALL/CEILING PREPARATION

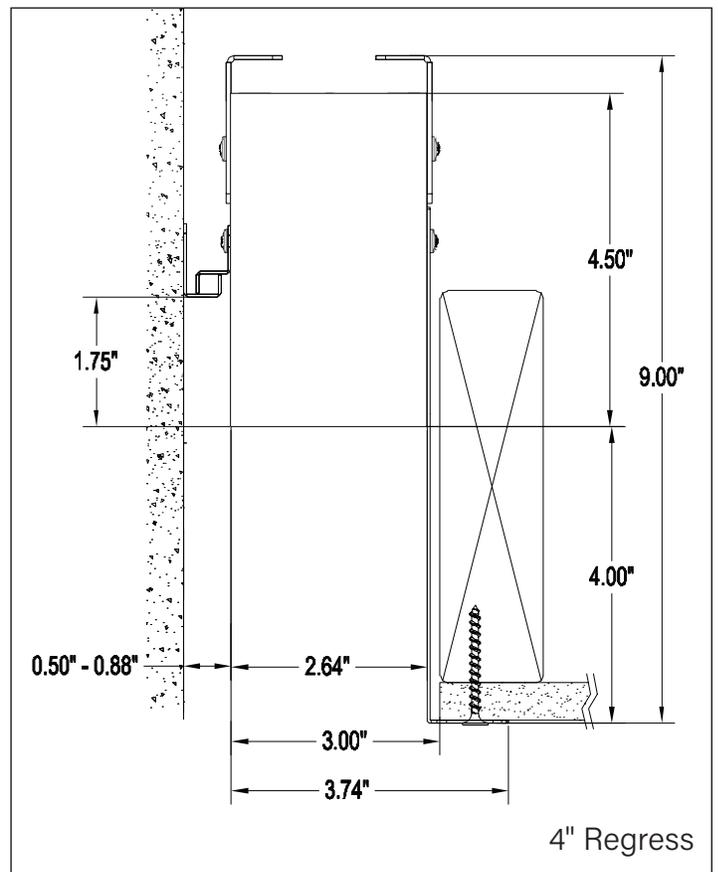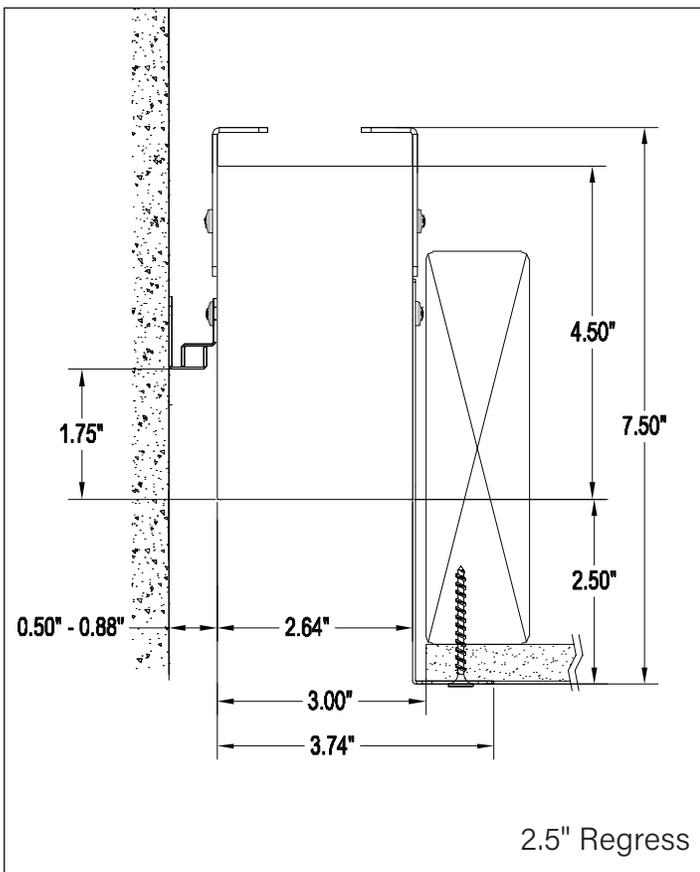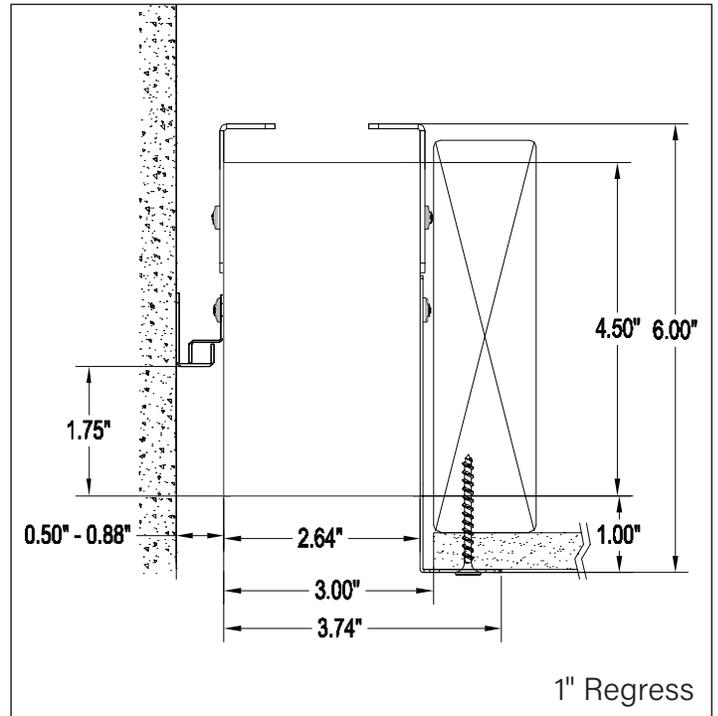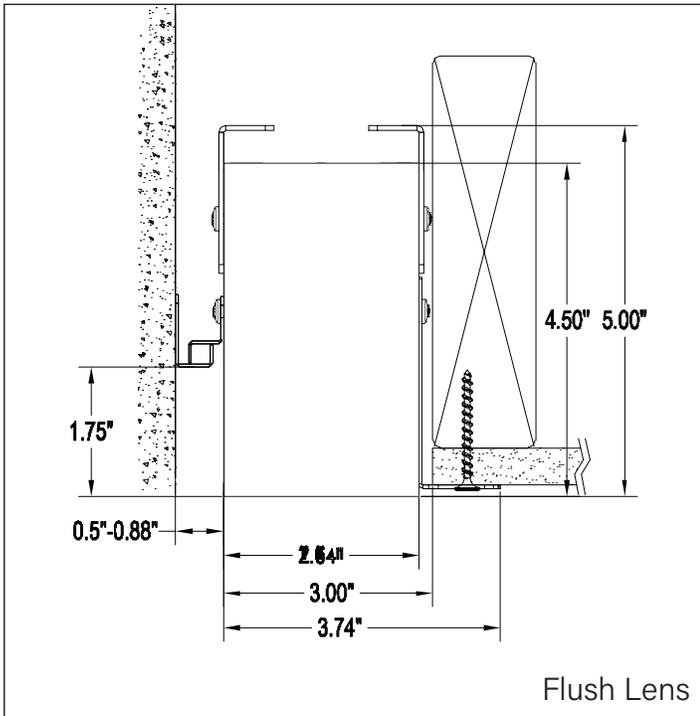

BASIC INSTALLATION

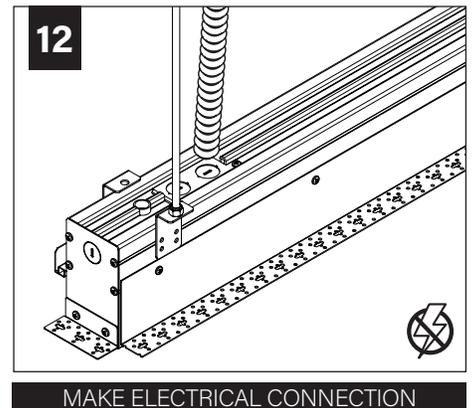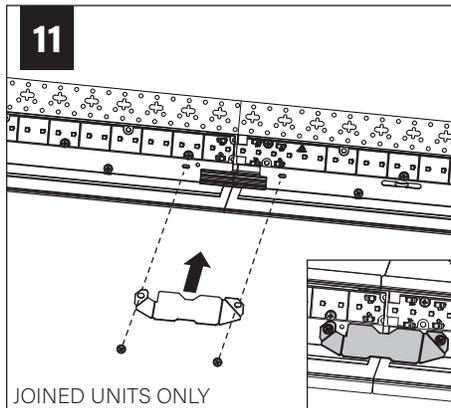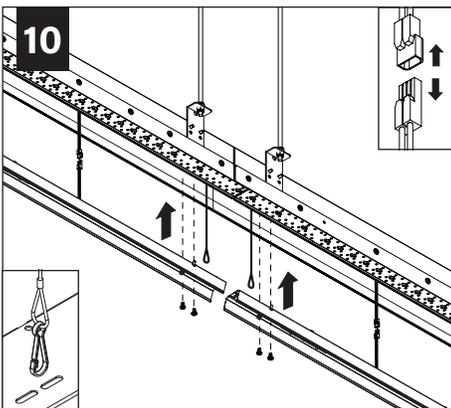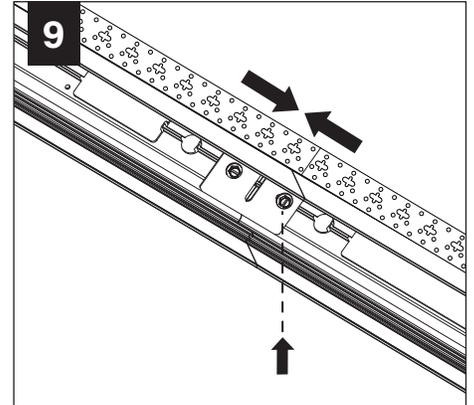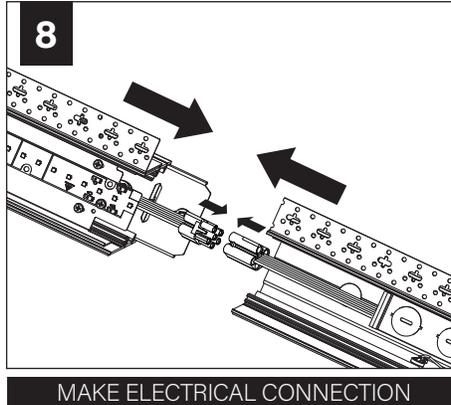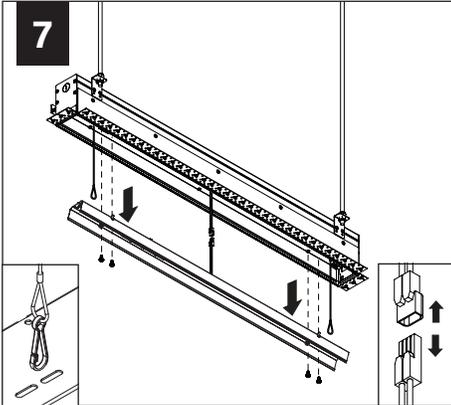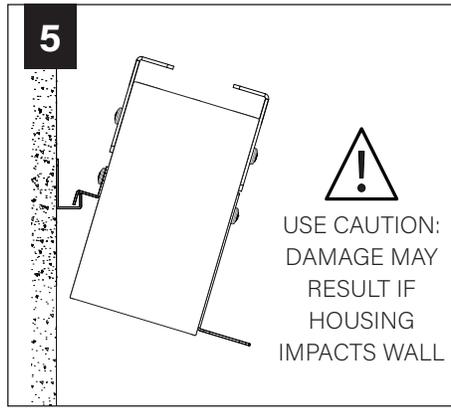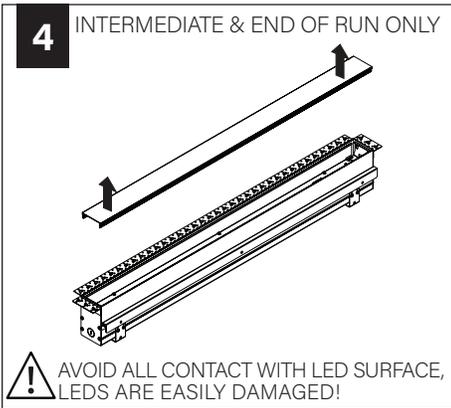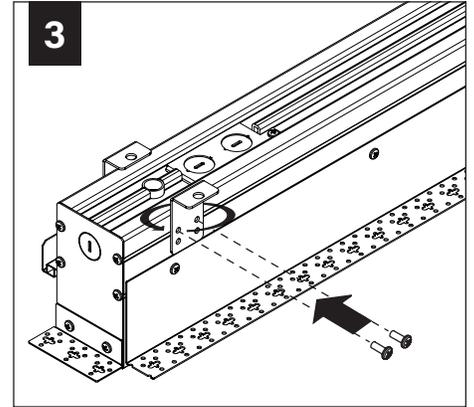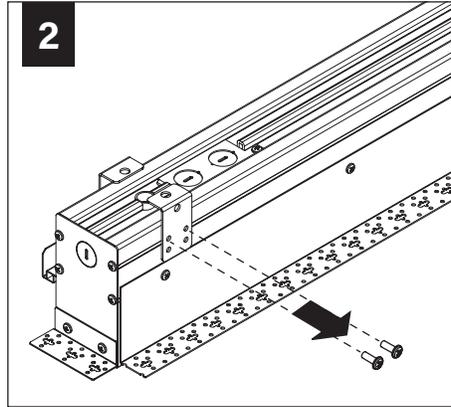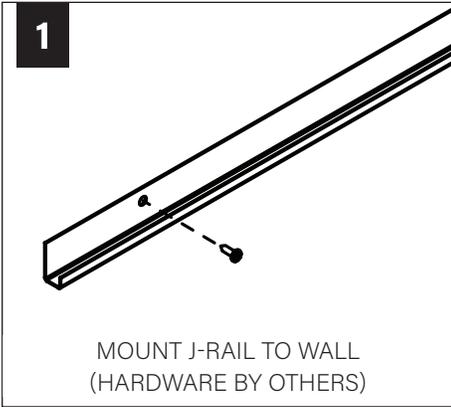

REPEAT STEPS 2 - 11 FOR EACH HOUSING SECTION

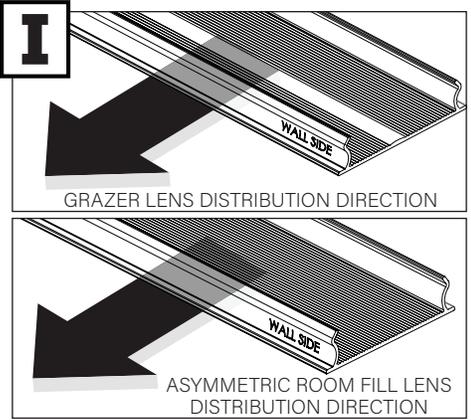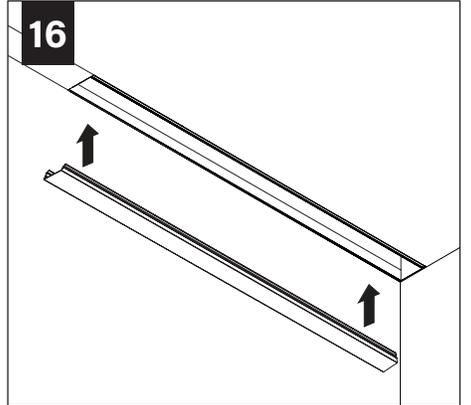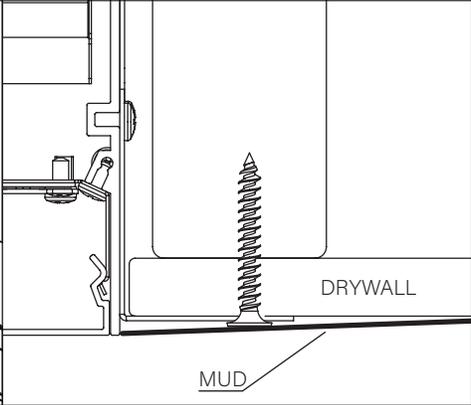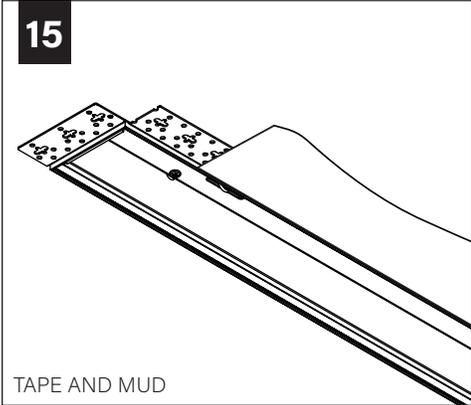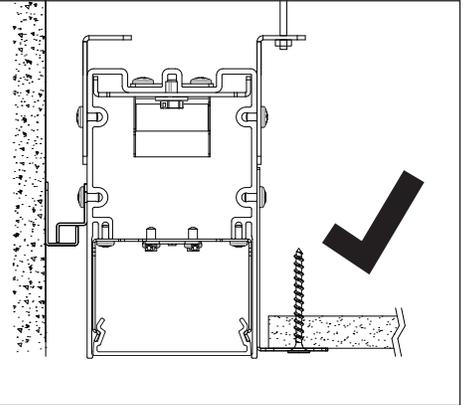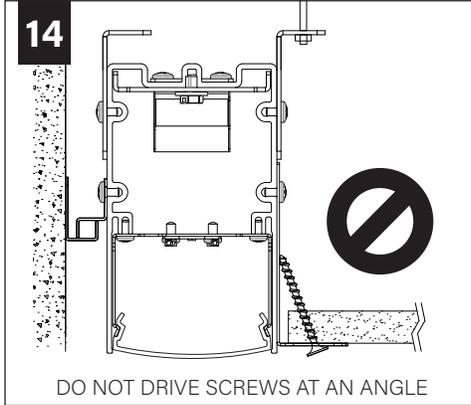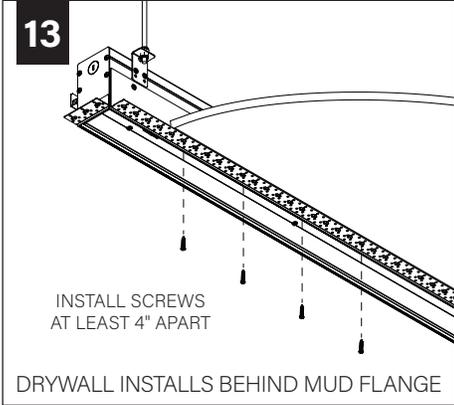

EMERGENCY

I

SEE BATTERY MANUFACTURER
INSTRUCTIONS

**EMERGENCY MAXIMUM MOUNTING HEIGHT
FROM FLOOR TO SURFACE OF LENS:**

17.9'


ADJUSTABLE HOUSING

1




FOLLOW BASIC INSTALLATION INSTRUCTIONS 1-12 ON PAGES 2-3

2

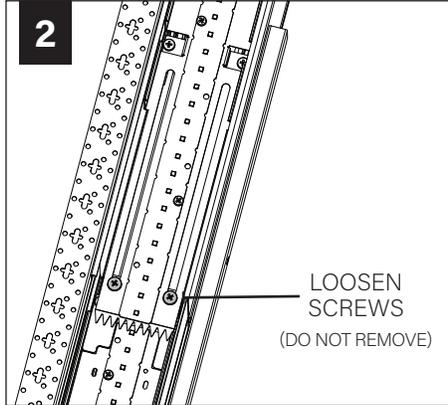


3

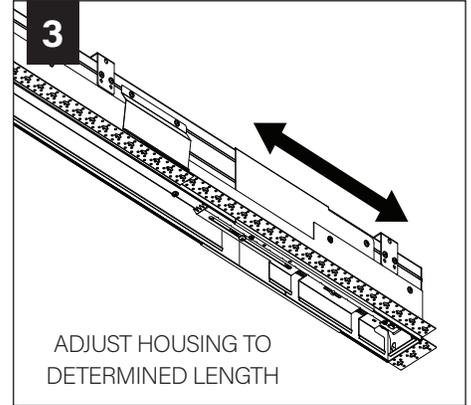


ADJUST HOUSING TO DETERMINED LENGTH

4

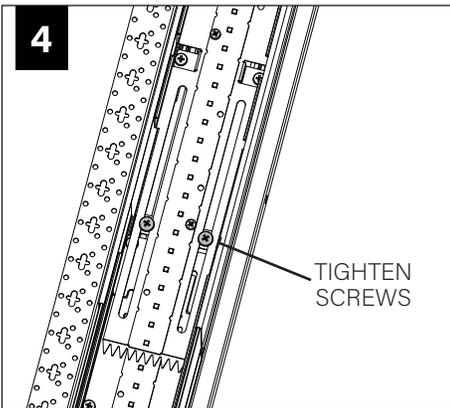

1", 2.5" & 4" REGRESS OPTIONS ONLY


5

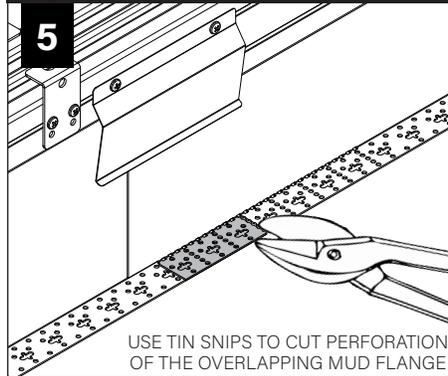

USE TIN SNIPS TO CUT PERFORATION OF THE OVERLAPPING MUD FLANGE

1", 2.5" & 4" REGRESS OPTIONS ONLY


6

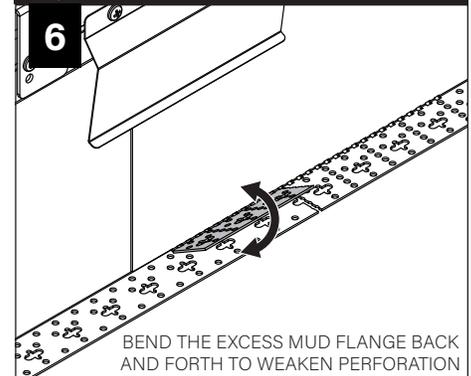

BEND THE EXCESS MUD FLANGE BACK AND FORTH TO WEAKEN PERFORATION


1", 2.5" & 4" REGRESS OPTIONS ONLY

7

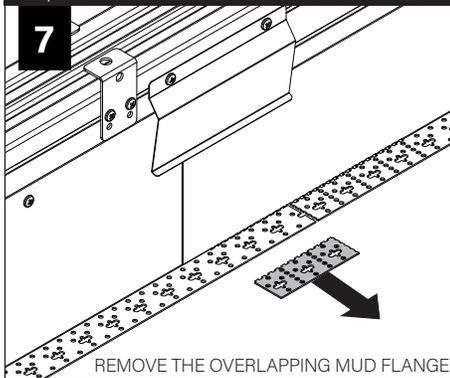


REMOVE THE OVERLAPPING MUD FLANGE

8

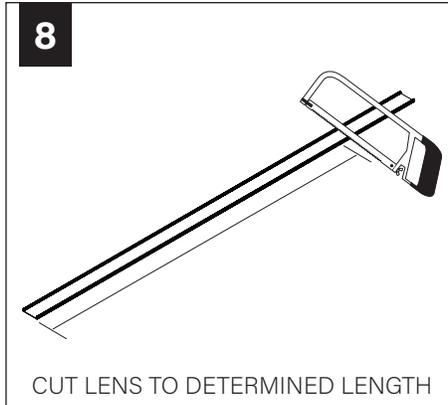


CUT LENS TO DETERMINED LENGTH

9








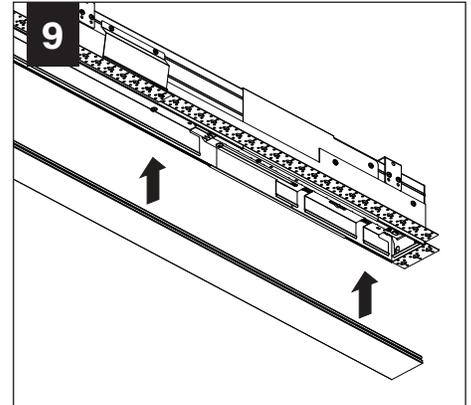


10

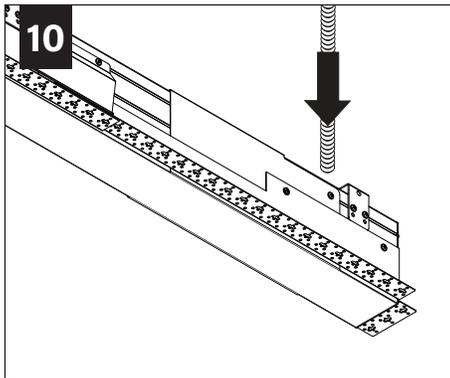

MAKE ELECTRICAL CONNECTION

CORNERS

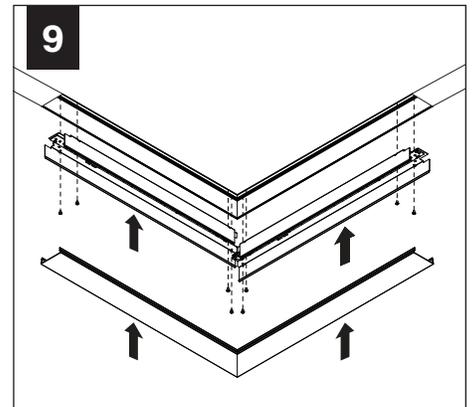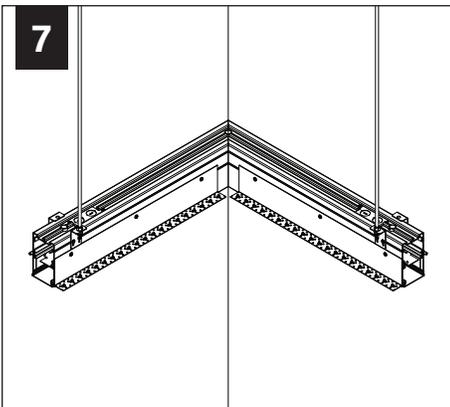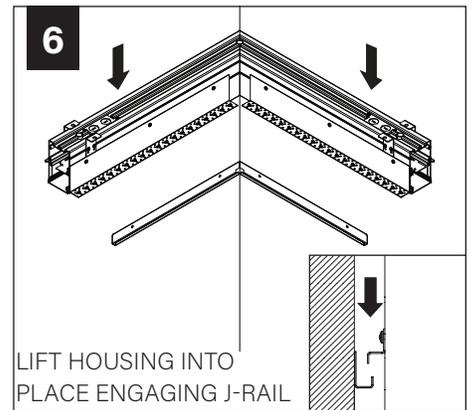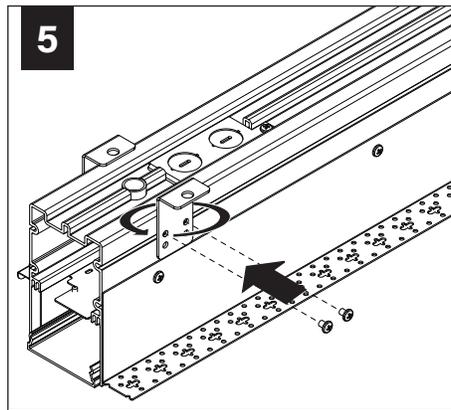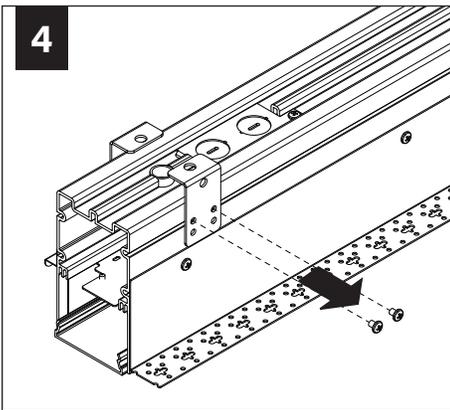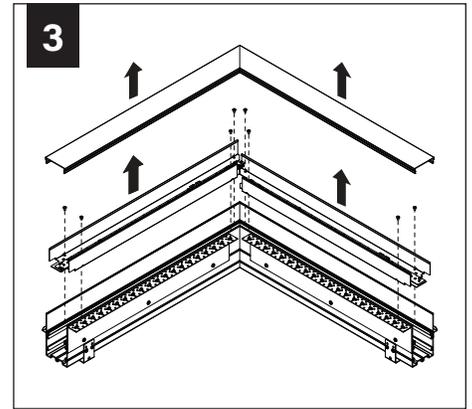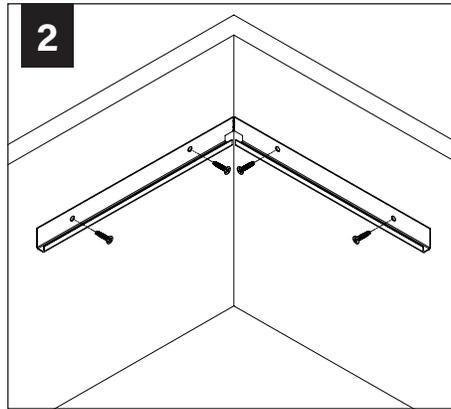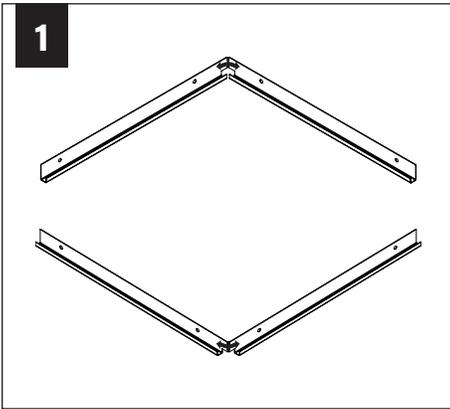

DRIVER SERVICE

