

# seem 4™ wall to ceiling corners




FSM4-CXF





**! LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL. !**

**! CONFIGURATIONS ARE RUN SPECIFIC, PLEASE CONSULT FACTORY DRAWINGS BEFORE BEGINNING INSTALLATION. !**

## FOCAL POINT

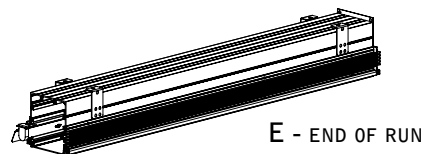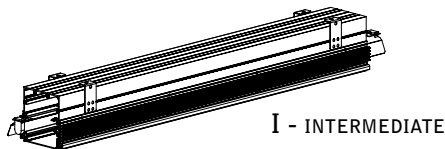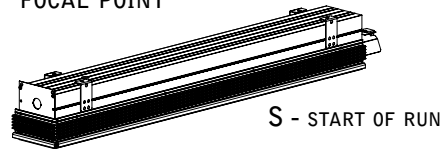


## CORNER UNITS

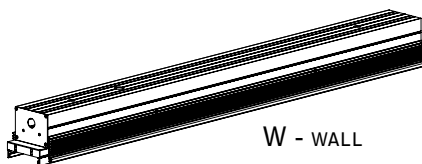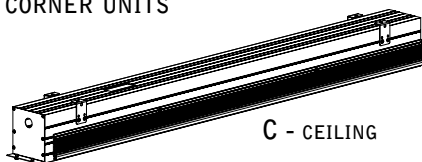


## PARTS LISTS




### SHIPPED IN HARDWARE BAG

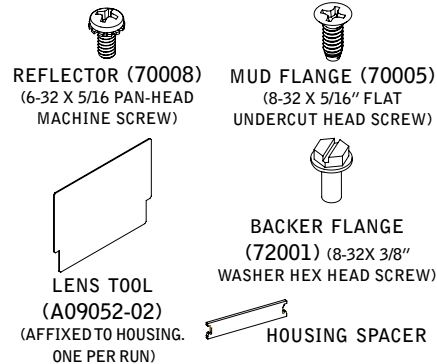



### SHIPPED INSTALLED

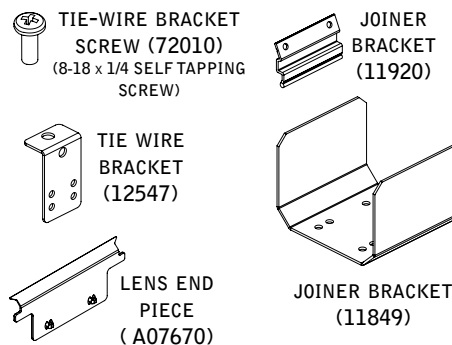



## KEY

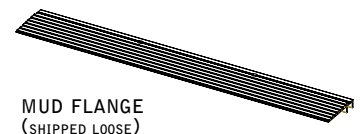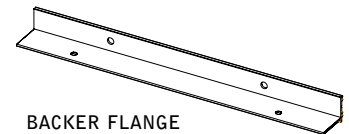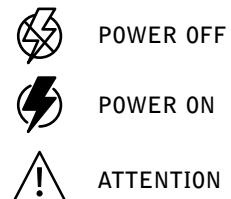



**2"x6" FRAMING REQUIRED ON BOTH SIDES OF WALL MOUNTED HOUSINGS**

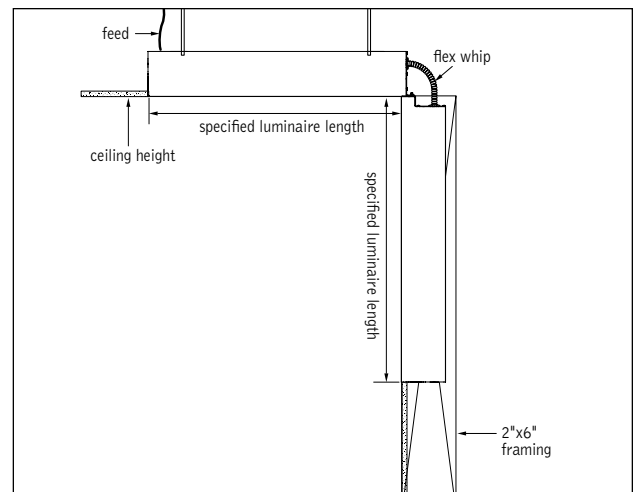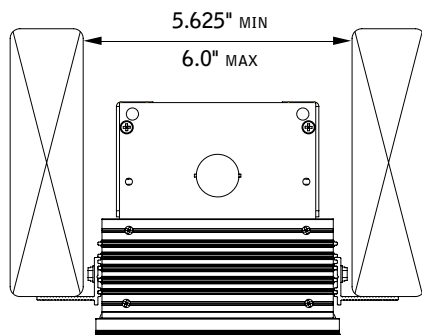

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

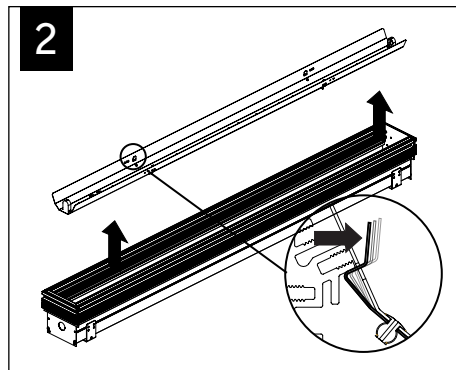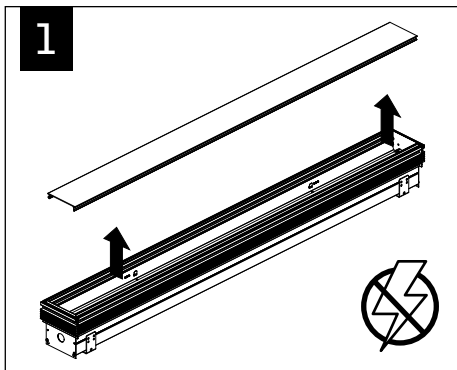


#### CEILING UNITS ONLY

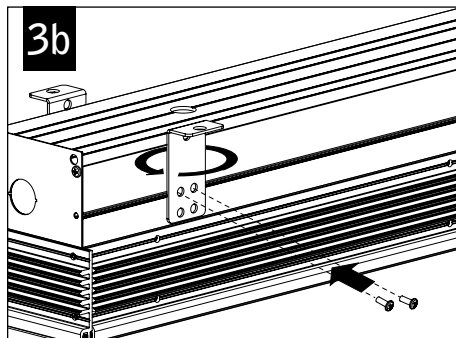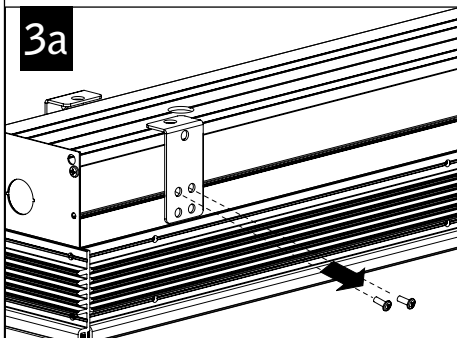




**4** USING THE BACKER FLANGE PLACEMENT GUIDE FROM **PAGE 1** DETERMINE THE PROPER PLACEMENT OF THE BACKER FLANGE FOR YOUR DRYWALL THICKNESS.

IF BACKER FLANGES WERE PRE-INSTALLED SKIP TO STEP 6

#### BACKER FLANGE PLACEMENT GUIDE

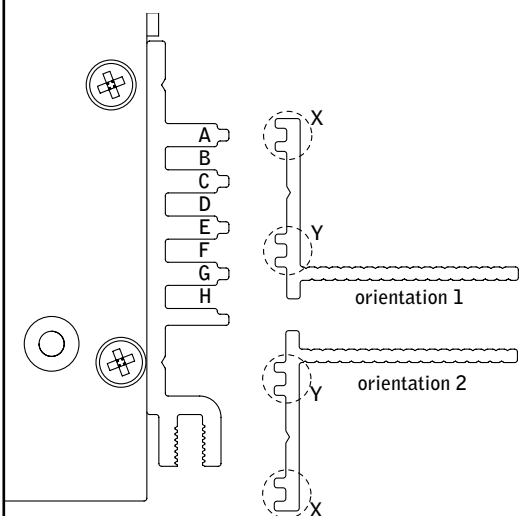







DRYWALL THICKNESS	ORIENTATION	GUIDE POINT	POSITION
3/8"	1	X	F
1/2"	1	X	E
5/8"	1	X	D
3/4"	1	X	C
7/8"	1	X	B
1"	1	X	A
1 1/8"	1	Y	G
1 1/4"	2	Y	F
1 3/8"	2	Y	E
1 1/2"	2	Y	D
1 5/8"	2	Y	C
1 3/4"	2	Y	B
1 7/8"	2	Y	A
2"	2	X	E
2 1/8"	2	X	D

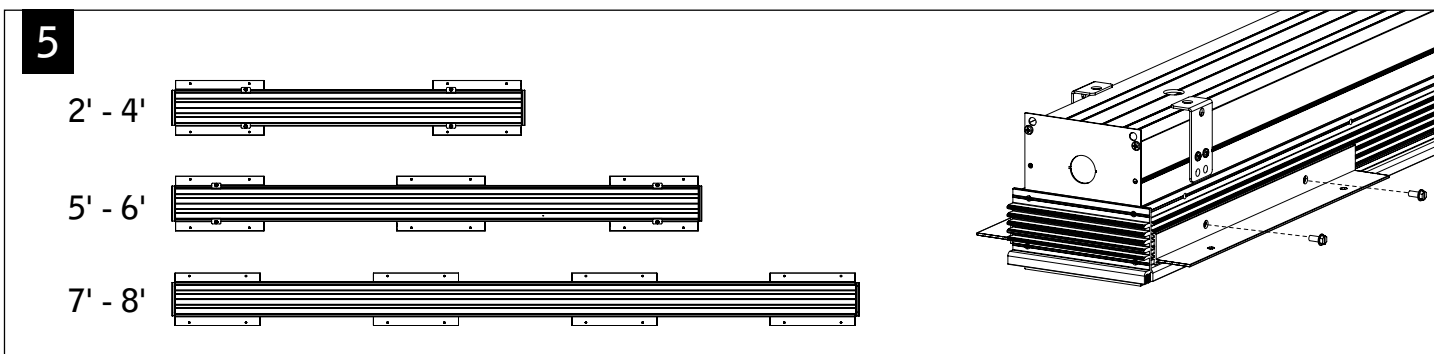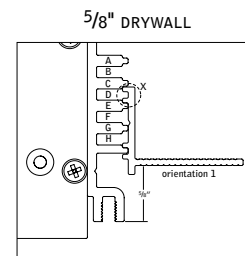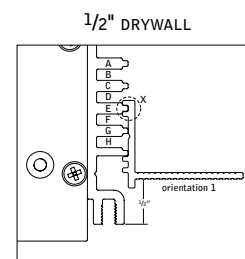






Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## CORNER UNITS (C & W) INSTALLATION

### WALL CORNER UNIT (W) ONLY

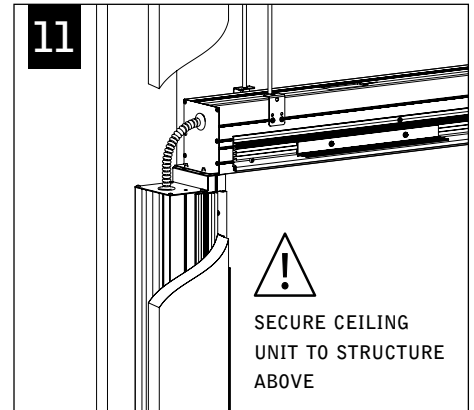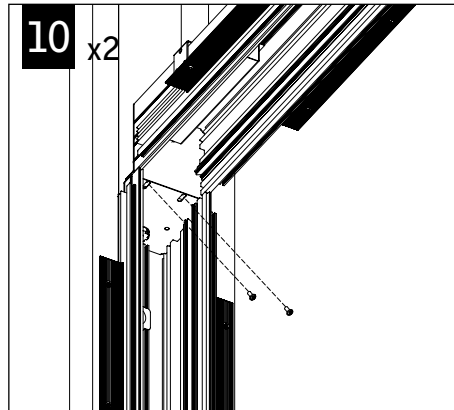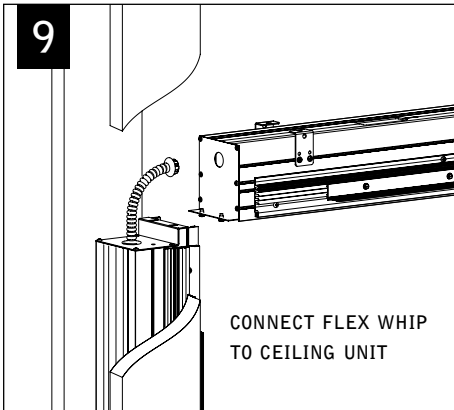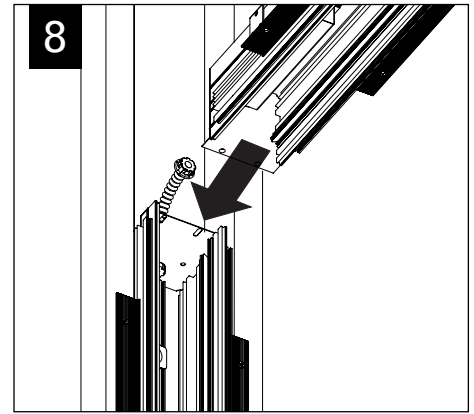
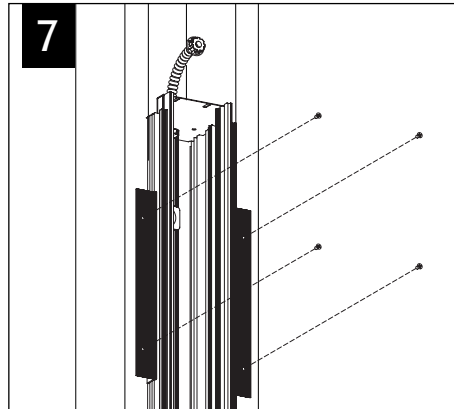
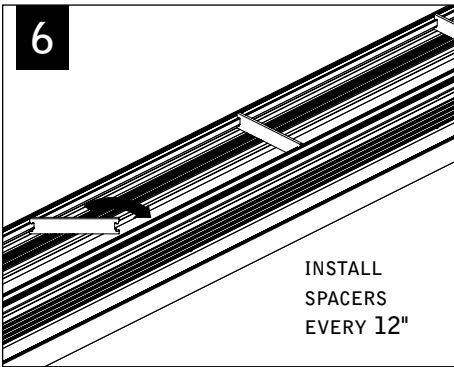


### CONTINUE INSTALLING REMAINING CEILING UNITS

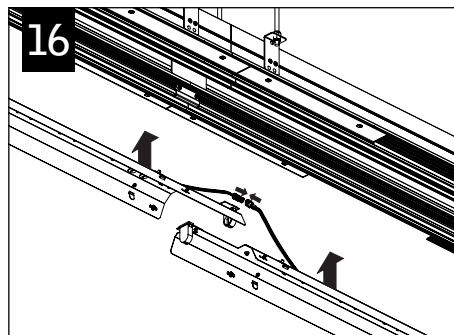
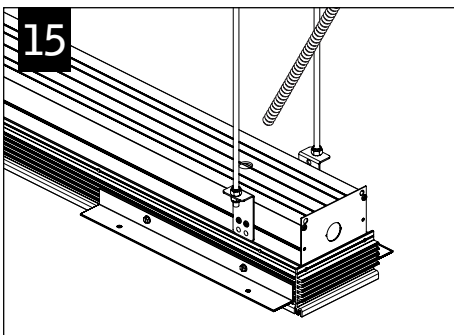
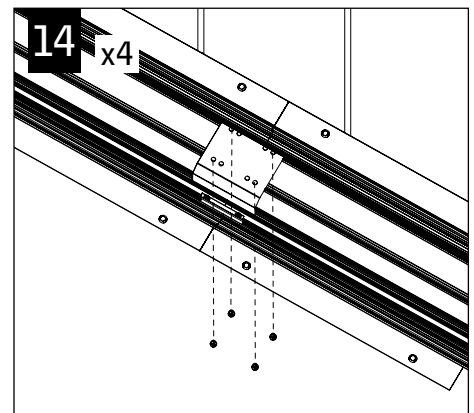
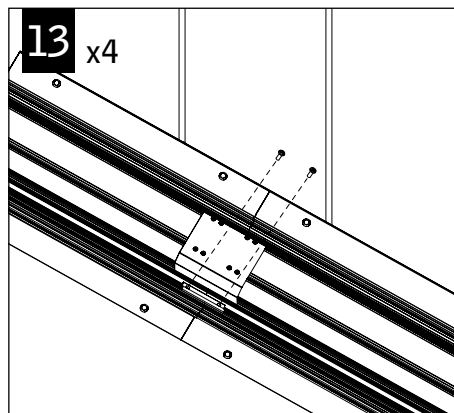
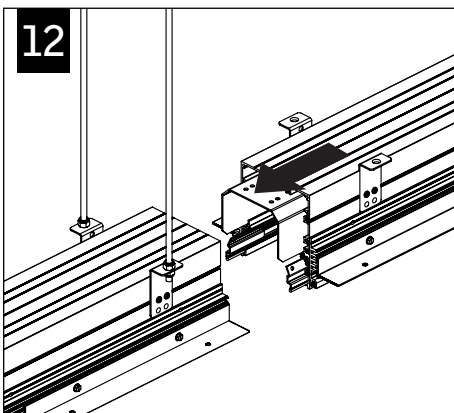


### MAKE ELECTRICAL CONNECTIONS


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

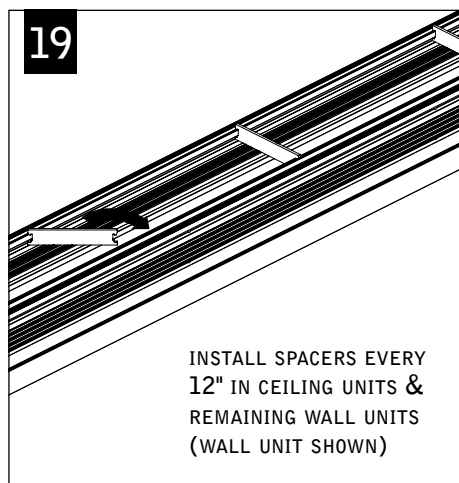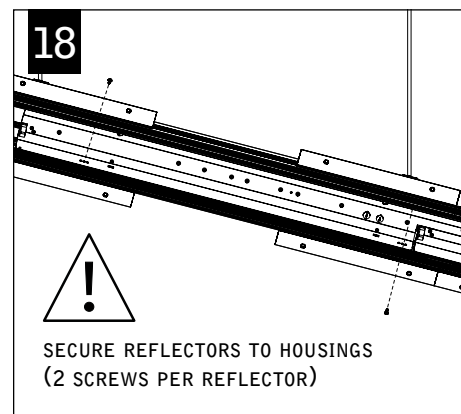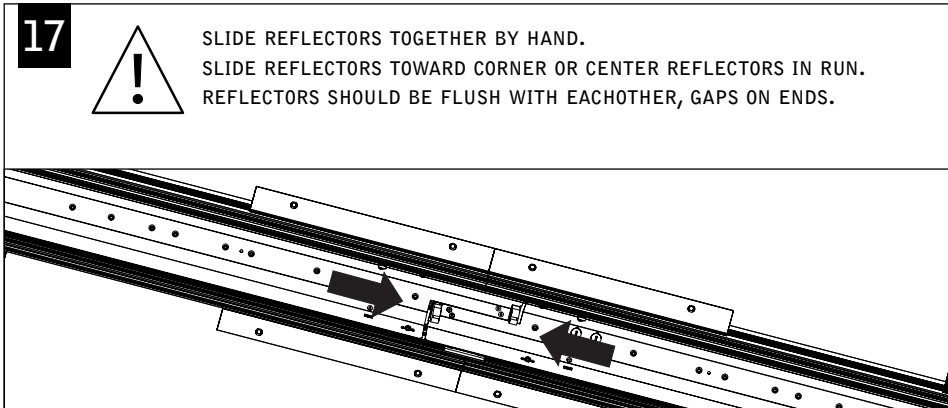

## INSTALL REMAINING WALL HOUSINGS

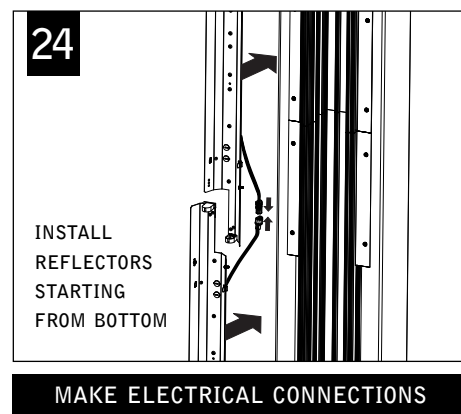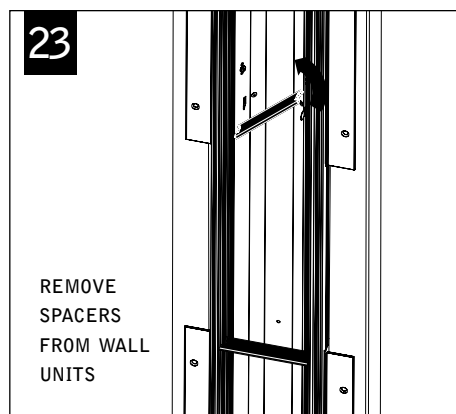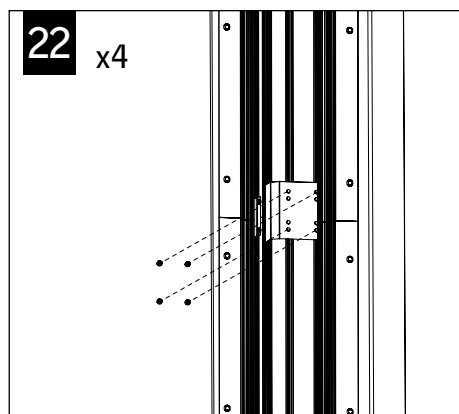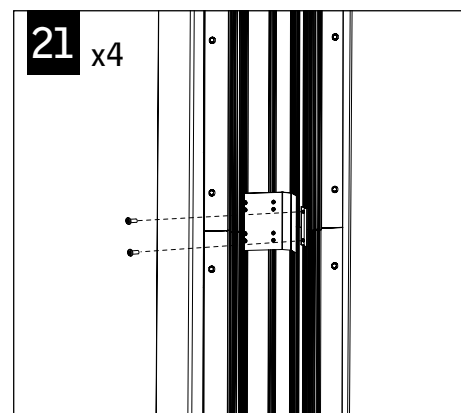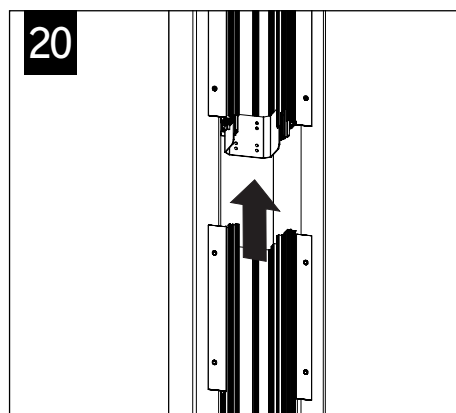

## MAKE ELECTRICAL CONNECTIONS

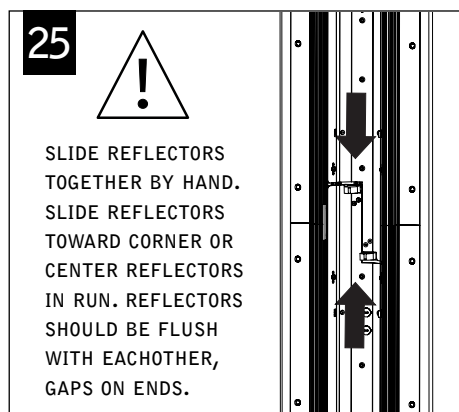

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## BEGIN DRYWALL INSTALLATION (CEILING UNITS SHOWN)


27




### ATTENTION

BEFORE BEGINNING DRYWALL  
INSTALLATION CONSULT GUIDE ON  
**PAGE 2** TO ENSURE THE BACKER  
FLANGE IS SET AT THE CORRECT  
DEPTH FOR THE DRYWALL.


28

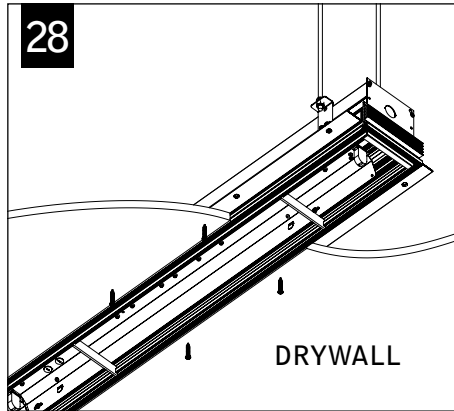


29

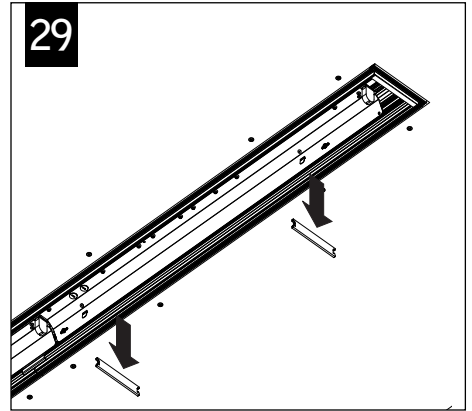


30

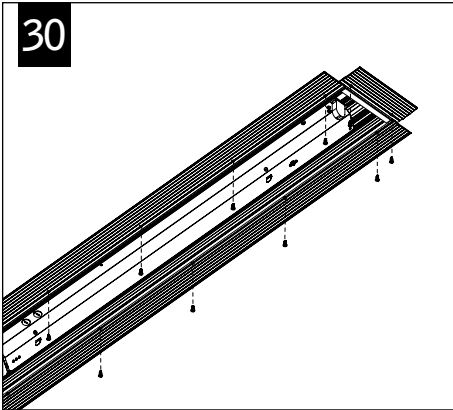

31

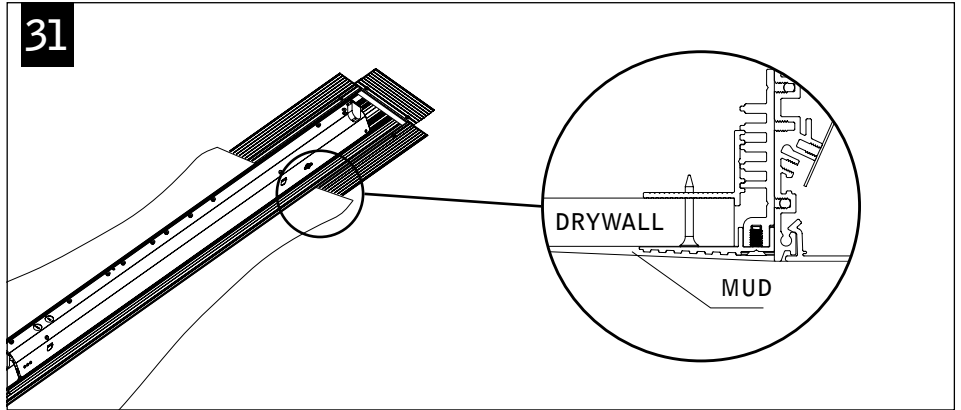

32

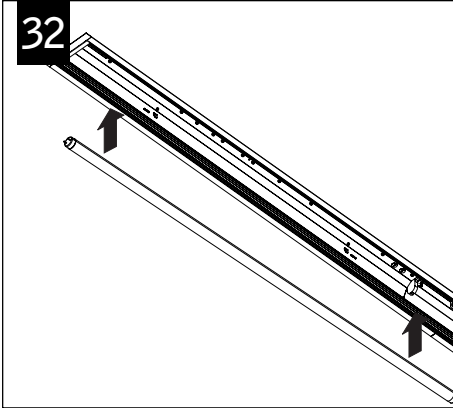


33



34







35

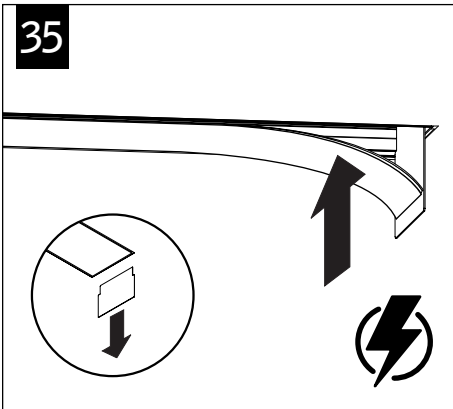

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## BALLAST SERVICE (CEILING UNITS SHOWN)

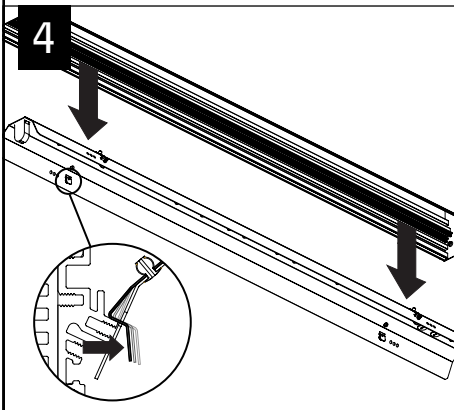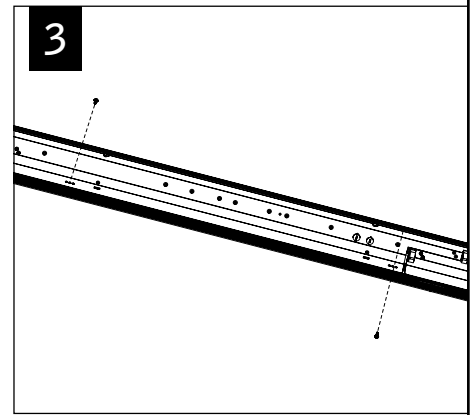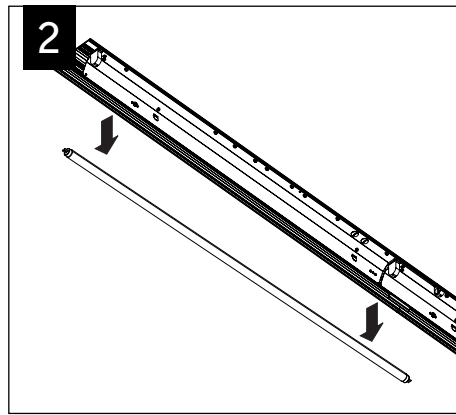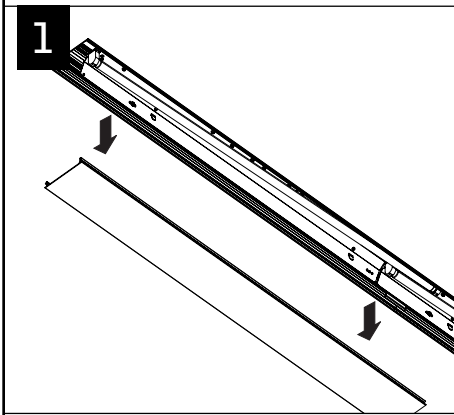

Contractor is responsible for adequately reinforcing walls and/or ceilings to support luminaire weight. Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings. The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.