

# vision™ III

FTV-22



FOCAL POINT



DRYWALL FRAME KIT  
SHIPS SEPARATELY

KEY



POWER OFF



POWER ON



ATTENTION



SEE ADDITIONAL  
INSTRUCTIONS




GLOVES  
REQUIRED

## DRYWALL ONLY

FOLLOW FOCAL POINT  
INSTRUCTIONS FOR  
DRYWALL FRAME KIT.  
SEE IS160.




## LUMINAIRE ORIENTATION

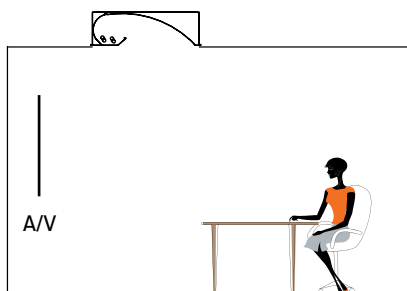


ORIENT LUMINAIRE  
AS ILLUSTRATED FOR  
AUDIO/VISUAL USE

1

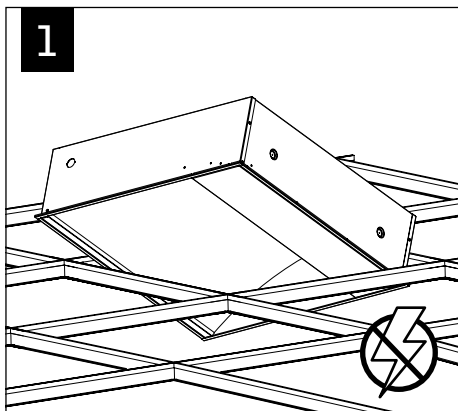


2

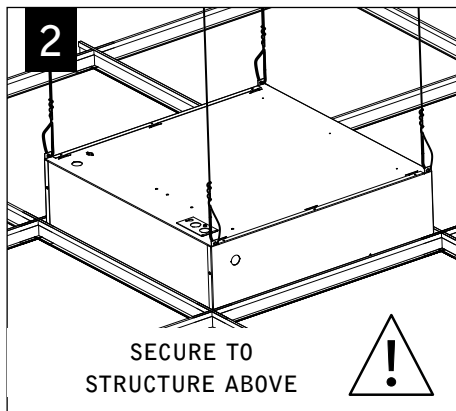

SECURE TO  
STRUCTURE ABOVE




3

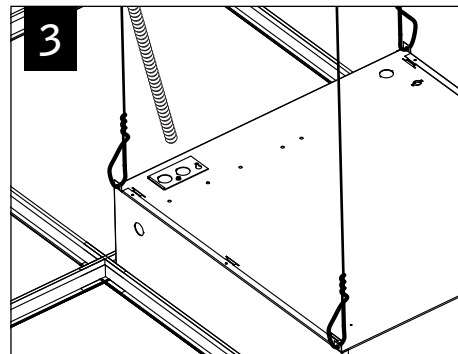


MAKE ELECTRICAL CONNECTIONS

4

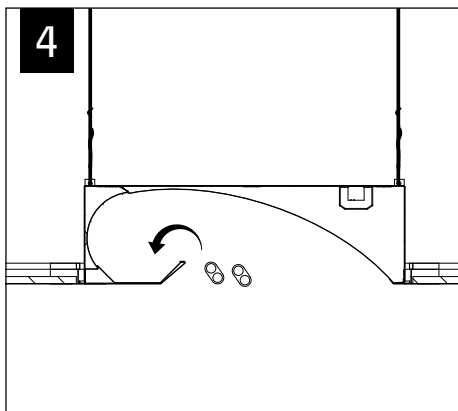


5

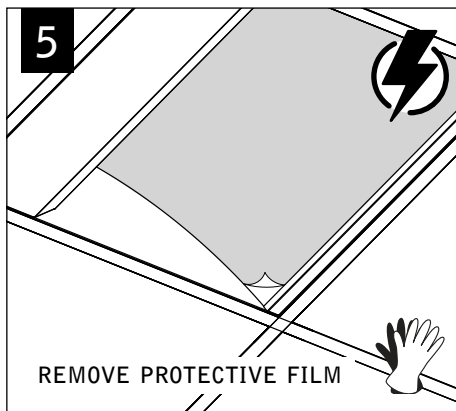

REMOVE PROTECTIVE FILM



## BALLAST SERVICE

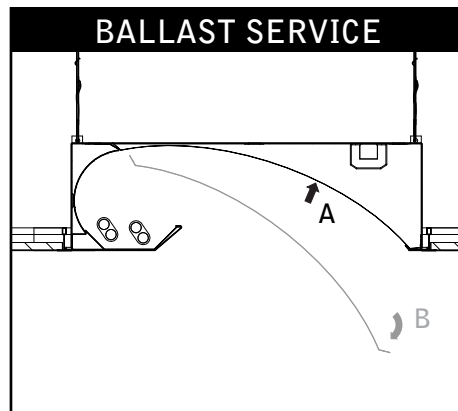

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

Contractor is responsible for adequately reinforcing walls and/or ceilings to support luminaire weight. Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings. The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.