



## FOCAL POINT

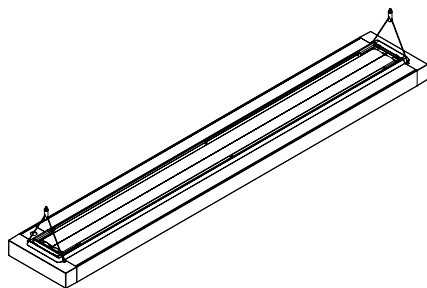

UNIVERSAL SUSPENSION SYSTEM - SHIPS SEPARATELY

## UNIT DESCRIPTION

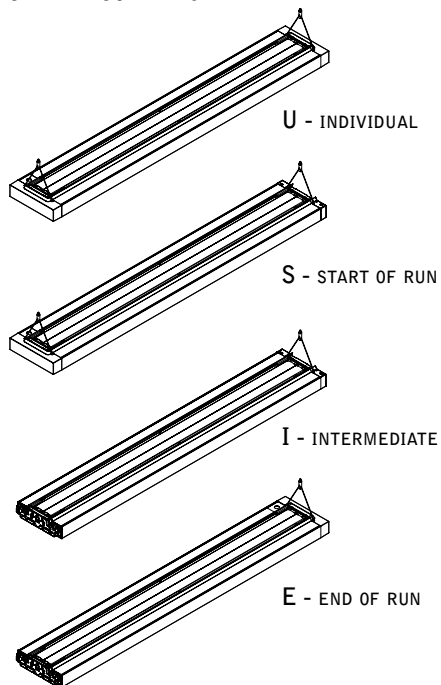

## KEY



POWER OFF



POWER ON



LEVEL




ATTENTION



ADDITIONAL INSTRUCTIONS  
ISO166



LOCKING SCREW ALLOWS FOR  
Y-CABLE ADJUSTMENT

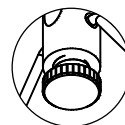


1

FOLLOW FOCAL POINT  
INSTRUCTIONS FOR  
UNIVERSAL SUSPENSION  
SYSTEM ASSEMBLY.


SEE ISO166




2

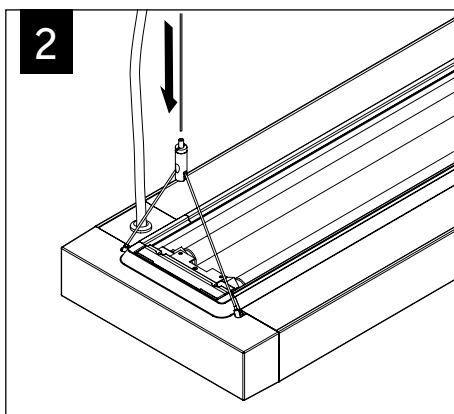

3

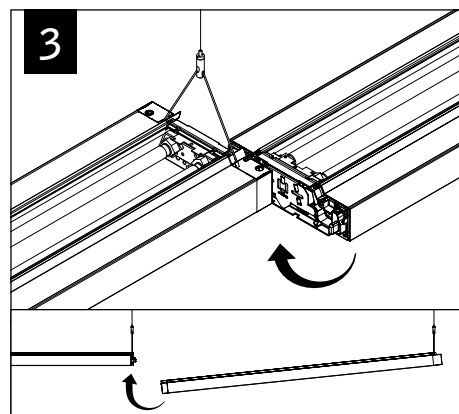


4

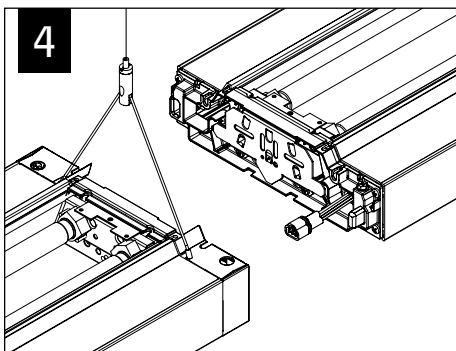


MAKE ELECTRICAL CONNECTIONS



5 x2

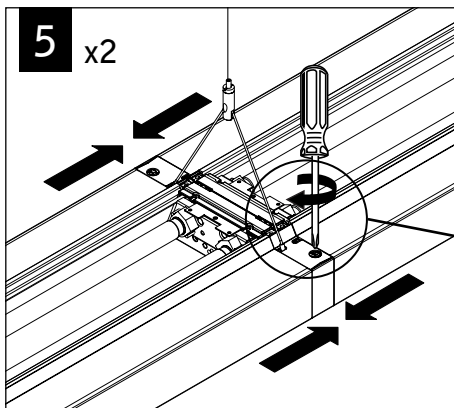




HAND TIGHT ONLY

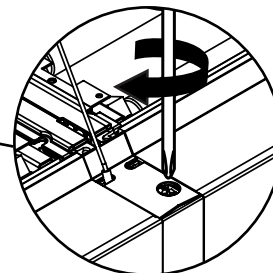

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

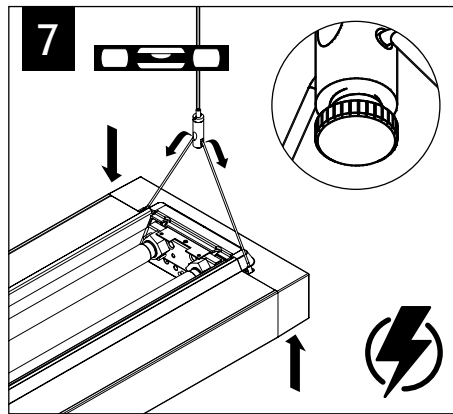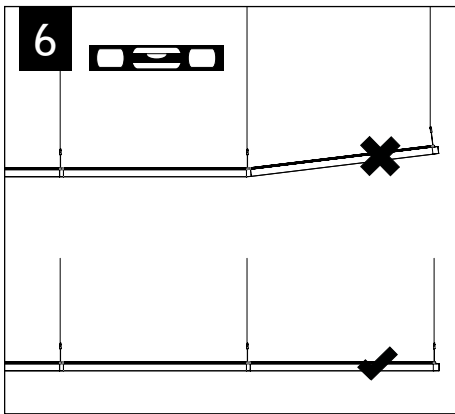

## LAMPING (FROM BOTTOM ONLY)

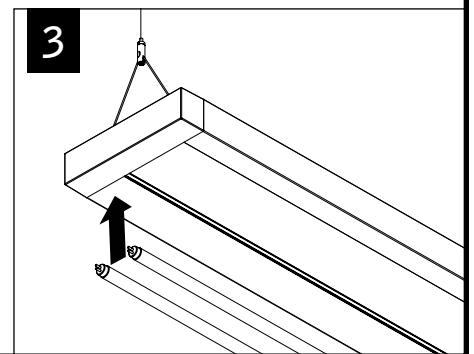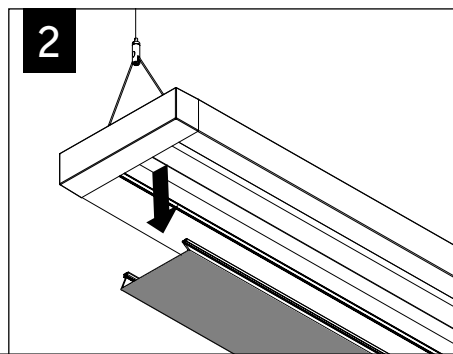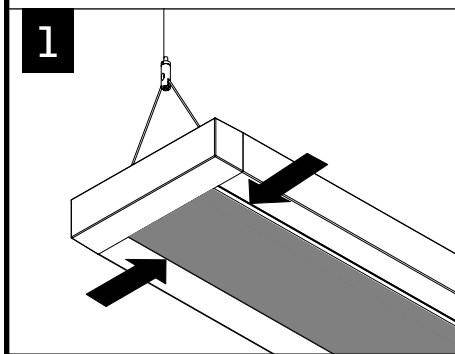

## BALLAST SERVICE

