Polina® Acoustic

TriCore® Acoustic Construction

SCONCE | APOLC-SHX-RWM | APOLC-RND-RWM | RPSPOL

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS

POWER OFF

POWER ON

HANDLING & CLEANING

Always handle with clean white gloves (provided).


Use can of compressed air to remove dust and debris from shade and dust cover.

Use lint roller to gently lift any remaining debris from shade.


Lightly wipe dust cover with damp cloth. Do not leave excess moisture on surface.

COMPONENT KEY

ACOUSTIC SHADES - SOFT HEXAGON

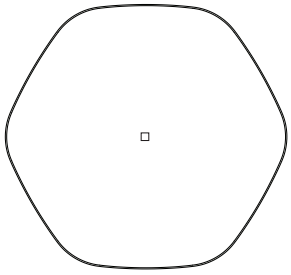


27" Shade

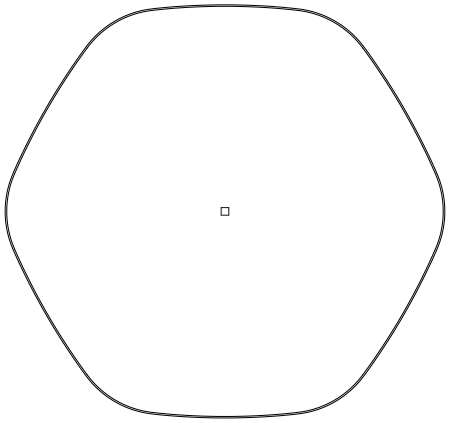


42" Shade

ACOUSTIC SHADES - ROUND

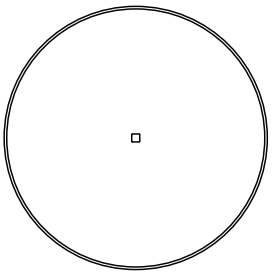


25" Shade

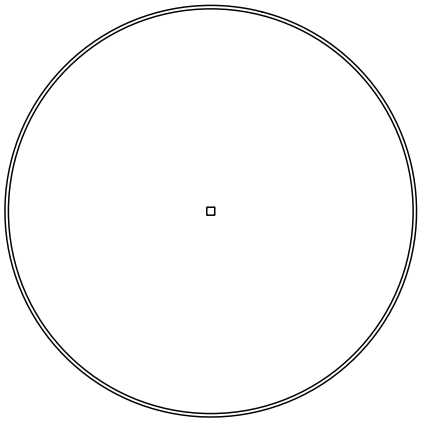


39" Shade

LIGHT ENGINE - HEXAGON

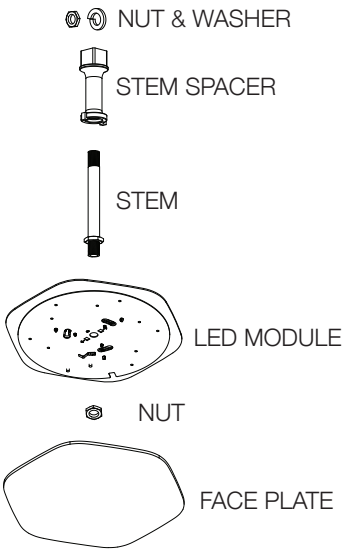


LIGHT ENGINE - ROUND

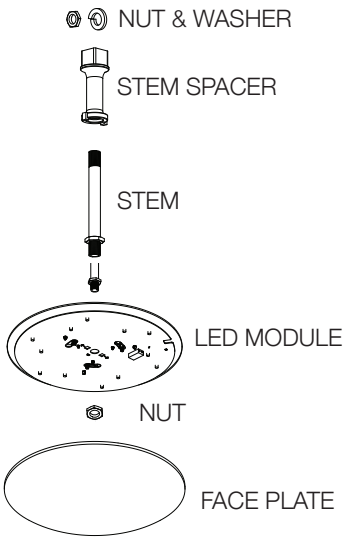


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

COMPONENT KEY

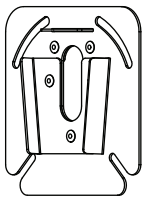

J-box Mounting Bracket

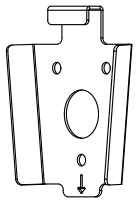


Shade Mounting Bracket




Shade Mounting Bracket Screws (PN 72023)

REMOTE POWER BOX

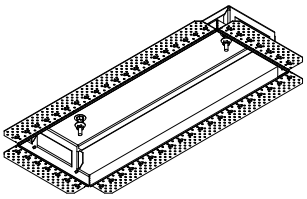


MUD-IN CHASIS

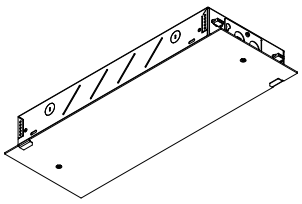


MUD-IN REMOTE POWER BOX

J-BOX


4" OCTAGONAL J-BOX REQUIRED

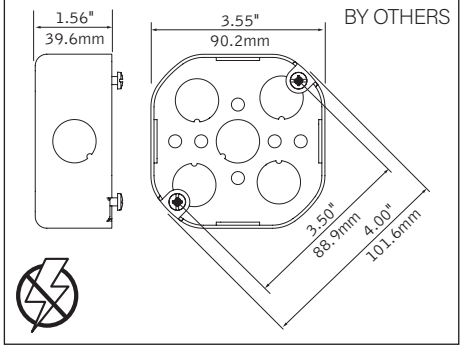


1 INSTALL J-BOX AND WIRING PRIOR TO DRYWALL INSTALLATION

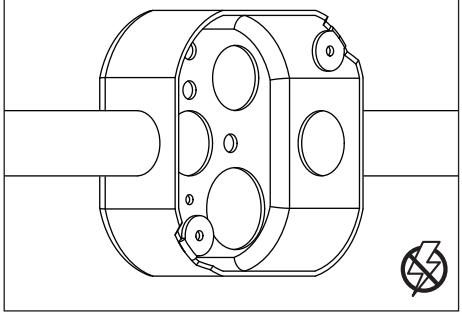

2

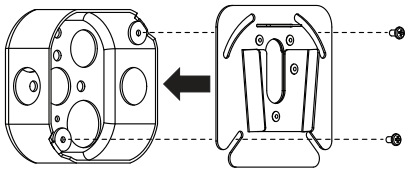



3

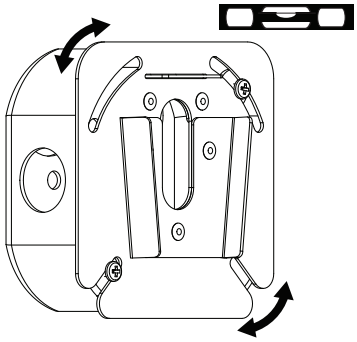

REMOTE POWER BOX - MUD-IN DRYWALL


1

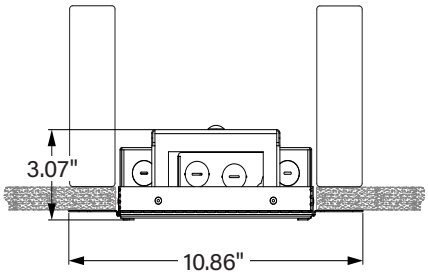

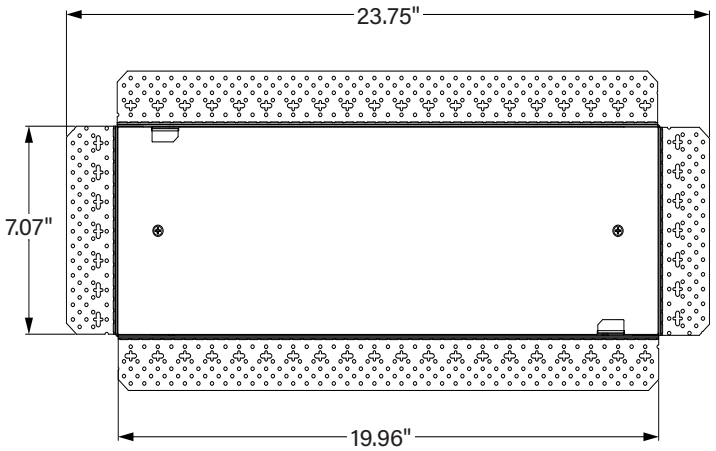


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

2 CUTOUT DIMENSIONS
20.125" x 7.25"

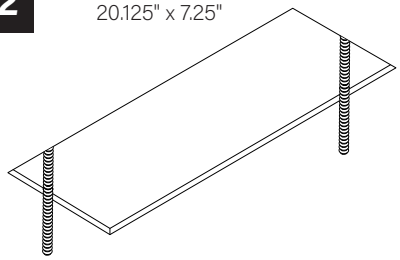


MAIN POWER FEED AND FEED TO J-BOXES MUST BE ACCESSABLE FROM BELOW CEILING POST DRYWALL

3

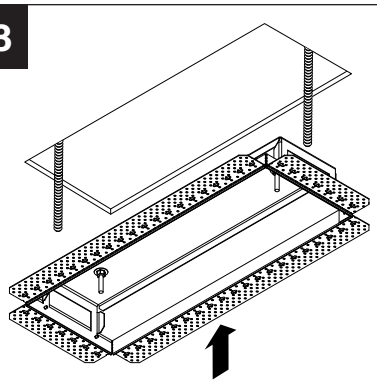


4

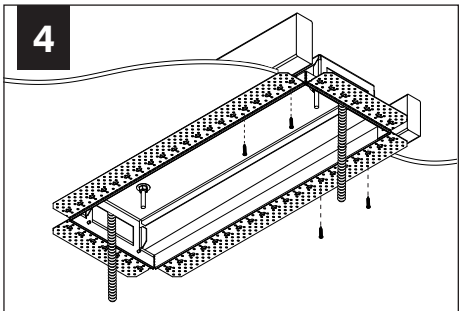


DRYWALL INSTALLS BEHIND MUD FLANGE STAGGER SCREWS (#8 FLAT UNDERCUT HEAD SCREW BY OTHERS)

5

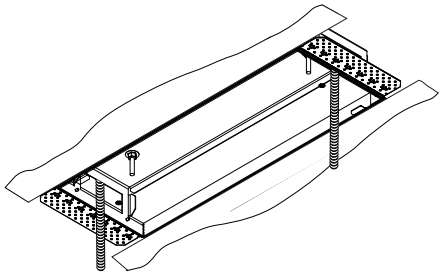


MUD AND TAPE


6

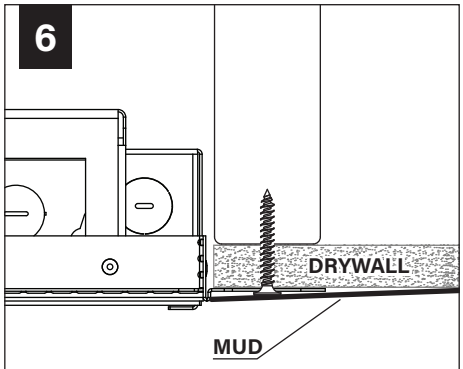


7

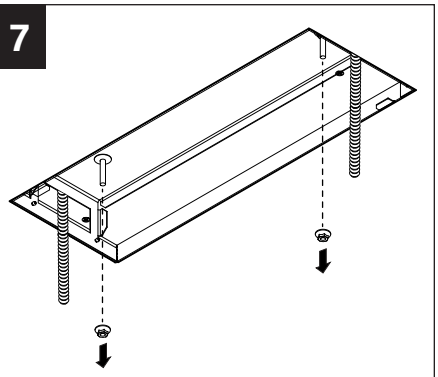

8

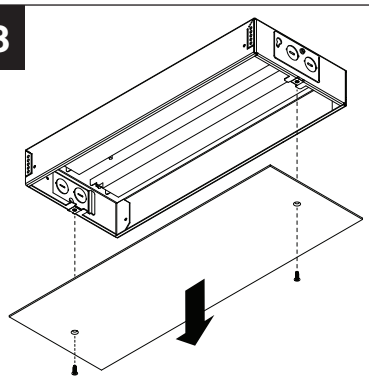


9

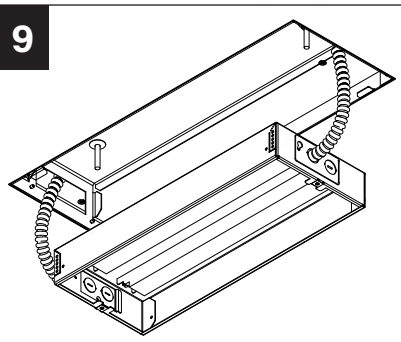


MAKE ELECTRICAL CONNECTION


10

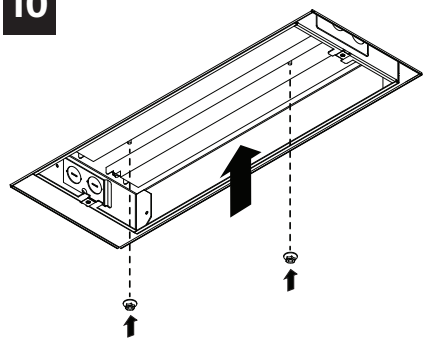


11

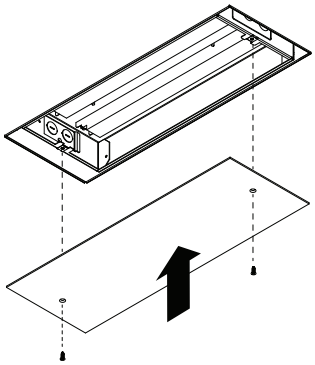

12

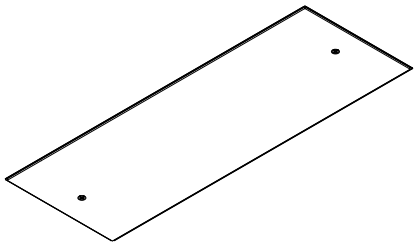


DRIVER SERVICE

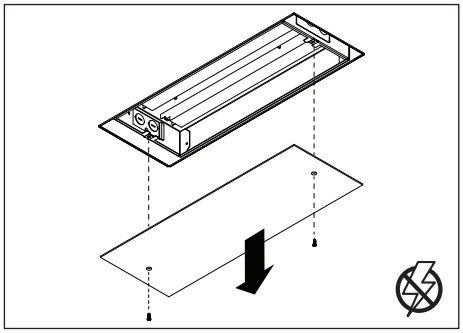


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

ACOUSTIC SHADE AND LED MODULE

1

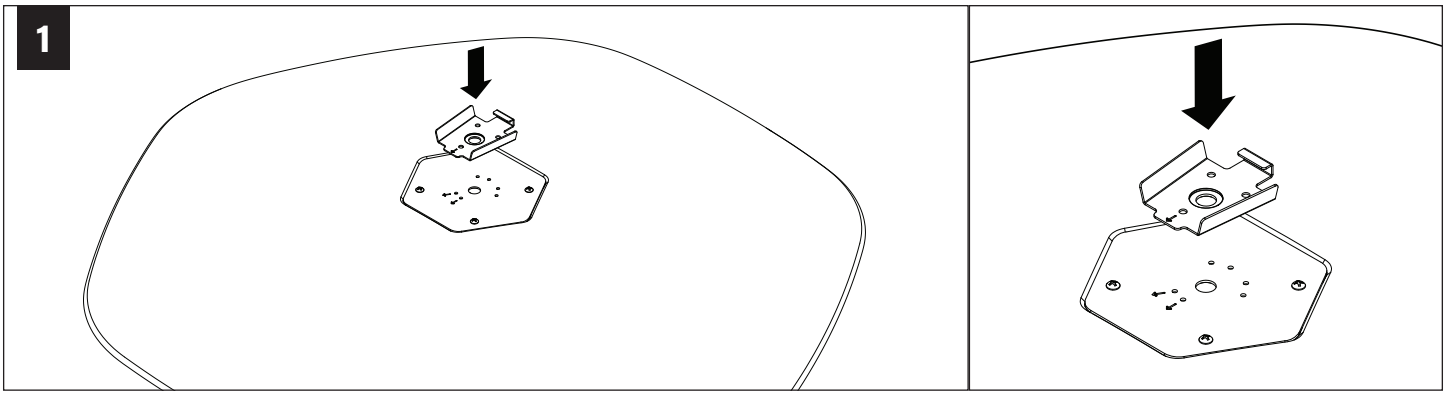


2 **HEXAGON ONLY**

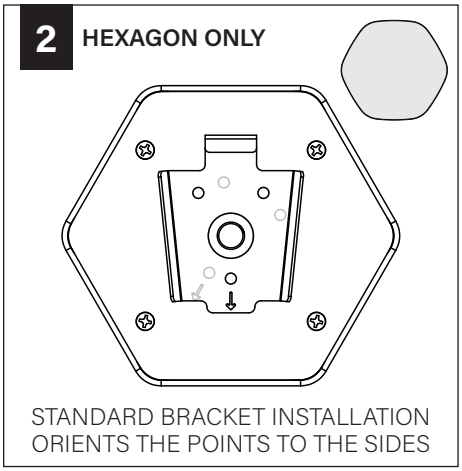


STANDARD BRACKET INSTALLATION ORIENTS THE POINTS TO THE SIDES

3 **HEXAGON ONLY**

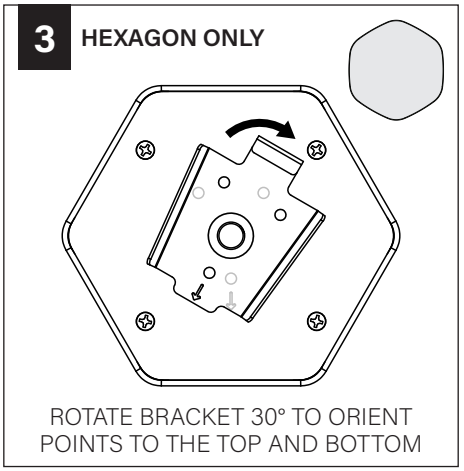


ROTATE BRACKET 30° TO ORIENT POINTS TO THE TOP AND BOTTOM

4

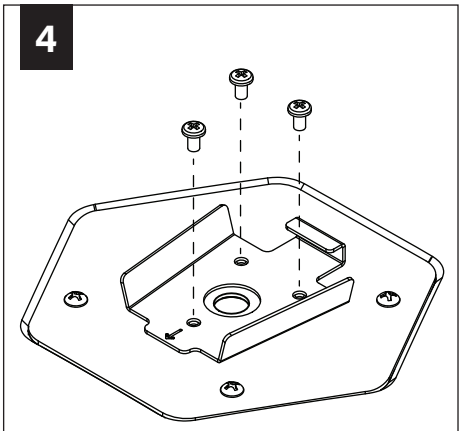


5

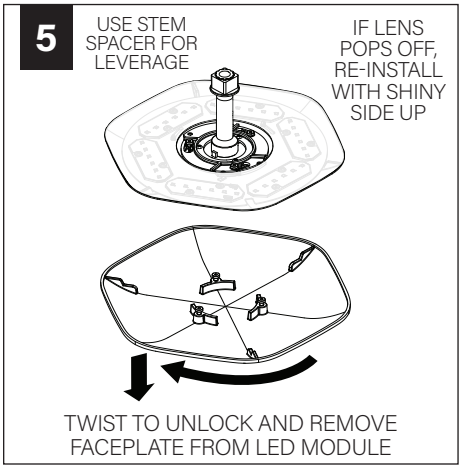

TWIST TO UNLOCK AND REMOVE FACEPLATE FROM LED MODULE


6

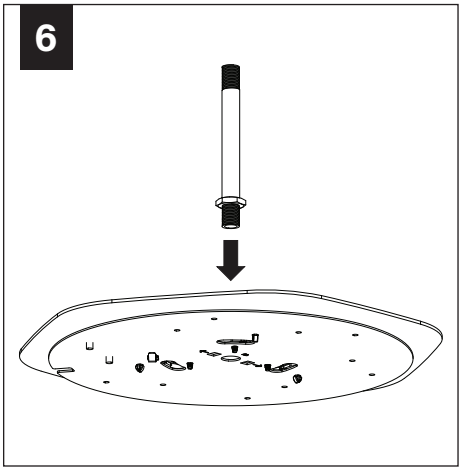


7




8

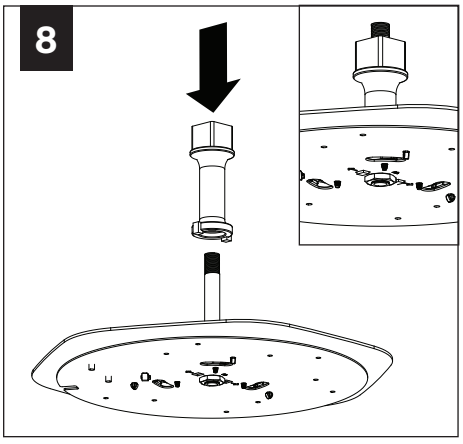

9

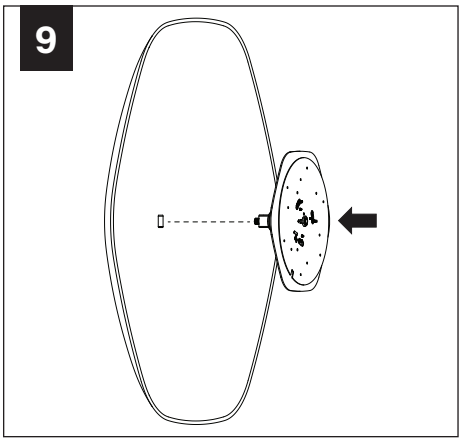


10

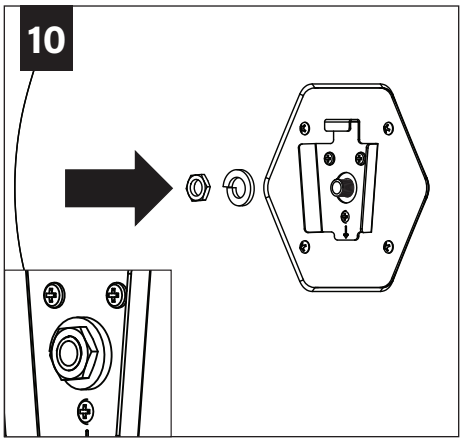


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

11a

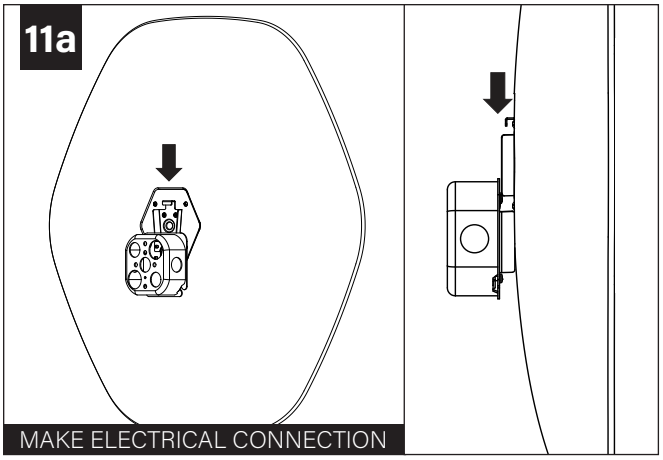


MAKE ELECTRICAL CONNECTION


11b

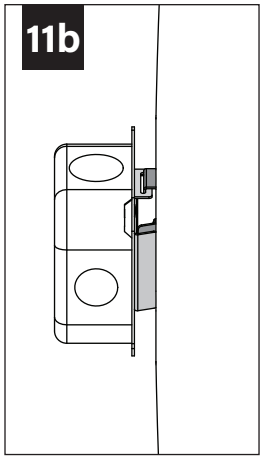

12

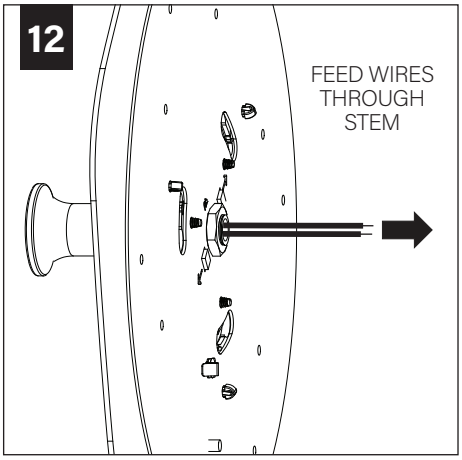


13

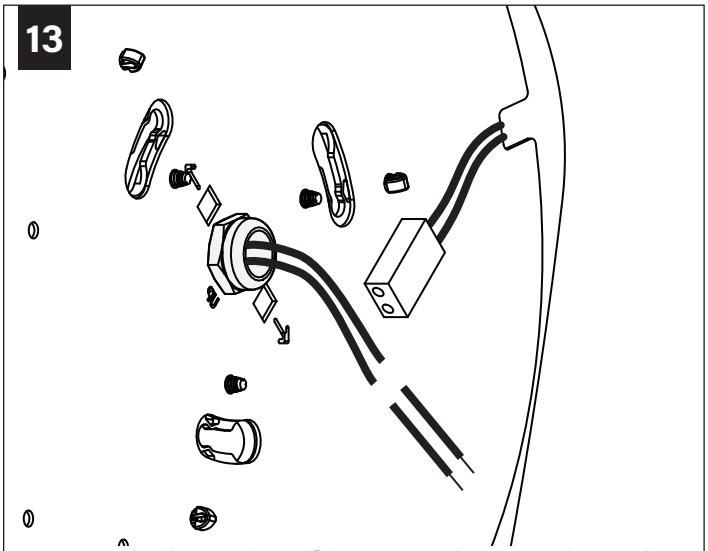


TRIM EXCESS WIRE. ONLY 2″ OF WIRE BELOW THE LOCKNUT IS NECESSARY FOR ELECTRICAL CONNECTION. DO NOT EXCEED 3″ OF WIRE

14

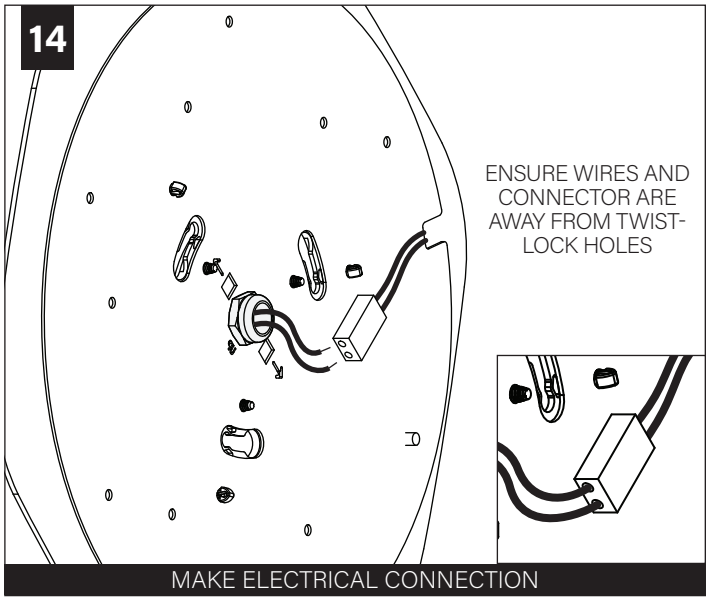


MAKE ELECTRICAL CONNECTION

15

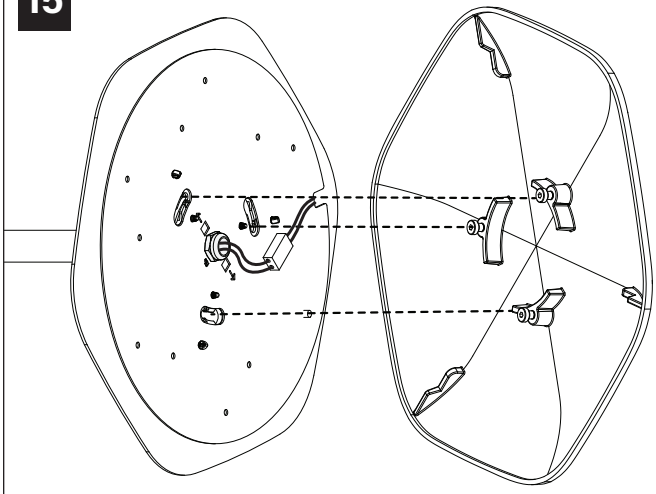


ALIGN PEGS ON FACE PLATE TO SLOTS ON LED MODULE.
ENSURE LENS ALIGNS WITH FACE PLATE UPON FINAL INSTALLATION.

16

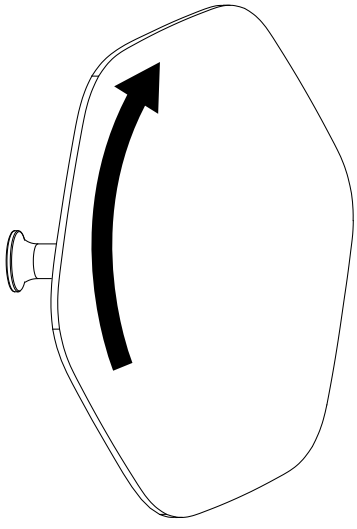

TWIST AND LOCK FACEPLATE UNTIL IT CLICKS INTO PLACE

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

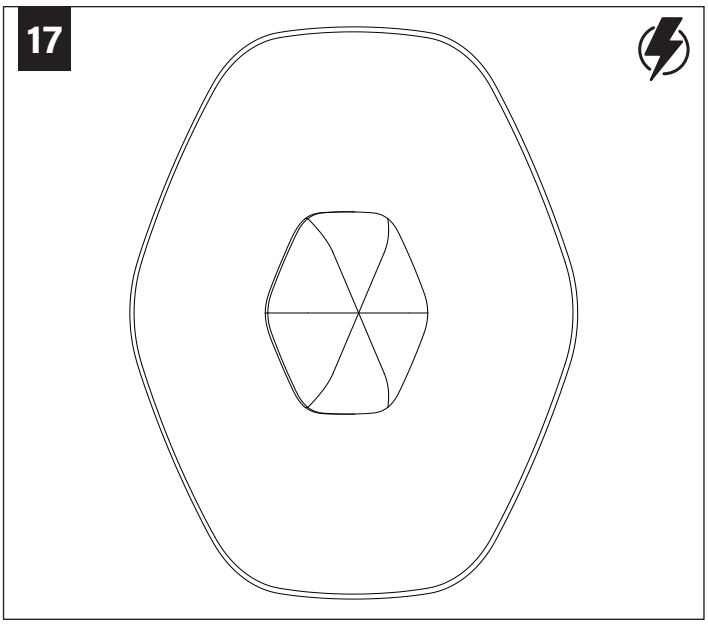

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference