

Polina™ Acoustic

SCONCE | APOLC-SHX-SHXS-RWM-27 | APOLC-SHX-SHXS-RWM-42



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



POWER OFF



POWER ON


HANDLING & CLEANING



Always handle with clean white gloves (provided).



Use can of compressed air to remove dust and debris from shade and dust cover.




Use lint roller to gently lift any remaining debris from shade.




Lightly wipe dust cover with damp cloth. Do not leave excess moisture on surface.

COMPONENT KEY


ACOUSTIC SHADES

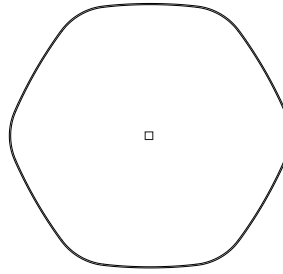


27" Shade

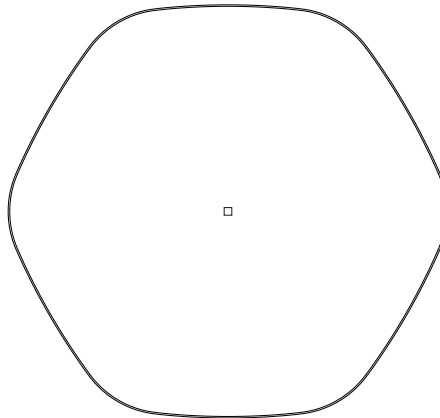

42" Shade

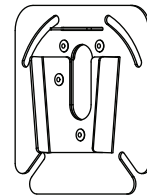

J-box Mounting Bracket

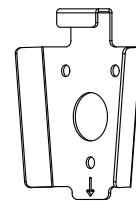

Shade Mounting Bracket




Shade Mounting Bracket Screws (PN 72023)

LIGHT ENGINE

 NUT & WASHER



STEM SPACER




STEM



LED MODULE




NUT




FACE PLATE

REMOTE POWER BOX

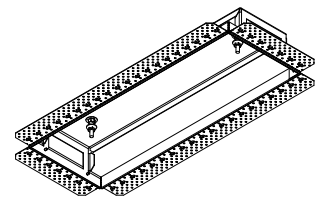


MUD-IN CHASIS

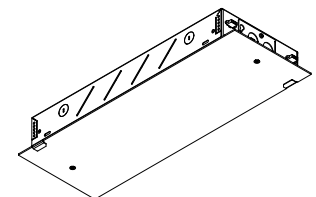


MUD-IN REMOTE POWER BOX

J-BOX


4" OCTAGONAL J-BOX REQUIRED

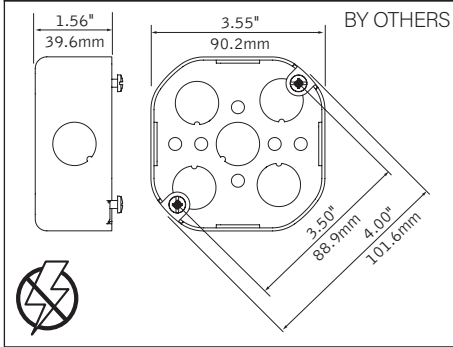


1 INSTALL J-BOX AND WIRING PRIOR TO DRYWALL INSTALLATION

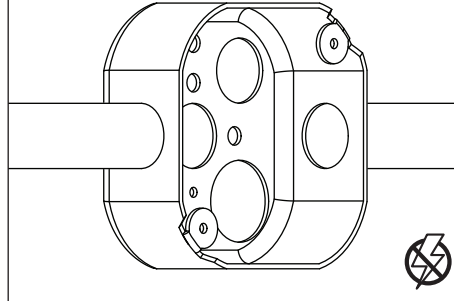

2

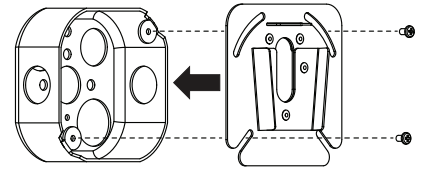


3

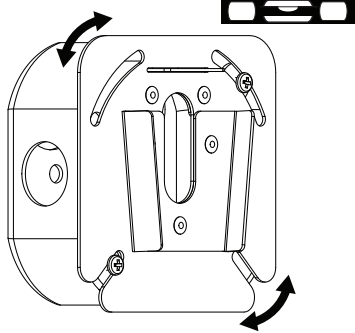


REMOTE POWER BOX - MUD-IN DRYWALL

1

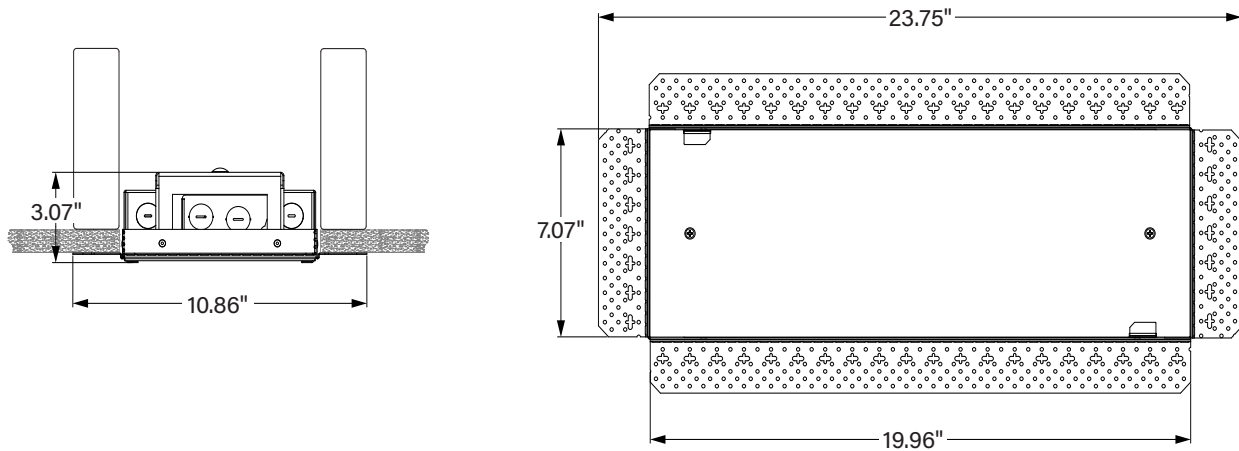


2

CUTOUT DIMENSIONS
20.125" x 7.25"

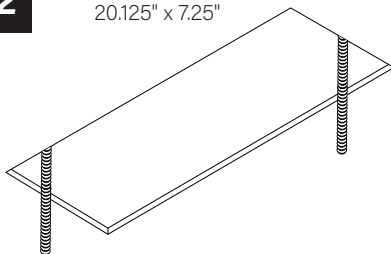


MAIN POWER FEED AND FEED TO J-BOXES MUST BE ACCESSIBLE FROM BELOW CEILING POST DRYWALL










3

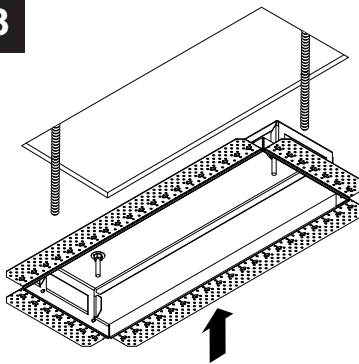

4

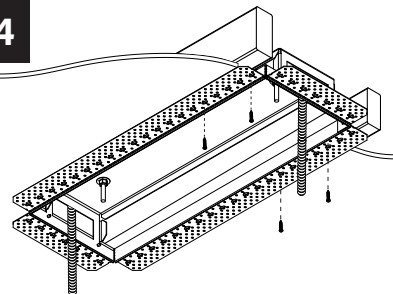

DRYWALL INSTALLS BEHIND MUD FLANGE
STAGGER SCREWS (#8 FLAT UNDERCUT
HEAD SCREW BY OTHERS)

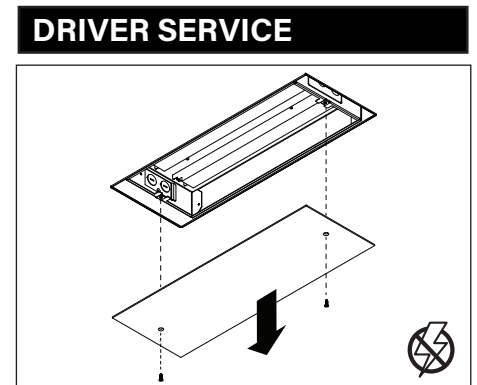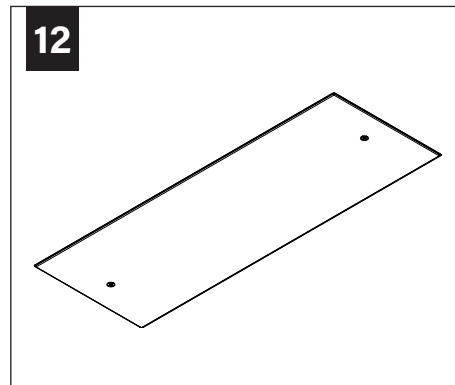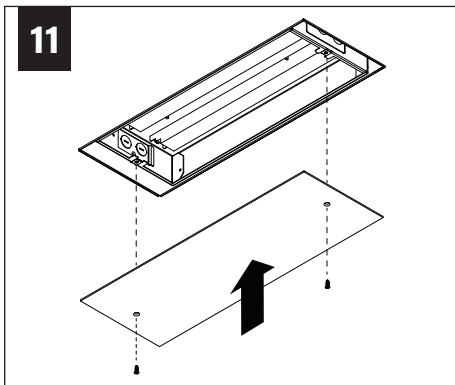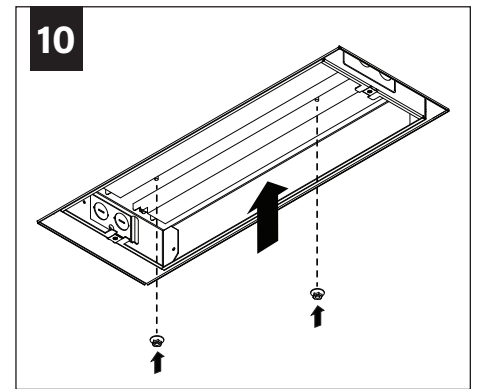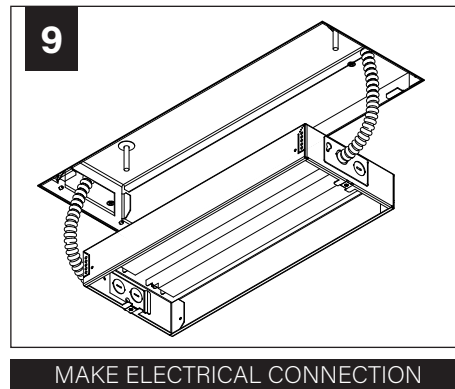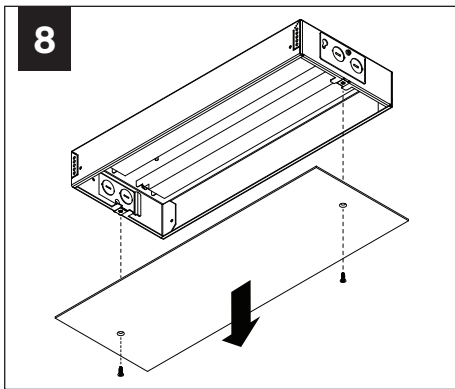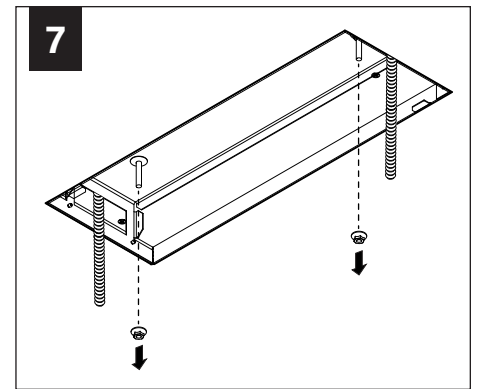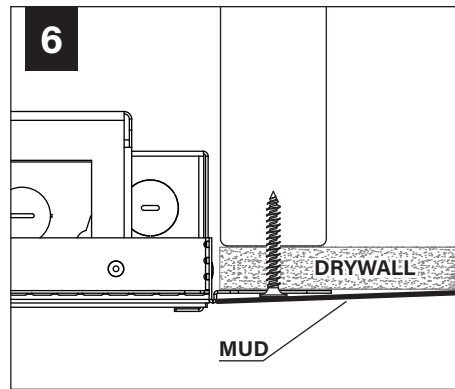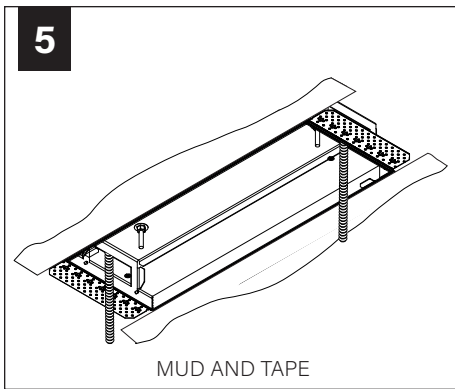

ACOUSTIC SHADE AND LED MODULE

