Polina® Acoustic

PENDANT | APOLP-SHX-MPC | APOLP-RND-MPC"

TriCore® Acoustic Construction

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS

POWER OFF

POWER ON

HANDLING & CLEANING

Always handle with clean white gloves (provided).


Use can of compressed air to remove dust and debris from shade and dust cover.

Use lint roller to gently lift any remaining debris from shade.


Lightly wipe dust cover with damp cloth. Do not leave excess moisture on surface.

COMPONENT KEY

ACOUSTIC SHADES - SOFT HEXAGON

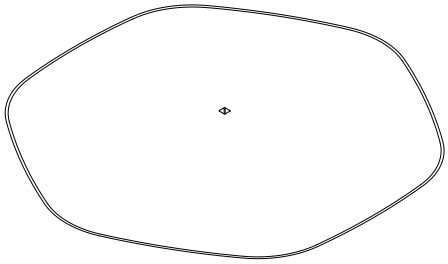


42" Shade

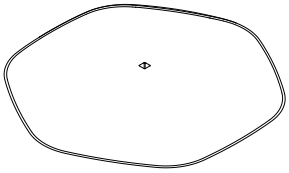


27" Shade

ACOUSTIC SHADES - ROUND

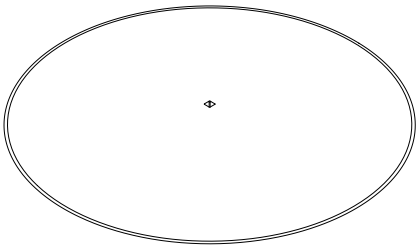

39" Shade

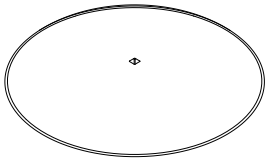

25" Shade

LIGHT ENGINE - HEXAGON




STEM SPACER

NUT



LED MODULE

LOCKNUT



FACE PLATE

LIGHT ENGINE - ROUND




STEM SPACER

NUT



LED MODULE

LOCKNUT




FACE PLATE

SHIPPED INSTALLED



#8-32X5/16" HALF DOG NOSE SET SCREWS

SHIPPED IN PARTS BAG



ALLEN WRENCH

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

COMPONENT KEY

STEM MOUNT




STEM MOUNTING BRACKET

FACE PLATE

STEM


MINI POWER CANOPY



J-BOX MOUNTING BRACKET / DRIVER CARRIAGE




FINISHING RING

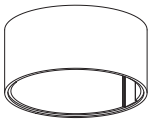


MINI POWER CANOPY

4" OCTAGONAL J-BOX REQUIRED

J-BOX BY OTHERS

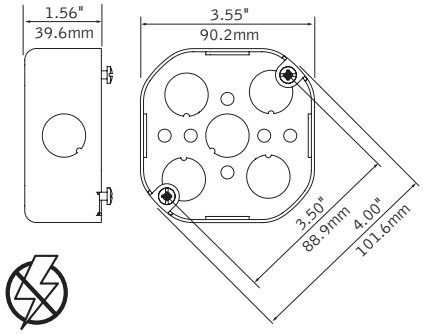


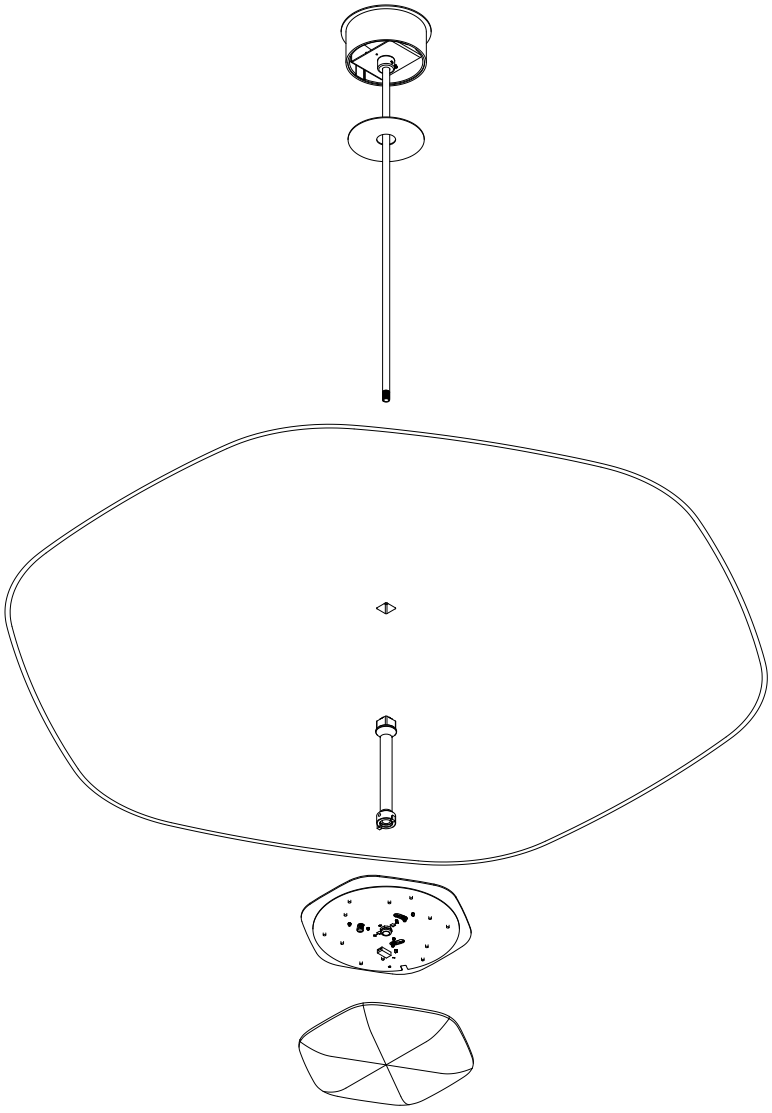

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


FIELD CUTTABLE STEM (OPTIONAL)

1

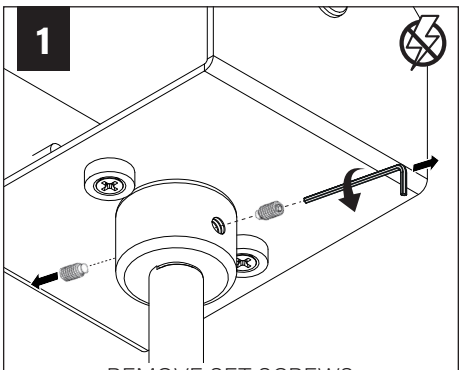


REMOVE SET SCREWS FROM BOTH SIDES

2

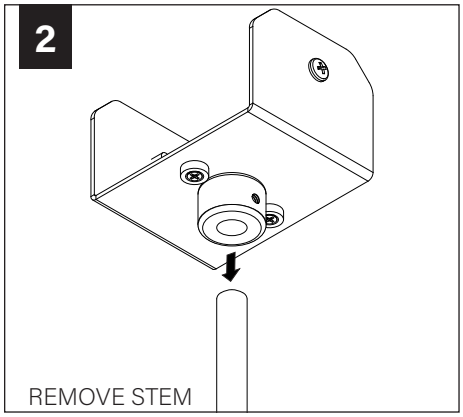

REMOVE STEM


3



MEASURE STEM TO DESIRED LENGTH


MINIMUM CUT LENGTH = 9"

4




CUT STEM AND DEBURR INSIDE EDGE

5

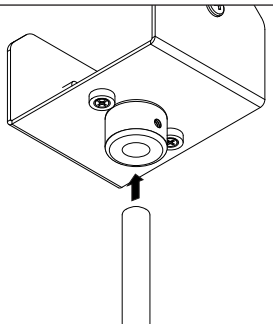


FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

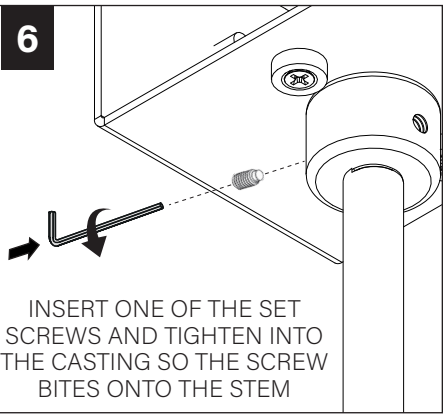


INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM

7

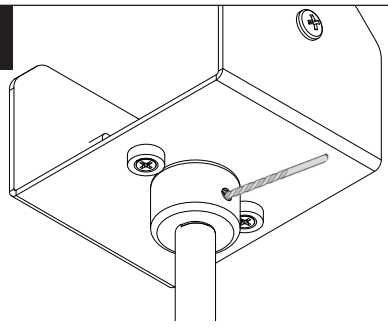


DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

8

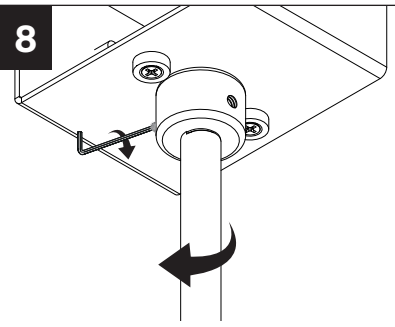


LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

9

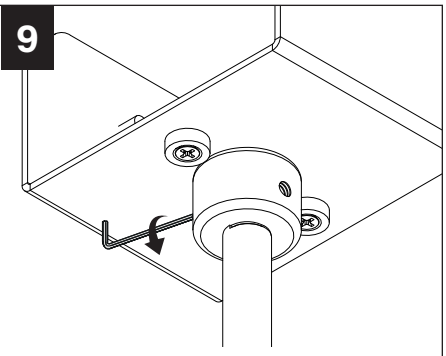


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

10

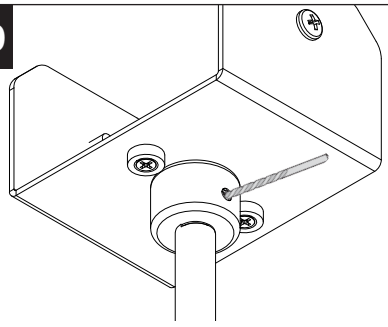


DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

11

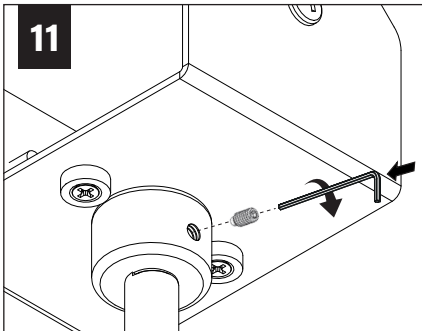

TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

12

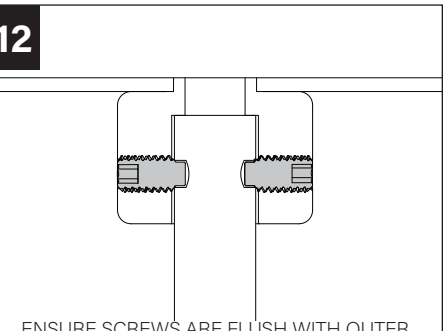


ENSURE SCREWS ARE FLUSH WITH OUTER DIAMETER OF ADAPTER SLEEVE UPON INSTALLATION. IF SCREW(S) WILL NOT INSTALL FLUSH, CHECK STEM HOLE SIZE AND ALIGNMENT.

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


MINI POWER CANOPY INSTALLATION

1

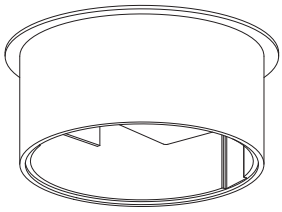


CANOPY ASSEMBLY SHIPS ASSEMBLED

2

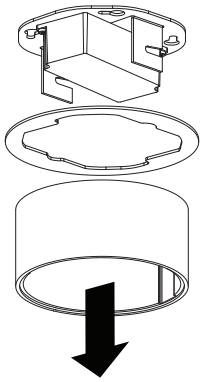


3

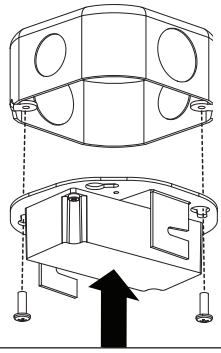

HARDWARE BY OTHERS


MAKE ELECTRICAL CONNECTION

4

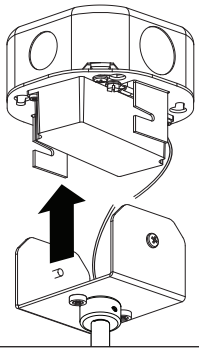


MAKE ELECTRICAL CONNECTION

5

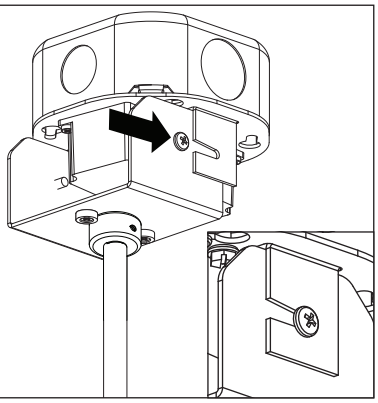


6

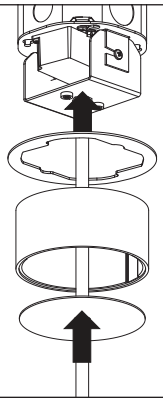

INSTALL CANOPY ASSEMBLY PARTS SIMULTANEOUSLY

7

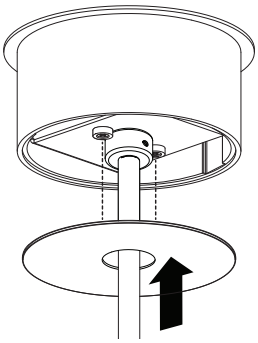


FACE PLATE HELD IN PLACE MAGNETICALLY


DRIVER SERVICE

TURN OFF POWER SOURCE PRIOR TO DRIVER SERVICE

1

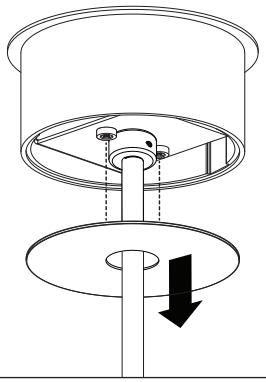


2

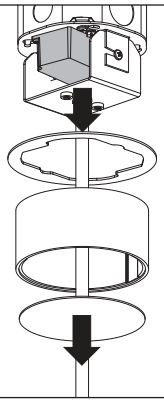


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

ACOUSTIC SHADE AND LED MODULE


1

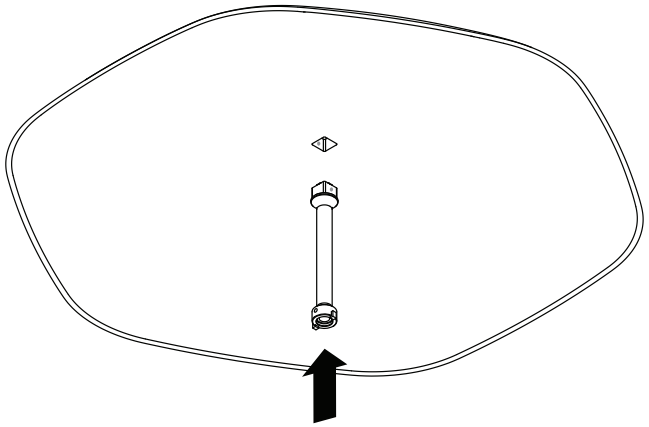

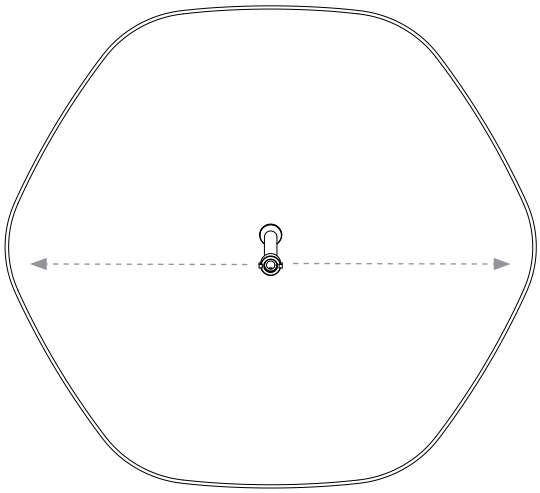


HEXAGON ONLY: SPACER PEGS MUST BE ORIENTED TOWARD POINTED SIDES OF SHADE, NOT FLAT SIDES


2a

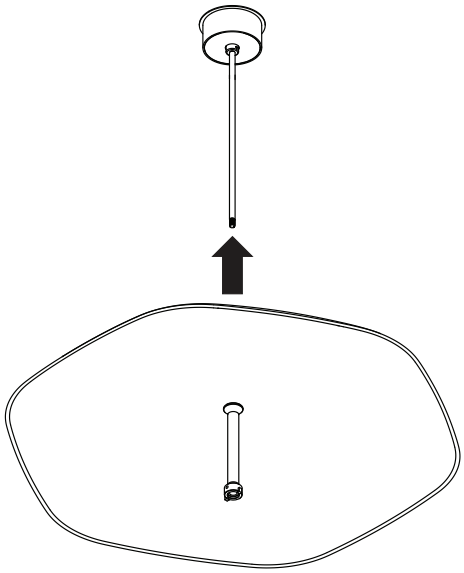

2b




TIGHTEN BY HAND.
DO NOT OVERTIGHTEN.

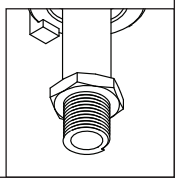


FEED STEM THROUGH BACK OF SHADE INTO SPACER AND TIGHTEN NUT TO STEM

3

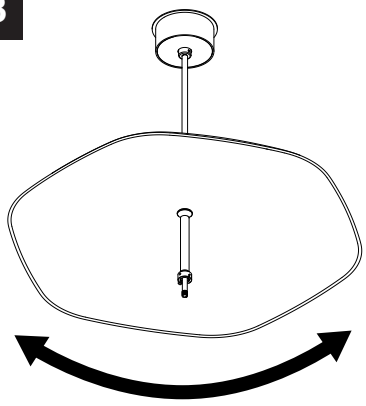

HEXAGON ONLY: ROTATE SHADE TO DESIRED ORIENTATION

4

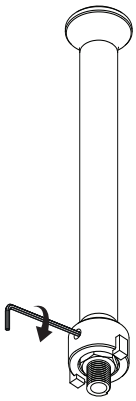


TIGHTEN SET SCREW IN STEM SPACER TO LOCK SHADE INTO PLACE

5

USE STEM SPACER FOR LEVERAGE


IF LENS POPS OFF, RE-INSTALL WITH SHINY SIDE UP

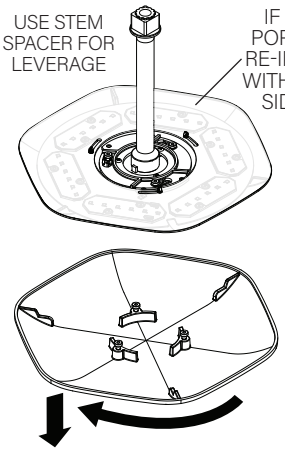


TWIST TO UNLOCK AND REMOVE FACEPLATE FROM LED MODULE

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


6

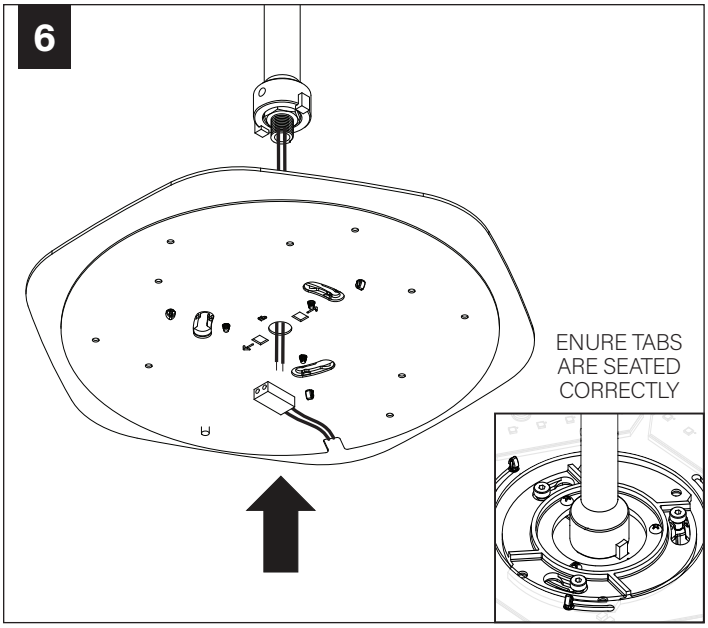


7

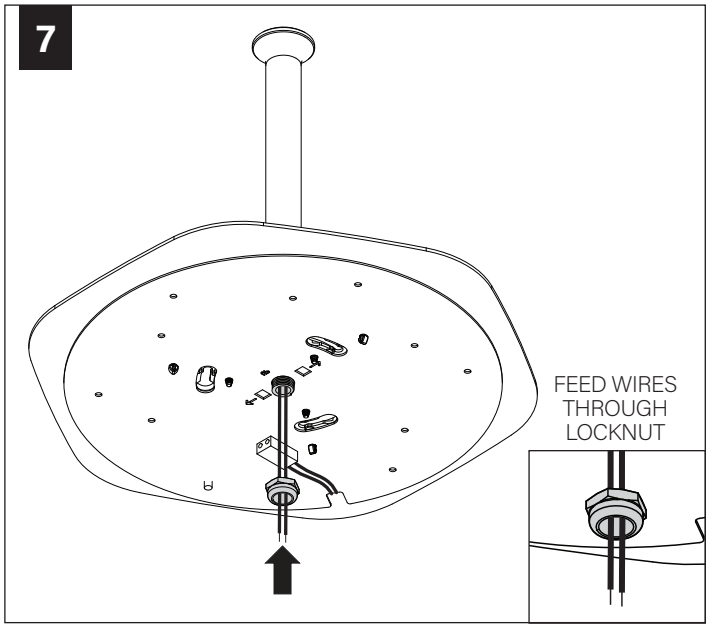


8

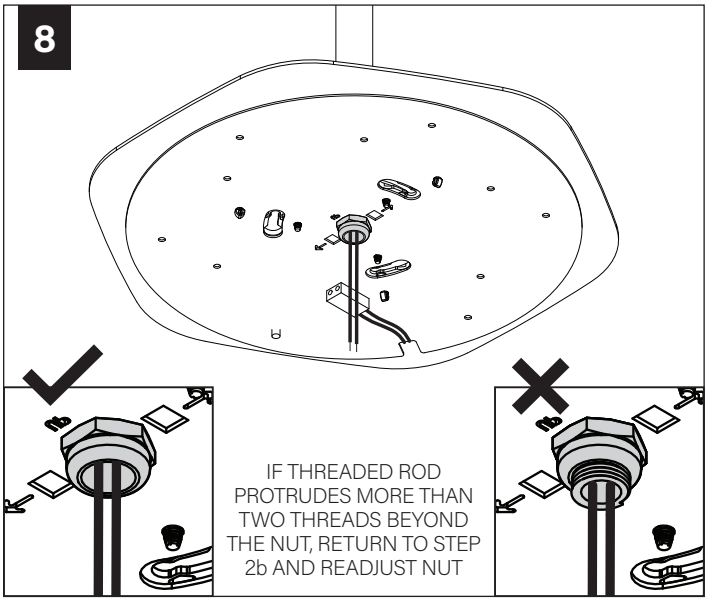

9

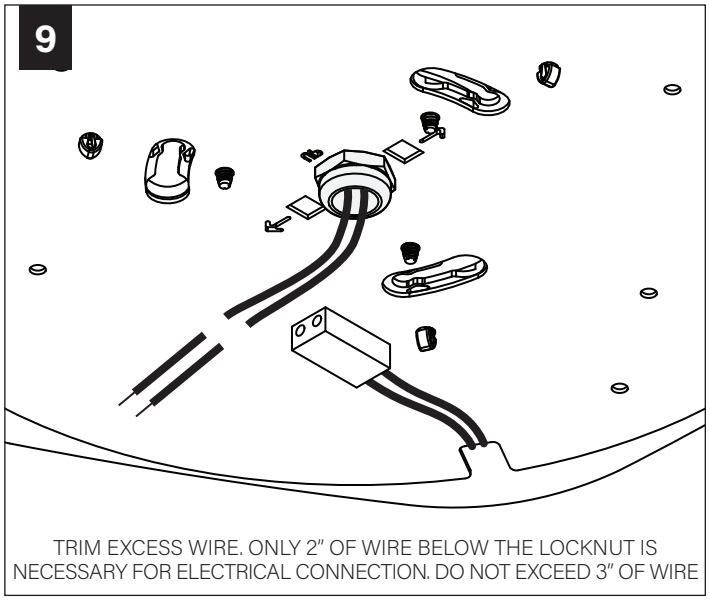


10

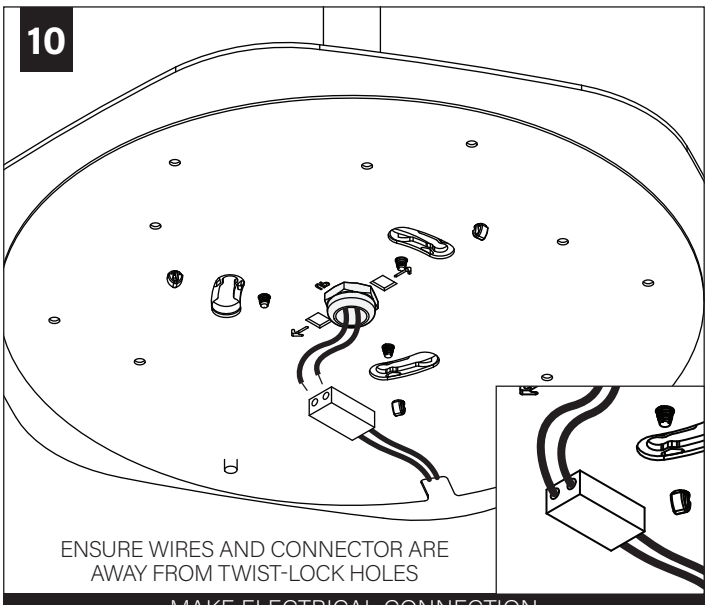


MAKE ELECTRICAL CONNECTION

11

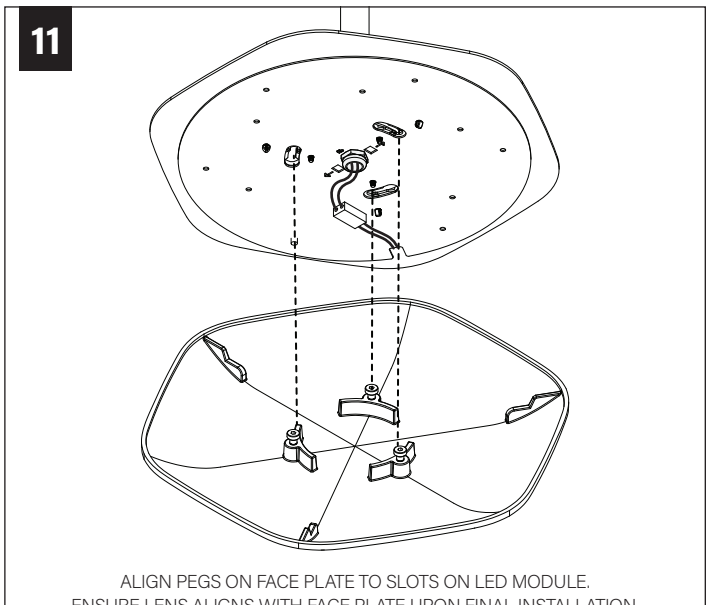


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

12

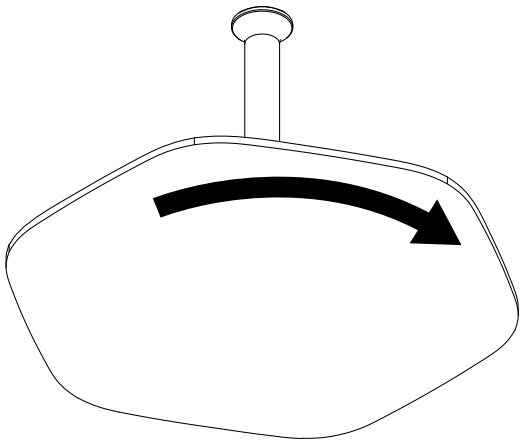

TWIST AND LOCK FACEPLATE UNTIL IT CLICKS INTO PLACE

13

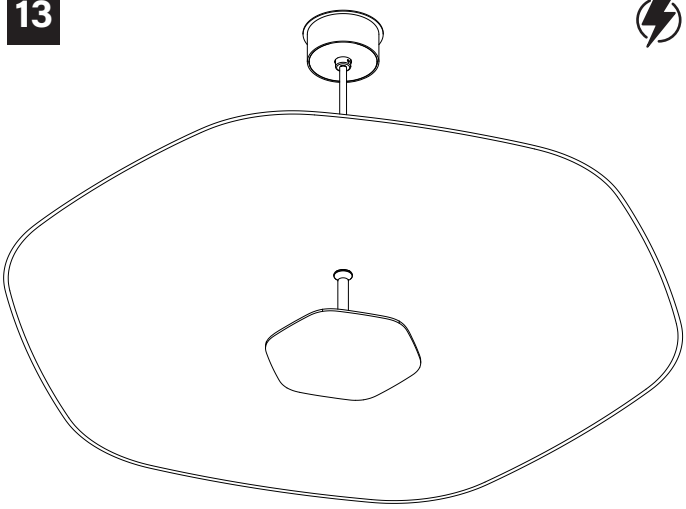

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference