

Polina™ Acoustic

TriCore™ Acoustic Construction

PENDANT | APOLP-SHX-RSC-RSPOL-27 | APOLP-SHX-RSC-RSPOL-42



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL
INSTRUCTIONS



POWER OFF




POWER ON


HANDLING & CLEANING



Always handle with clean white gloves (provided).

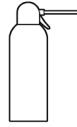

Use can of compressed air to remove dust and debris from shade and dust cover.

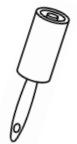


Use lint roller to gently lift any remaining debris from shade.




Lightly wipe dust cover with damp cloth. Do not leave excess moisture on surface.

COMPONENT KEY

ACOUSTIC SHADES

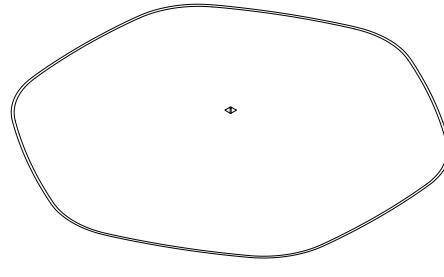


42" Shade

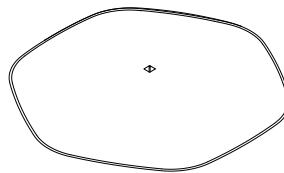

27" Shade

LIGHT ENGINE

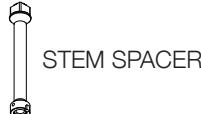

STEM SPACER



NUT



LED MODULE



LOCK NUT



FACE PLATE

SHIPPED INSTALLED




#273 SET SCREWS

SHIPPED IN PARTS BAG



ALLEN WRENCH

STEM MOUNT

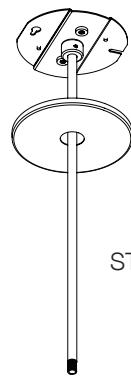


STEM
MOUNTING
BRACKET


FACE PLATE

STEM


REMOTE POWER SYSTEM

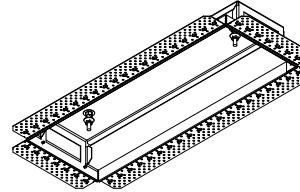


MUD-IN CHASSIS

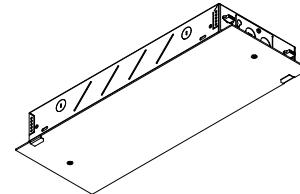


MUD-IN REMOTE POWER BOX

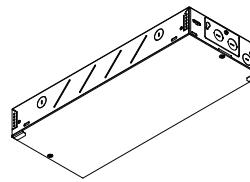


OPEN CEILING REMOTE POWER BOX

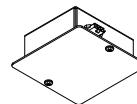


CONVERTER J-BOX

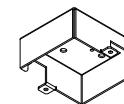

RPS J-BOX

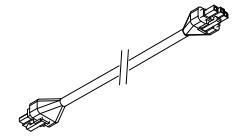


LOW VOLTAGE CABLE

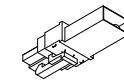


TERMINATOR

REMOTE POWER SYSTEM - MUD-IN DRYWALL

1

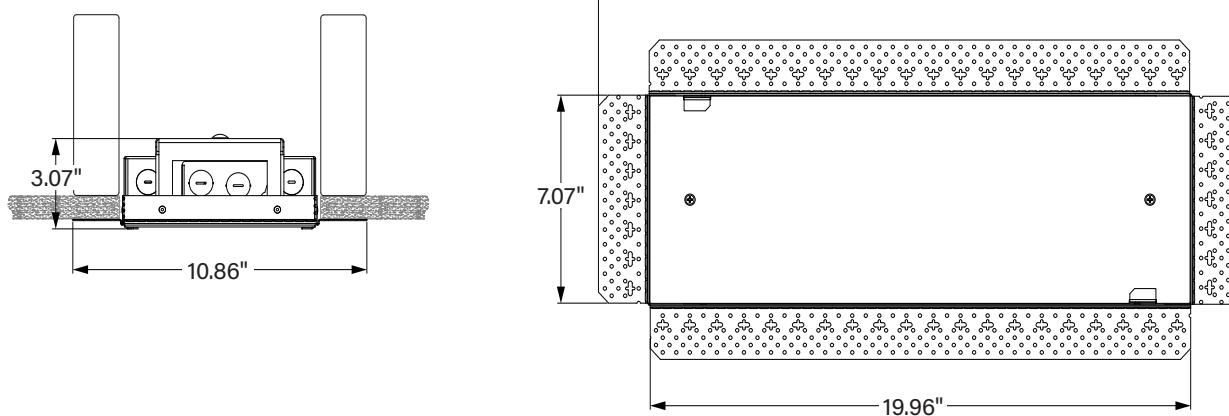


1

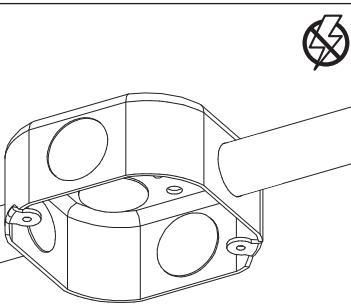

INSTALL J-BOX AND WIRING PRIOR TO DRYWALL INSTALLATION


2

CUTOUT DIMENSIONS
20.125" x 7.25"

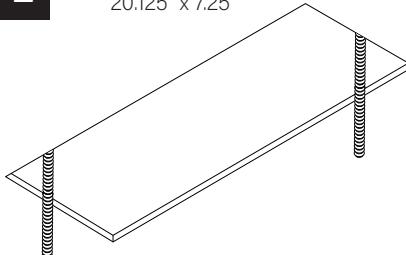


MAIN POWER FEED AND FEED TO J-BOXES MUST BE ACCESSIBLE FROM BELOW CEILING POST DRYWALL

3

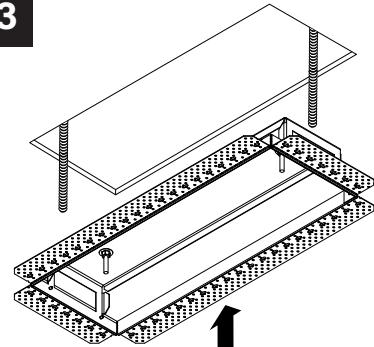


4

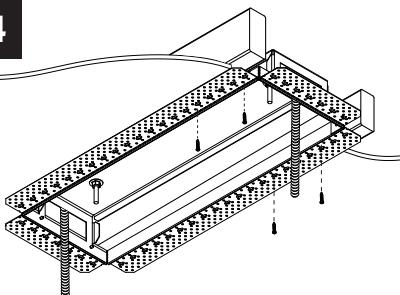


DRYWALL INSTALLS BEHIND MUD FLANGE
STAGGER SCREWS (#8 FLAT UNDERCUT HEAD SCREW BY OTHERS)

5

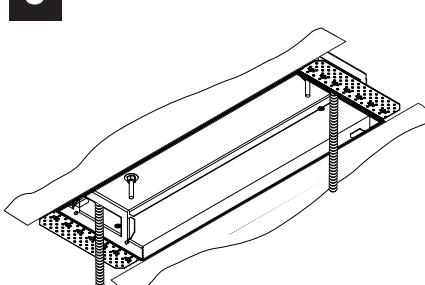


MUD AND TAPE


6

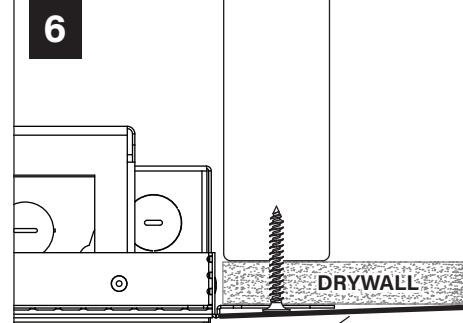


7

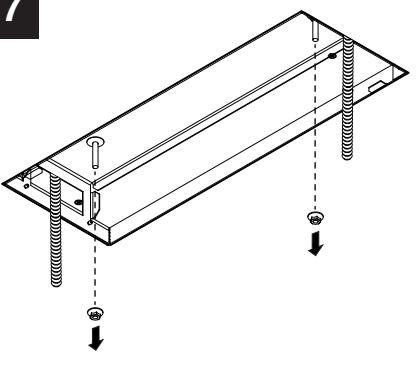







8

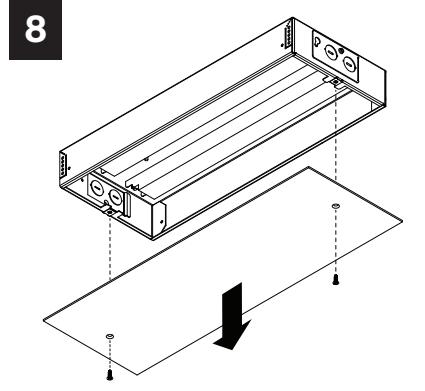




9

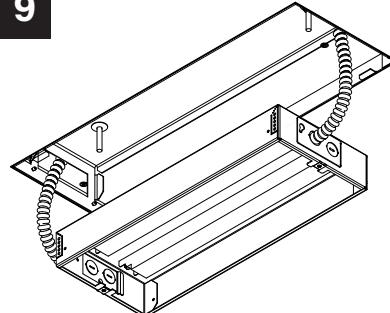




MAKE ELECTRICAL CONNECTION

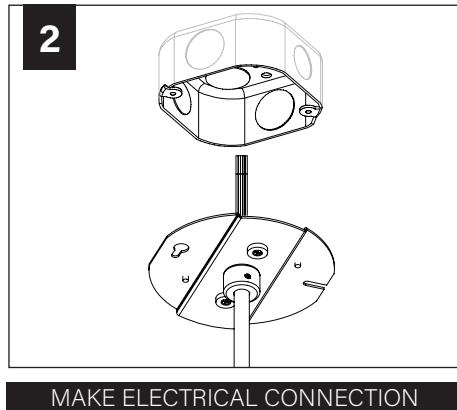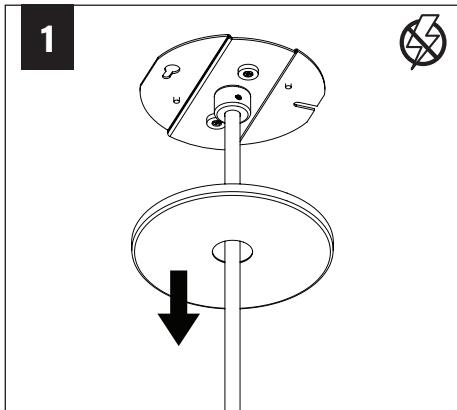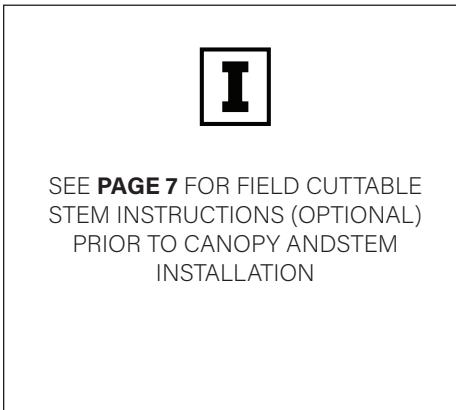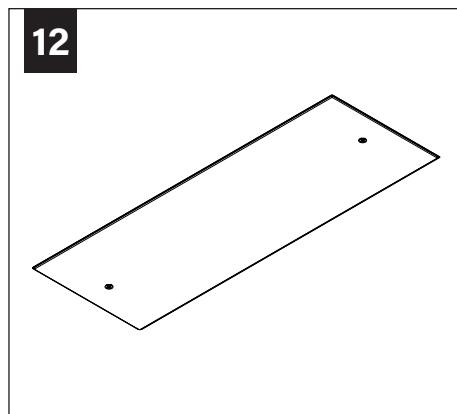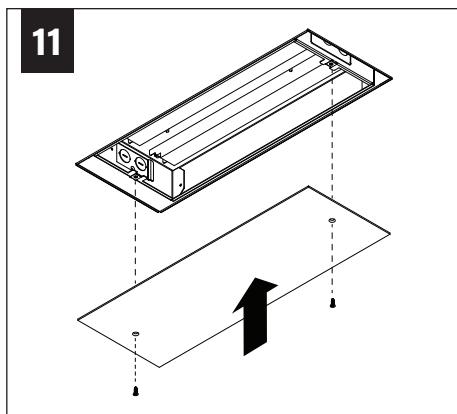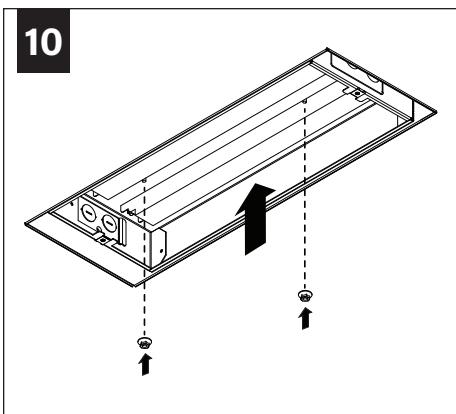

MAKE ELECTRICAL CONNECTION

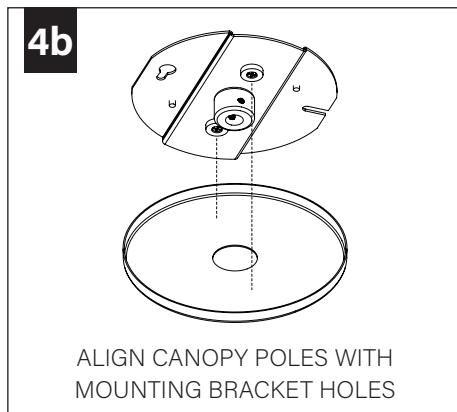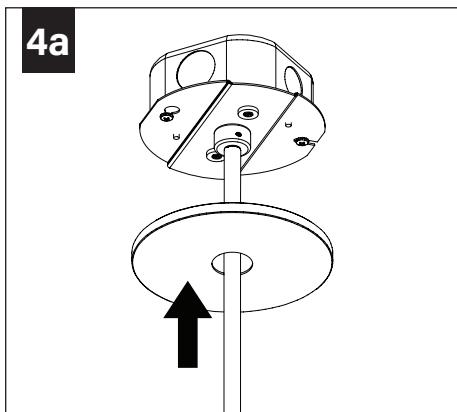
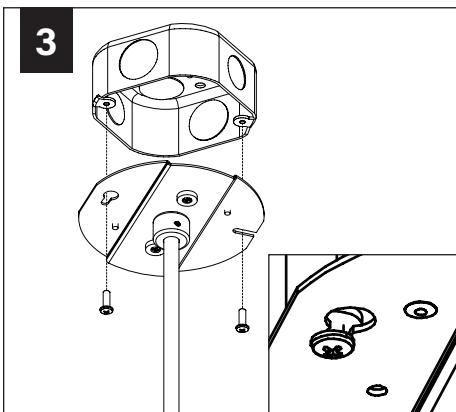


ALIGN CANOPY POLES WITH
MOUNTING BRACKET HOLES

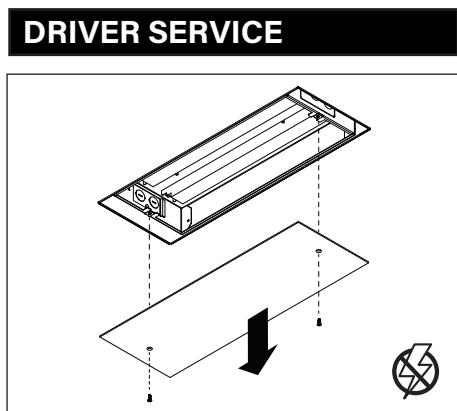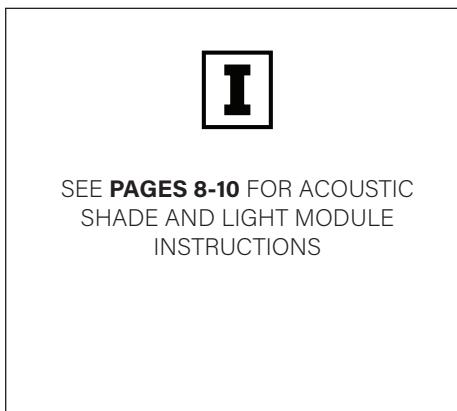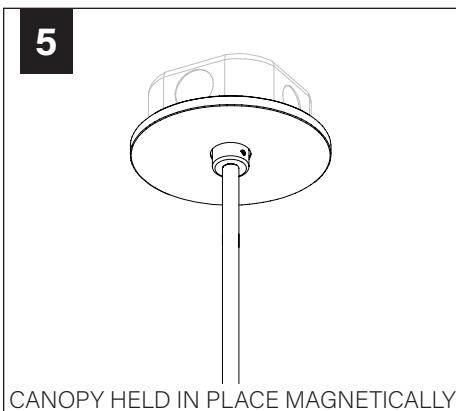


REMOTE POWER SYSTEM - OPEN CEILING


1

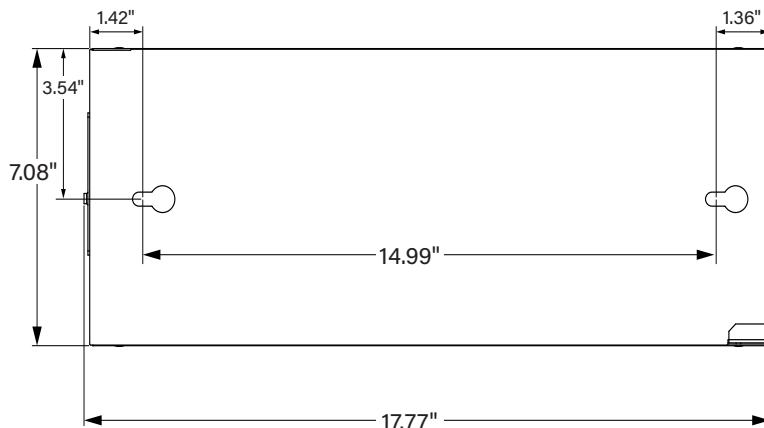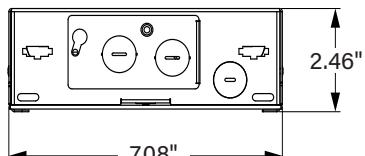


2

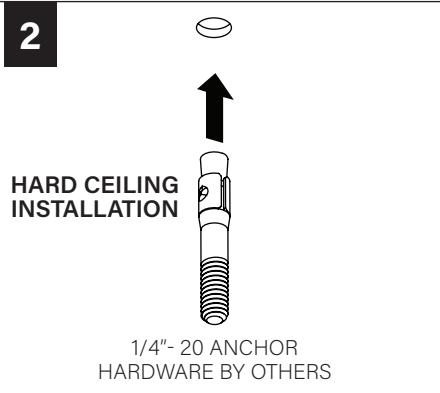


2

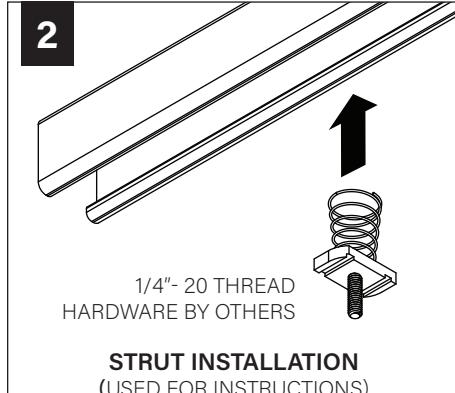


3

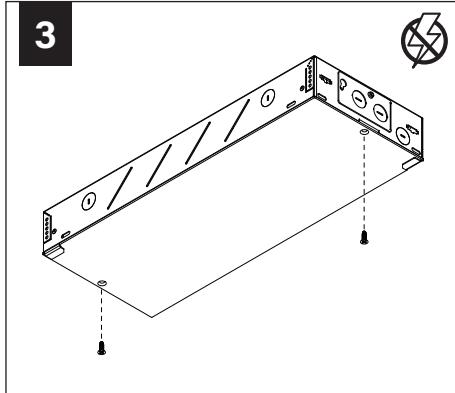


4

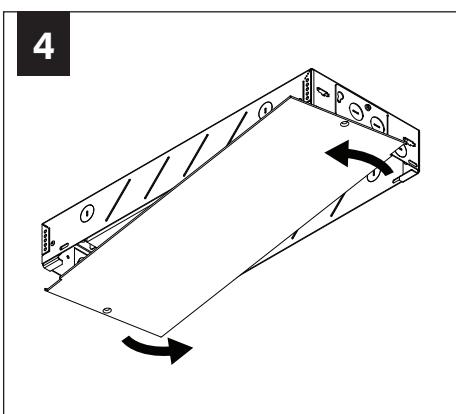


5

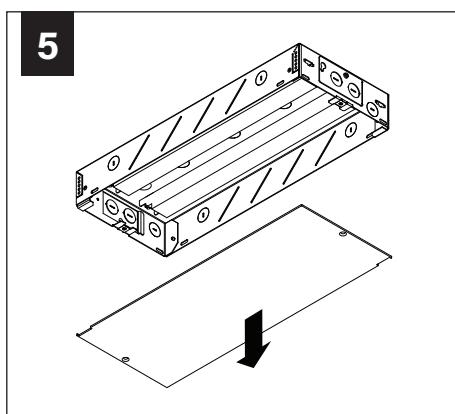


6

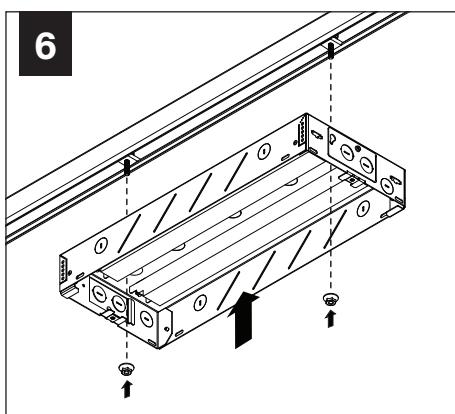


7

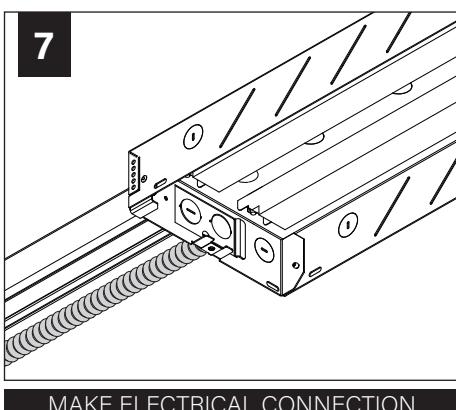












8

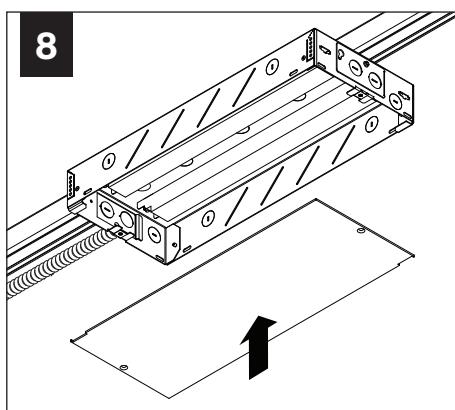




9

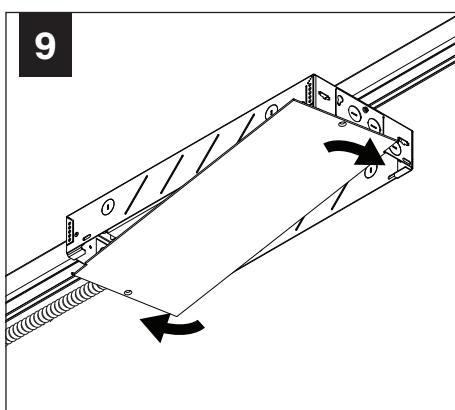








MAKE ELECTRICAL CONNECTION

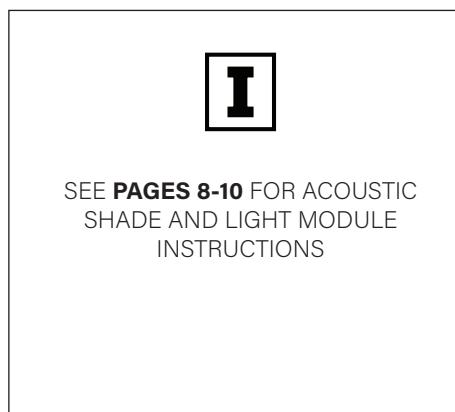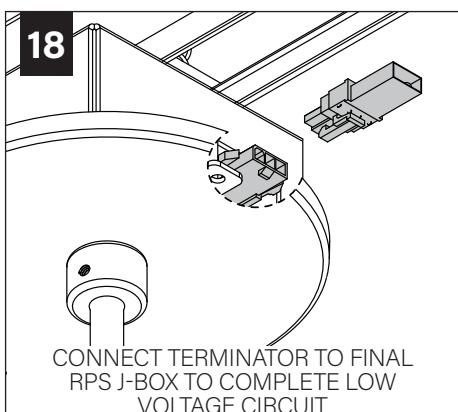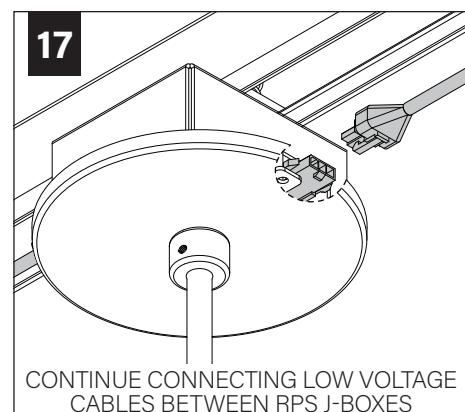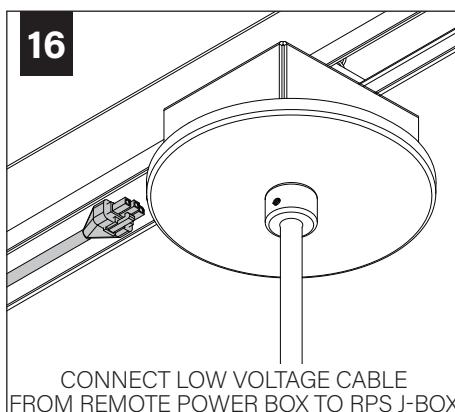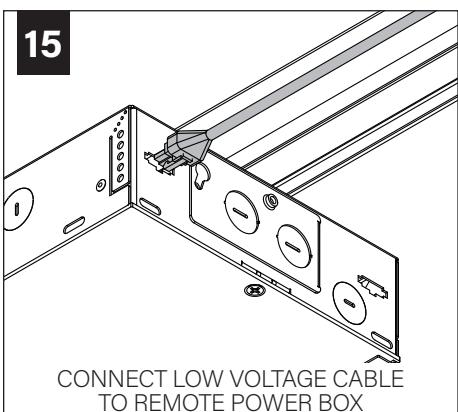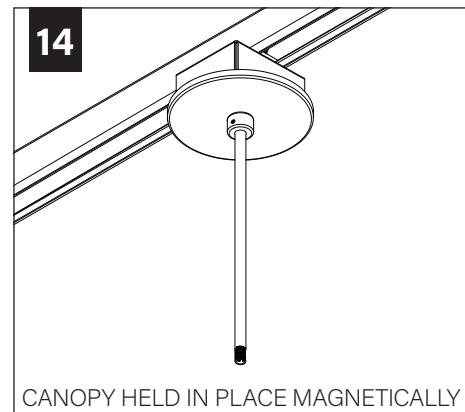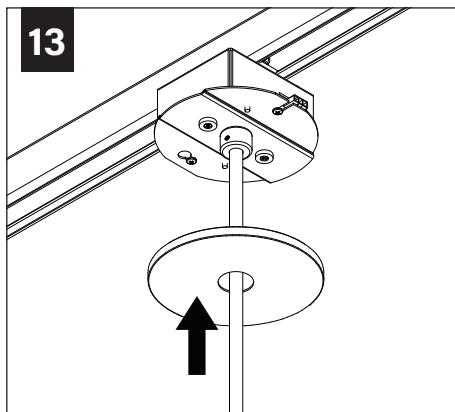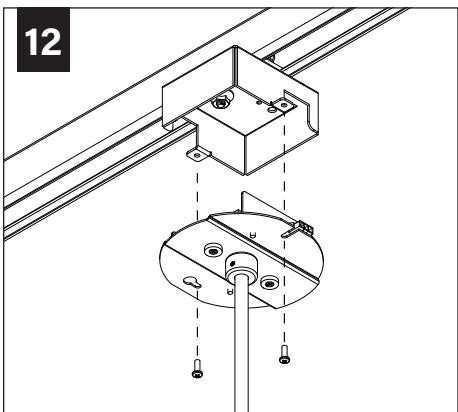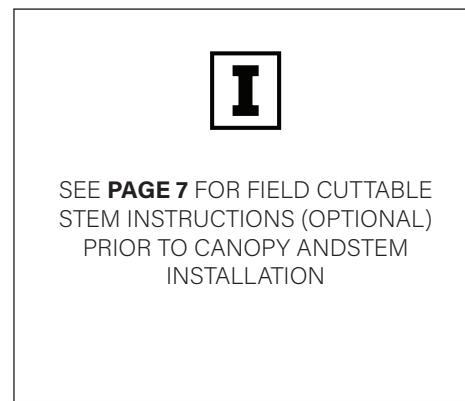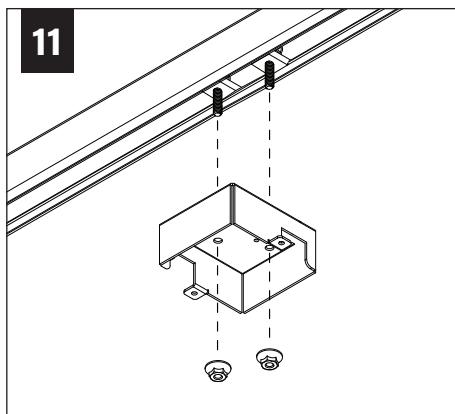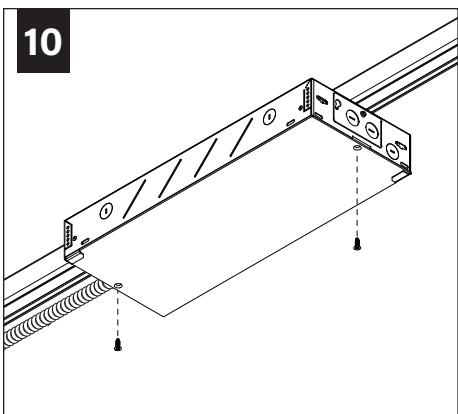












DRIVER SERVICE

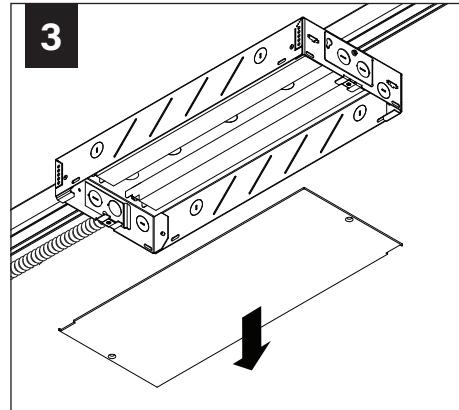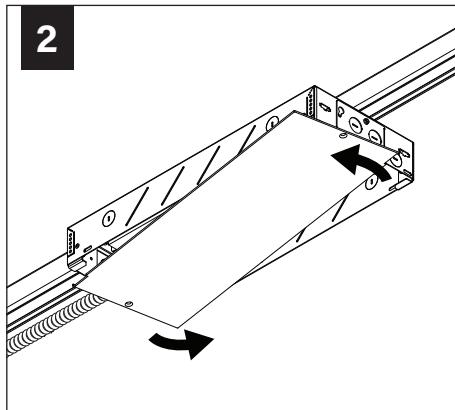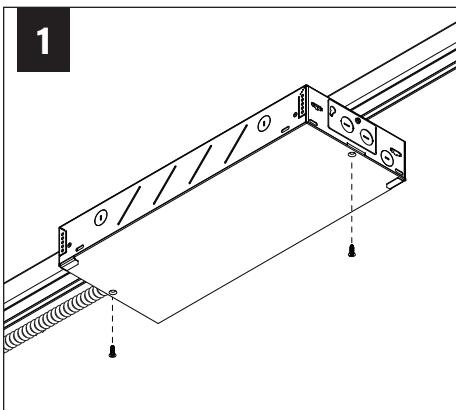


TRANSITIONAL CEILING

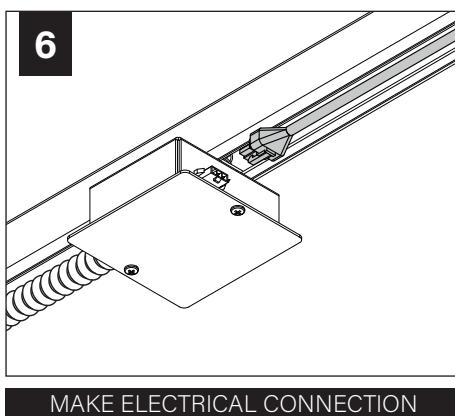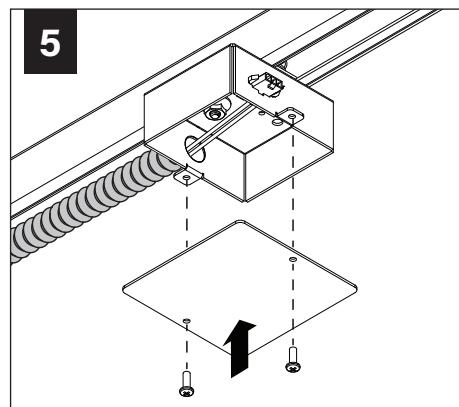
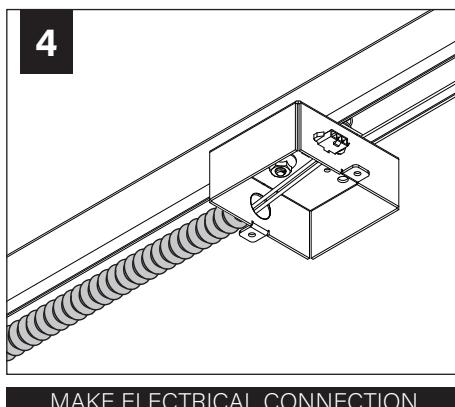
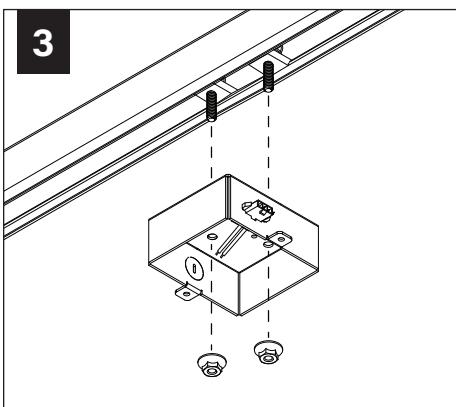
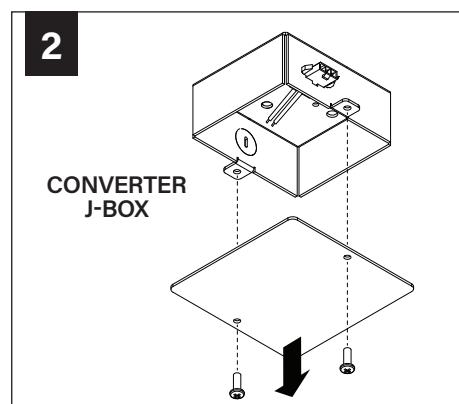
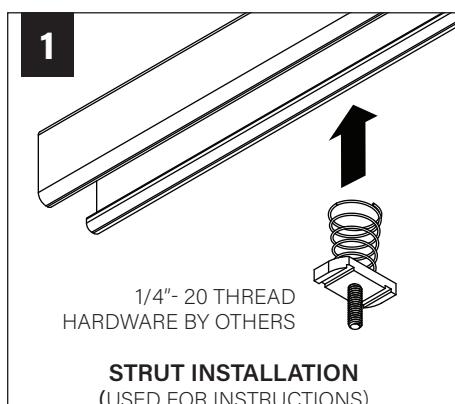
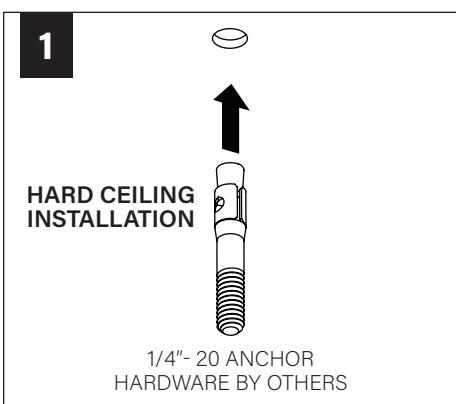



FIELD CUTTABLE STEM (OPTIONAL)

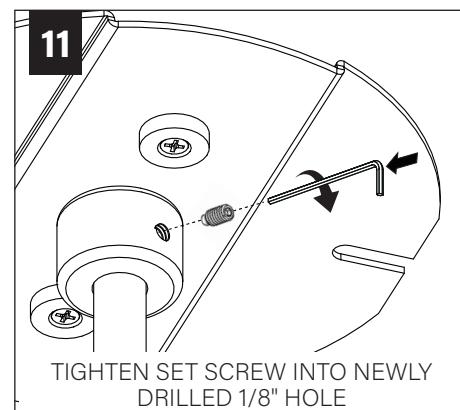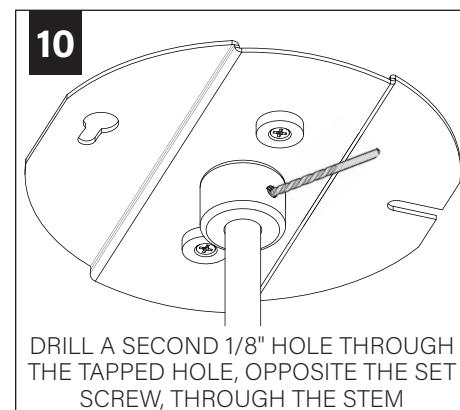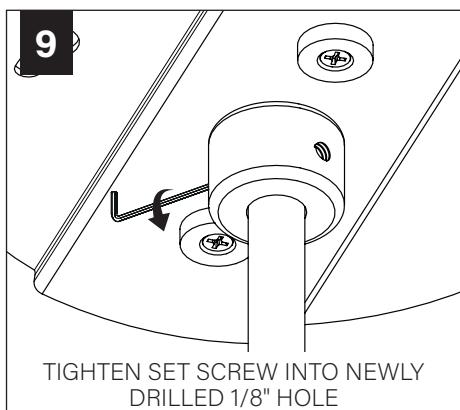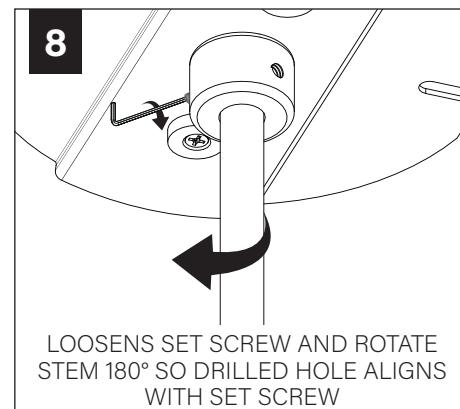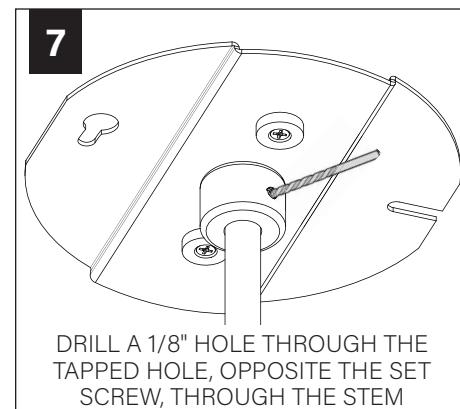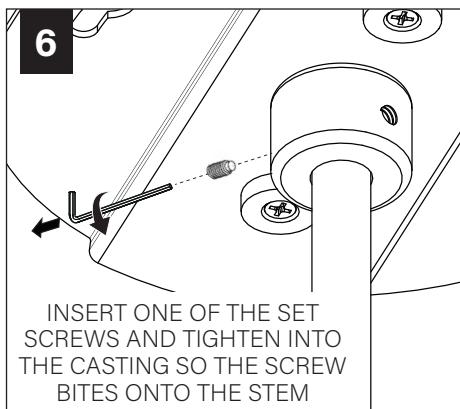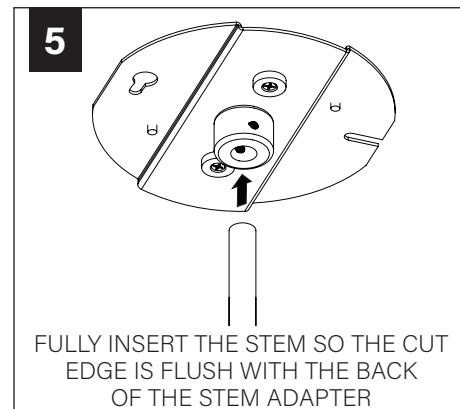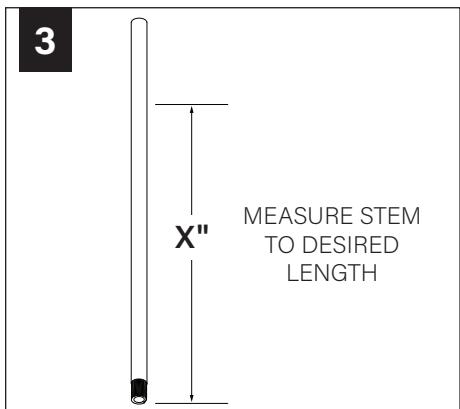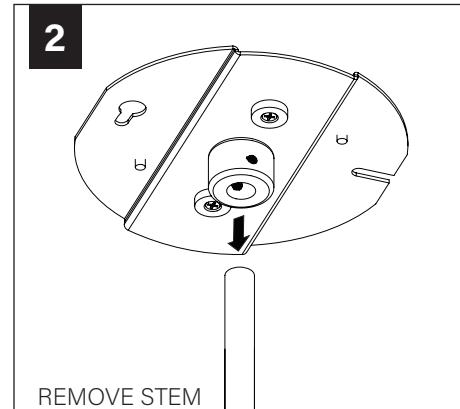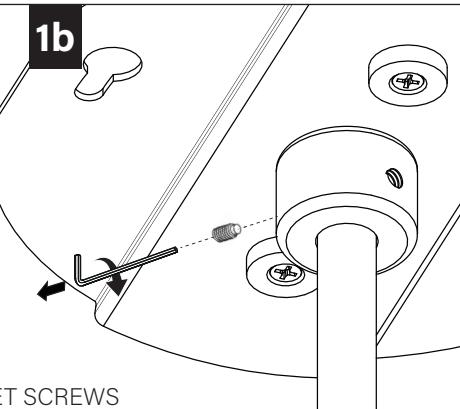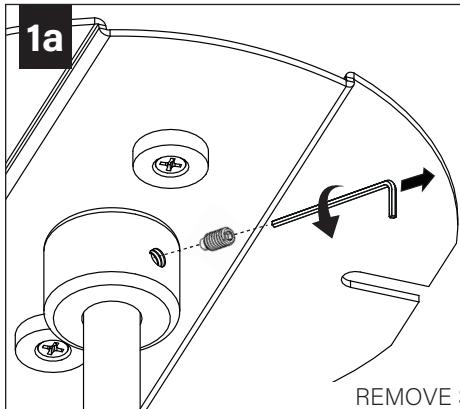

ACOUSTIC SHADE AND LED MODULE

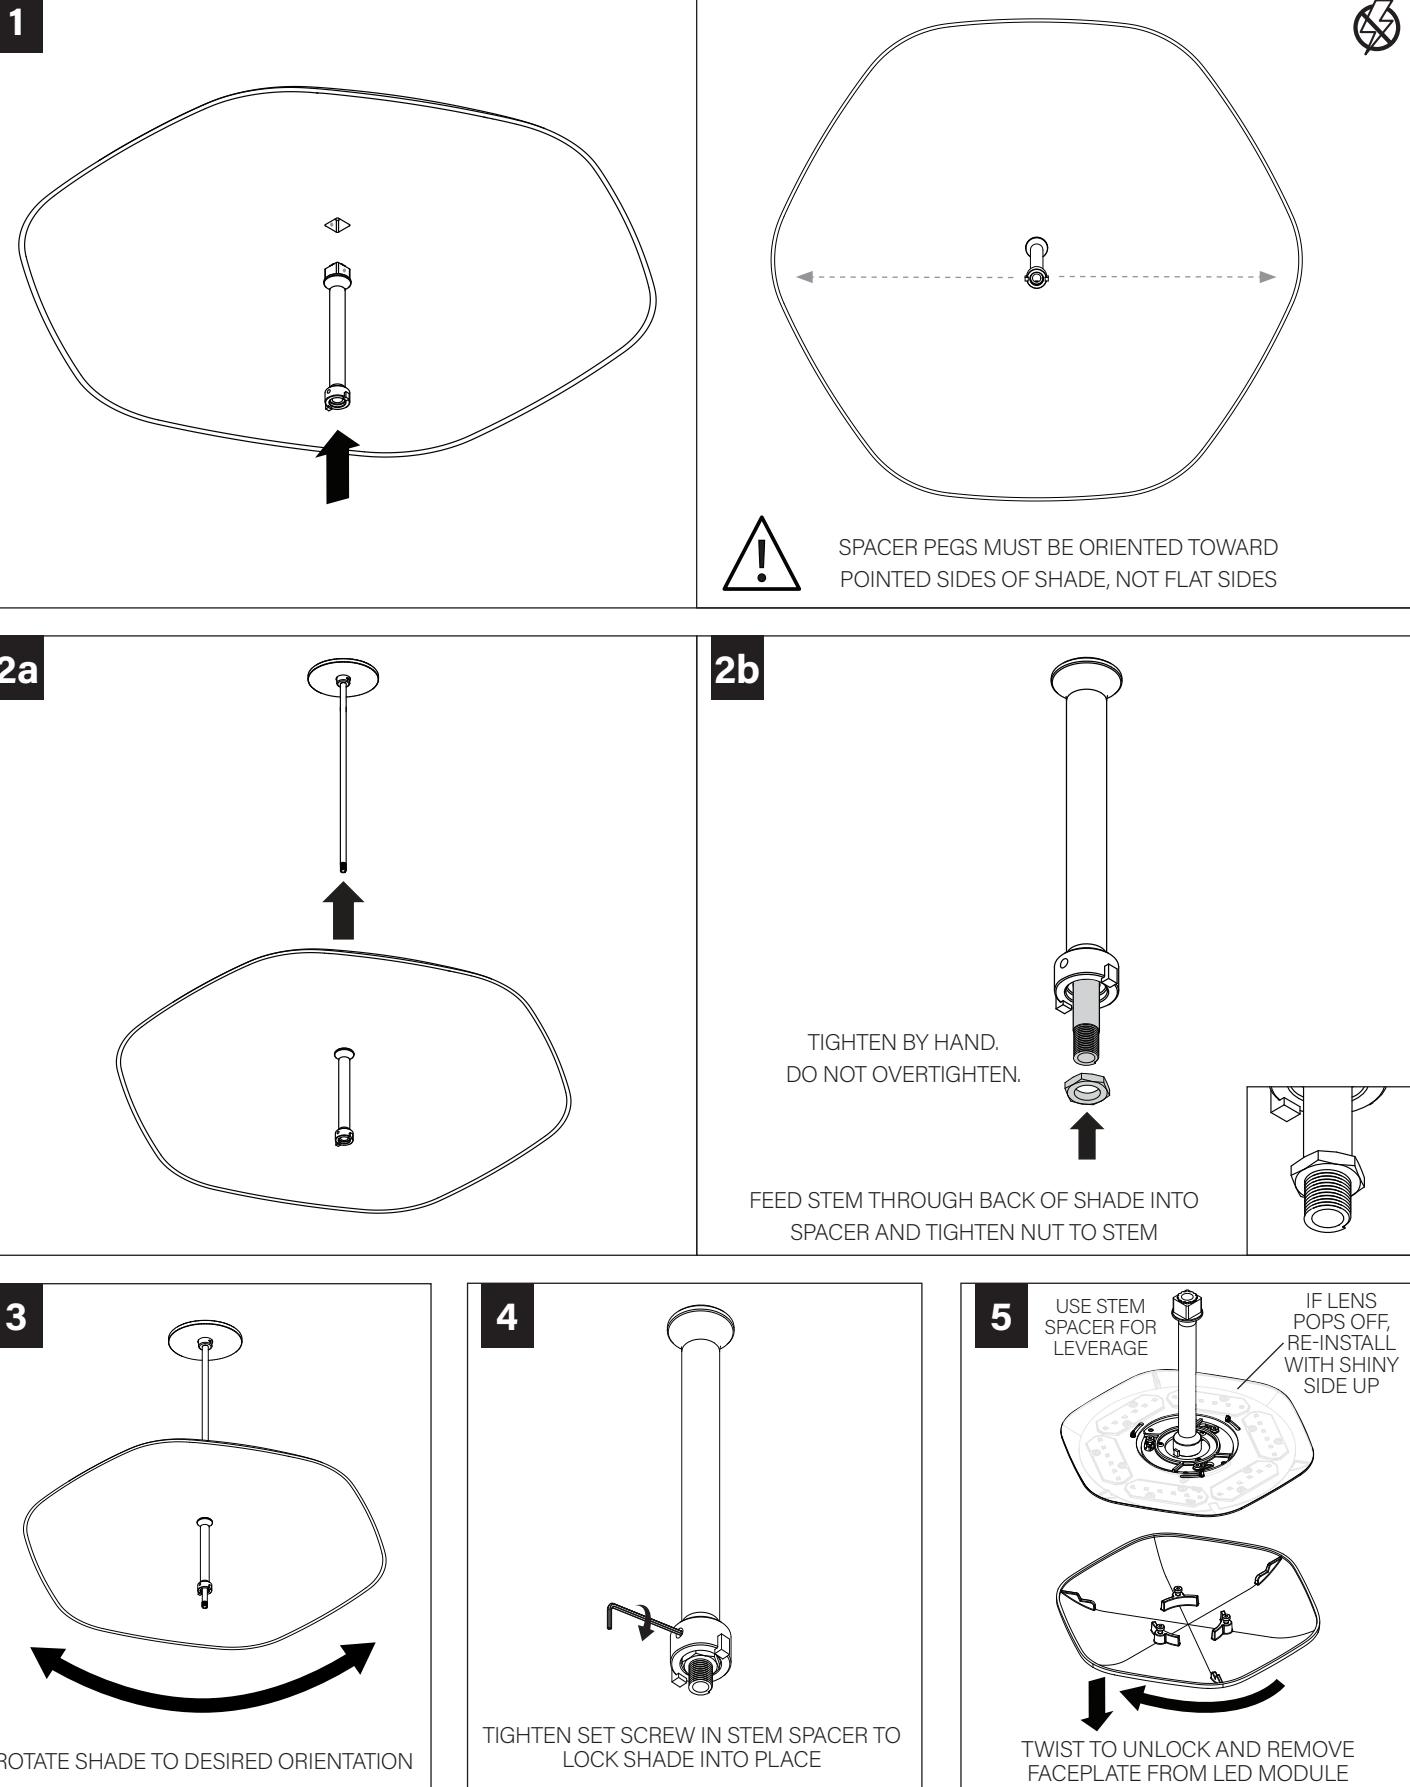

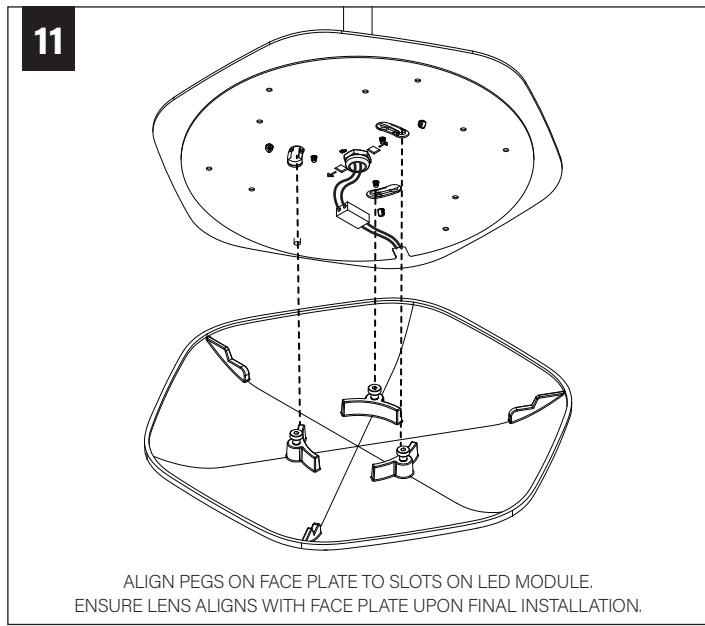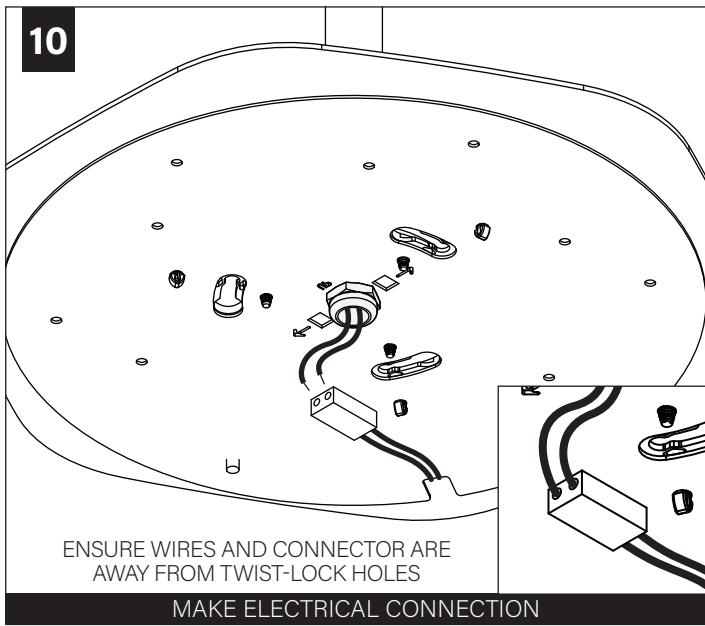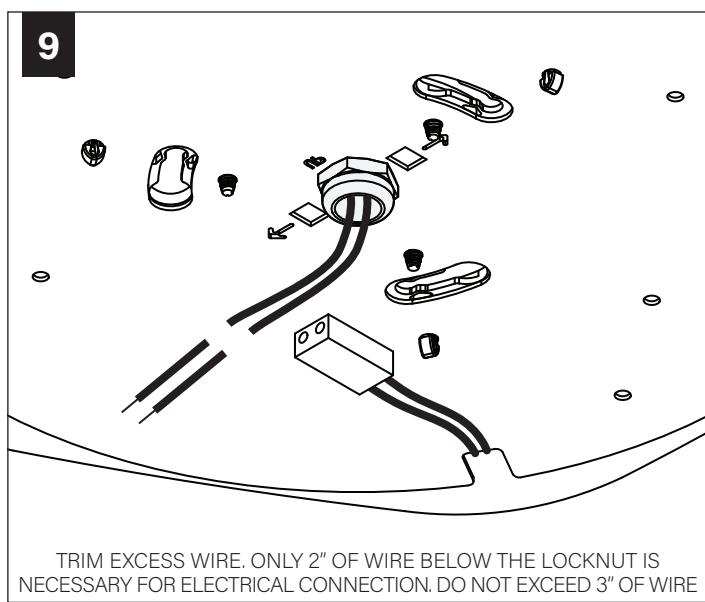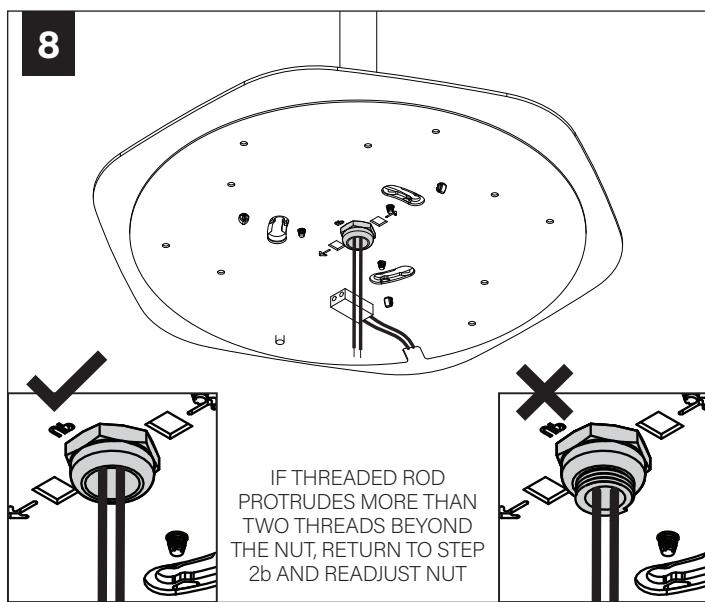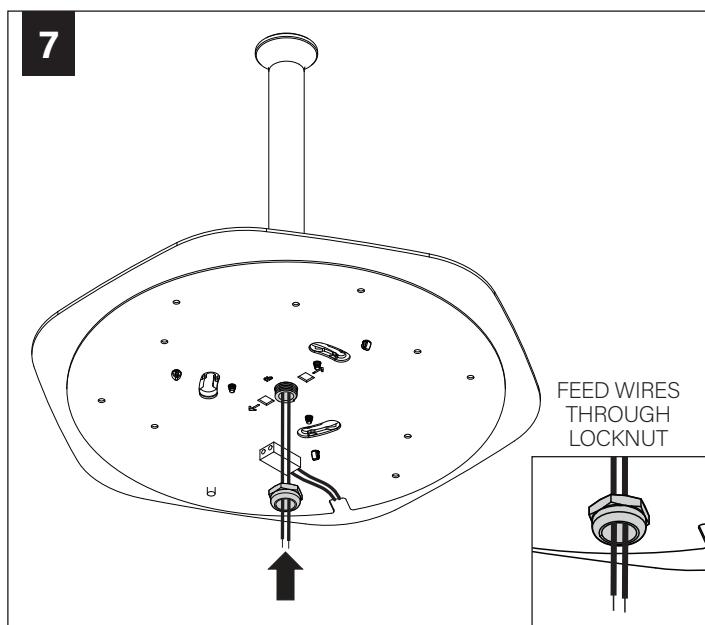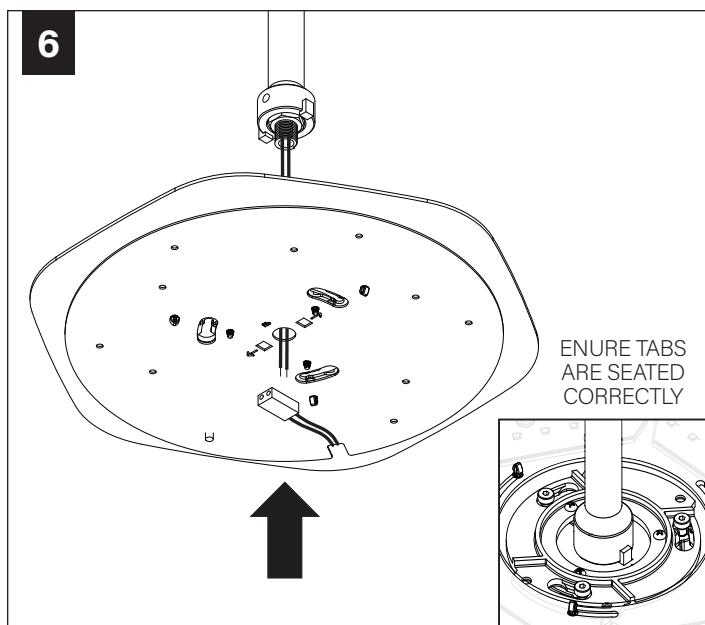

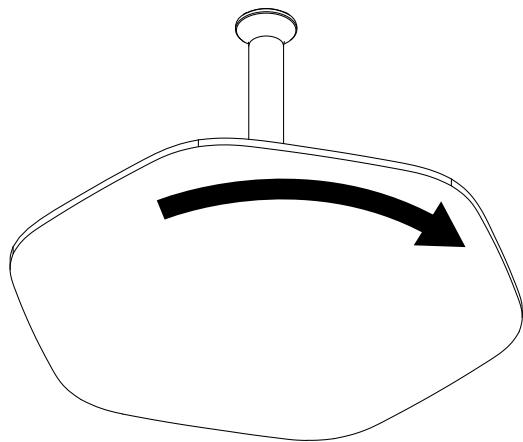10

TWIST AND LOCK FACEPLATE INTO PLACE

11