

Polina™ Acoustic

PENDANT | APOLP-SHX-RPSPOL-27 | APOLP-SHX-RPSPOL-42



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



POWER OFF



POWER ON


HANDLING & CLEANING



Always handle with clean white gloves (provided).



Use can of compressed air to remove dust and debris from shade and dust cover.




Use lint roller to gently lift any remaining debris from shade.




Lighty wipe dust cover with damp cloth. Do not leave excess moisture on surface.

COMPONENT KEY

ACOUSTIC SHADES

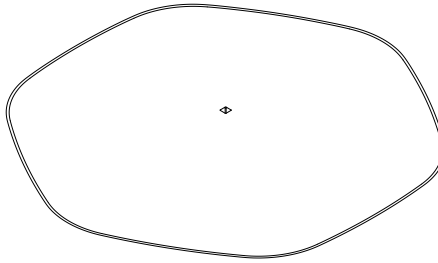

42" Shade

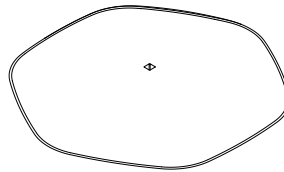

27" Shade

LIGHT ENGINE



STEM SPACER




NUT



LED MODULE



LOCK NUT




FACE PLATE

SHIPPED INSTALLED




#273 SET SCREWS

SHIPPED IN PARTS BAG




ALLEN WRENCH

STEM MOUNT




STEM MOUNTING BRACKET




FACE PLATE

STEM


REMOTE POWER SYSTEM

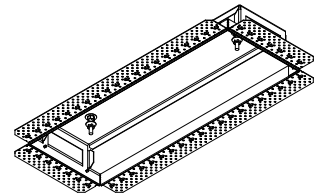


MUD-IN CHASIS

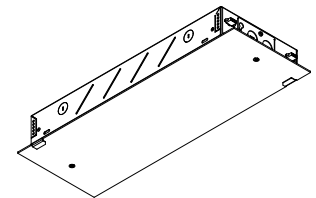


MUD-IN REMOTE POWER BOX

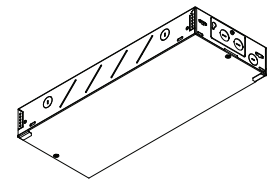


OPEN CEILING REMOTE POWER BOX




CONVERTER J-BOX



RPS J-BOX

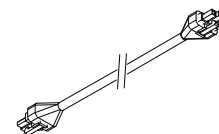



LOW VOLTAGE CABLE




TERMINATOR

REMOTE POWER SYSTEM - MUD-IN DRYWALL

1

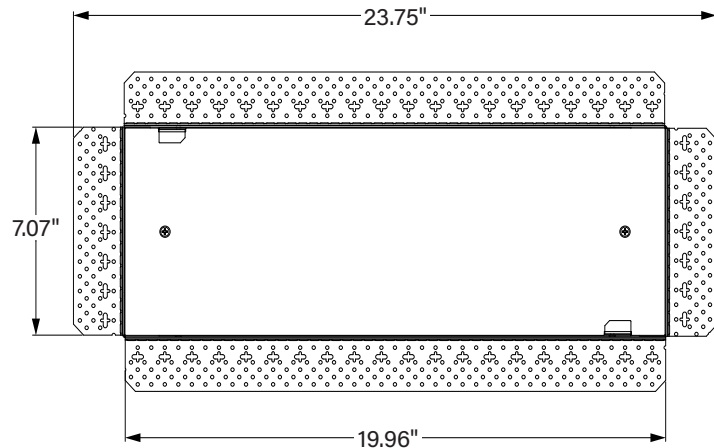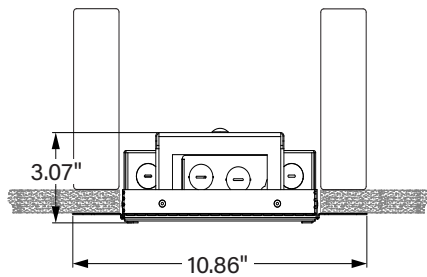


1

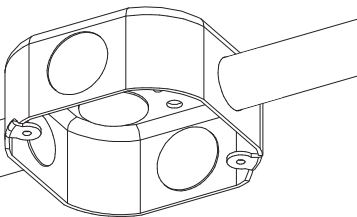

INSTALL J-BOX AND WIRING PRIOR TO DRYWALL INSTALLATION


2

CUTOUT DIMENSIONS
20.125" x 7.25"

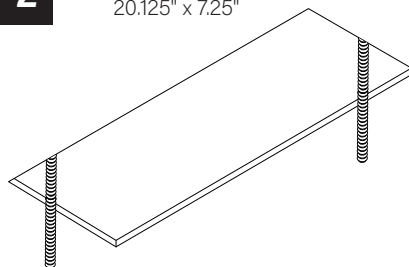


MAIN POWER FEED AND FEED TO J-BOXES MUST BE ACCESSIBLE FROM BELOW CEILING POST DRYWALL

3

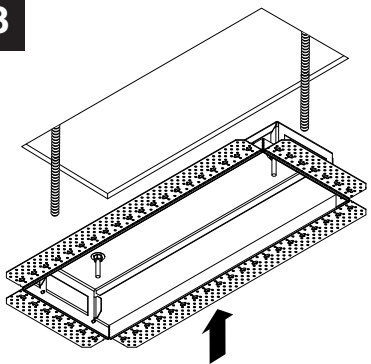


4

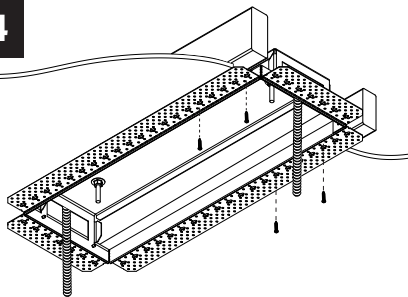


DRYWALL INSTALLS BEHIND MUD FLANGE
STAGGER SCREWS (#8 FLAT UNDERCUT
HEAD SCREW BY OTHERS)

5

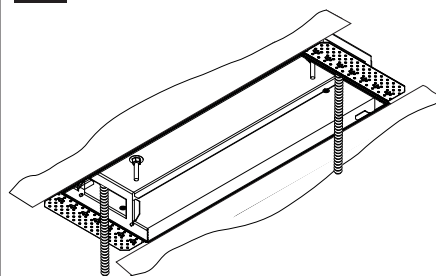


MUD AND TAPE


6

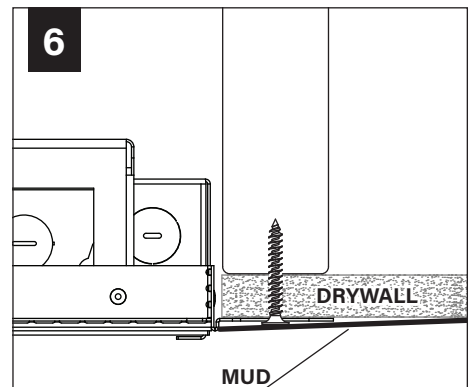


7

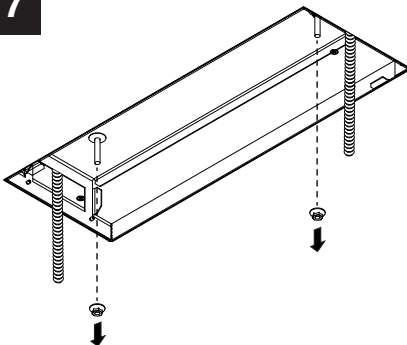













8

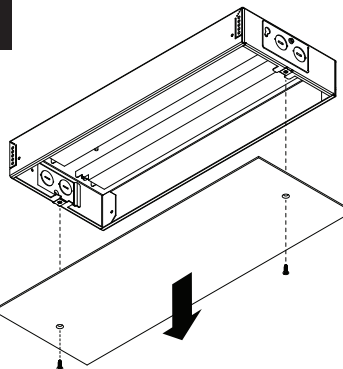

9


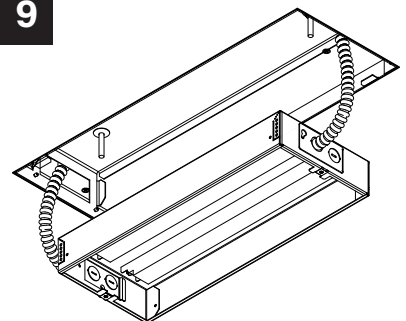


MAKE ELECTRICAL CONNECTION

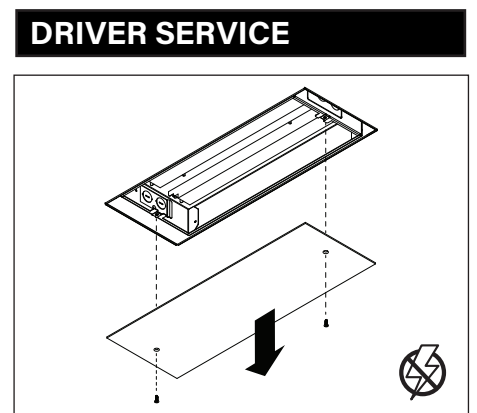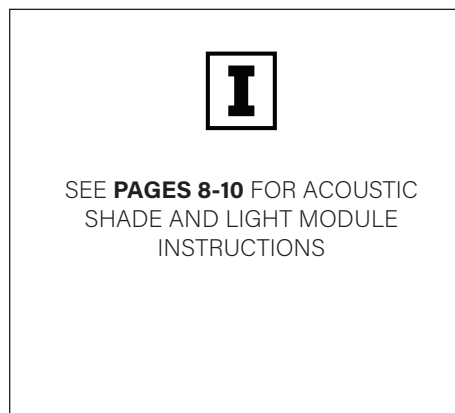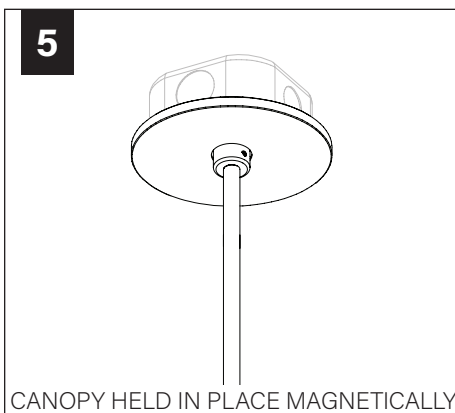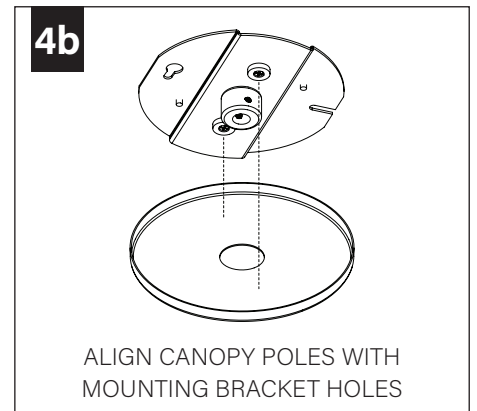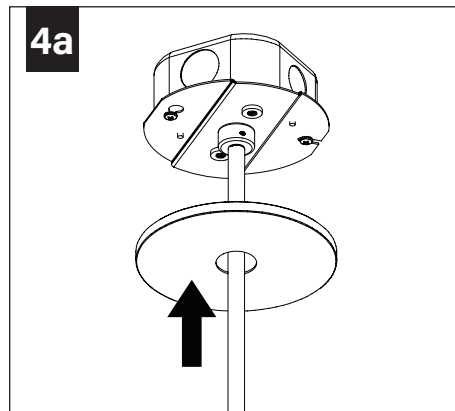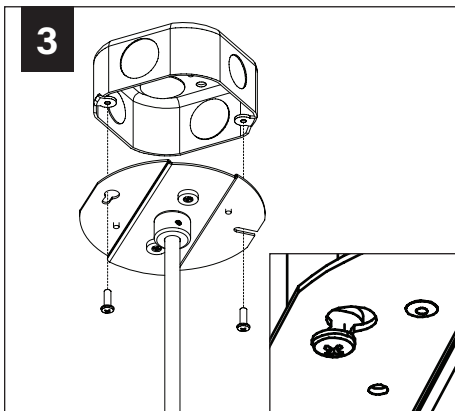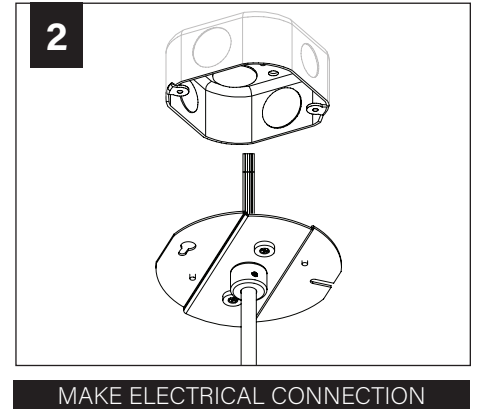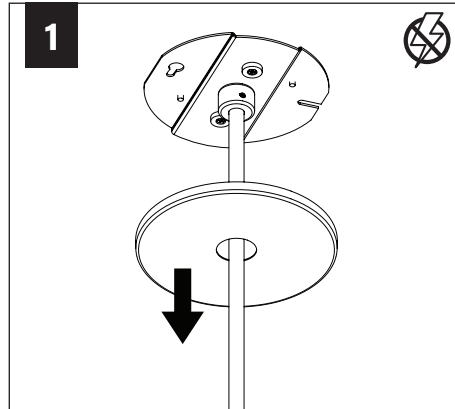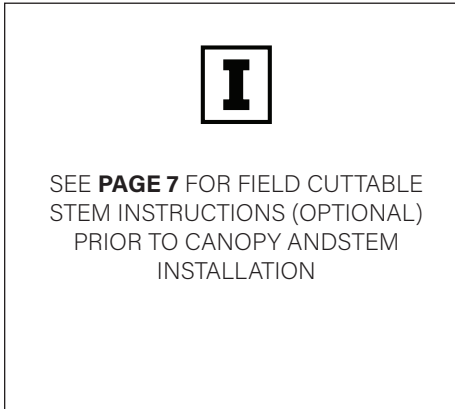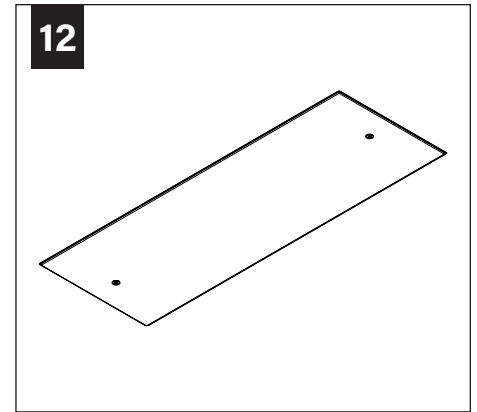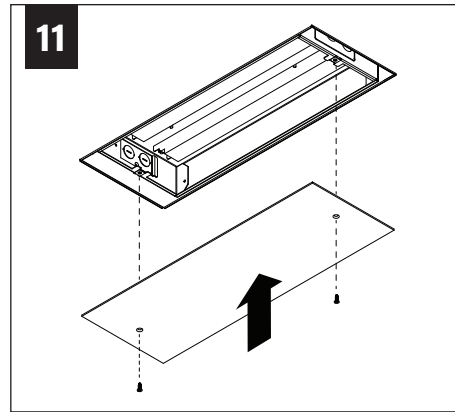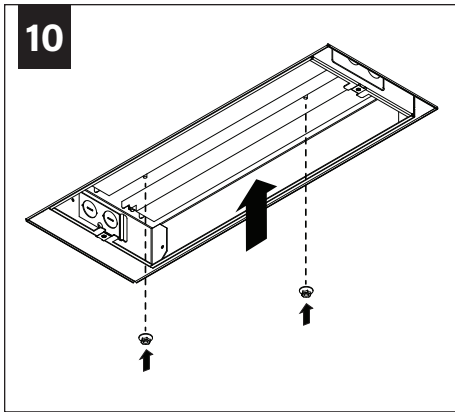

REMOTE POWER SYSTEM - OPEN CEILING

1

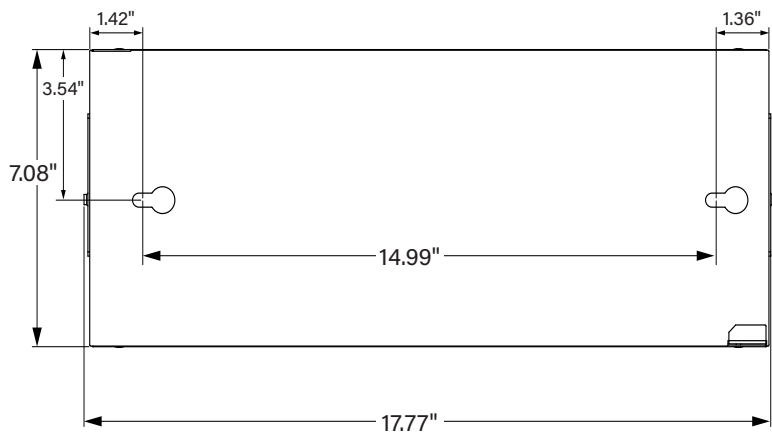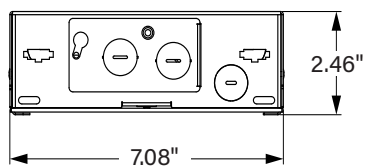

2

**HARD CEILING
INSTALLATION**




1/4" - 20 ANCHOR
HARDWARE BY OTHERS


2

1/4" - 20 THREAD
HARDWARE BY OTHERS


**STRUT INSTALLATION
(USED FOR INSTRUCTIONS)**

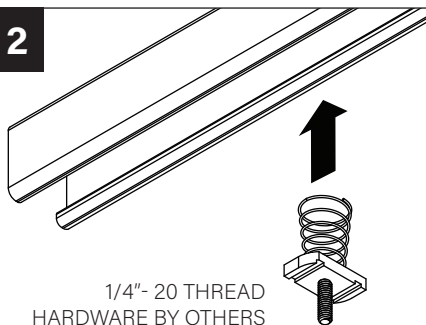


3

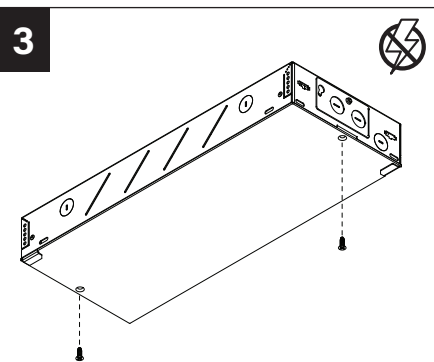


4

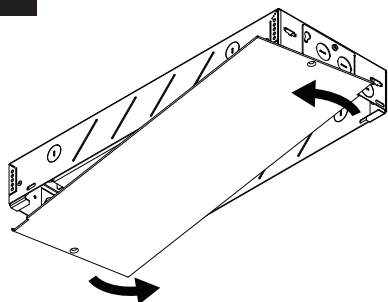


5

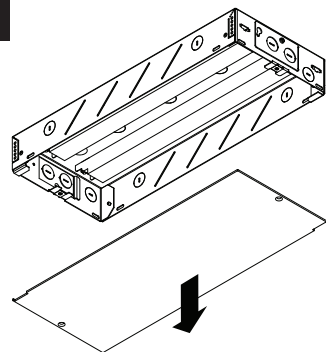

6

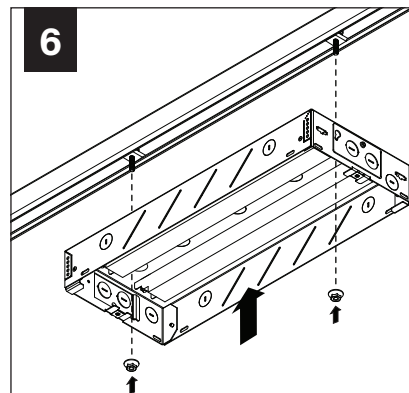


7

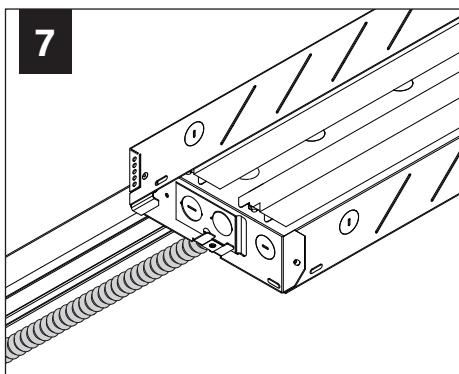




MAKE ELECTRICAL CONNECTION

8

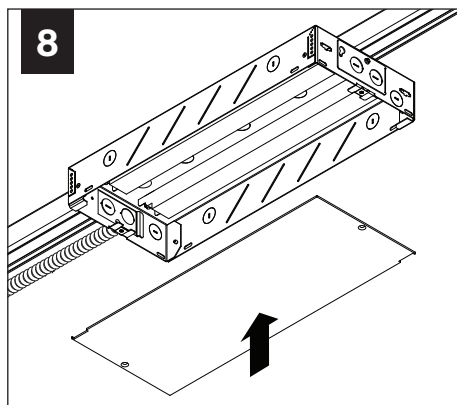




9

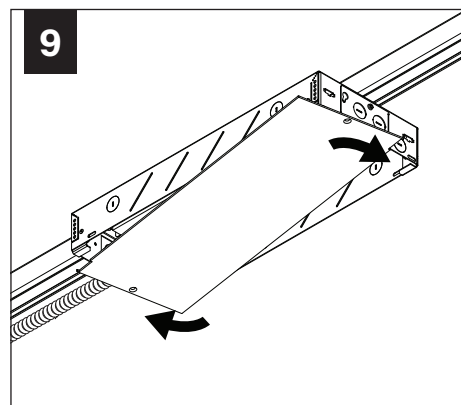

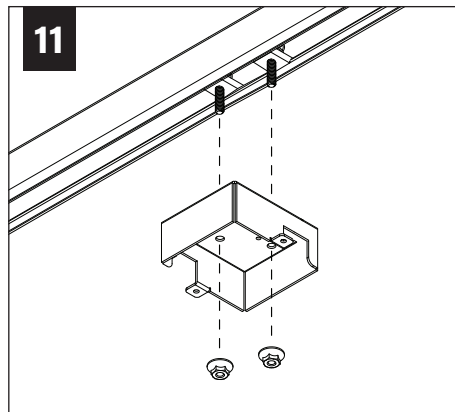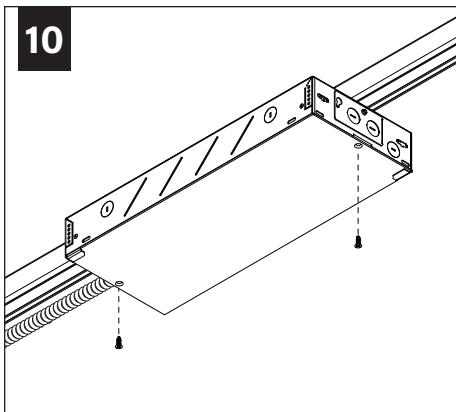


I


SEE **PAGE 7** FOR FIELD CUTTABLE
STEM INSTRUCTIONS (OPTIONAL)
PRIOR TO CANOPY AND STEM
INSTALLATION

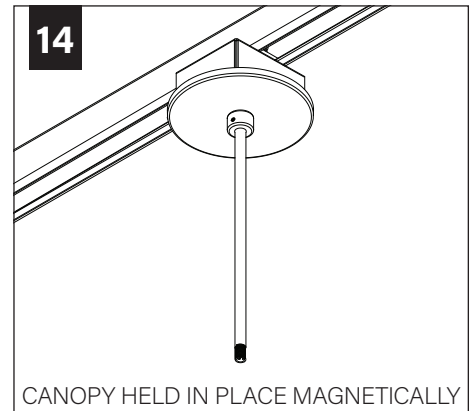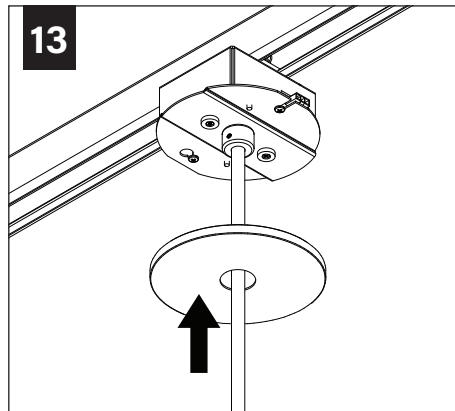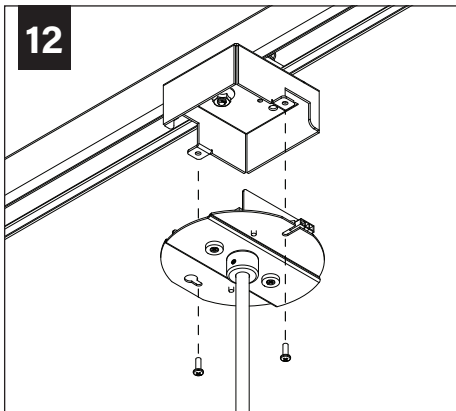


CANOPY HELD IN PLACE MAGNETICALLY

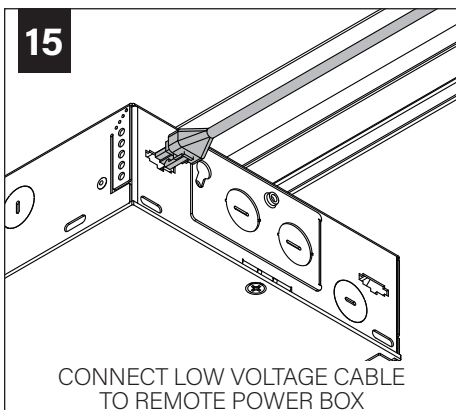


CONNECT LOW VOLTAGE CABLE
TO REMOTE POWER BOX

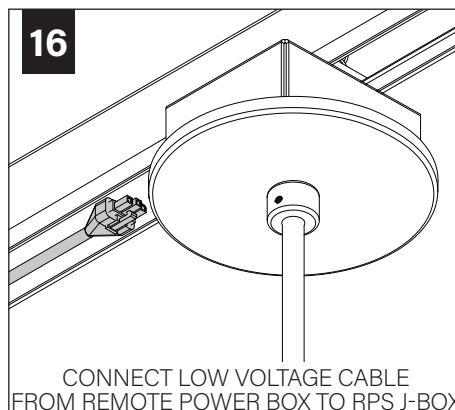

CONNECT LOW VOLTAGE CABLE
FROM REMOTE POWER BOX TO RPS J-BOX

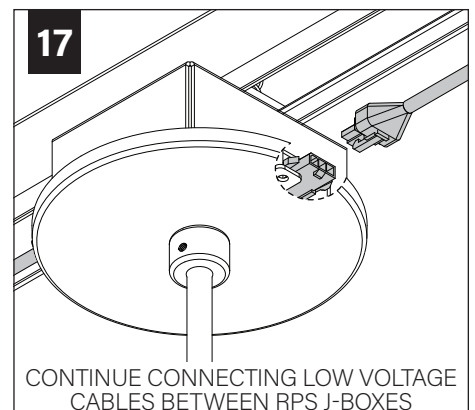

CONTINUE CONNECTING LOW VOLTAGE
CABLES BETWEEN RPS J-BOXES



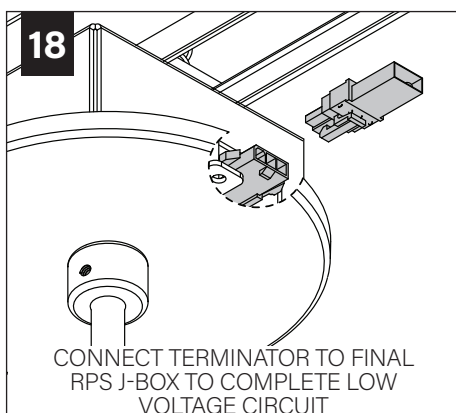


CONNECT TERMINATOR TO FINAL
RPS J-BOX TO COMPLETE LOW
VOLTAGE CIRCUIT








I

SEE **PAGES 8-10** FOR ACOUSTIC
SHADE AND LIGHT MODULE
INSTRUCTIONS












DRIVER SERVICE

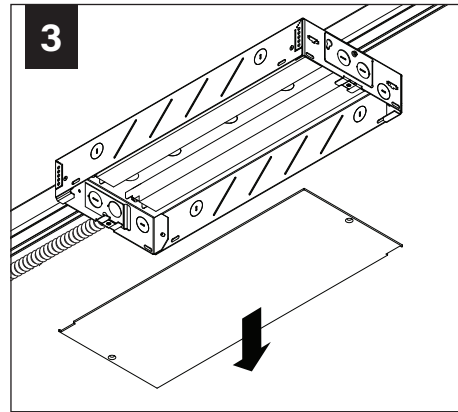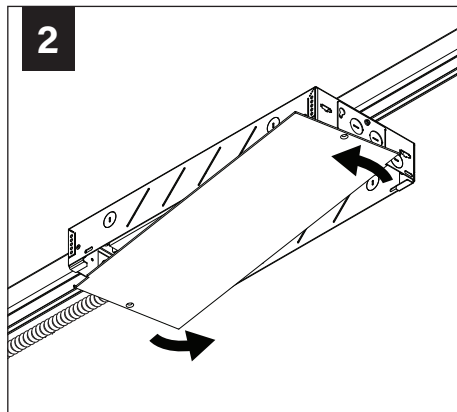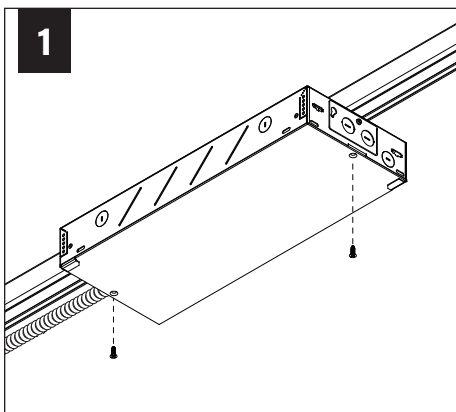

TRANSITIONAL CEILING

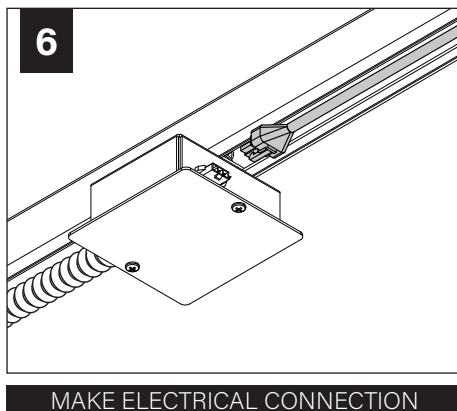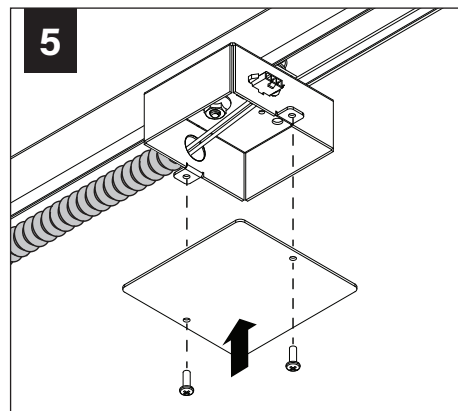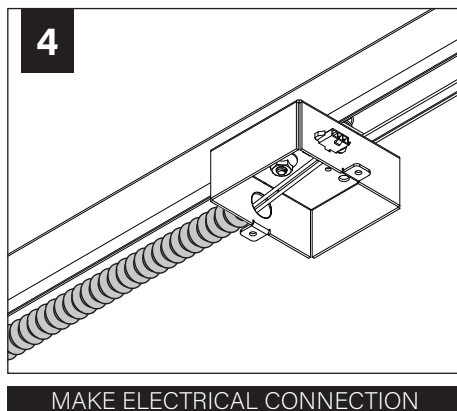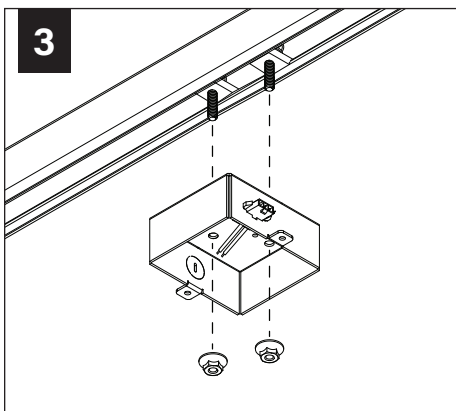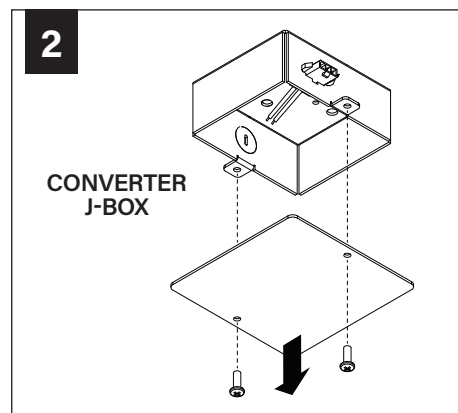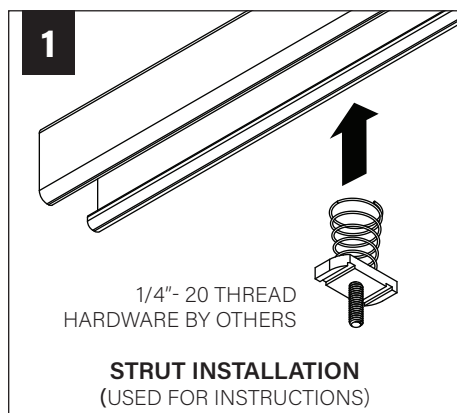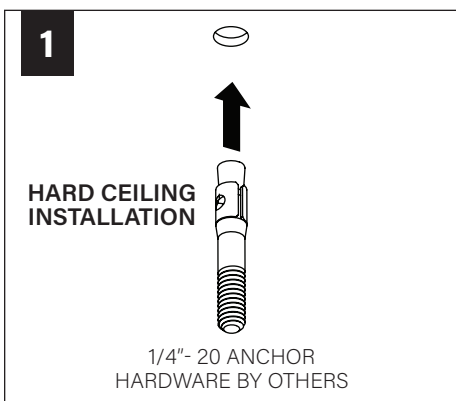


FIELD CUTTABLE STEM (OPTIONAL)

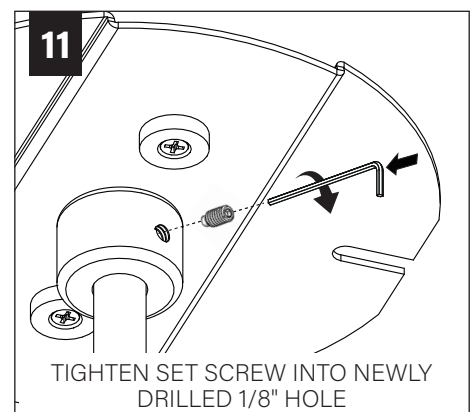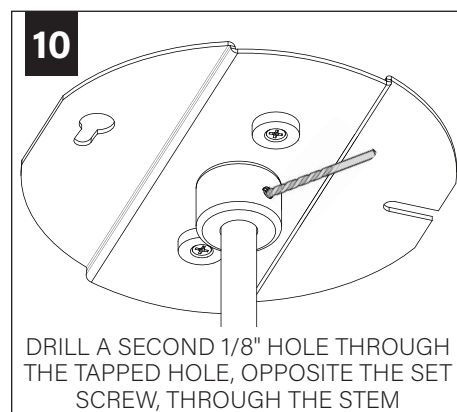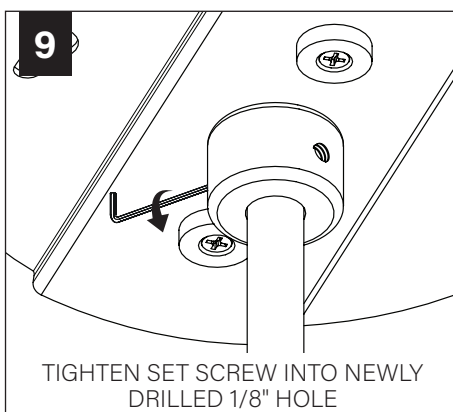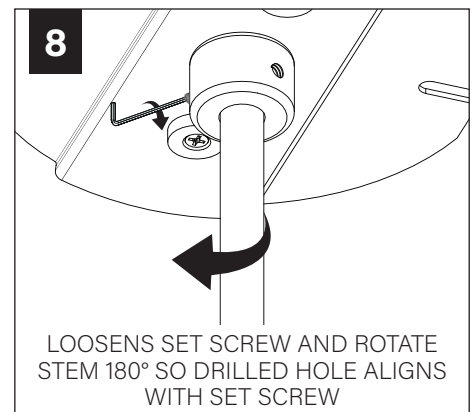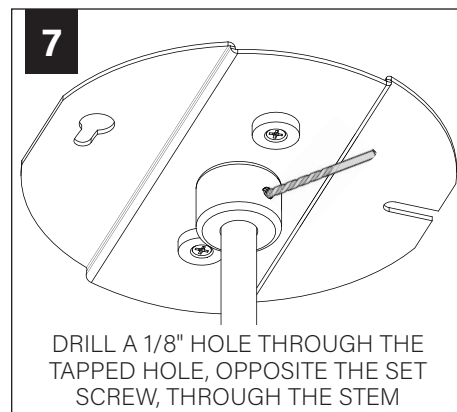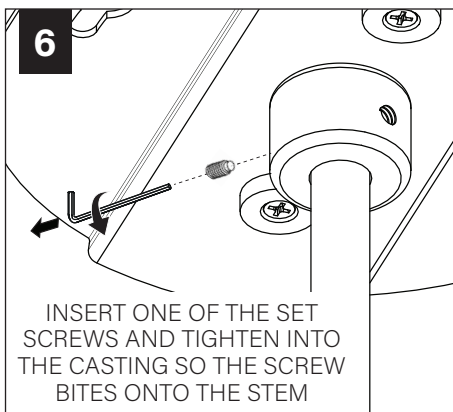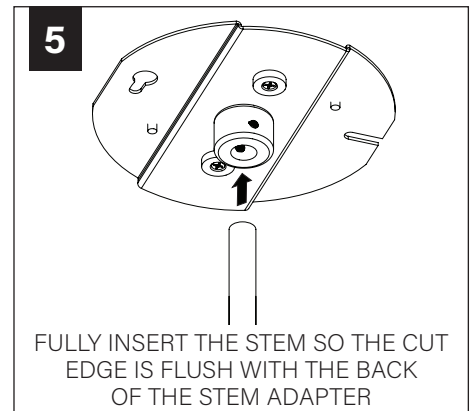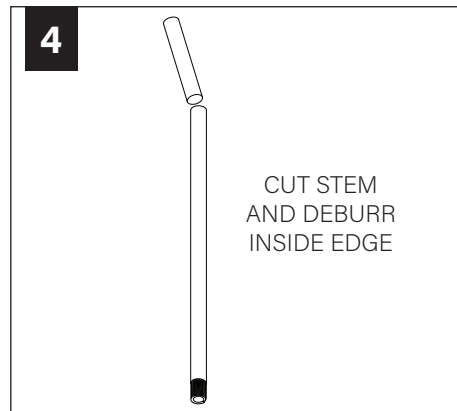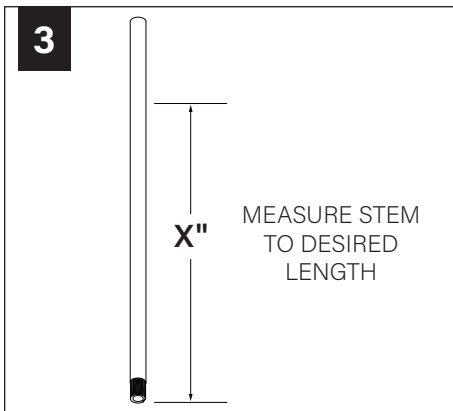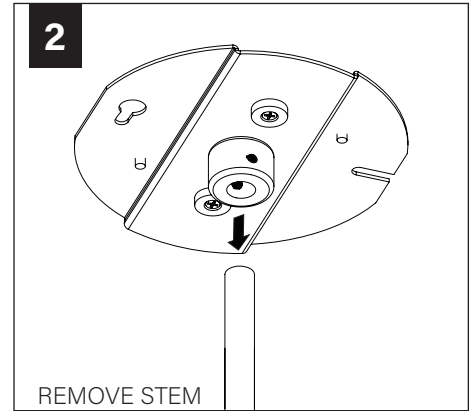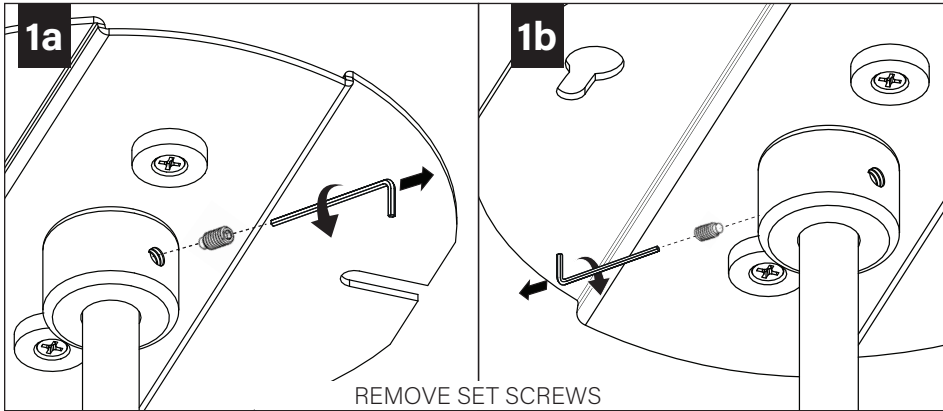


ACOUSTIC SHADE AND LED MODULE

1

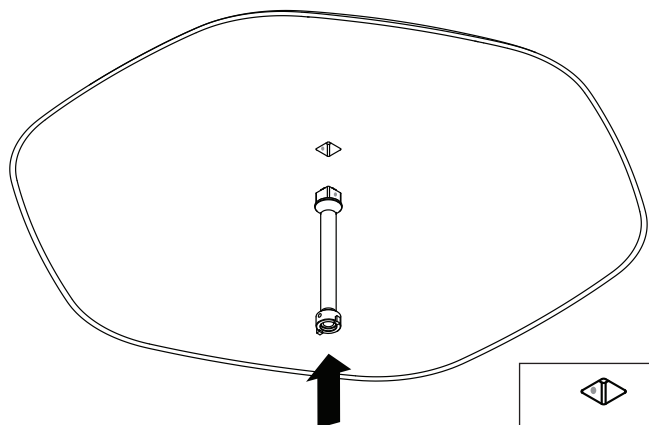


ALIGN GREEN DOTS ON SPACER WITH GREEN DOTS ON SHADE

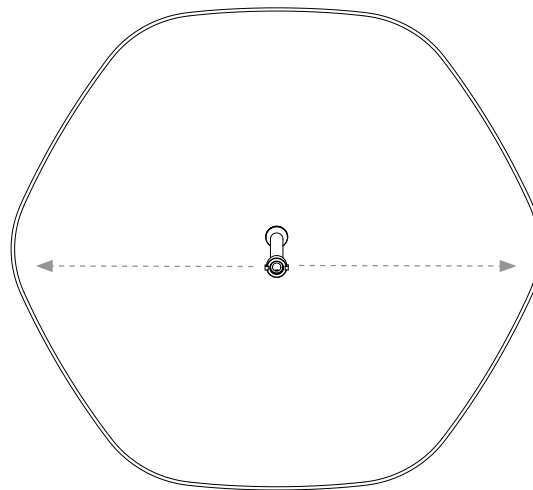


SPACER PEGS MUST BE ORIENTED TOWARD POINTED SIDES OF SHADE, NOT FLAT SIDES

2a

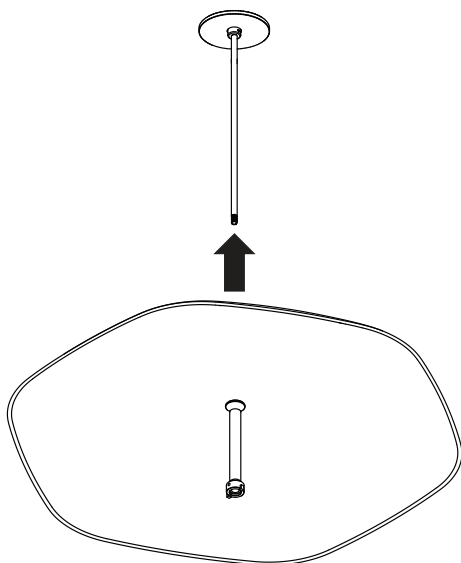


2b




TIGHTEN BY HAND.
DO NOT OVERTIGHTEN.

FEED STEM THROUGH BACK OF SHADE INTO SPACER AND TIGHTEN NUT TO STEM

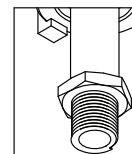


3

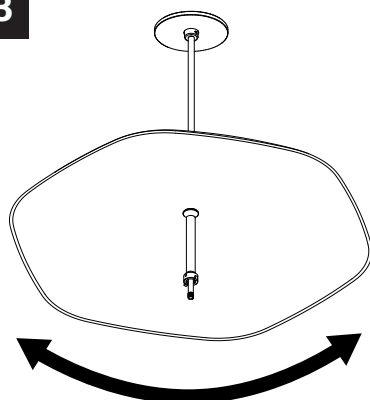

ROTATE SHADE TO DESIRED ORIENTATION

4


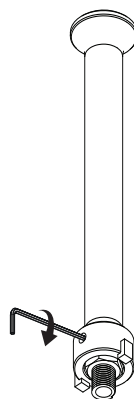


TIGHTEN SET SCREW IN STEM SPACER TO LOCK SHADE INTO PLACE







5

USE STEM SPACER FOR LEVERAGE


IF LENS POPS OFF, RE-INSTALL WITH SHINY SIDE UP

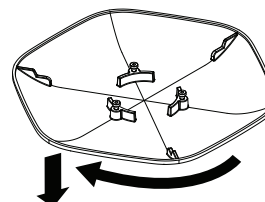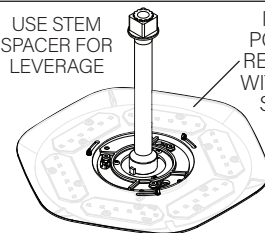

TWIST TO UNLOCK AND REMOVE FACEPLATE FROM LED MODULE

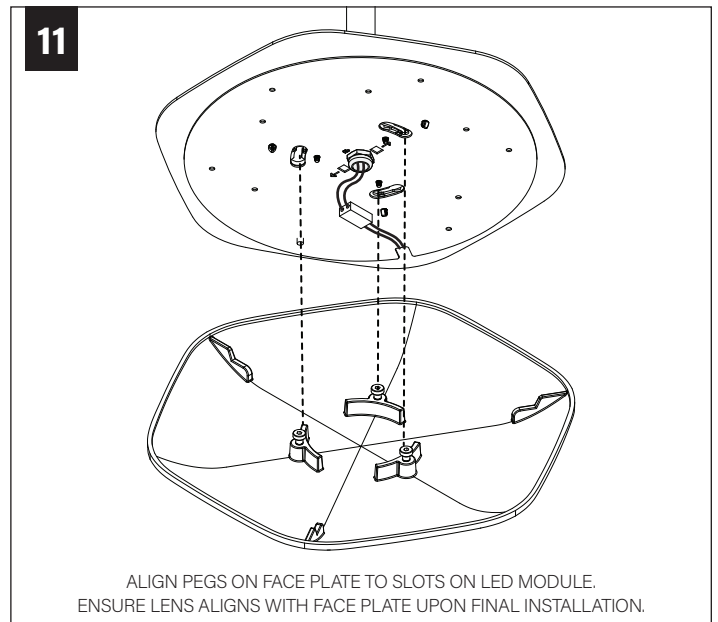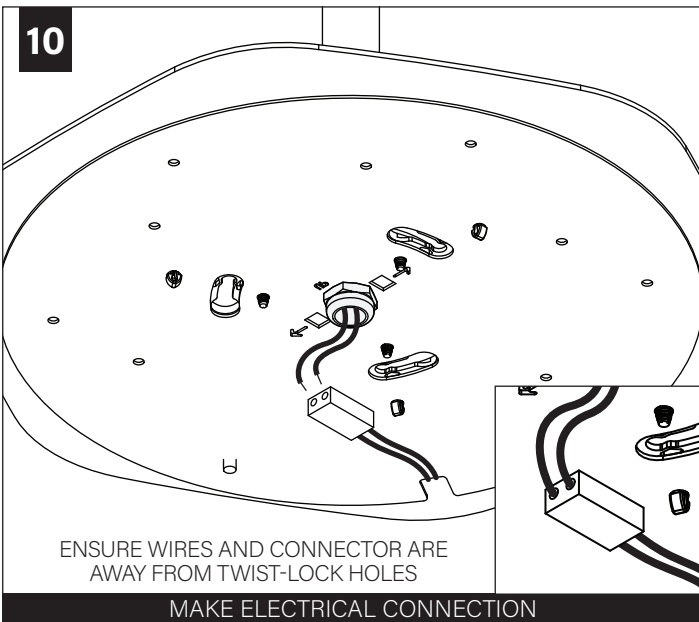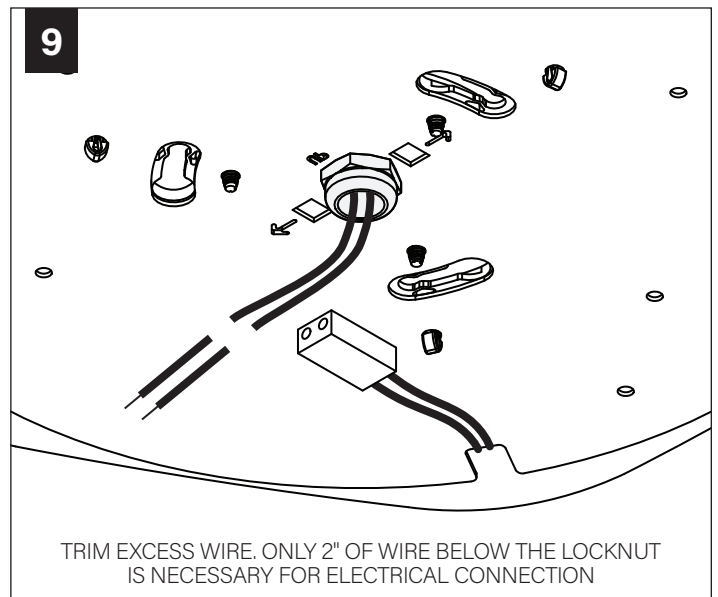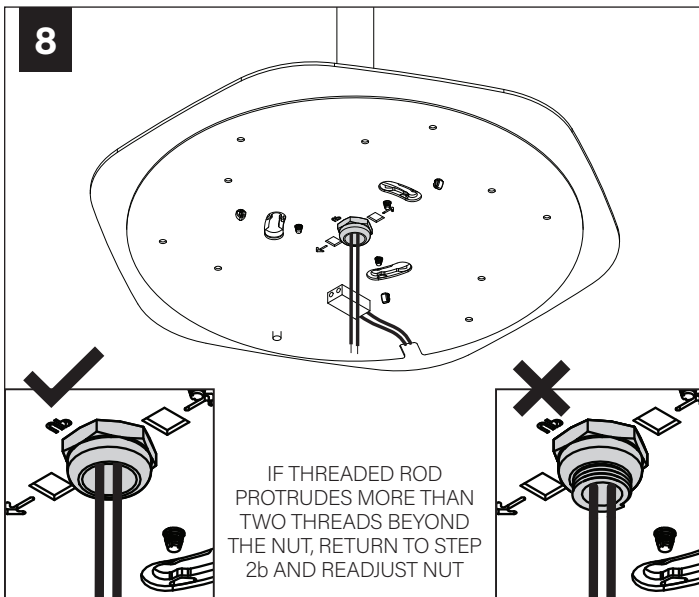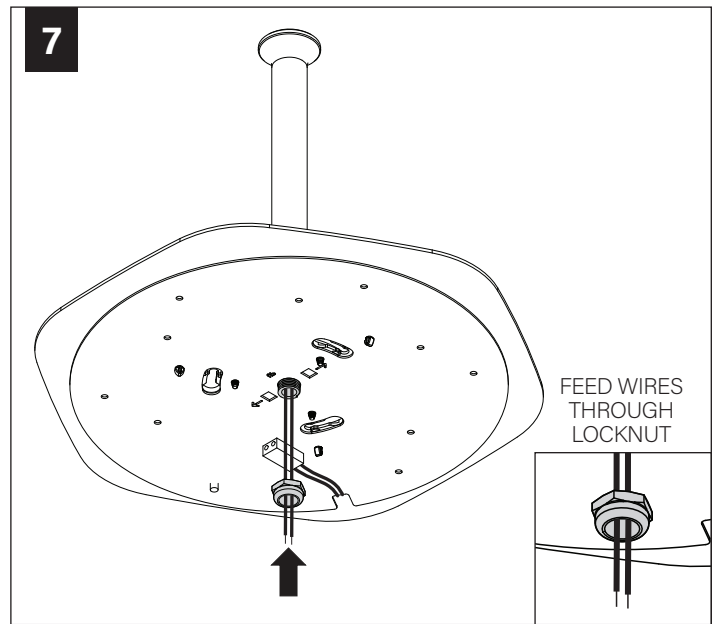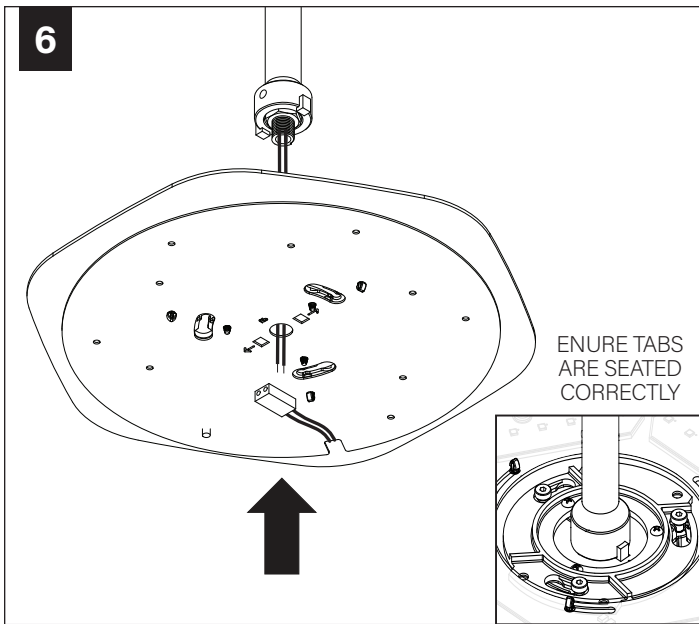

10

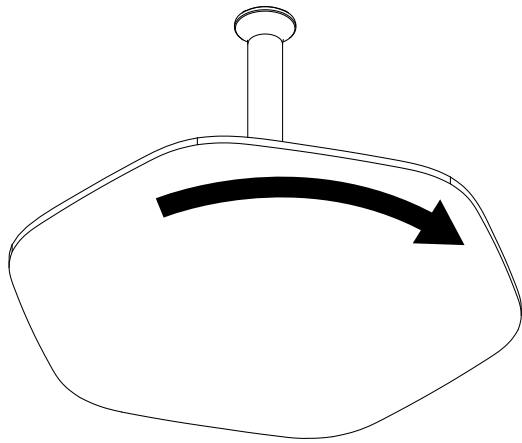

TWIST AND LOCK FACEPLATE INTO PLACE

11

