



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



POWER OFF



POWER ON


EMERGENCY



PRIOR TO LUMINAIRE INSTALLATION, SEE **PAGE 6** FOR EMERGENCY INSTALLATION INSTRUCTIONS.

COMPONENT KEY


ID+ CYLINDER

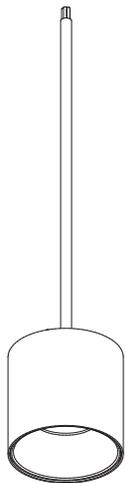


4" HOUSING HEIGHT




CLAMP




CYLINDER CAPTURE




PET SPACERS

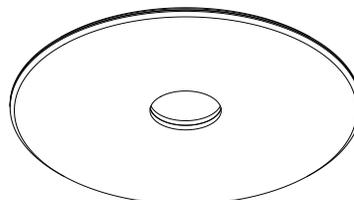

CIRCLE 24" | 36" | 48"

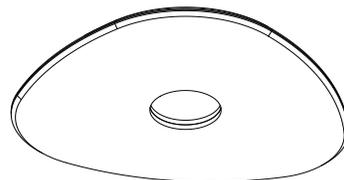


OVO 24" | 36" | 48"

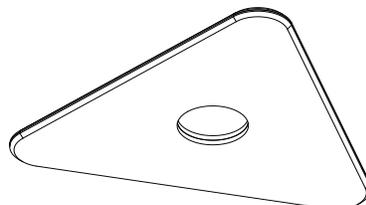

TRIANGLE 24" | 36" | 48"

MINI POWER CANOPY




J-BOX MOUNTING BRACKET / DRIVER CARRIAGE



POWER CORD MOUNTING BRACKET



FINISHING RING

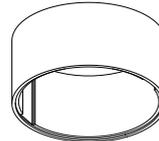

MINI POWER CANOPY




FACE PLATE



STRAIN RELIEF


SHIPPED IN HARDWARE BAG

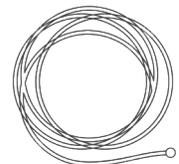

AIRCRAFT CABLE (73039-30,-102,-192)




4" OCTAGONAL J-BOX REQUIRED

J-BOX BY OTHERS



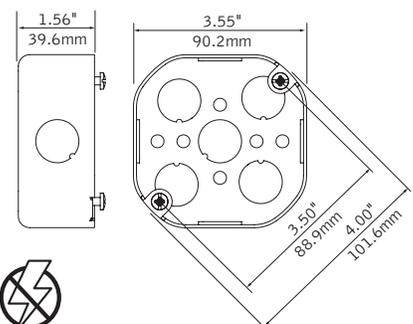


DIMENSIONS




CIRCLE

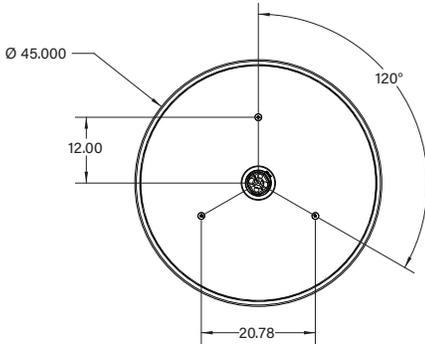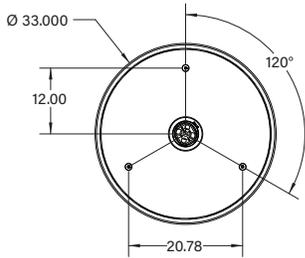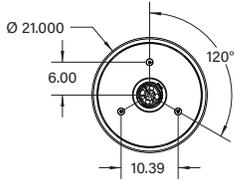

OVO

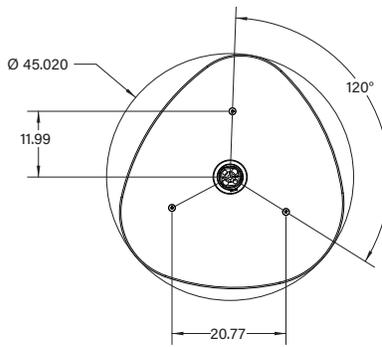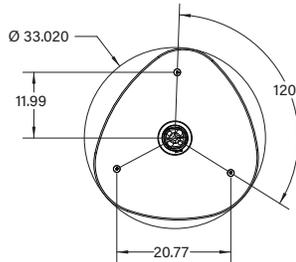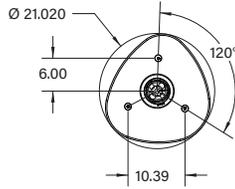


TRIANGLE

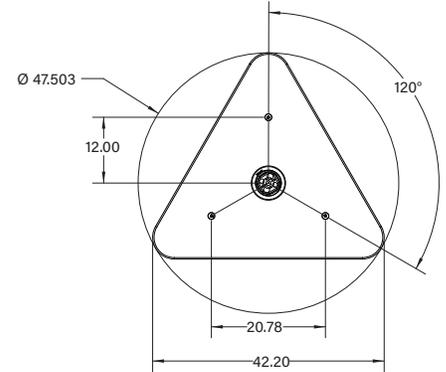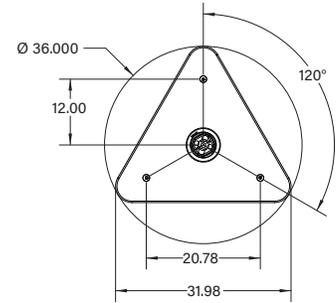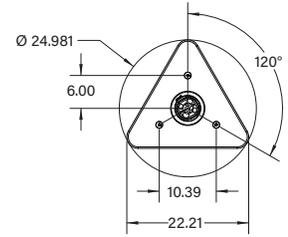


CYLINDER


1

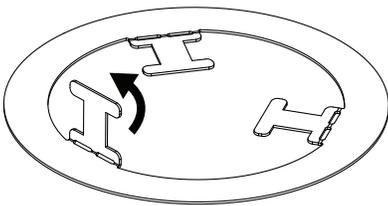









2

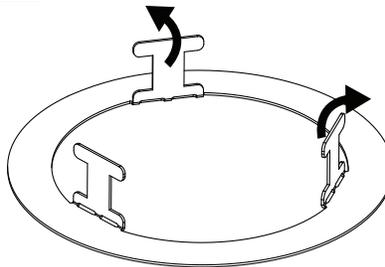




3














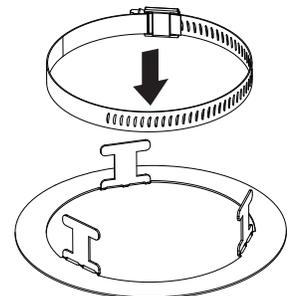


INSTALL CLAMP ONTO THE OUTSIDE OF THE TABS ON THE CANOPY CAPTURE (DO NOT TIGHTEN)

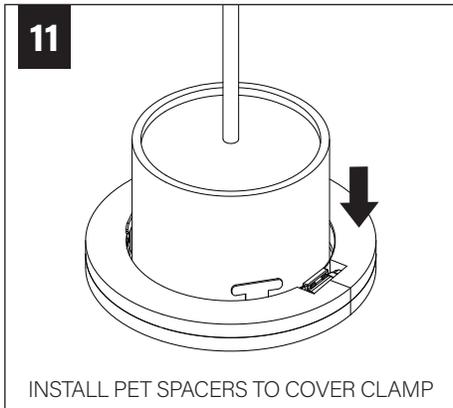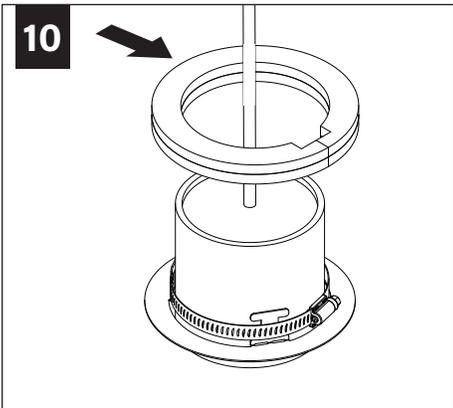
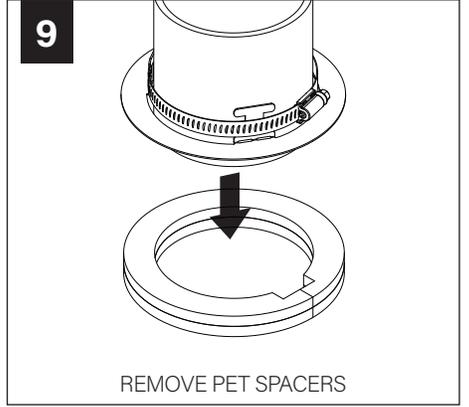
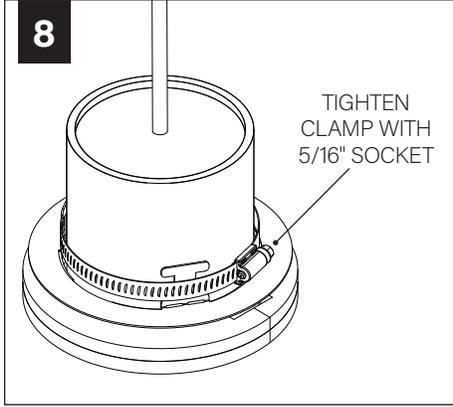
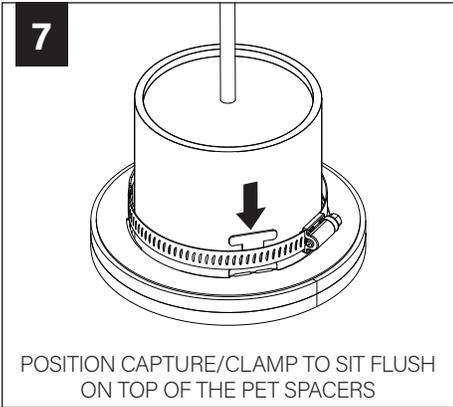
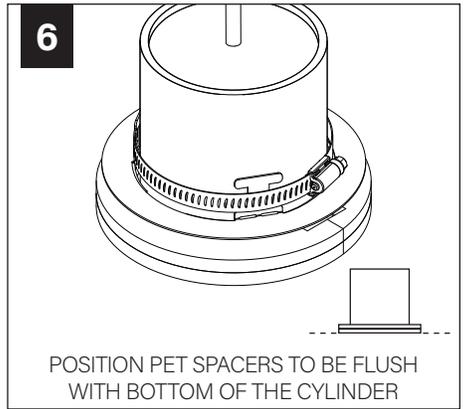
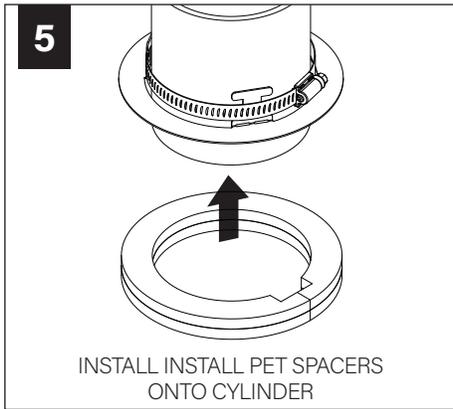
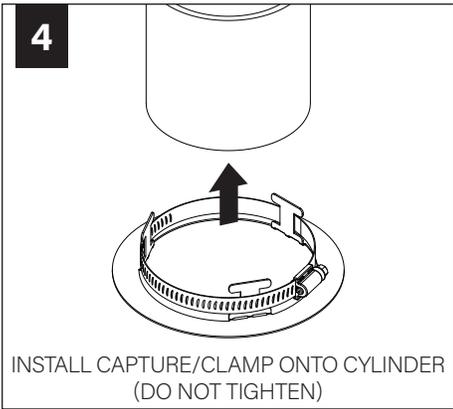


CANOPY

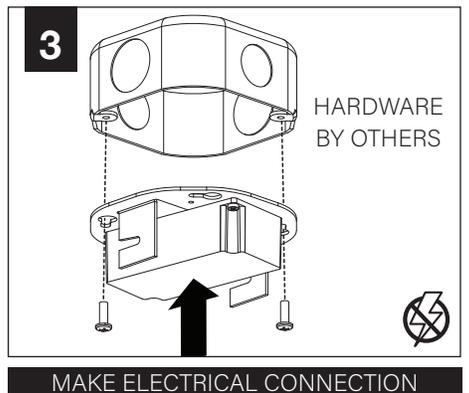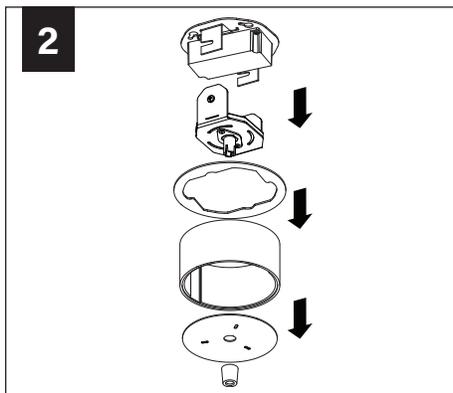
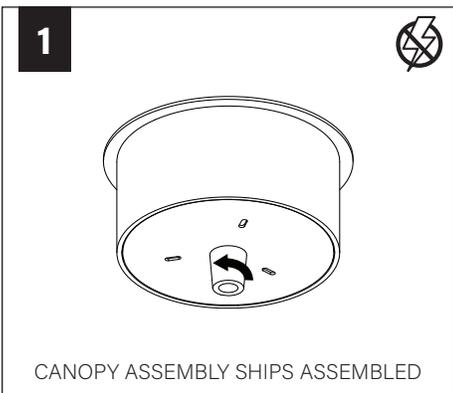


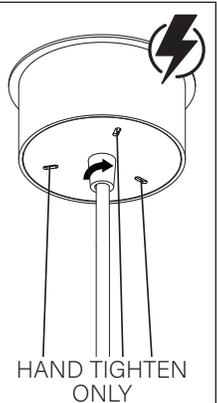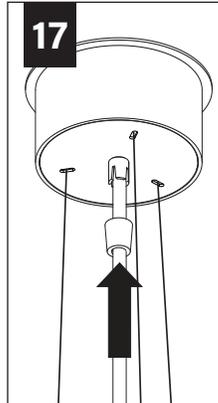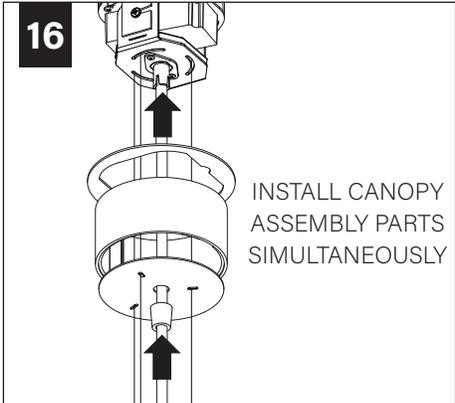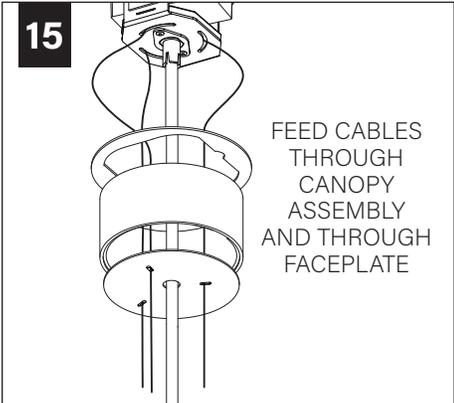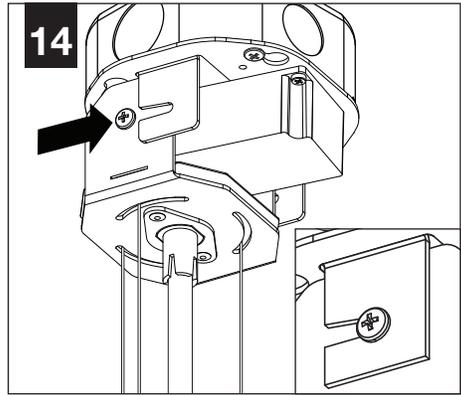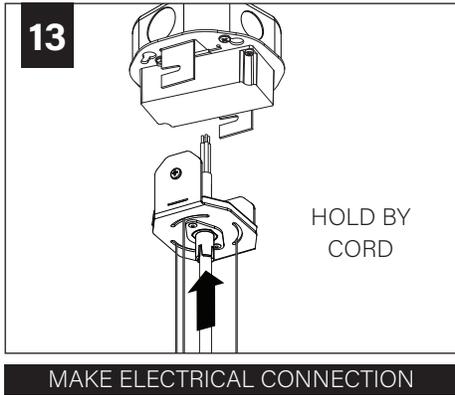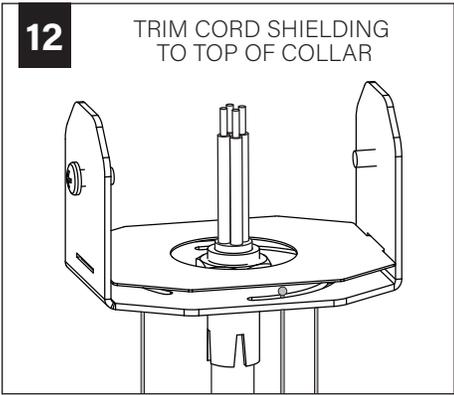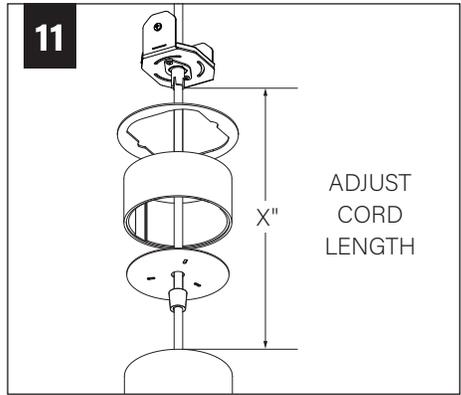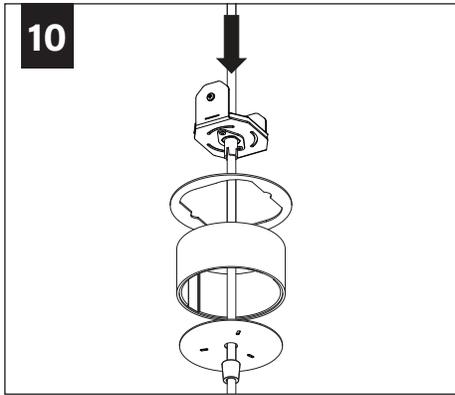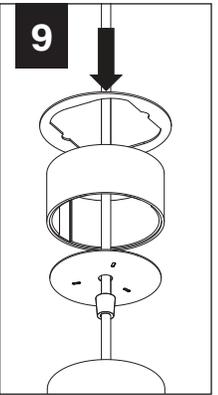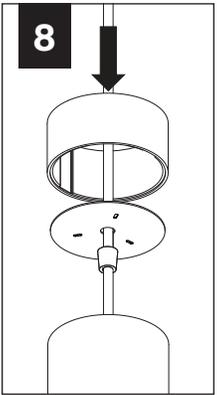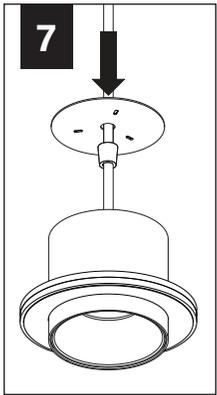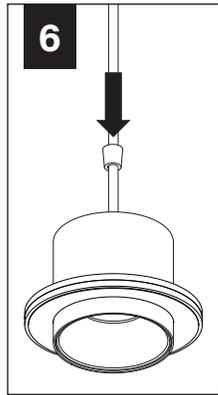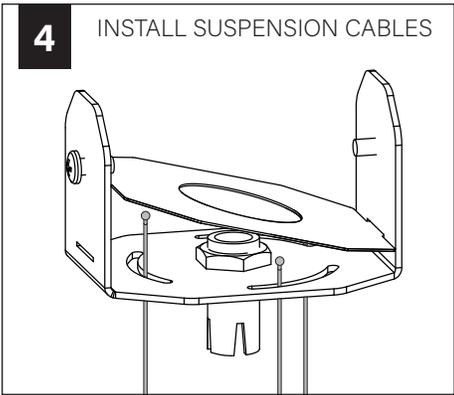











SHADE

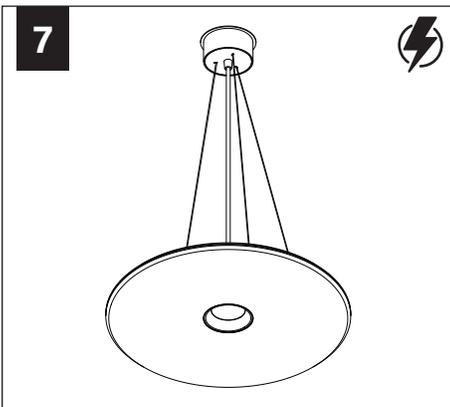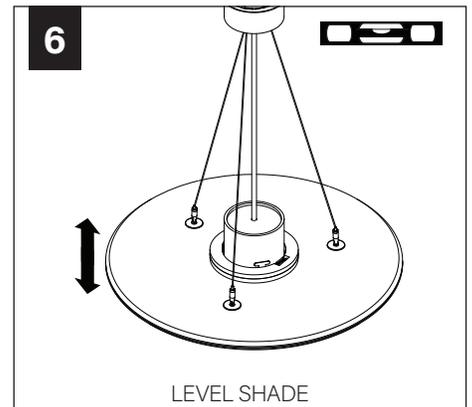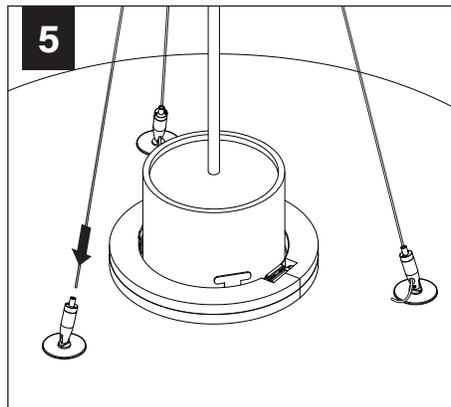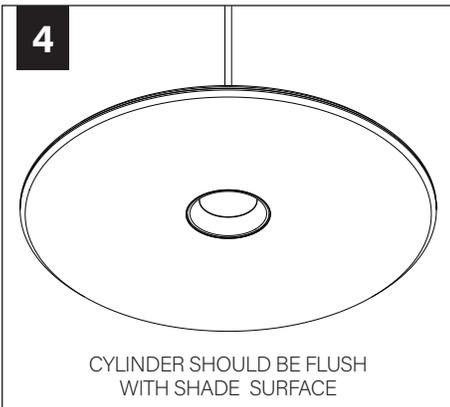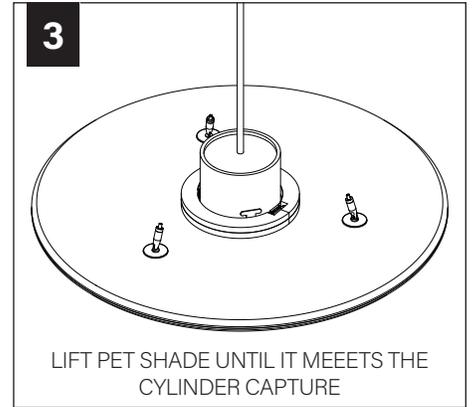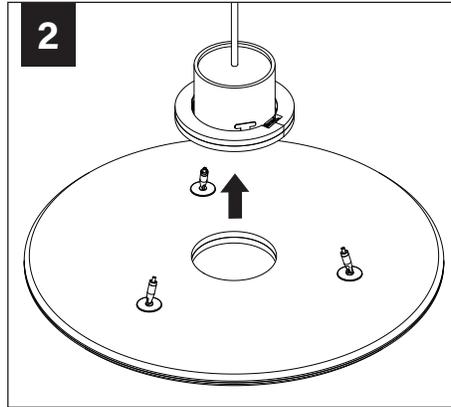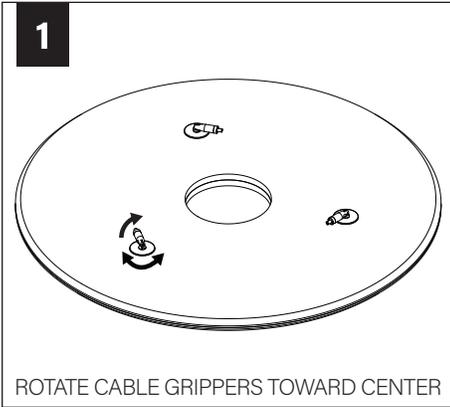


DRIVER SERVICE

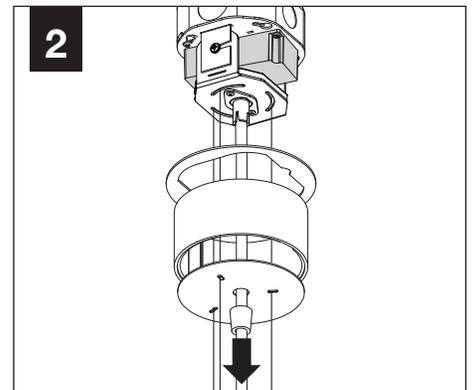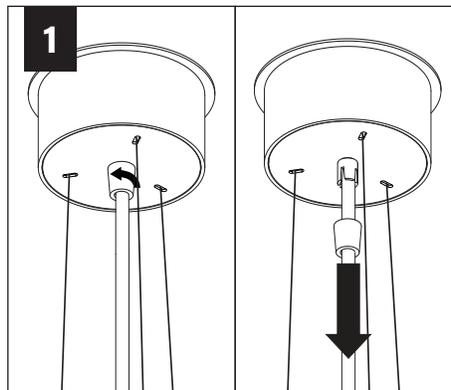

OPTIC SERVICE

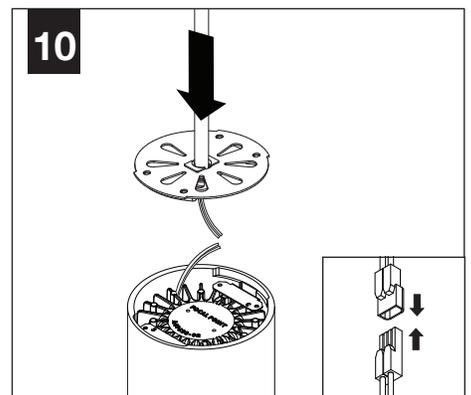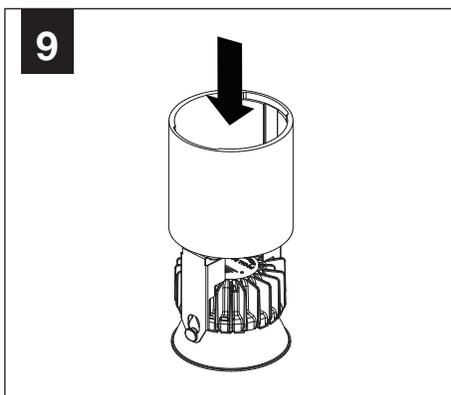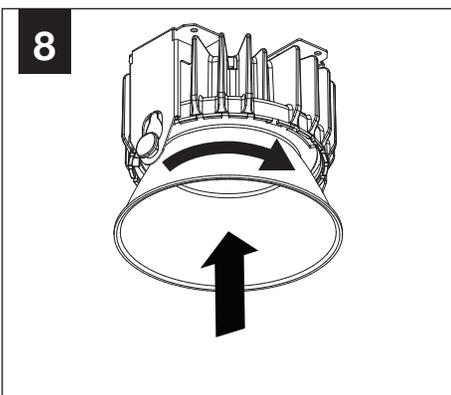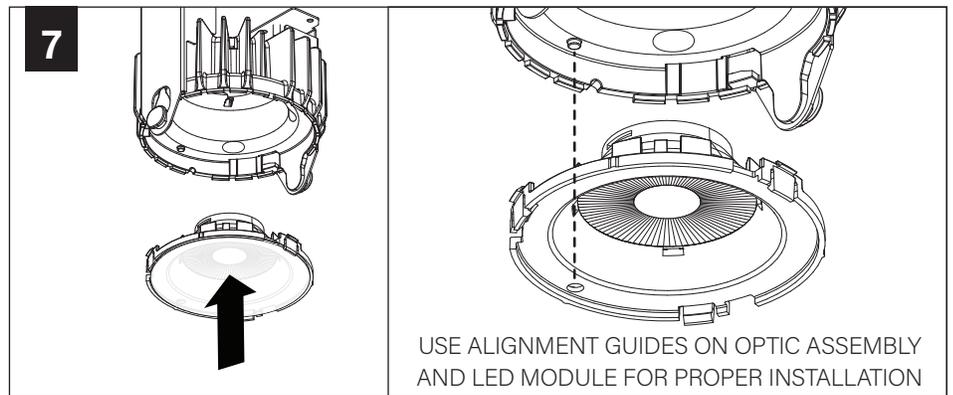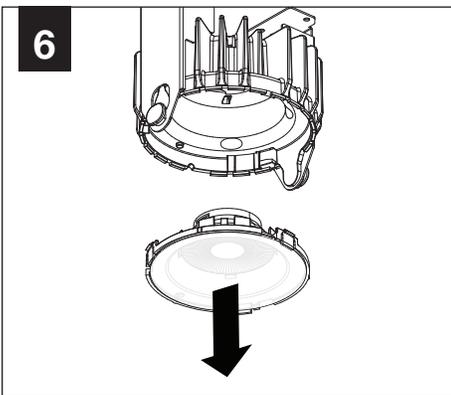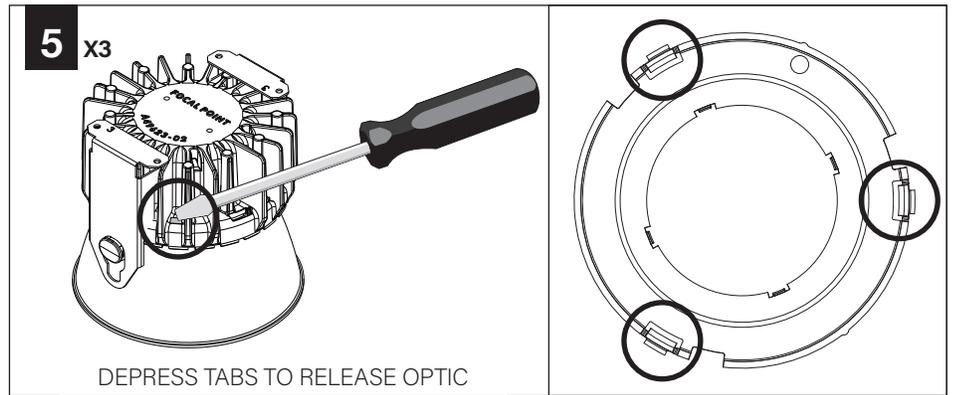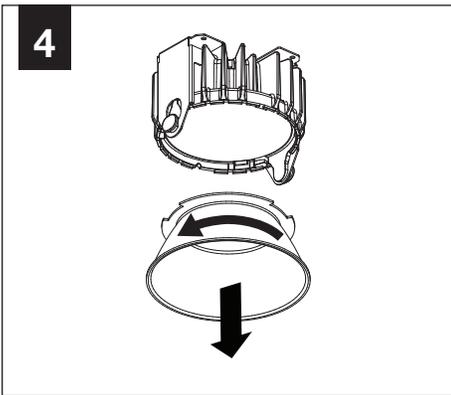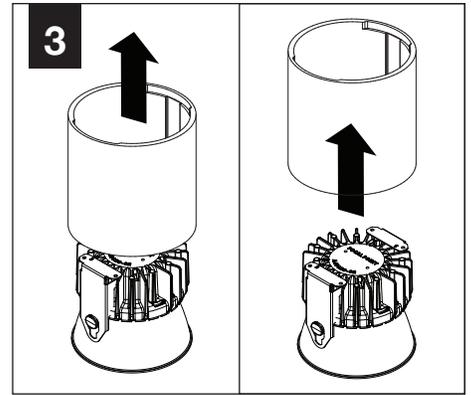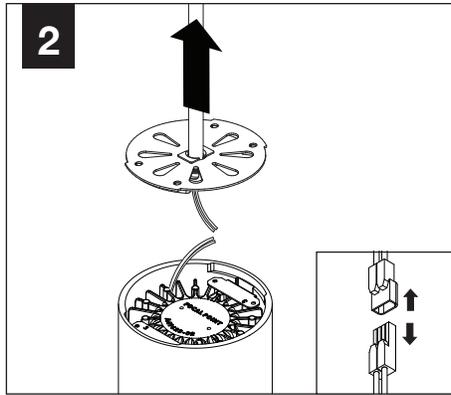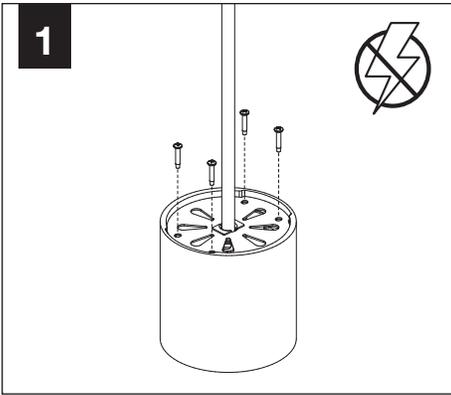

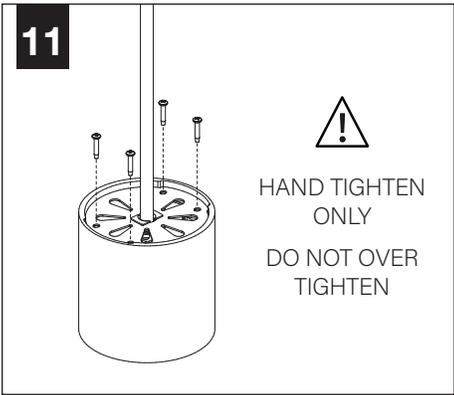

EMERGENCY

I

SEE BATTERY MANUFACTURER INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT:
CD & WH REFLECTORS - 17.1'
WD & BK REFLECTORS - 15.1'

1

HARDWARE BY OTHERS

SECURE TO STRUCTURE ABOVE

2

MAKE ELECTRICAL CONNECTION

3

4

I

PROCEED TO LUMINAIRE INSTALLATION