



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



**SEE ADDITIONAL
INSTRUCTIONS**



POWER OFF



POWER ON



EMERGENCY




PRIOR TO LUMINAIRE INSTALLATION,
SEE **PAGE 6** FOR EMERGENCY
INSTALLATION INSTRUCTIONS.

COMPONENT KEY



ID+ CYLINDER

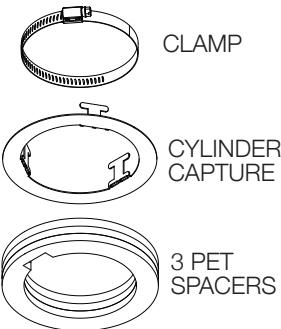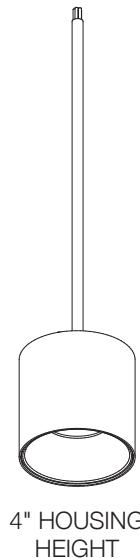

MINI POWER CANOPY

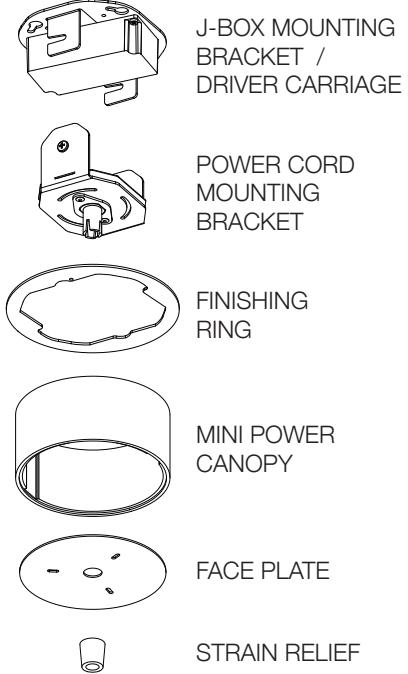


SHIPPED IN HARDWARE BAG

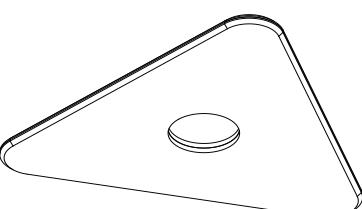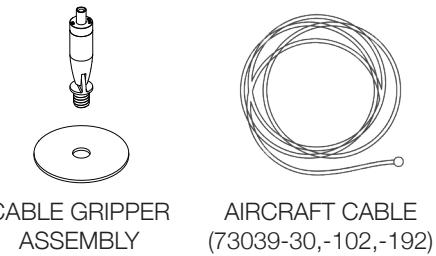

TRIANGLE 24" | 36" | 48"




4" OCTAGONAL J-BOX REQUIRED

J-BOX BY OTHERS



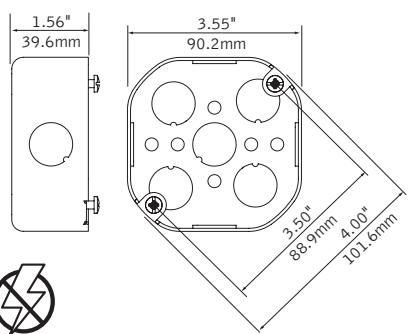


DIMENSIONS




CIRCLE

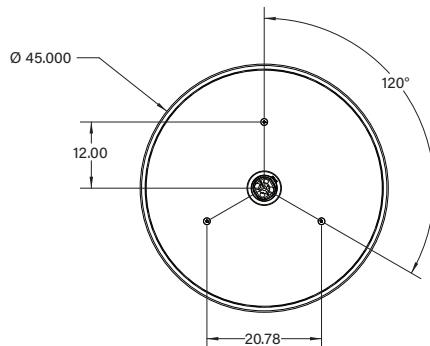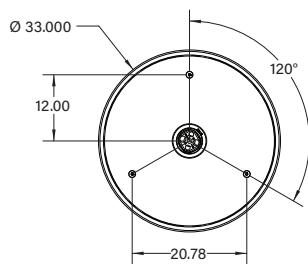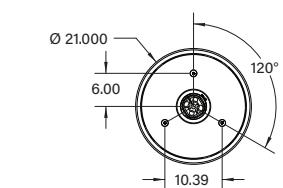

OVO

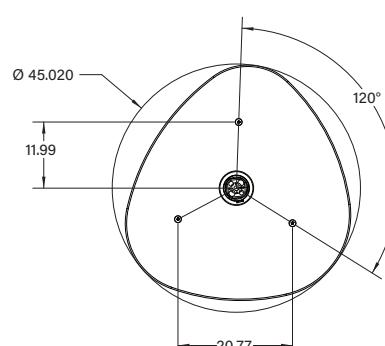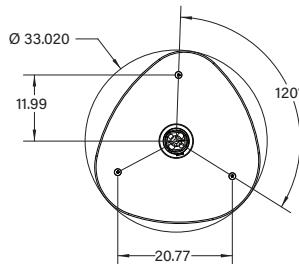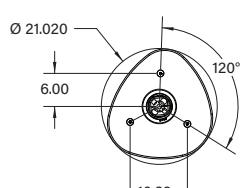


TRIANGLE

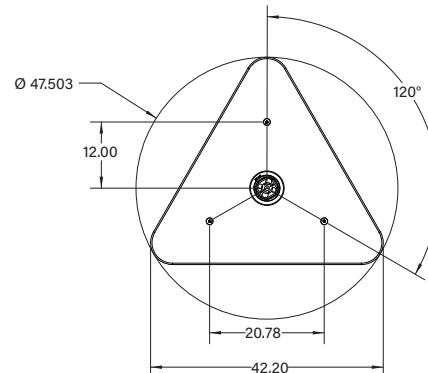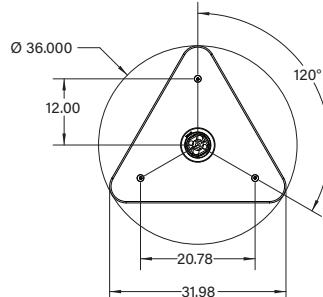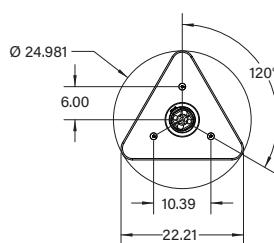


CYLINDER


1

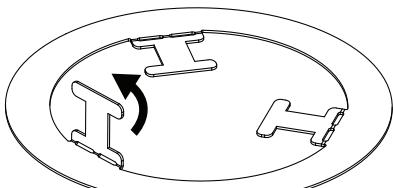









2

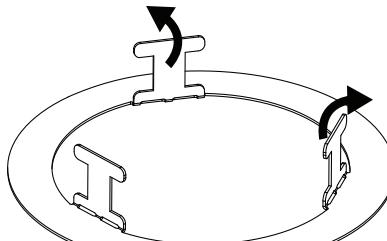




3








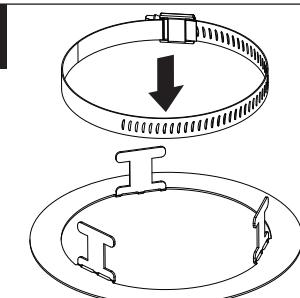


INSTALL CLAMP ONTO THE OUTSIDE OF
THE TABS ON THE CANOPY CAPTURE
(DO NOT TIGHTEN)

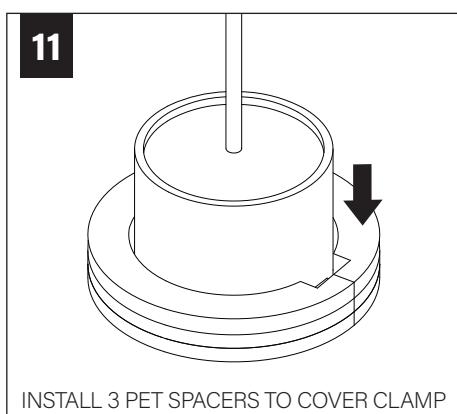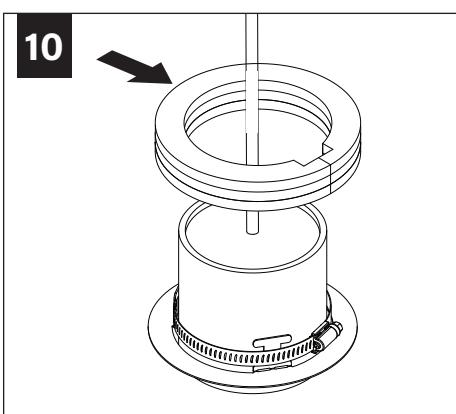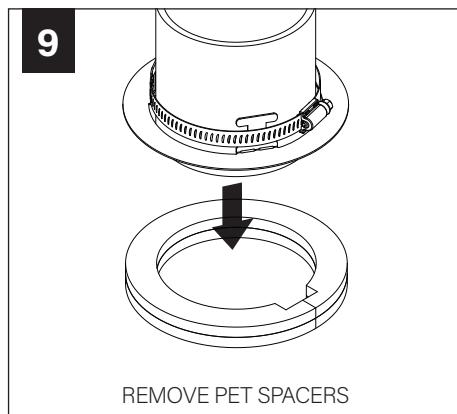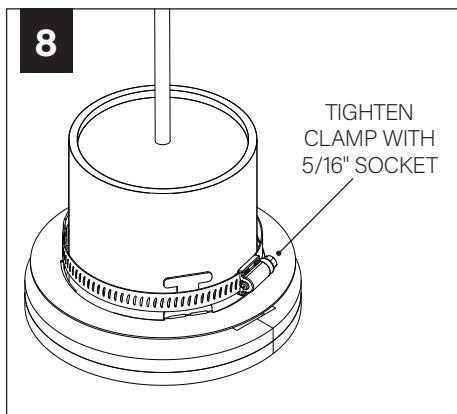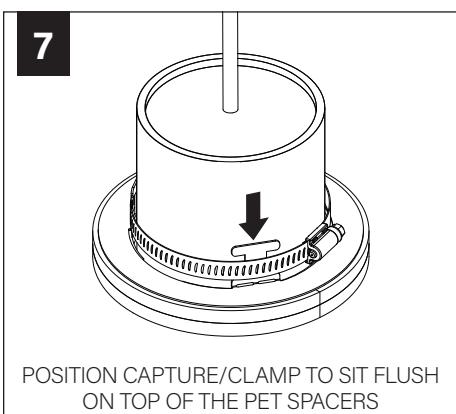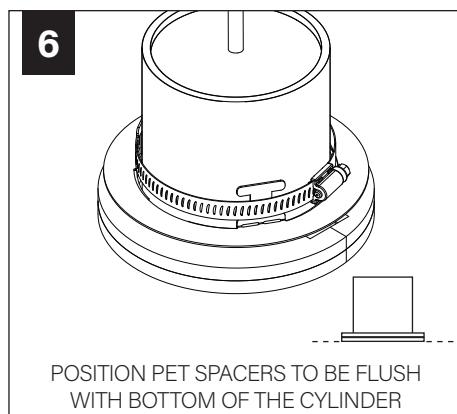
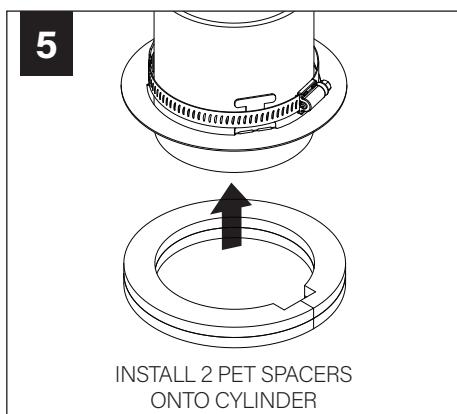
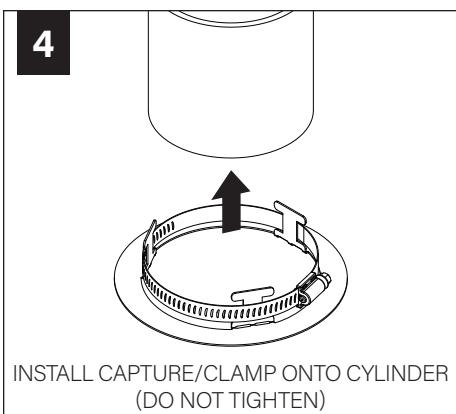


CANOPY

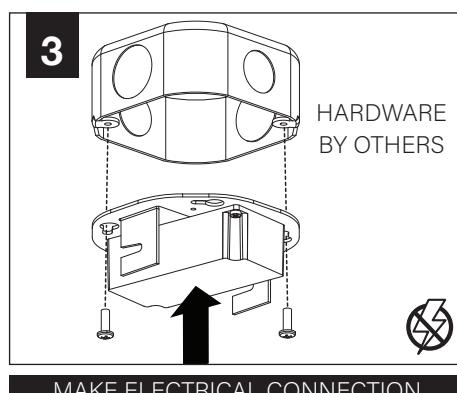
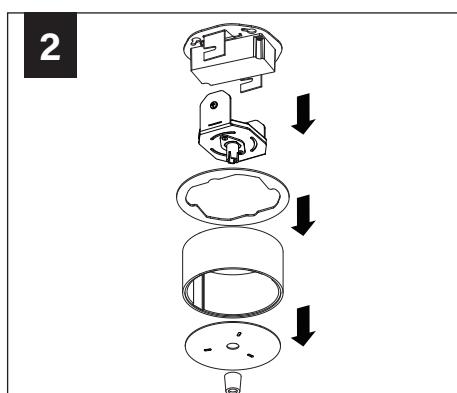
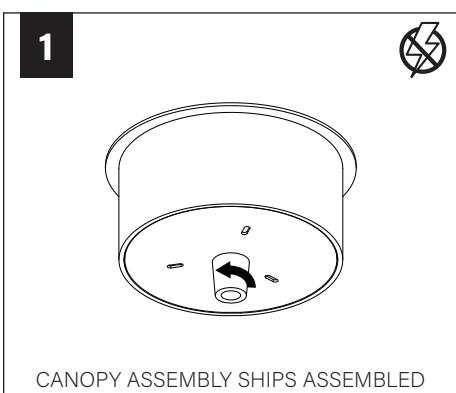


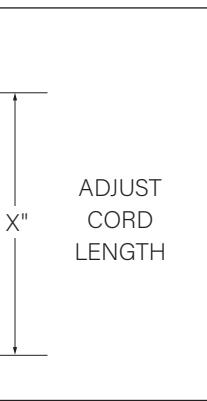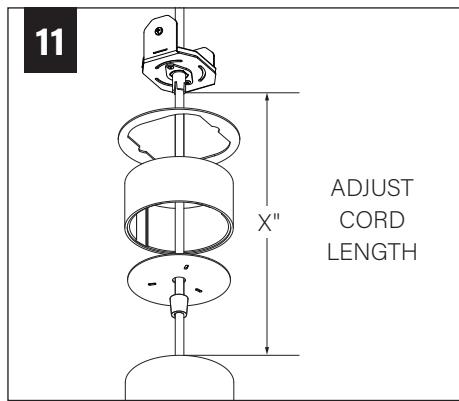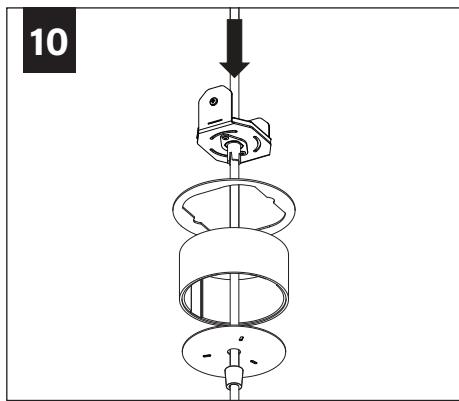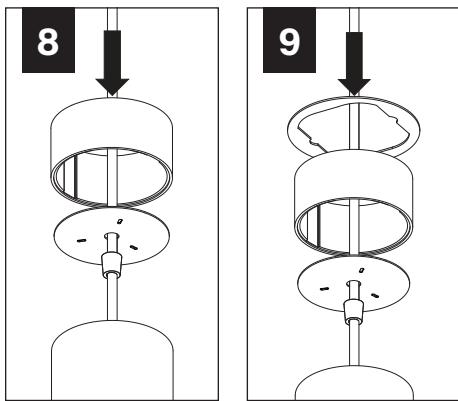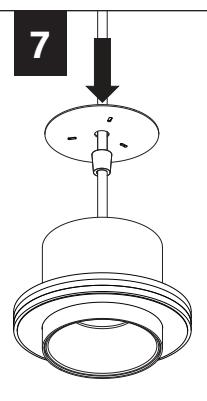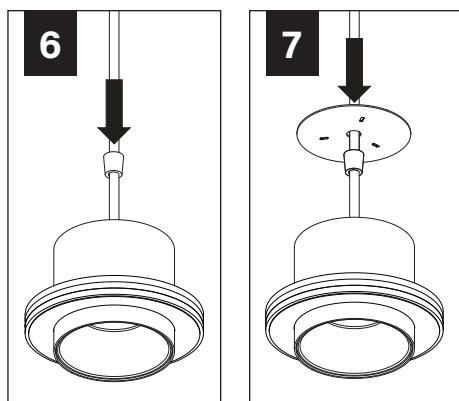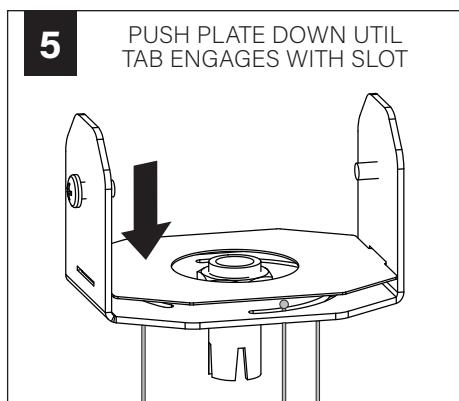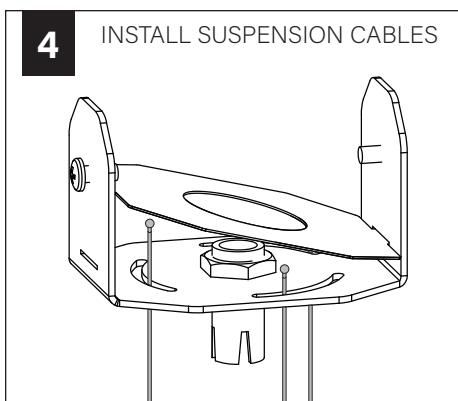


ADJUST
CORD
LENGTH

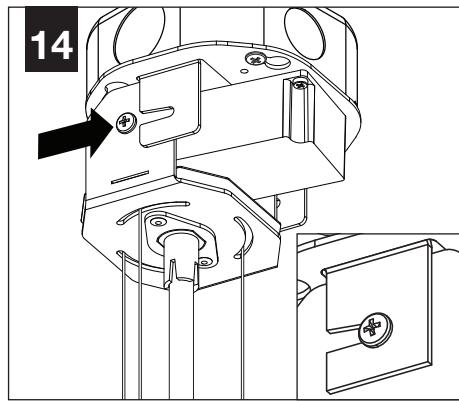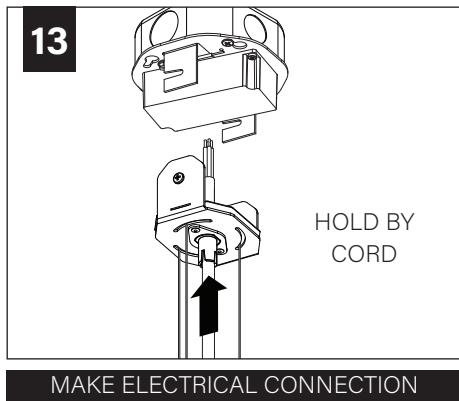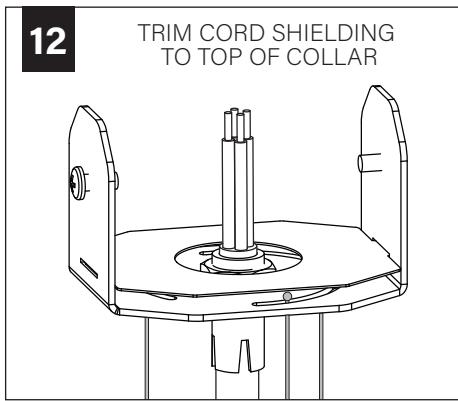


MAKE ELECTRICAL CONNECTION

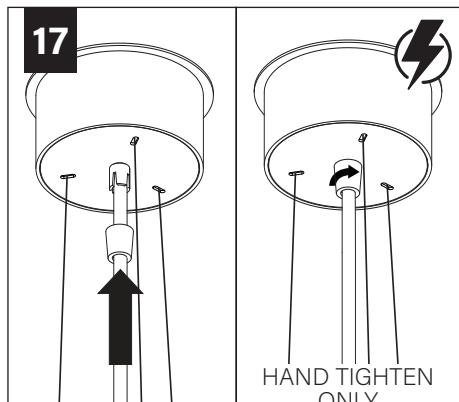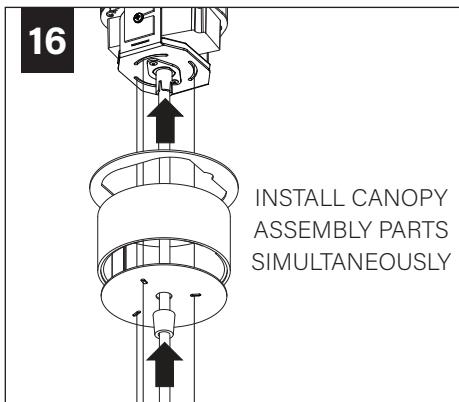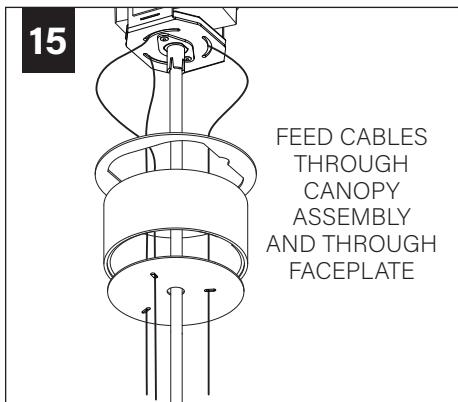


SHADE

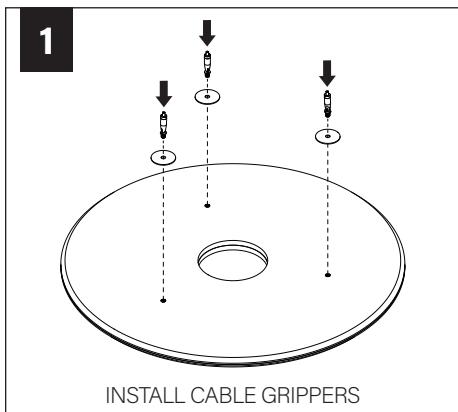



INSTALL CABLE GRIPPERS

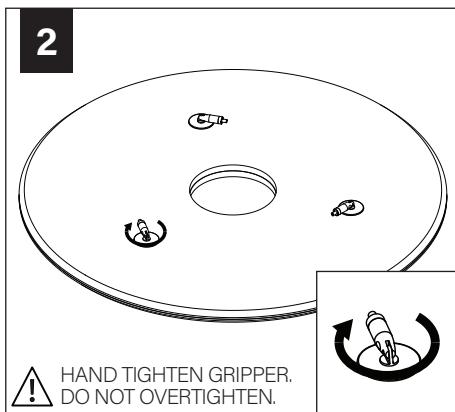


! HAND TIGHTEN GRIPPER.
DO NOT OVERTIGHTEN.

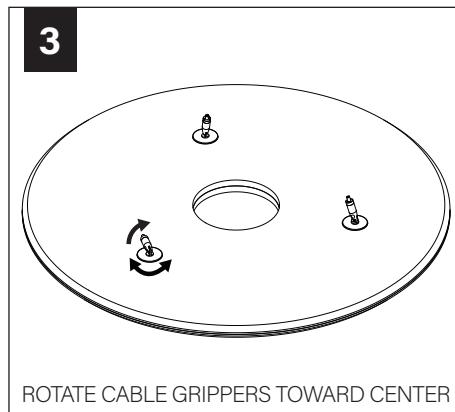



ROTATE CABLE GRIPPERS TOWARD CENTER

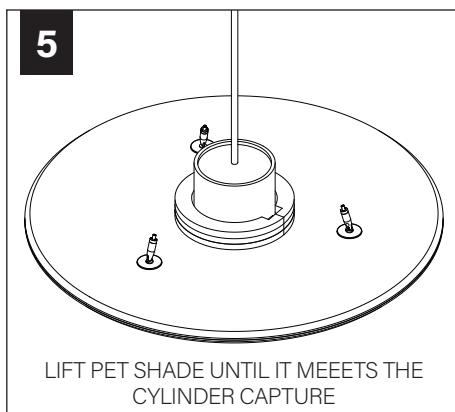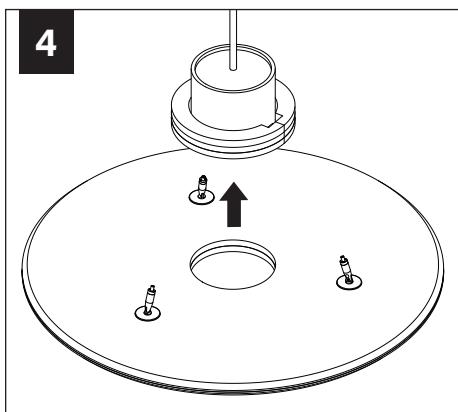


LIFT PET SHADE UNTIL IT MEETS THE CYLINDER CAPTURE

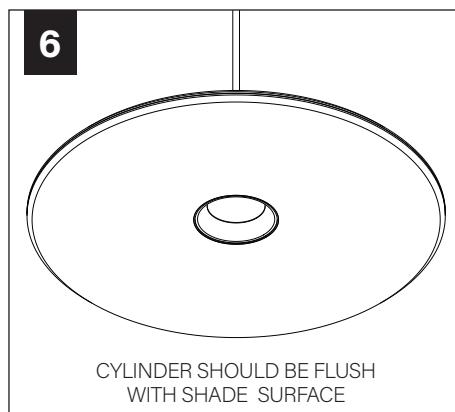

CYLINDER SHOULD BE FLUSH
WITH SHADE SURFACE

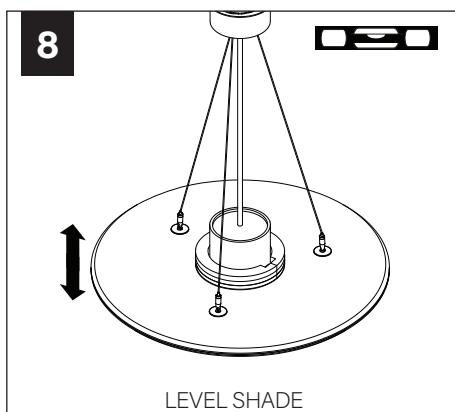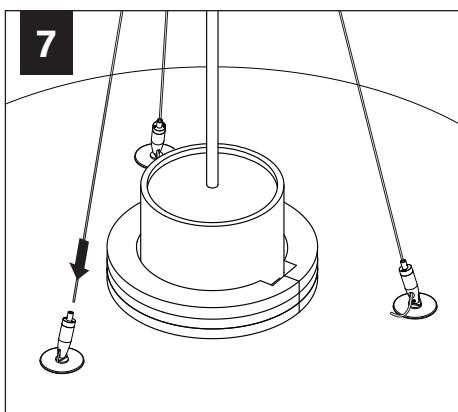



LEVEL SHADE

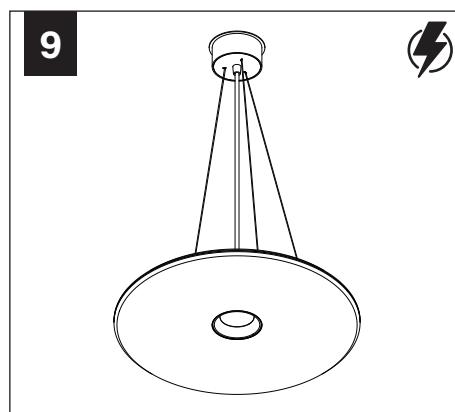













DRIVER SERVICE




TURN OFF POWER SOURCE
PRIOR TO DRIVER SERVICE

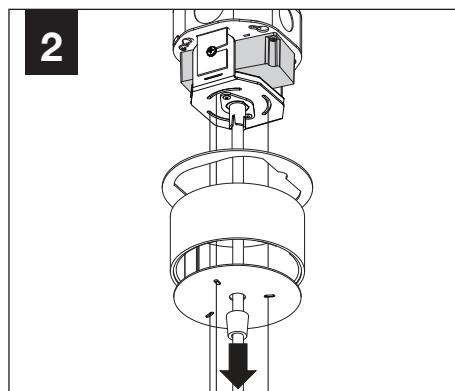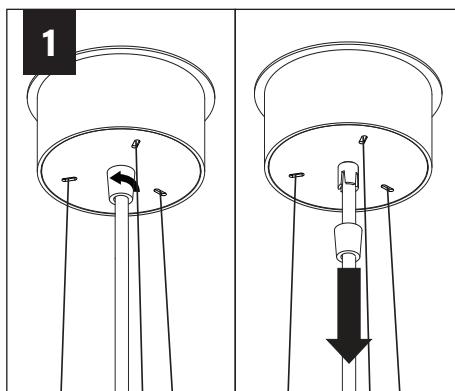

OPTIC SERVICE

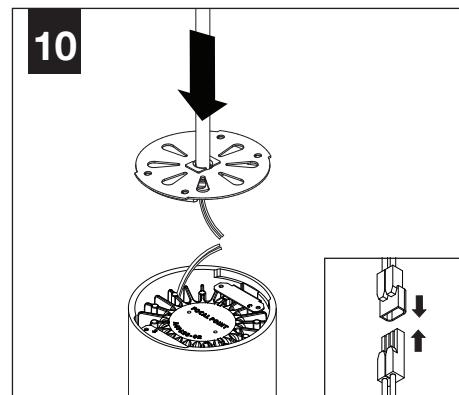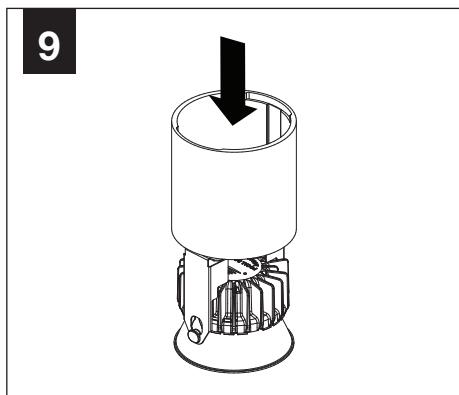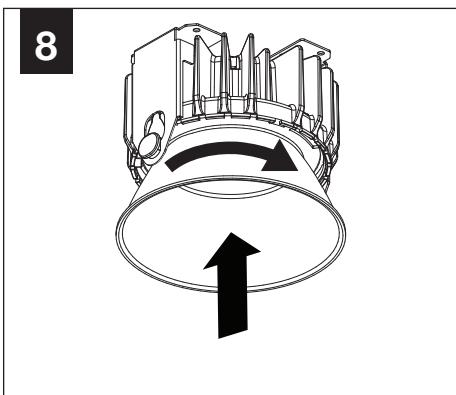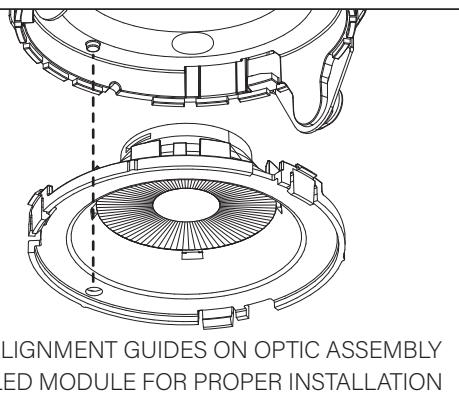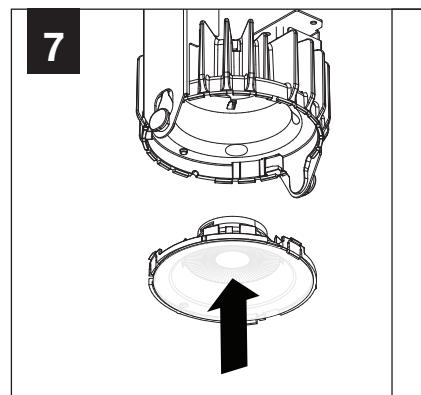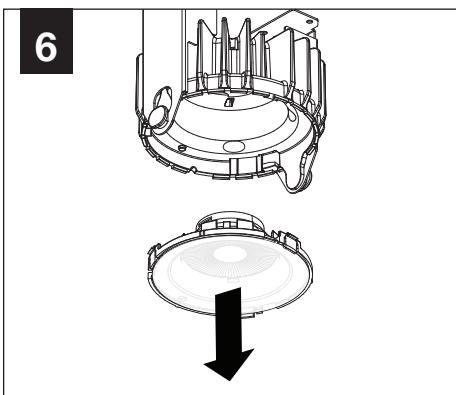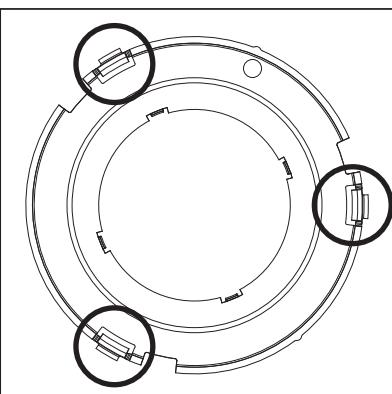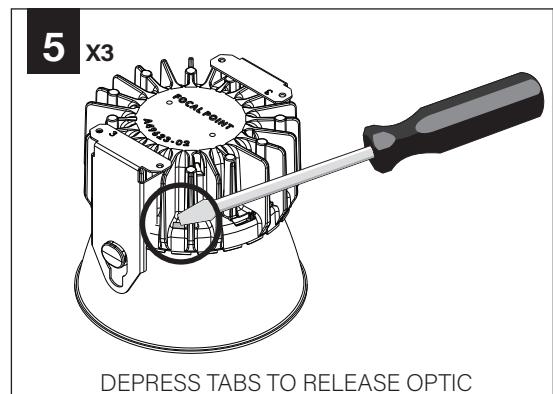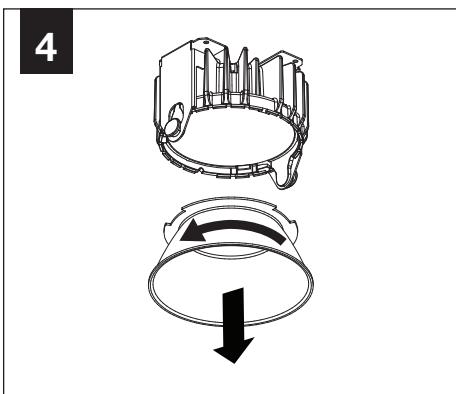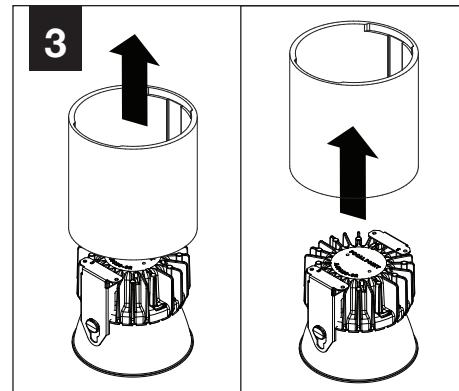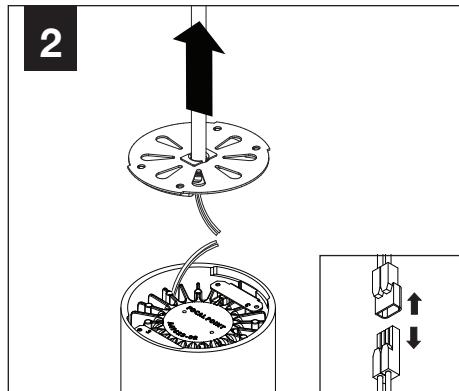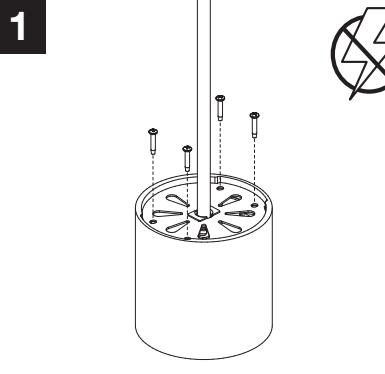

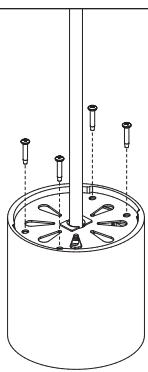11

!
HAND TIGHTEN
ONLY
DO NOT OVER
TIGHTEN

EMERGENCY





SEE BATTERY MANUFACTURER
INSTRUCTIONS



EMERGENCY MAXIMUM MOUNTING HEIGHT:
CD & WH REFLECTORS - 17.1"
WD & BK REFLECTORS - 15.1"

1

HARDWARE
BY OTHERS

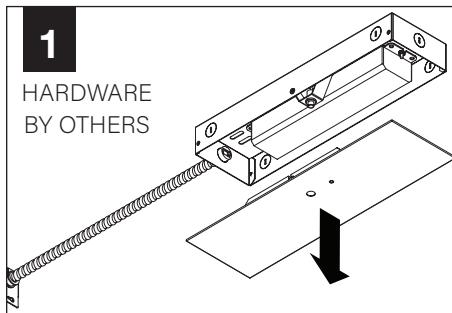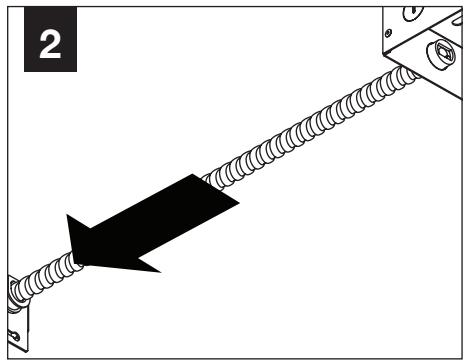**2**

MAKE ELECTRICAL CONNECTION

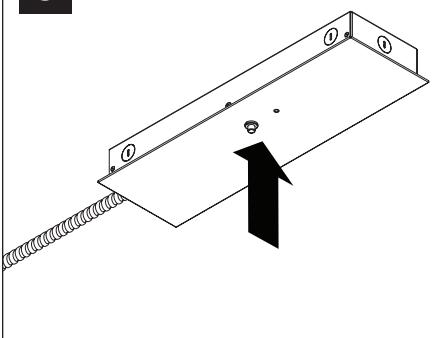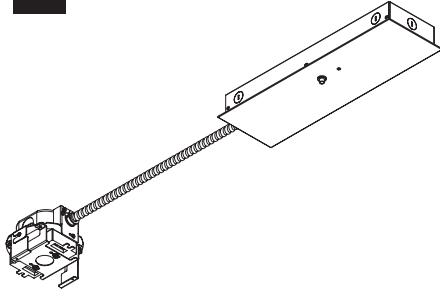3**4**

PROCEED TO
LUMINAIRE INSTALLATION