Ori[™]Acoustic Tile

FOCAL POINT

Plenum/Chicago Plenum Assembly

COMPONENT KEY


BEFORE YOU BEGIN

- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



PROFILE KEY

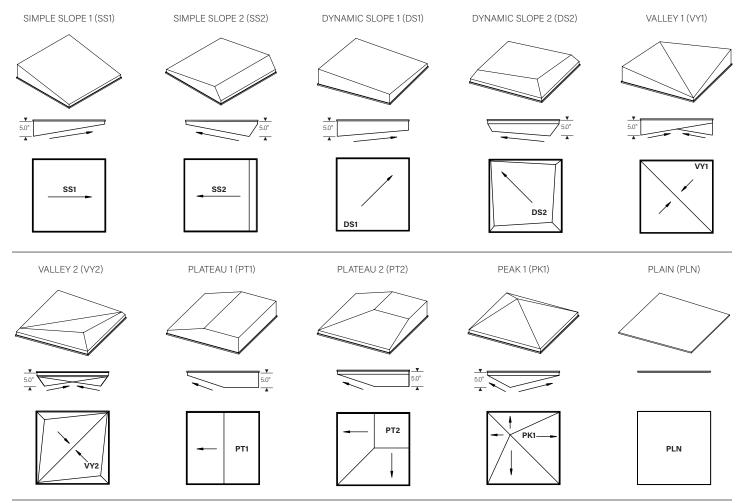

Standard Assembly

A brand of Liegrand®


1 of 2 IS0762 REV. B



ORI ACOUSTIC TILE DO NOT apply any weight on or suspend objects from tile.



STANDARD INSTALLATION

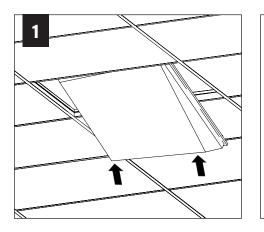






To integrate with sprinkler heads, downlights or other ceiling objects, it is recommended to **only cut**


PLAIN (PLN) acoustic tiles, using a utility knife with fresh blade and a steady hand.

DO NOT apply any weight on or suspend objects from tile.



PLENUM/CHICAGO PLENUM INSTALLATION

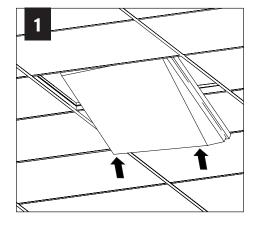

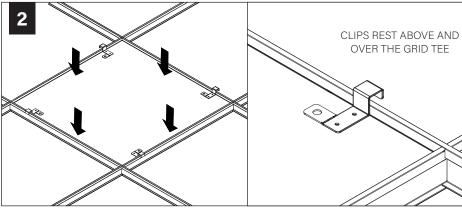

SECURE TO STRUCTURE ABOVE [OPTIONAL]

