Polina® Acoustic

TriCore® Acoustic Construction

UNLIT PENDANT | AUPOLP-SHX-SC | AUPOLP-RND-SC

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS

HANDLING & CLEANING


Always handle with clean white gloves (provided).

Use can of compressed air to remove dust and debris from shade.


Use lint roller to gently lift any remaining debris from shade.

COMPONENT KEY

ACOUSTIC SHADES - SOFT HEXAGON

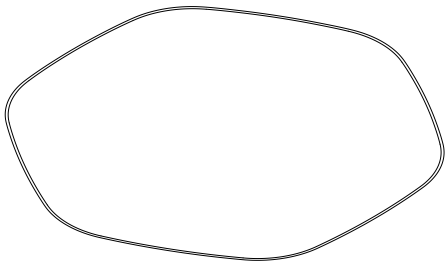


42" Shade

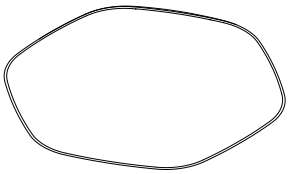


27" Shade

ACOUSTIC SHADES - ROUND

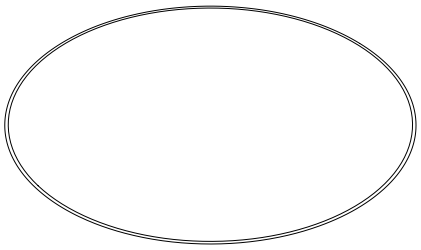


39" Shade

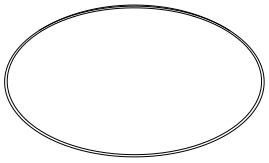

25" Shade

STEM MOUNT

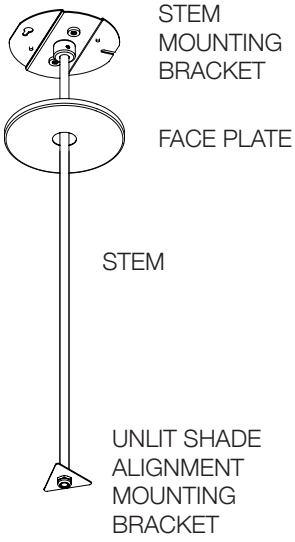


SHIPPED INSTALLED



#273 SET SCREWS

4" OCTAGONAL J-BOX REQUIRED


J-BOX BY OTHERS

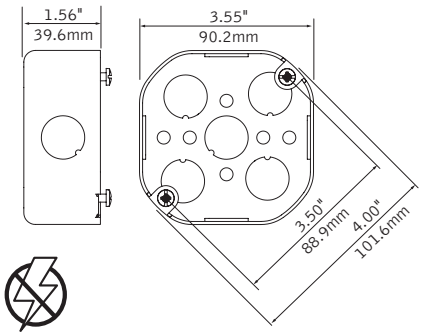


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

FIELD CUTTABLE STEM (OPTIONAL)

1a

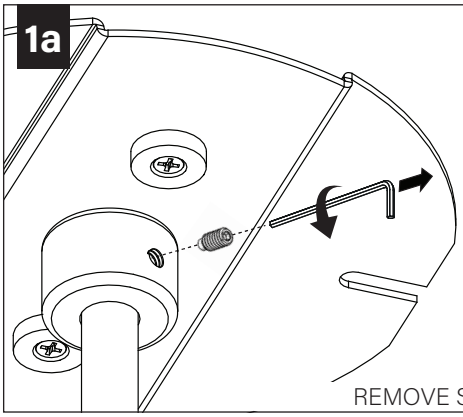


1b

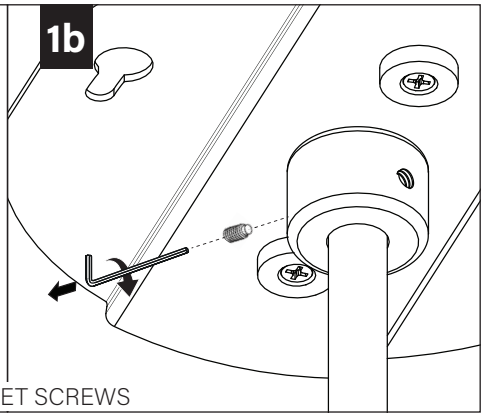


REMOVE SET SCREWS

2

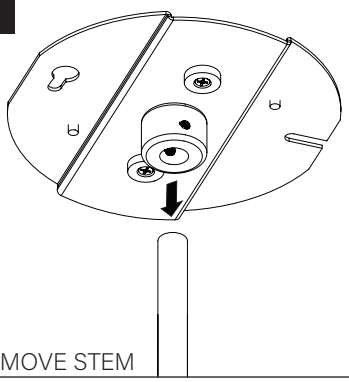

REMOVE STEM

3



X"


MEASURE STEM TO DESIRED LENGTH

4




CUT STEM AND DEBURR INSIDE EDGE

5

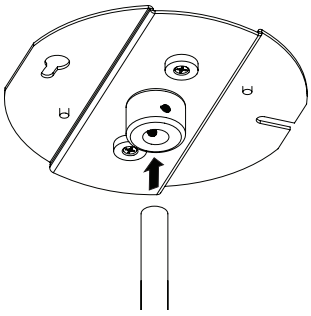


FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

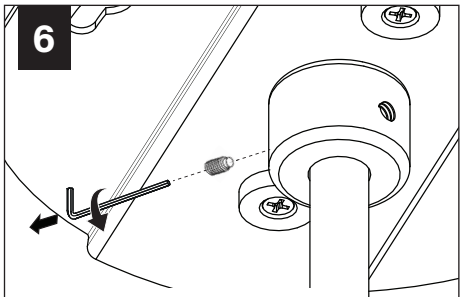


INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM

7

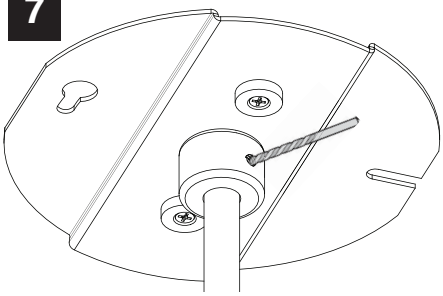


DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

8

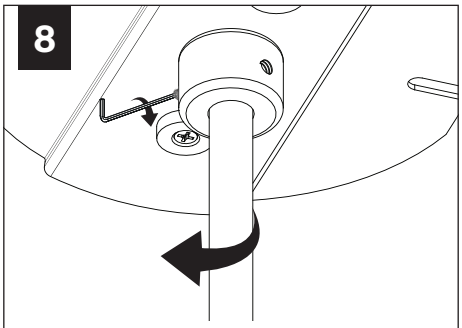


LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

9

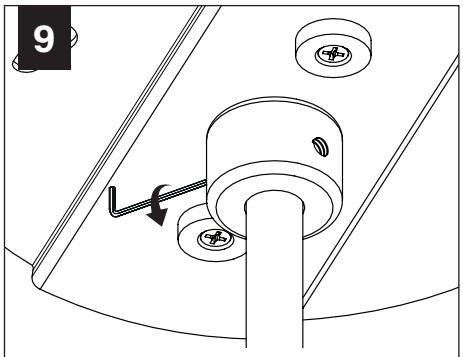


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

10

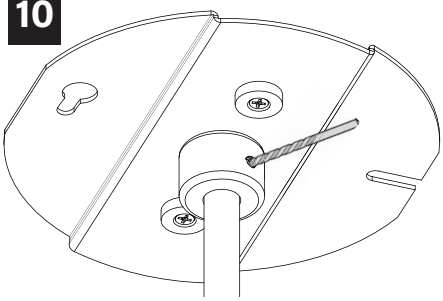

DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

11

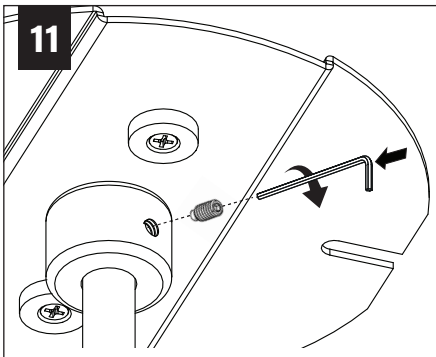


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

SHALLOW CANOPY INSTALLATION


1

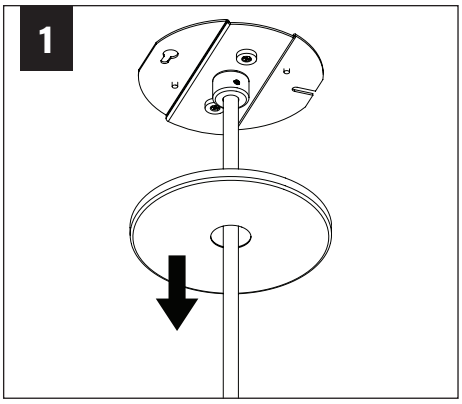


3

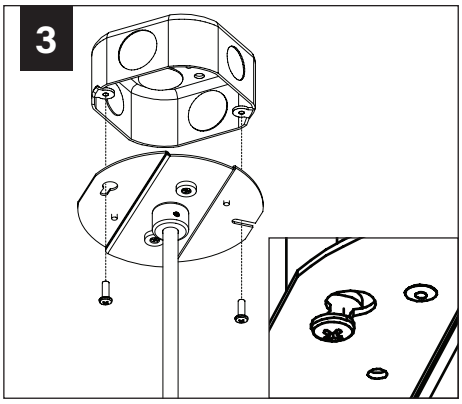

4a

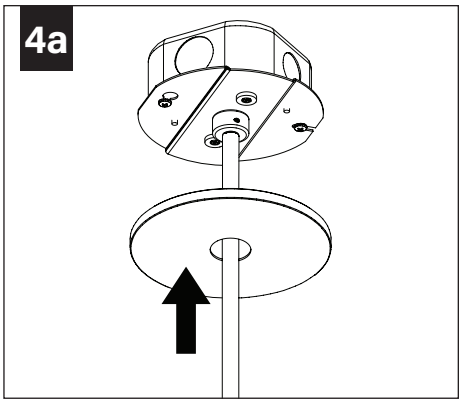


4b

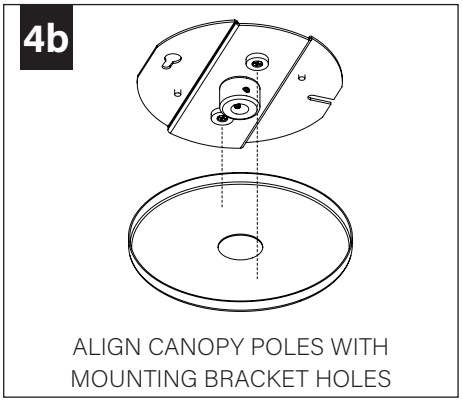

ALIGN CANOPY POLES WITH MOUNTING BRACKET HOLES


5

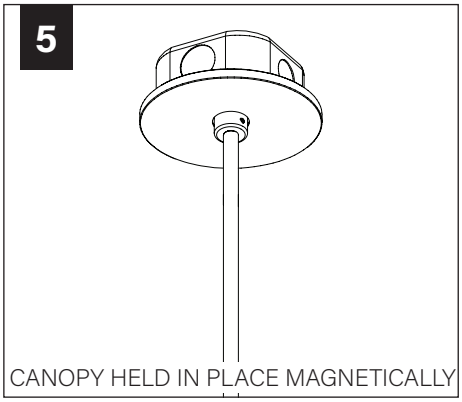


CANOPY HELD IN PLACE MAGNETICALLY

ACOUSTIC SHADE

1a

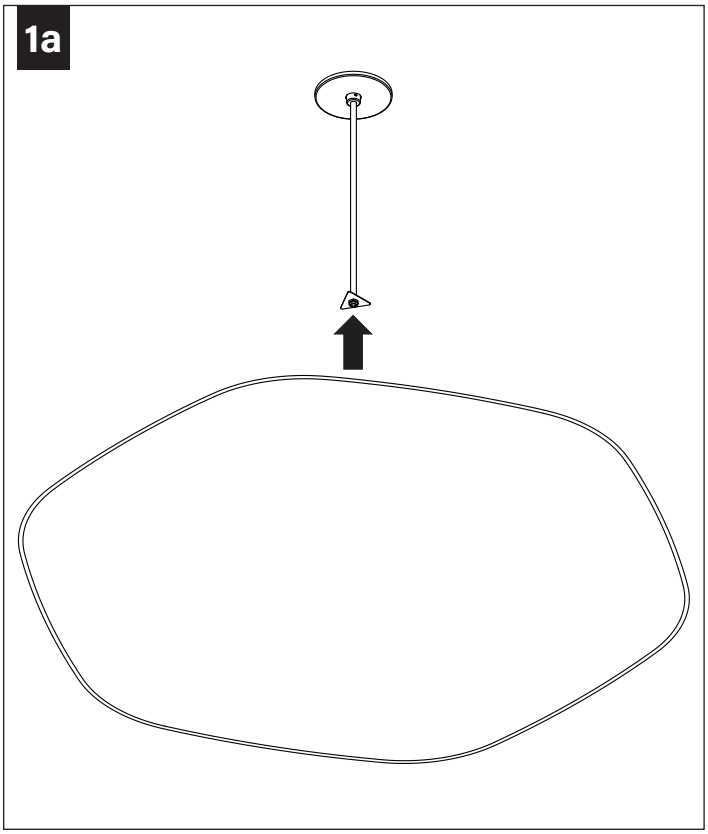


1b

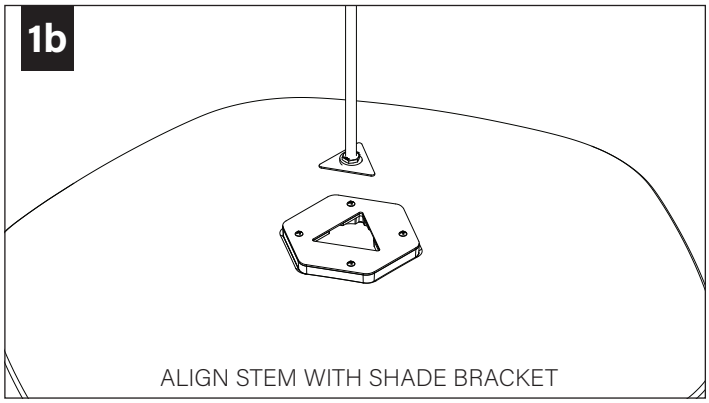

ALIGN STEM WITH SHADE BRACKET


2

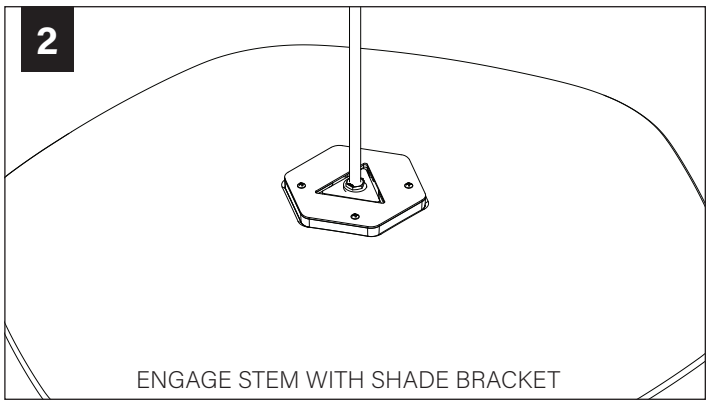

ENGAGE STEM WITH SHADE BRACKET


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

3 **HEXAGON**

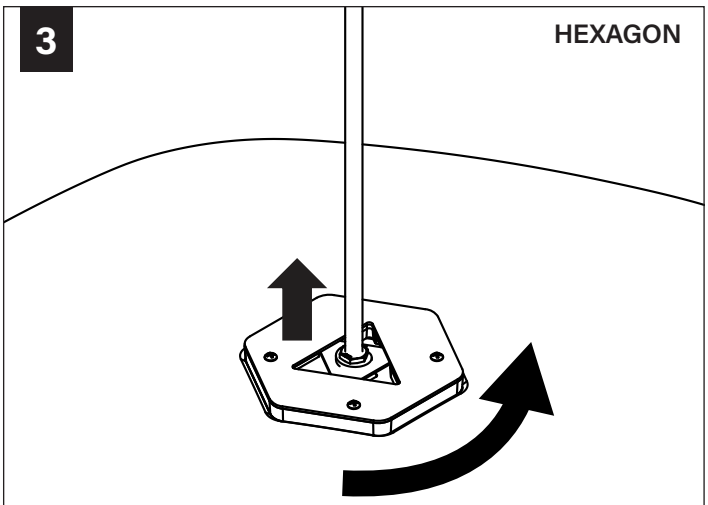


LIFT SHADE SLIGHTLY AND ROTATE 60° CLOCKWISE UNTIL STOPPING POINT. THE SHADE WILL DROP INTO PLACE. ROTATE ANOTHER 20° TO THE RIGHT TO LOCK."

3 **ROUND**

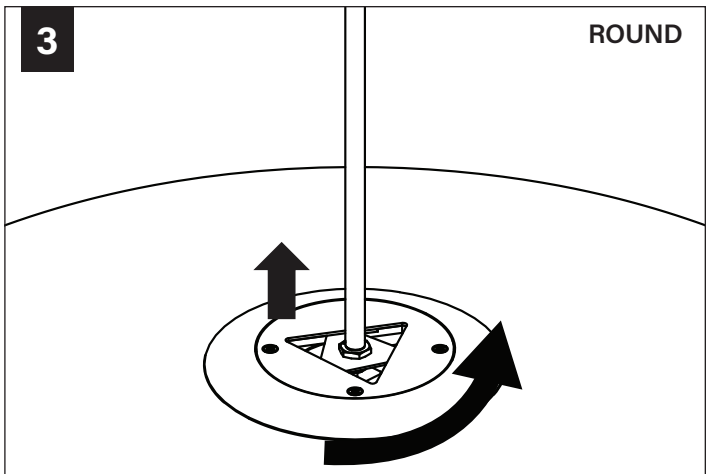

LIFT SHADE SLIGHTLY AND ROTATE 60° CLOCKWISE UNTIL STOPPING POINT. THE SHADE WILL DROP INTO PLACE. ROTATE ANOTHER 20° TO THE RIGHT TO LOCK."

4

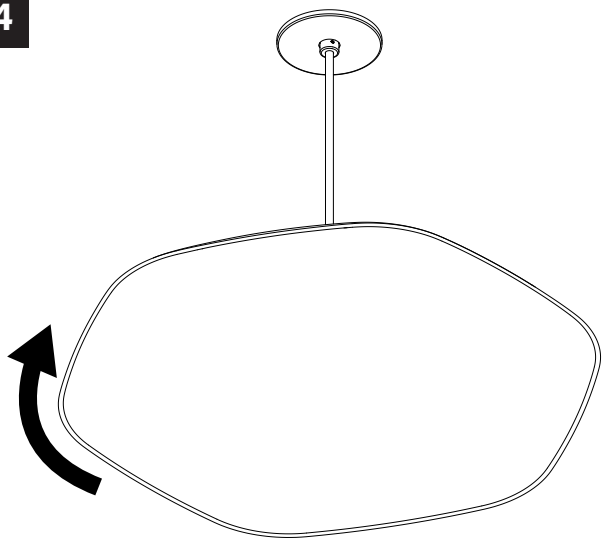

HEXAGON ONLY: ONCE SHADE IS LOCKED INTO PLACE, THE SHADE CAN BE ROTATED CLOCKWISE FOR DESIRED ORIENTATION.

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference