



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON


COMPONENT KEY


LIGHT ENGINE

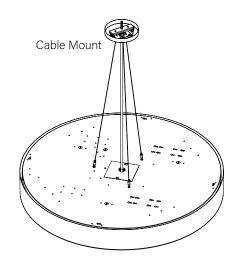

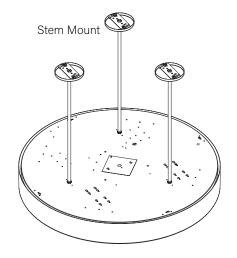

PET SHADE

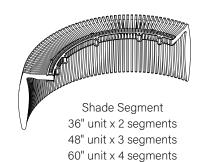

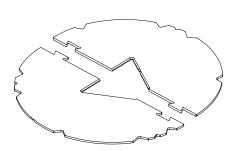

PET Installation Template



Joiner 36" unit x 2 48" unit x 3 60" unit x 4



Joiner Screw (700295)



LIGHT ENGINE MUST BE INSTALLED PRIOR TO PET SHADE



CABLE MOUNT INSTALLATION SEE **PAGE 2**

STEM MOUNT INSTALLATION SEE **PAGE 3**

PET SHADE INSTALLATION SEE **PAGE 4**

LIGHT ENGINE INSTALLATION



WEIGHTS:

36" UNIT - 42 LBS

2 PEOPLE RECOMMENDED FOR INSTALLATION


48" UNIT - 80 LBS


3 PEOPLE RECOMMENDED FOR INSTALLATION


60" UNIT - 110 LBS


3 PEOPLE RECOMMENDED FOR INSTALLATION


CABLE MOUNT

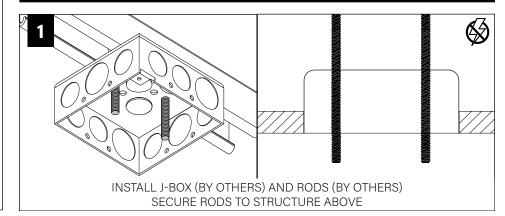


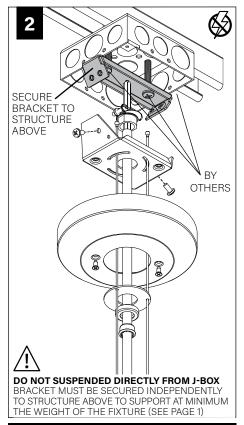

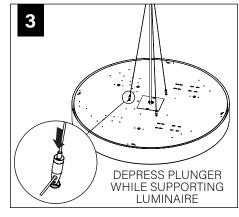

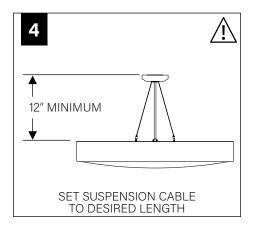

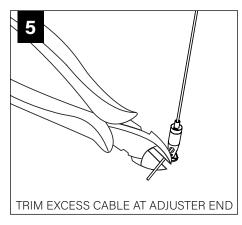

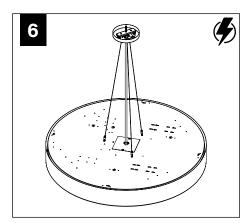



MAKE ELECTRICAL CONNECTION


2' DIAMETER


3' DIAMETER


4' DIAMETER

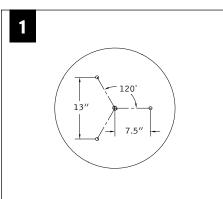


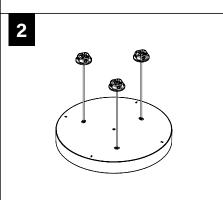


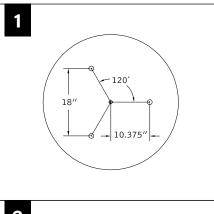

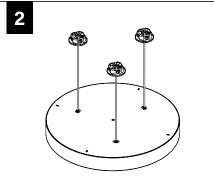


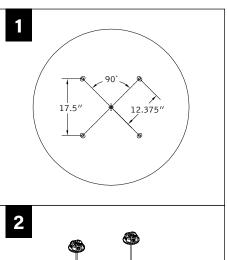

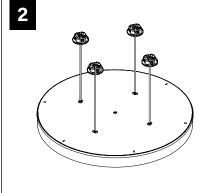

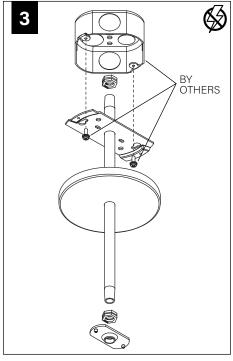




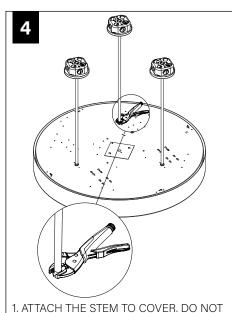



OVER TIGHTEN STEM, THIS MAY CAUSE PINCHED WIRES.


2. USING PLIERS, SECURELY TIGHTEN LOCK NUT. STEM MUST BE SECURELY TIGHTENED AND UNABLE TO SPIN LOOSE.

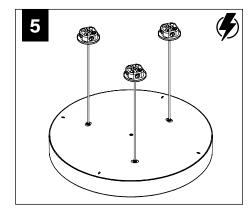

DRIVER SERVICE

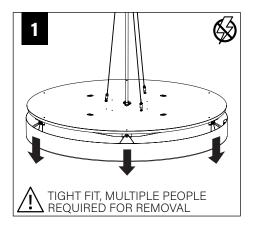

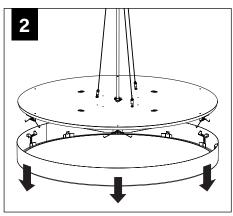

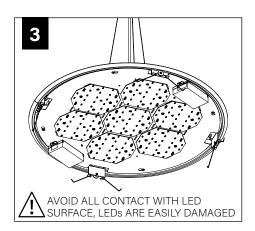

EMERGENCY



PET SHADE INSTALLATION

