



## BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

## INSTRUCTION KEY



**ATTENTION**



**SEE ADDITIONAL  
INSTRUCTIONS**



**POWER OFF**



**POWER ON**



**LIGHT ENGINE MUST BE INSTALLED  
PRIOR TO PET SHADE**




**INDIRECT LED UNIT INSTALLATION  
SEE PAGE 2**

**CABLE MOUNT INSTALLATION  
SEE PAGE 2-3**


**STEM MOUNT INSTALLATION  
SEE PAGE 4**

**PET SHADE INSTALLATION  
SEE PAGE 5-7**

## LIGHT ENGINE

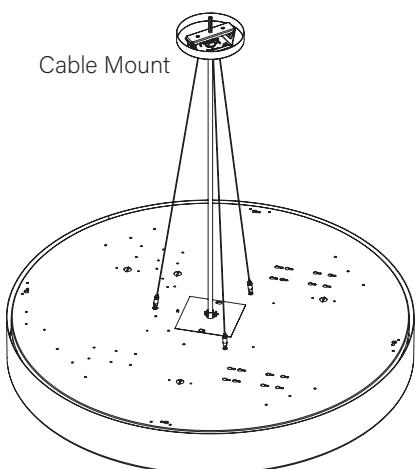


## STEM MOUNT

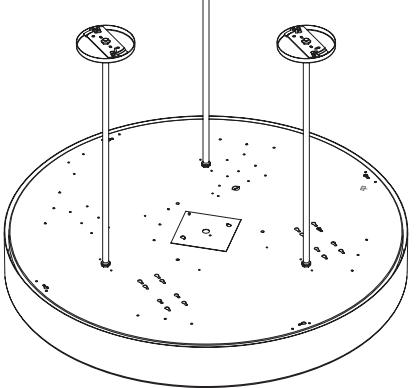


## COMPONENT KEY

### PET SHADE

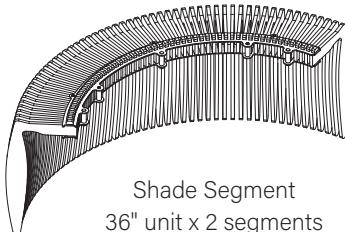

**Shade Segment**  
36" unit x 2 segments  
48" unit x 3 segments  
60" unit x 4 segments

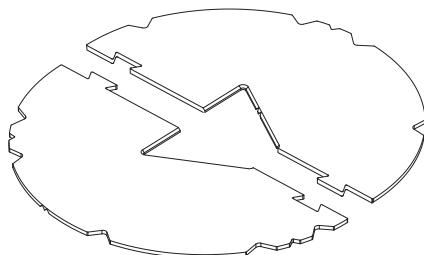


**PET Installation Template**



**Joiner**  
36" unit x 2  
48" unit x 3  
60" unit x 4



**Joiner Screw**  
(72026)

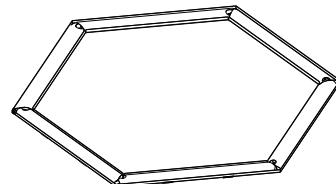

**Indirect LED Unit**




**Standoff x 6**  
(Small unit x 3)  
(700718)




**Standoff Screws x 6**  
(Small unit x 3)  
(72074)

## DIMENSIONAL DATA

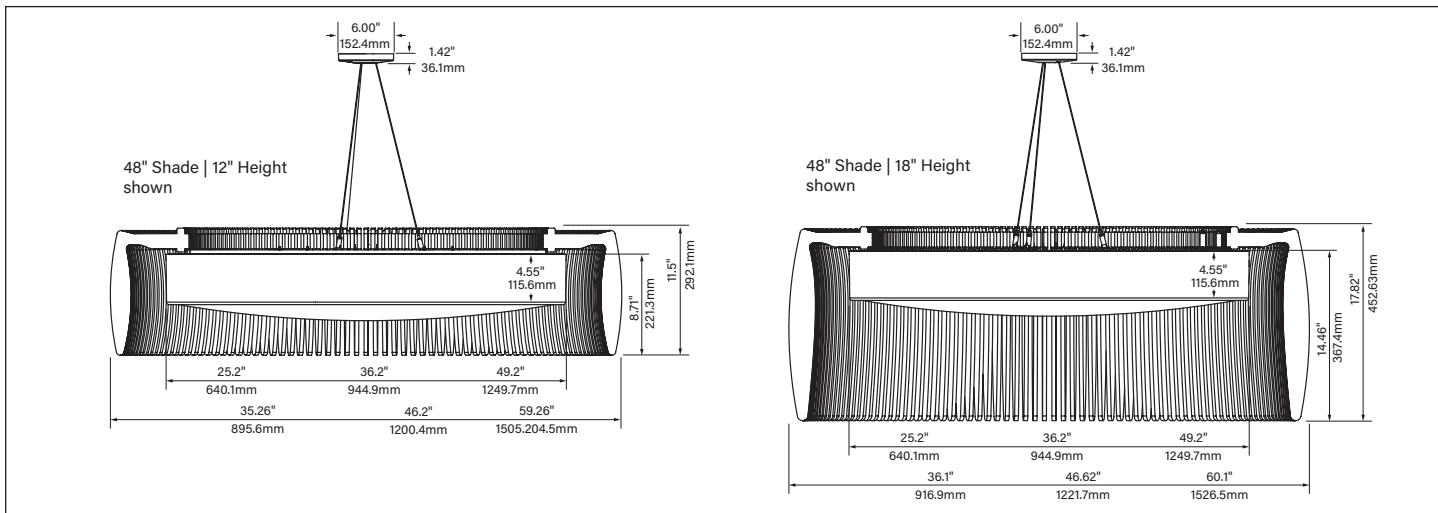

## INDIRECT LED UNIT INSTALLATION (OPTIONAL)

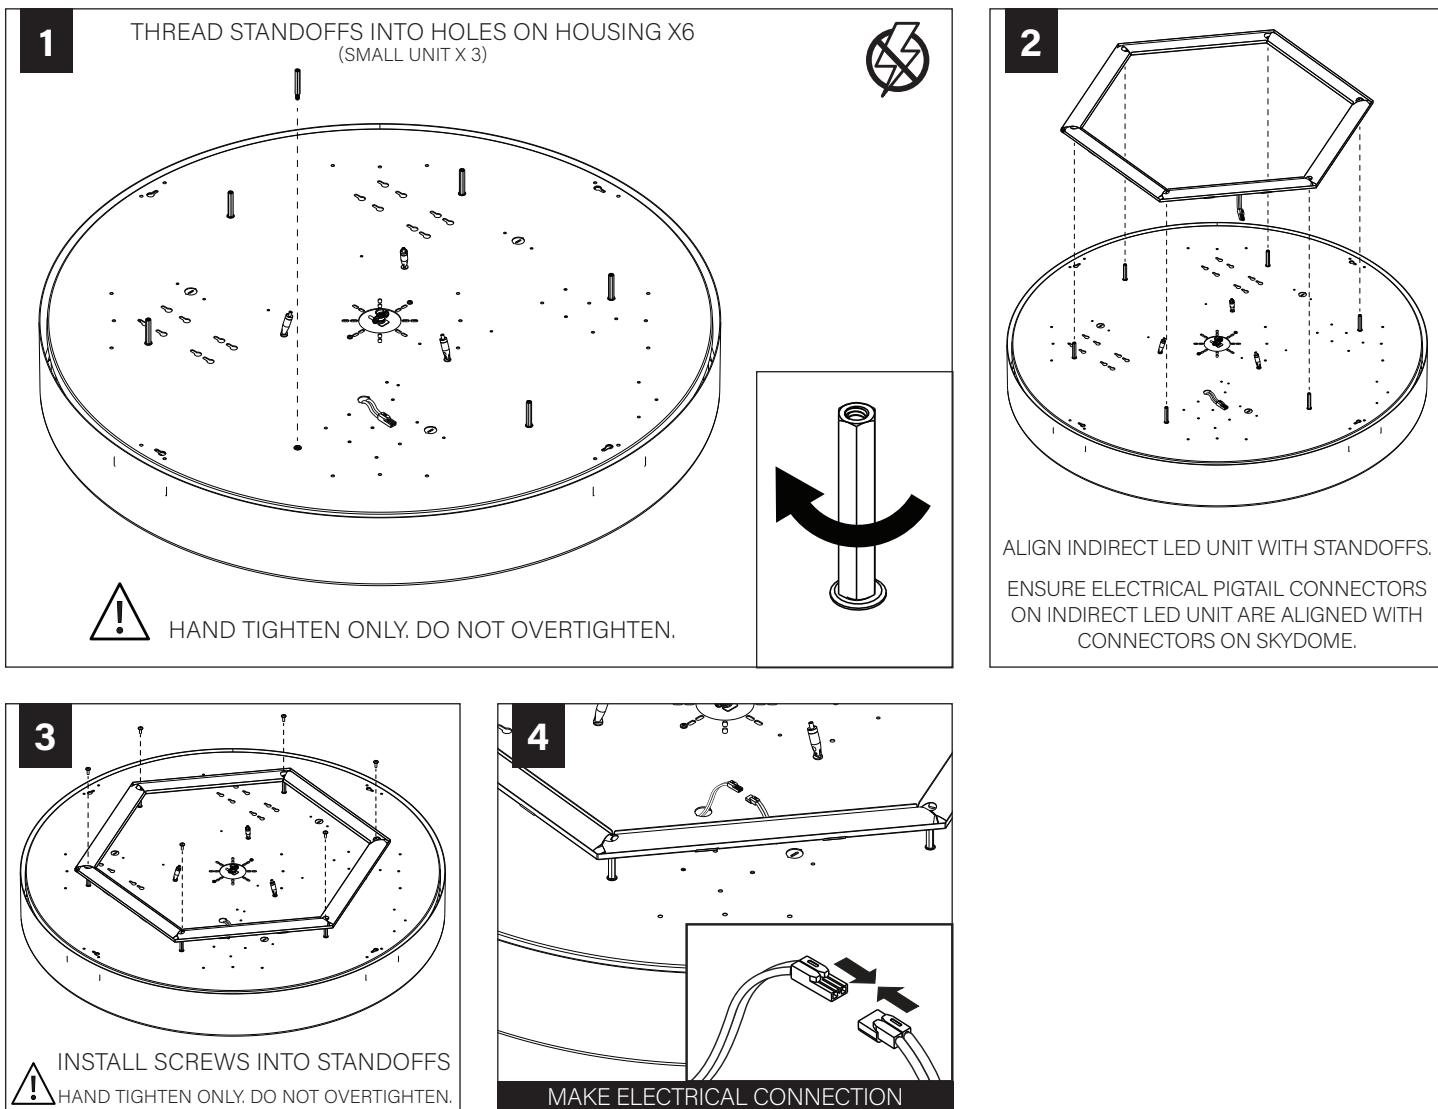

## LIGHT ENGINE INSTALLATION



### WEIGHTS:

#### 36" UNIT - 45 LBS

2 PEOPLE RECOMMENDED FOR INSTALLATION

#### 48" UNIT - 82 LBS


3 PEOPLE RECOMMENDED FOR INSTALLATION

#### 60" UNIT - 112 LBS

3 PEOPLE RECOMMENDED FOR INSTALLATION


## CABLE MOUNT

1

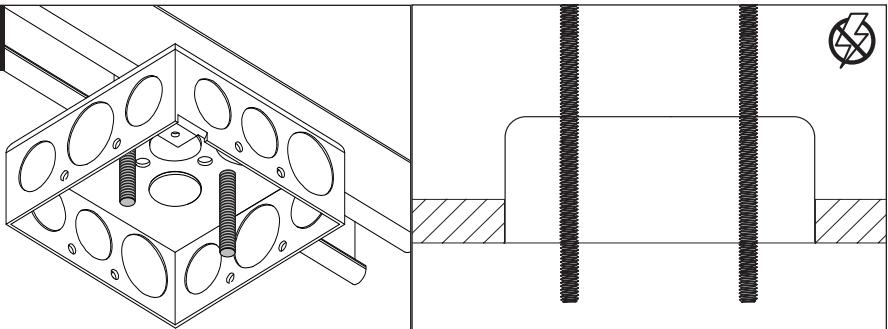

INSTALL J-BOX (BY OTHERS) AND RODS (BY OTHERS)  
SECURE RODS TO STRUCTURE ABOVE


2

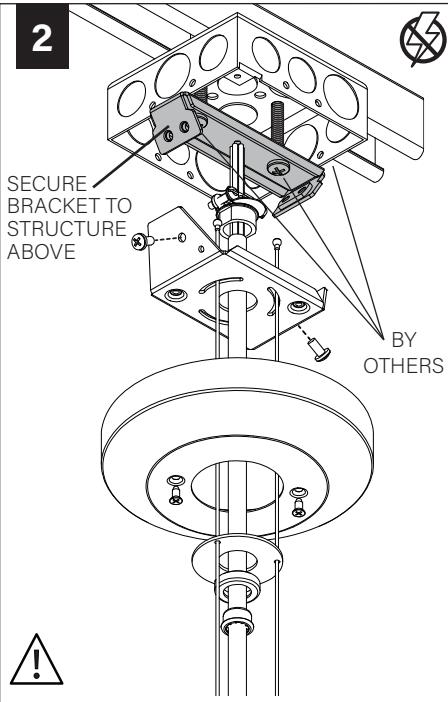

**DO NOT SUSPENDED DIRECTLY FROM J-BOX**  
BRACKET MUST BE SECURED INDEPENDENTLY TO STRUCTURE ABOVE TO SUPPORT AT MINIMUM THE WEIGHT OF THE FIXTURE (SEE PAGE 1)


MAKE ELECTRICAL CONNECTION

3

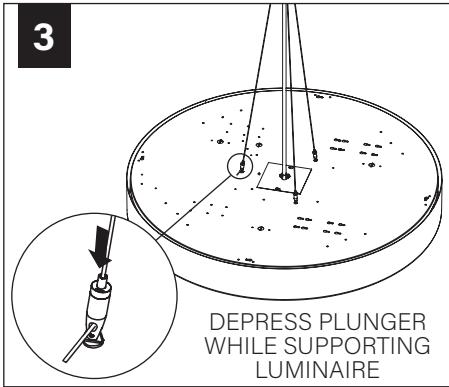


DEPRESS PLUNGER WHILE SUPPORTING LUMINAIRE

4

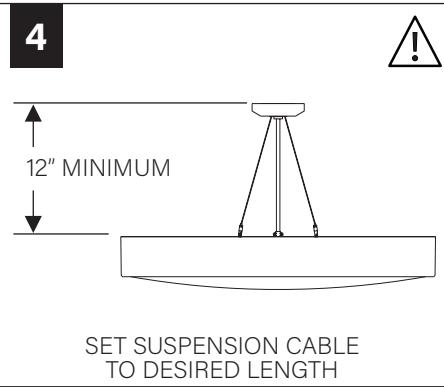


12" MINIMUM  
SET SUSPENSION CABLE TO DESIRED LENGTH

5

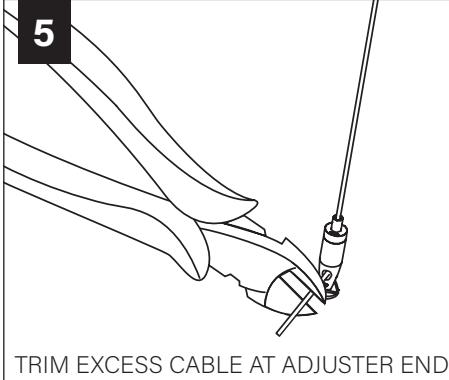

TRIM EXCESS CABLE AT ADJUSTER END

6

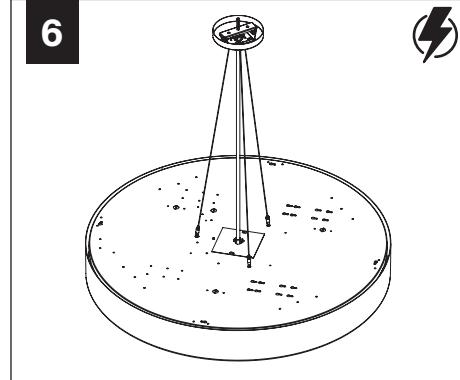


## STEM MOUNT

2' DIAMETER


3' DIAMETER

4' DIAMETER


1

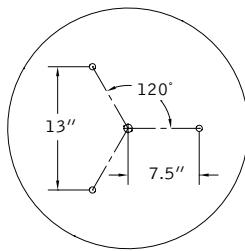


2

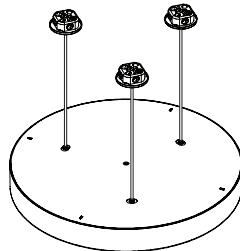


1

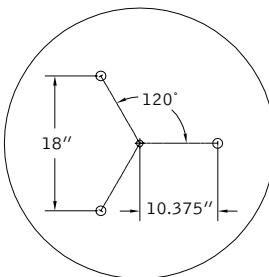


2

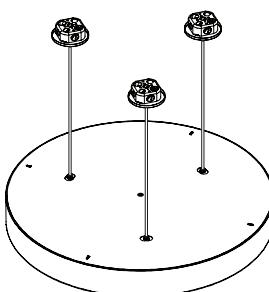


1

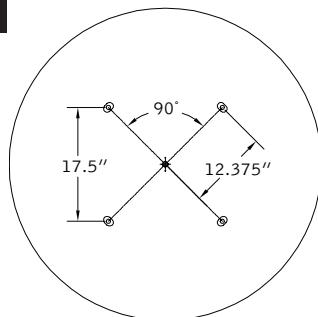

2

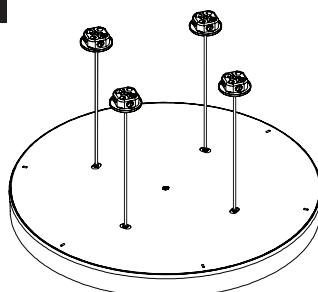


3

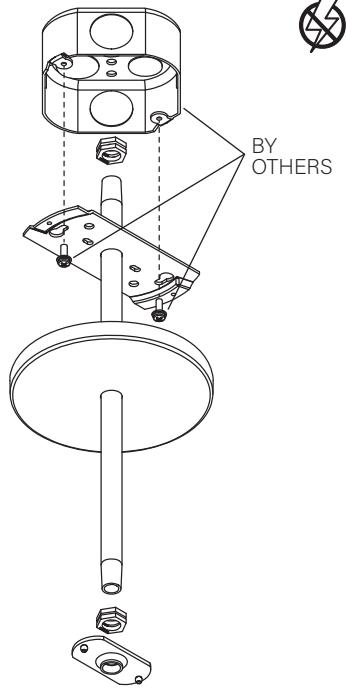

MAKE ELECTRICAL CONNECTION


4

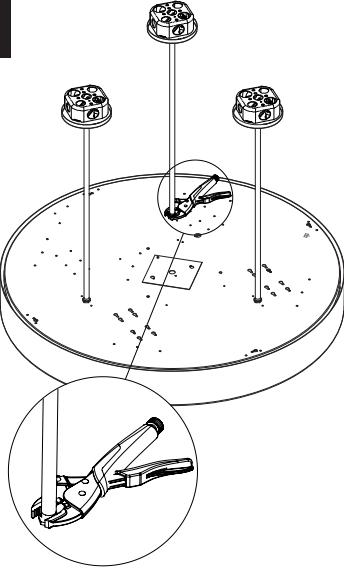


1. ATTACH THE STEM TO COVER. DO NOT OVER TIGHTEN STEM, THIS MAY CAUSE PINCHED WIRES.

2. USING PLIERS, SECURELY TIGHTEN LOCK NUT. STEM MUST BE SECURELY TIGHTENED AND UNABLE TO SPIN LOOSE.



5

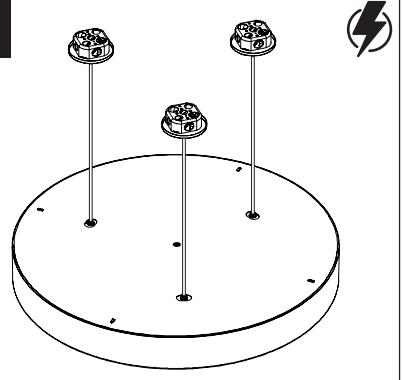

## DRIVER SERVICE

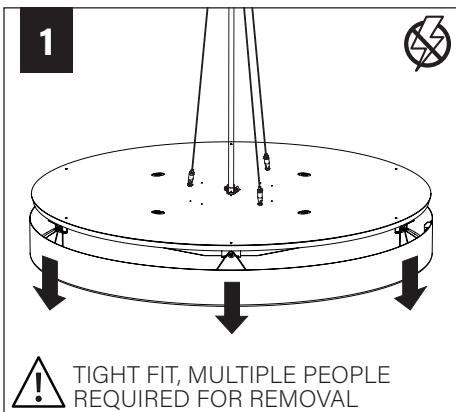

**!** TIGHT FIT, MULTIPLE PEOPLE REQUIRED FOR REMOVAL

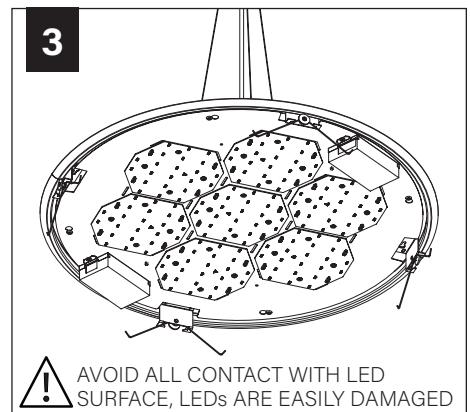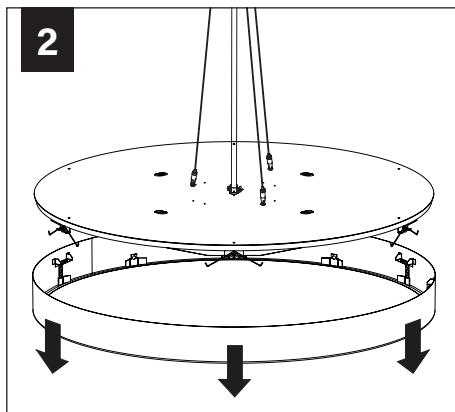

**!** AVOID ALL CONTACT WITH LED SURFACE, LEDs ARE EASILY DAMAGED


## EMERGENCY





SEE BATTERY MANUFACTURER  
INSTRUCTIONS


EMERGENCY MAXIMUM MOUNTING HEIGHT:  
**16.00'**

## PET TEMPLATE INSTALLATION

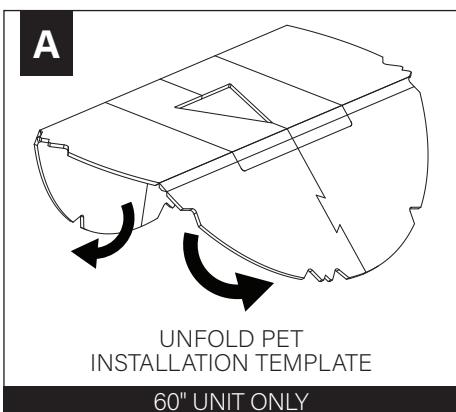


**UNFOLD PET  
INSTALLATION TEMPLATE**  
60" UNIT ONLY

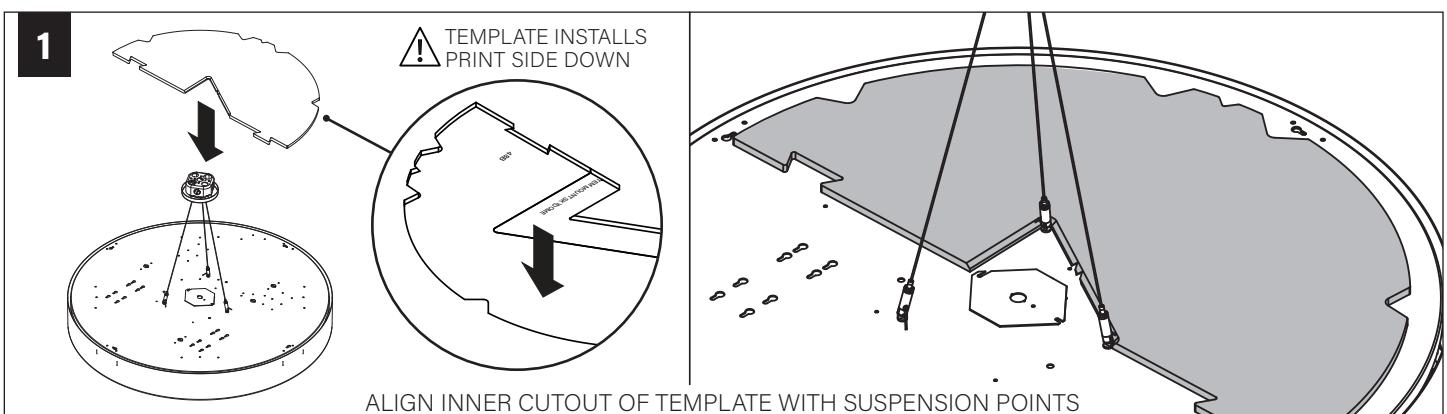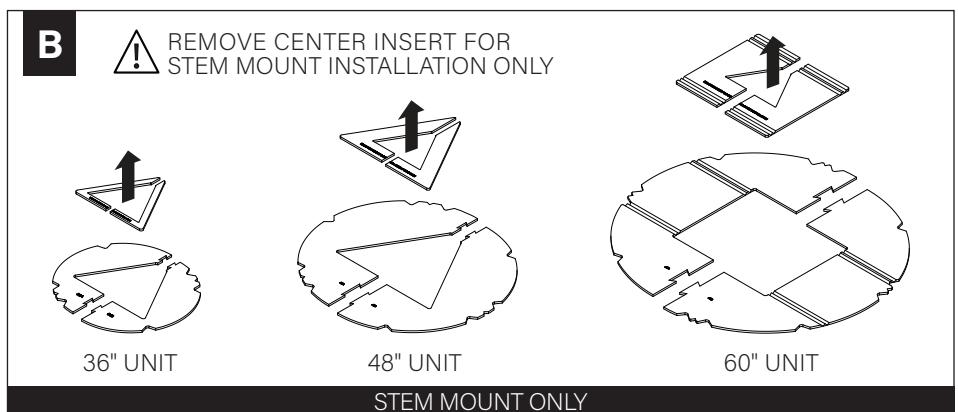

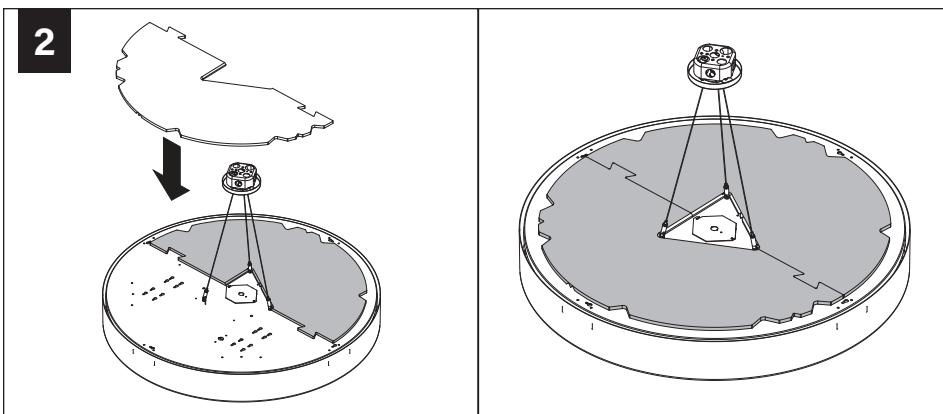

### PET TEMPLATE INSTALLATION - INDIRECT ONLY

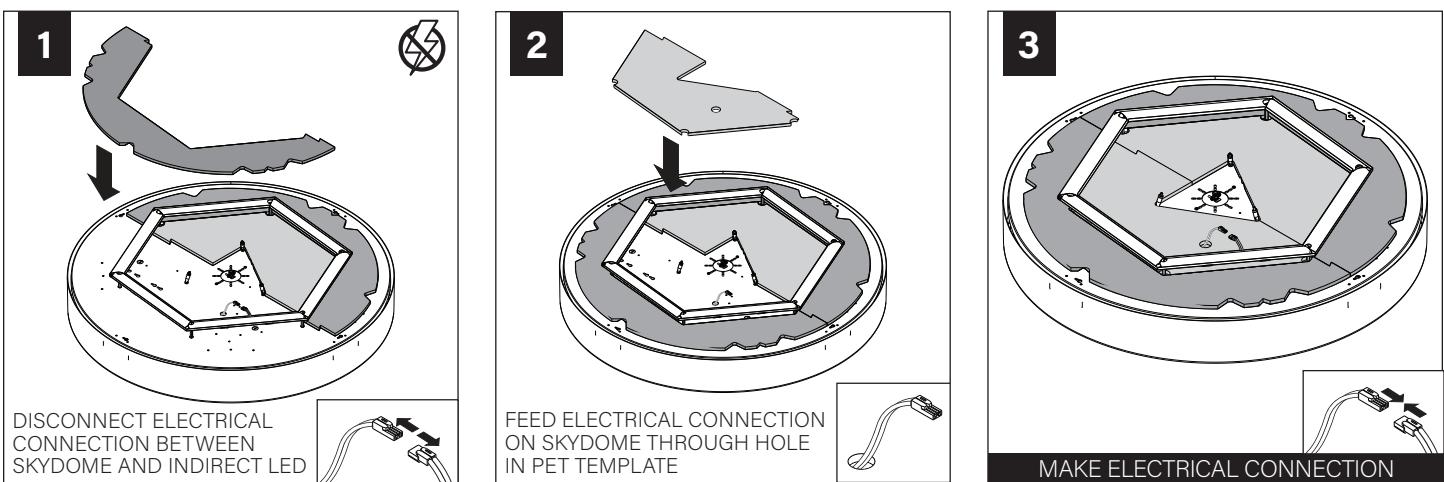

### PET SHADE INSTALLATION

