



FOCAL POINT - GRID

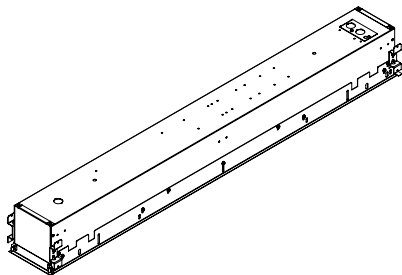

FOCAL POINT - DRYWALL

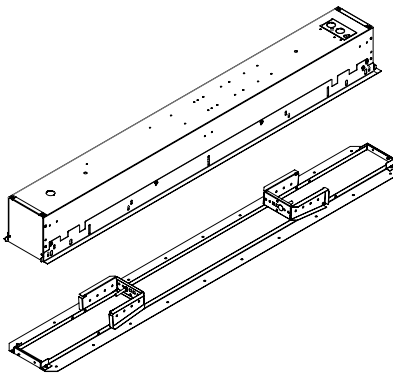

KEY



POWER OFF



POWER ON




ATTENTION

GRID INSTALLATION (SEE PAGE 3 FOR DRYWALL INSTALLATION)



4FT LUMINAIRE WEIGHT: 20LBS

5FT LUMINAIRE WEIGHT: 25LBS

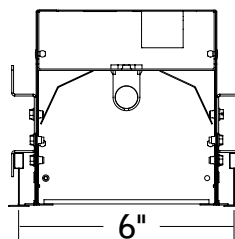


AVENUE 6 IS COMPATIBLE WITH ARMSTRONG® TECHZONE® AND OTHER SPECIALTY 6" CEILING SYSTEMS. TEE SPACING SHOULD BE 6" ON CENTER FOR ALL CEILING SYSTEMS.


RAIL & CLIP GUIDE




CHECK RAIL & CLIP POSITIONS BEFORE INSTALLATION. ARROWS INDICATE SCREW POSITIONS. TO CHANGE IN THE FIELD REMOVE AND REINSTALL ACCORDING TO DIAGRAMS BELOW.

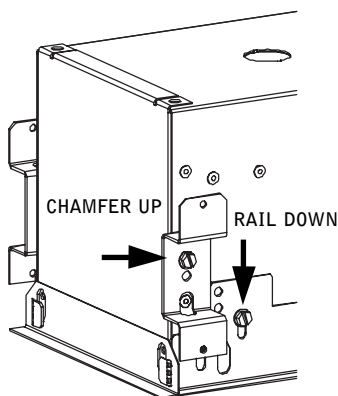


G1: STD 15/16" LAY-IN TILE
G2: STD 9/16" LAY-IN TILE

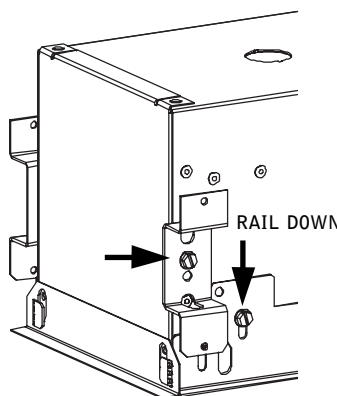

G4: TALL 15/16" LAY-IN TILE
G5: TALL 9/16" LAY-IN TILE

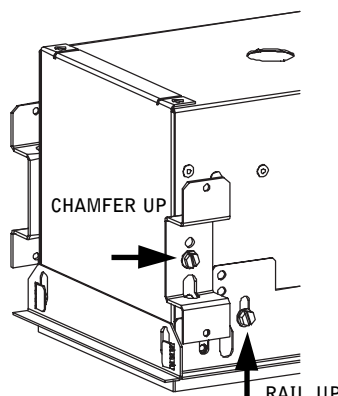

G3: 9/16" SLOT-TEE TEGULAR TILE
T1: STD 15/16" TEGULAR TILE
T2: STD 9/16" TEGULAR TILE
T6: 9/16" NODE TEGULAR TILE

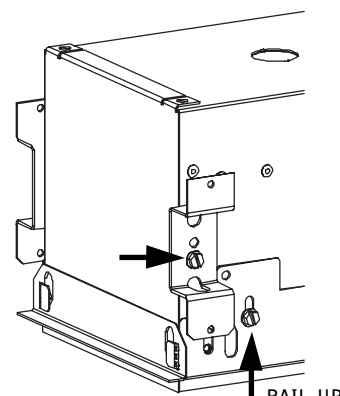




T4: TALL 15/16" TEGULAR TILE
T5: TALL 9/16" TEGULAR TILE









STD = 1-1/2" TEE HEIGHT, TALL = 1-11/16" TEE HEIGHT

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

GRID INSTALLATION (CONTINUED)

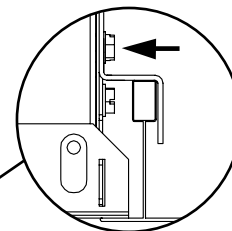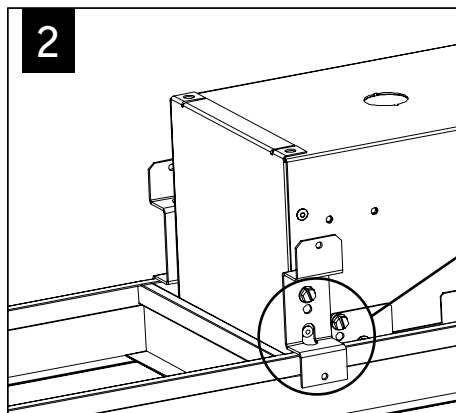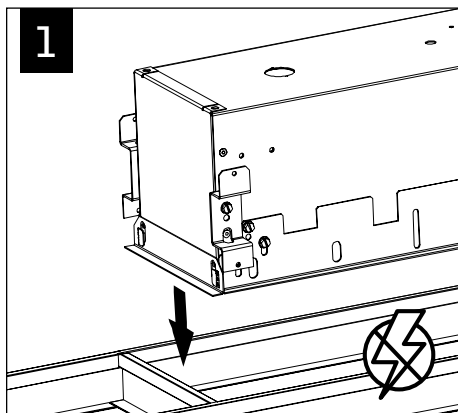

IF LUMINAIRE DOES NOT SIT FLUSH,
LOOSEN SCREWS TO ADJUST

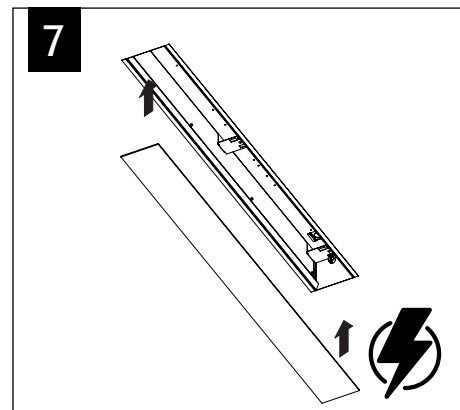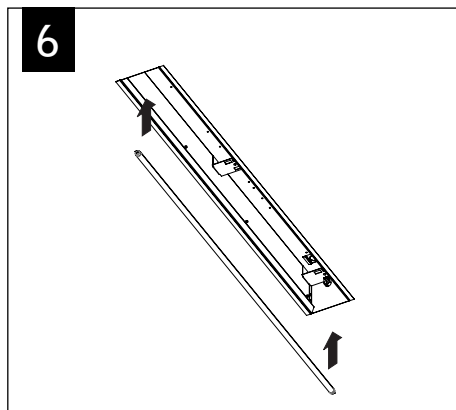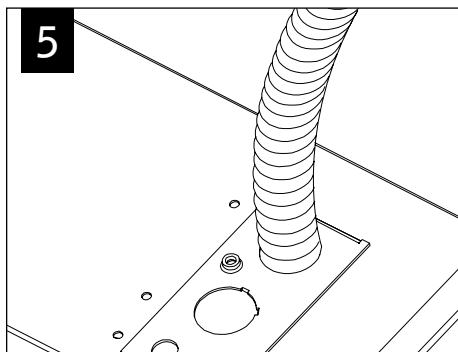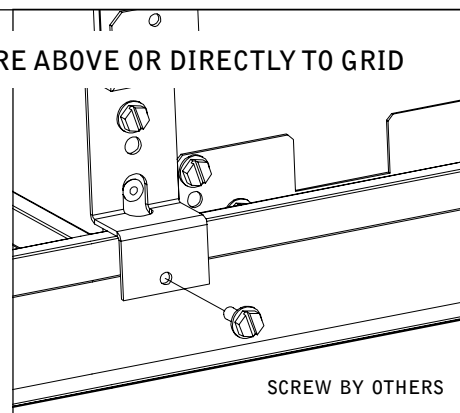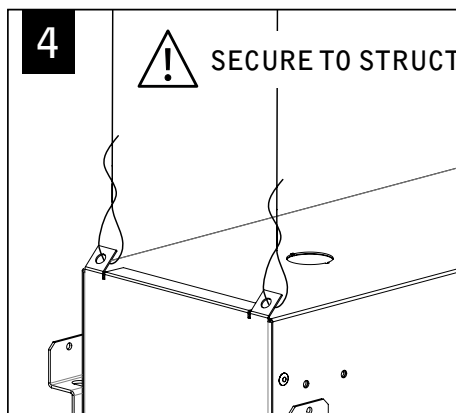
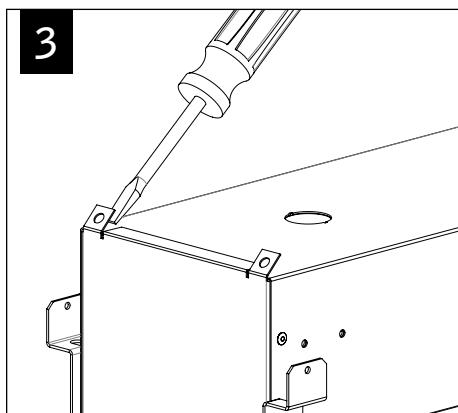


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

DRYWALL INSTALLATION




YOKE MUST BE
INSTALLED PRIOR
TO DRYWALL

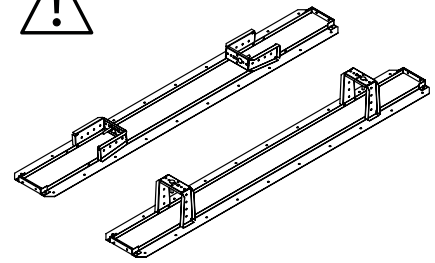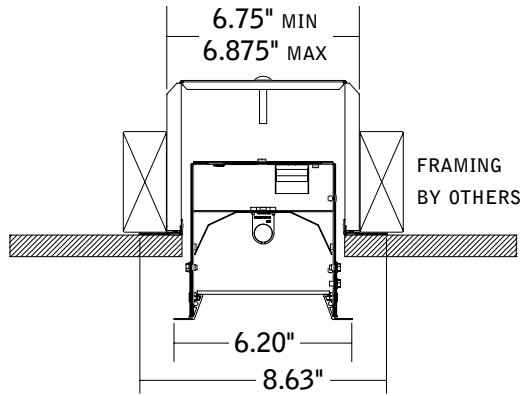

UNFOLD YOKES PRIOR TO INSTALLATION


1

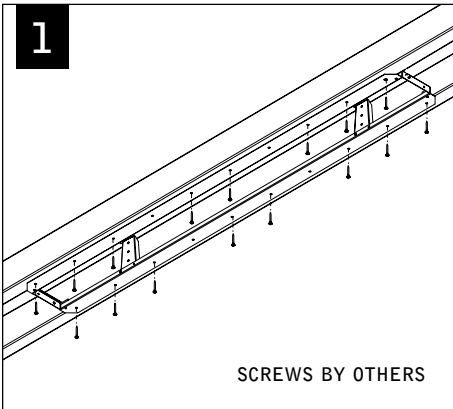

SCREWS BY OTHERS


ROW MOUNT (T5/T5HO LAMPS ONLY)

2

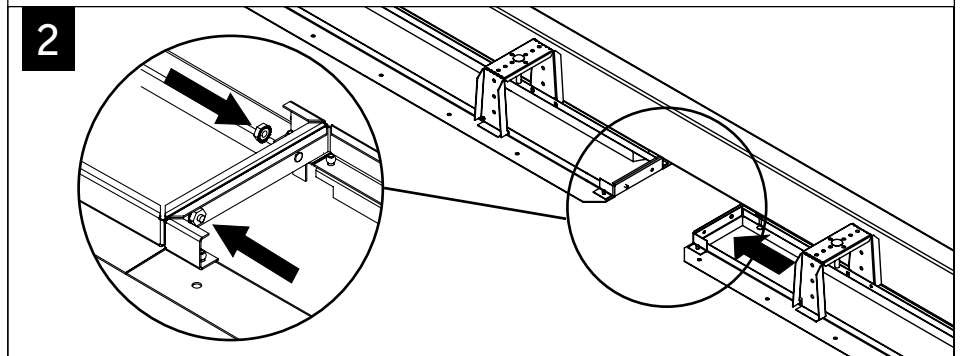


3


DRYWALL INSTALLATION

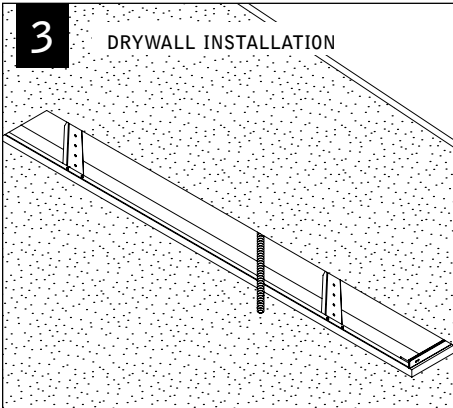


4

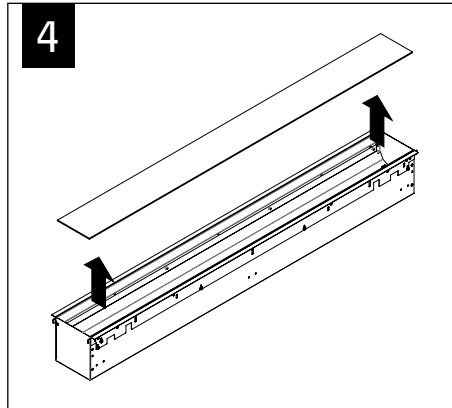

5

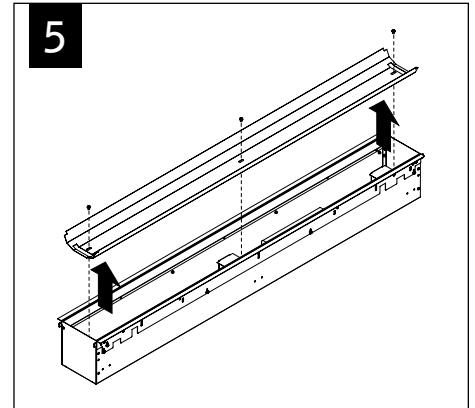


6

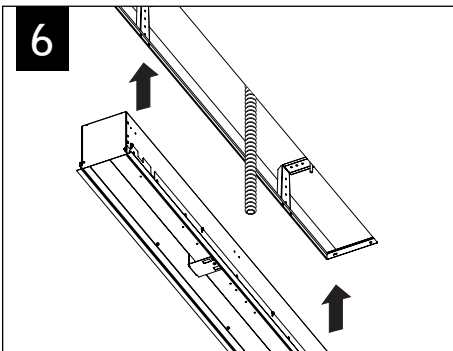


MAKE ELECTRICAL CONNECTIONS

7


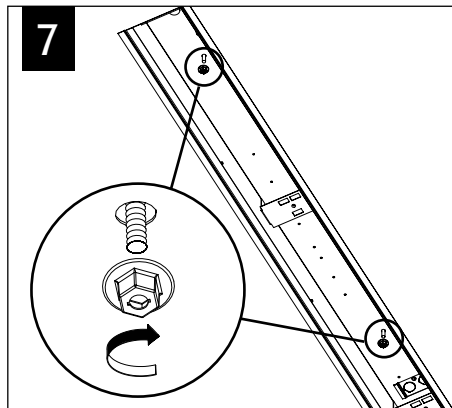


8



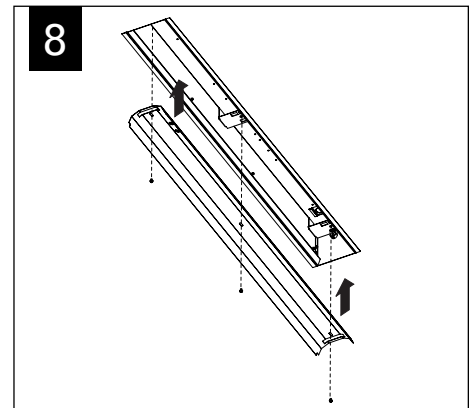


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

DRYWALL INSTALLATION (CONTINUED)

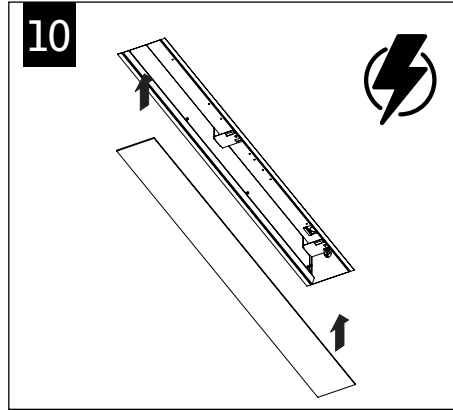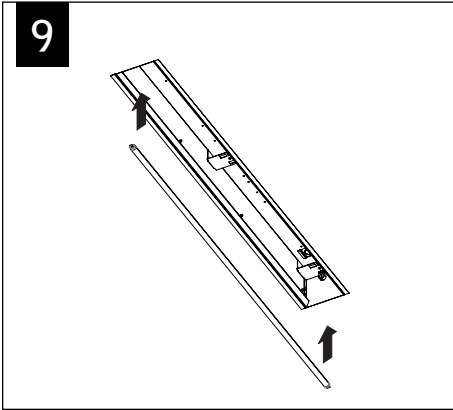

BALLAST SERVICE

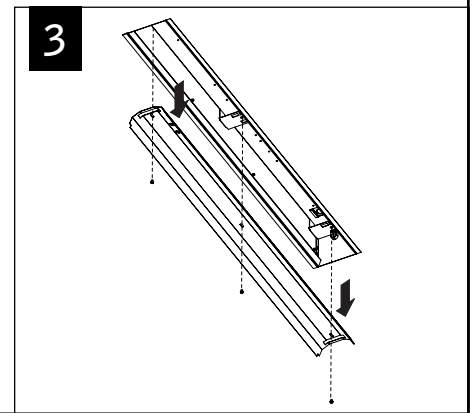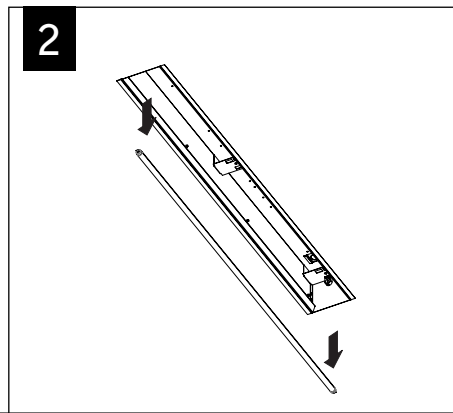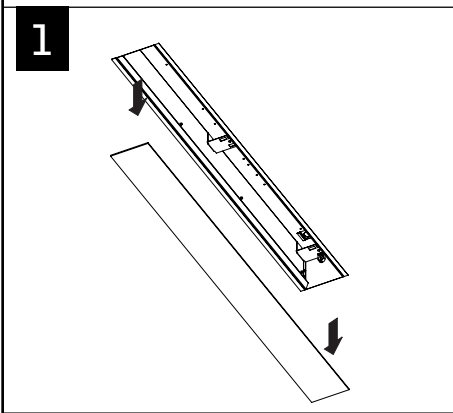

Contractor is responsible for adequately reinforcing walls and/or ceilings to support luminaire weight. Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings. The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.