

id+ 3.5" round trimless housing

FLC3D | FLC3W




FOCAL POINT™



LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING.




NON-EMERGENCY - THERMALLY PROTECTED, NON-IC

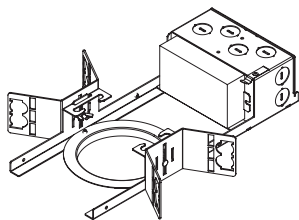

FLC3D | FLC3W



OPTIONAL - BAR HANGERS SOLD SEPARATELY

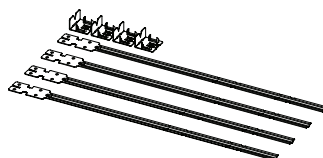

KEY



POWER OFF



POWER ON



ATTENTION




LEVEL




SEE ADDITIONAL INSTRUCTIONS

IC/CP


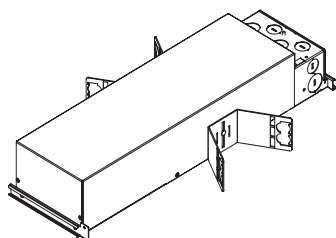


FLC3D | FLC3W


WALL WASH ORIENTATION

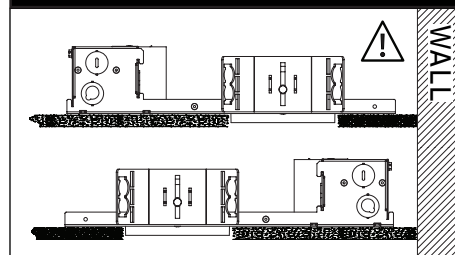


KEEP SHADED AREA FREE FROM OBSTRUCTION ABOVE CEILING

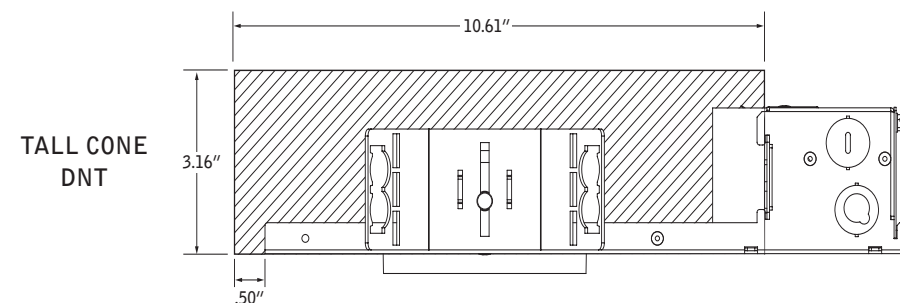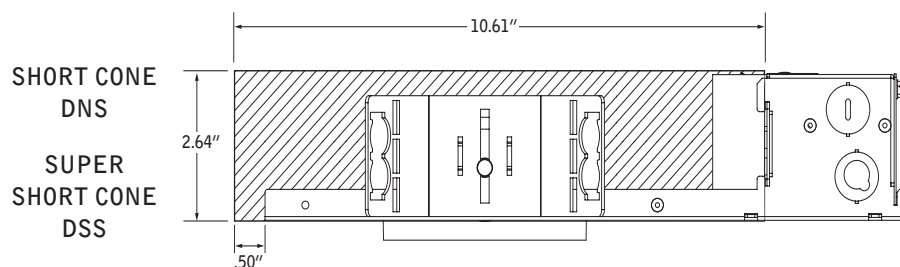

1 x2

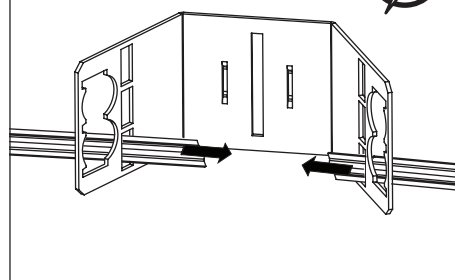


2



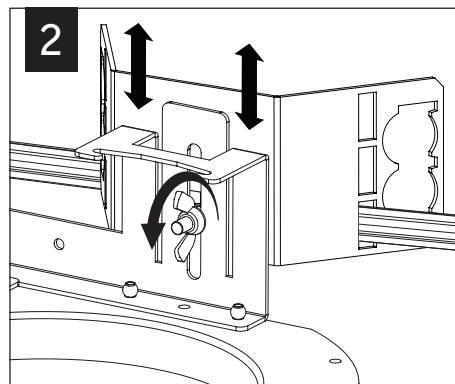


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.







WOOD STUDS

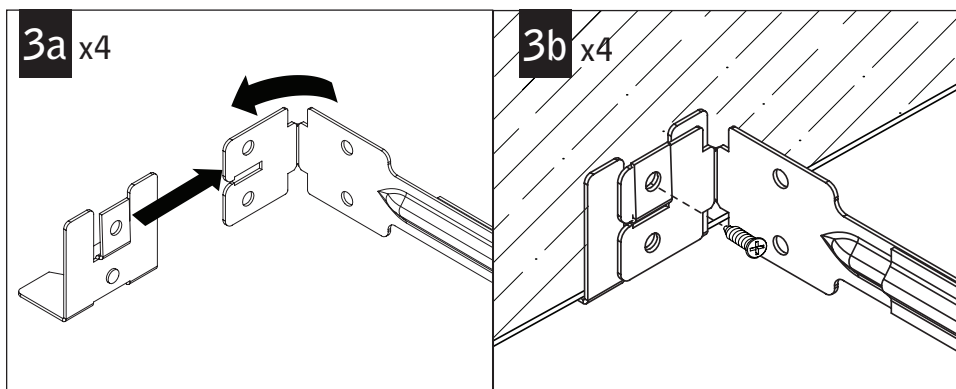




METAL STUDS

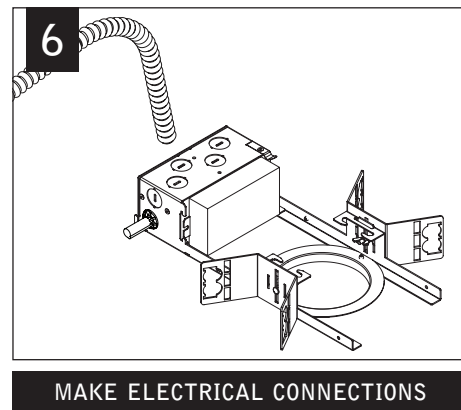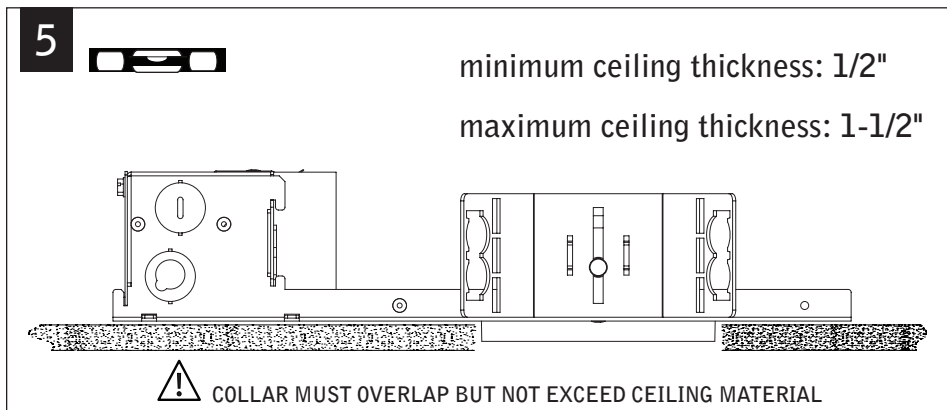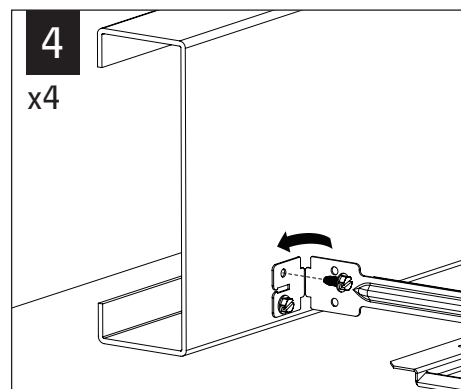






MUD-IN

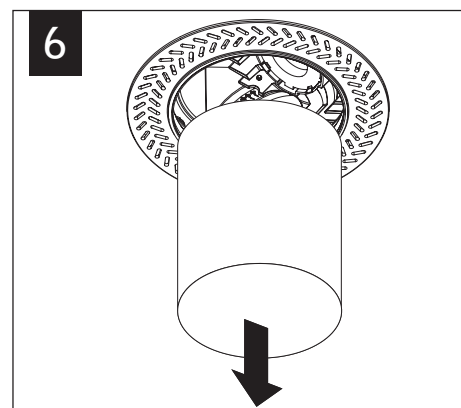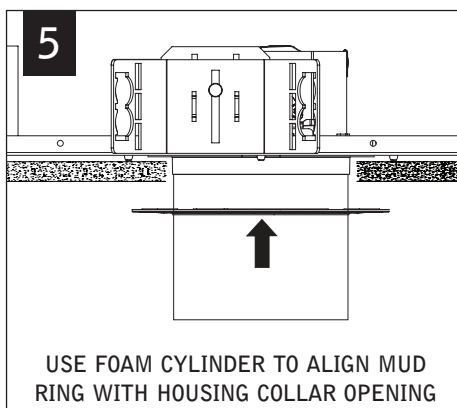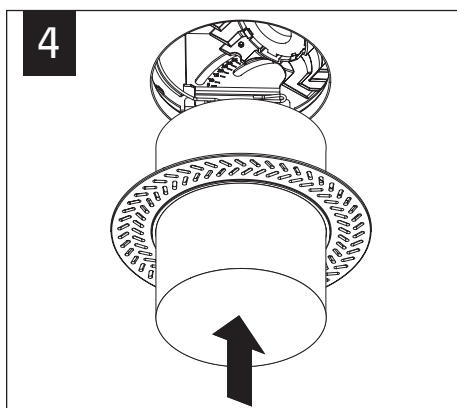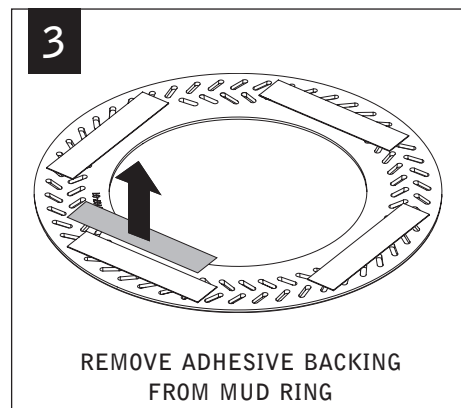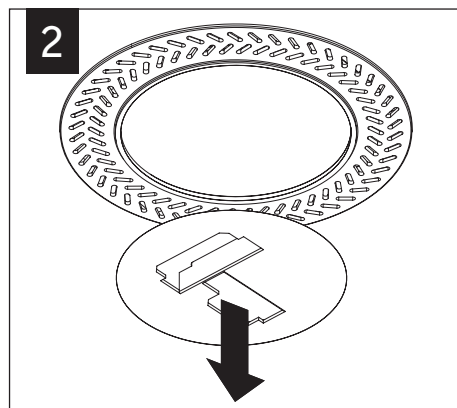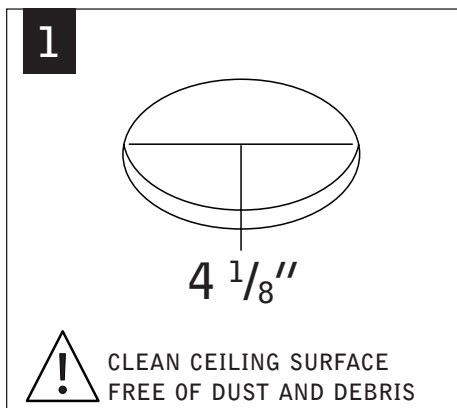







Fixtures must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

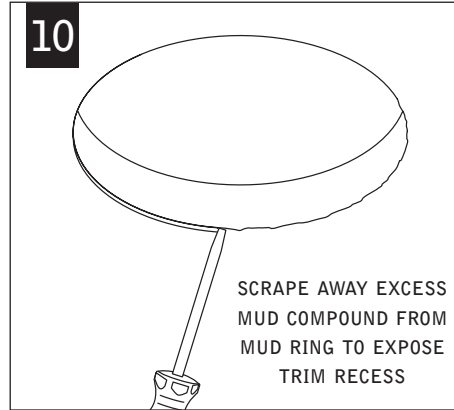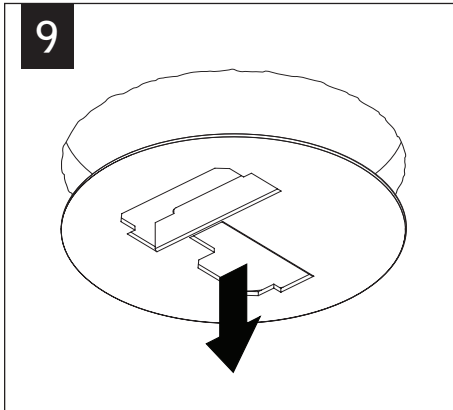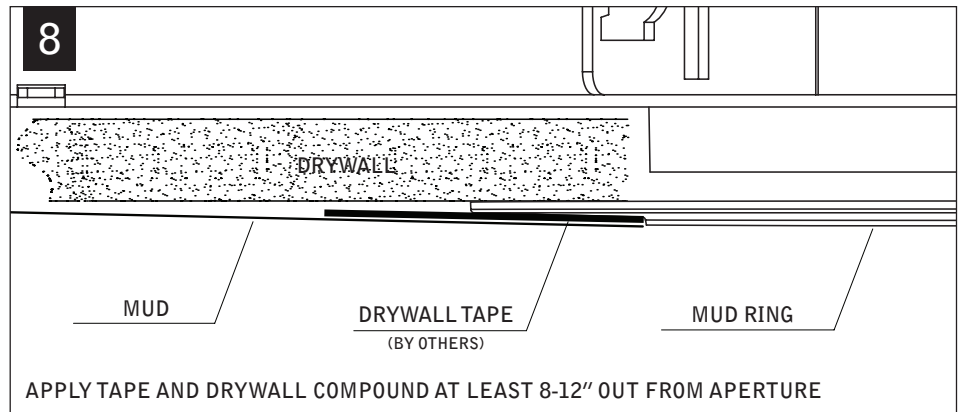

WOOD CEILING

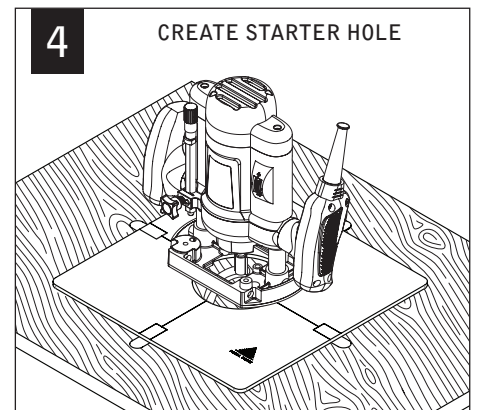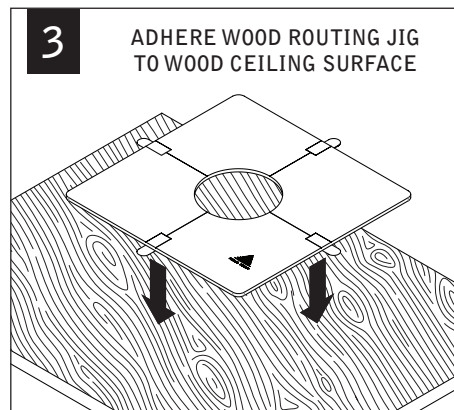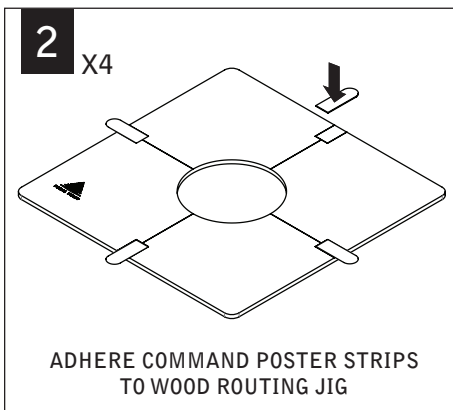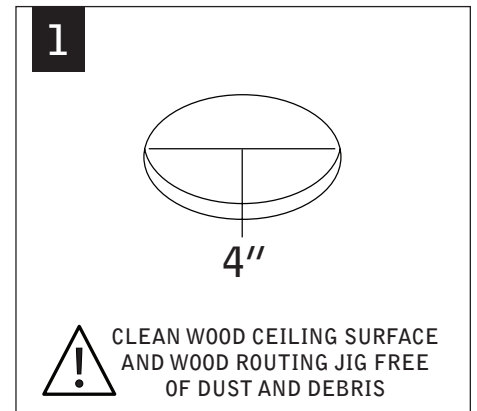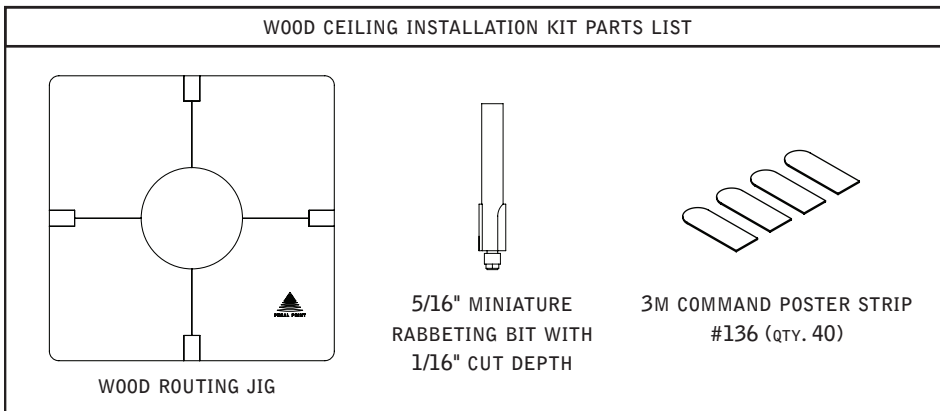

Fixtures must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

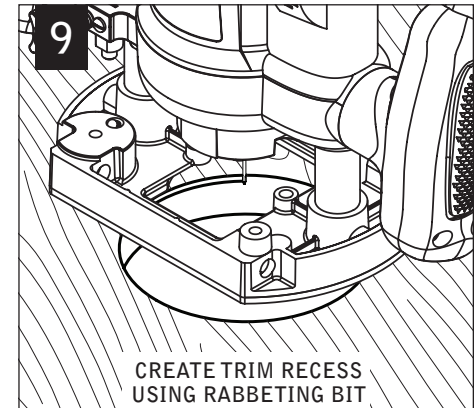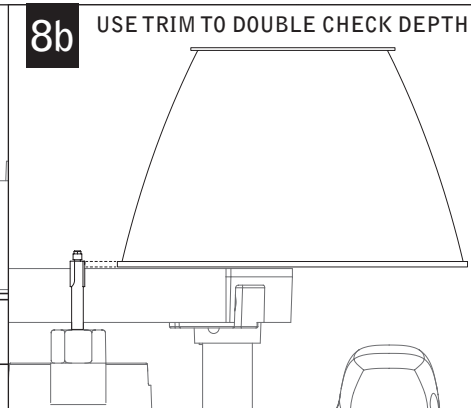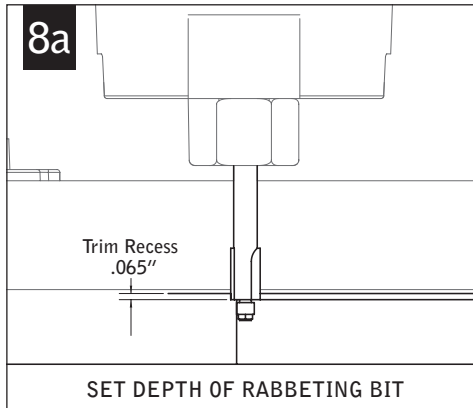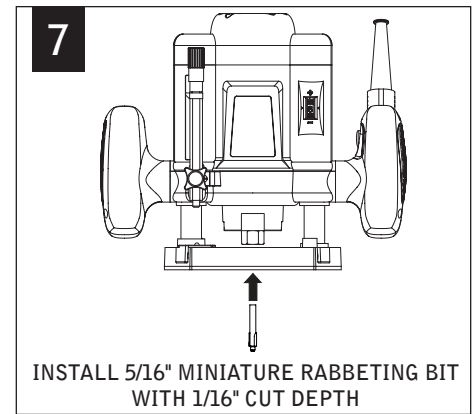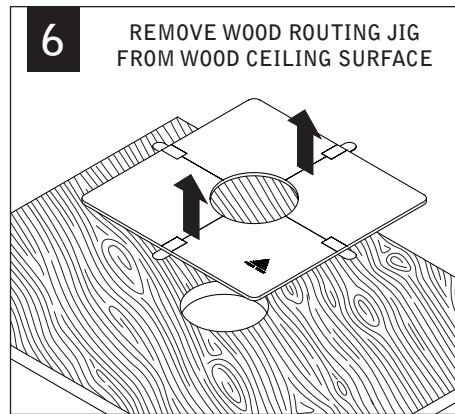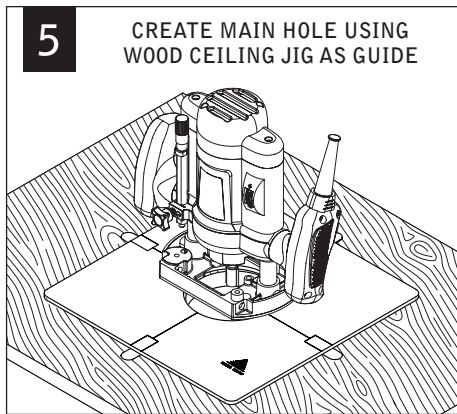

DRIVER SERVICE

