

ID+ 2.5" Pure Cylinder - Surface Mount

FLCY2N - Mini Power Canopy



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON

COMPONENT KEY

ID+ CYLINDER

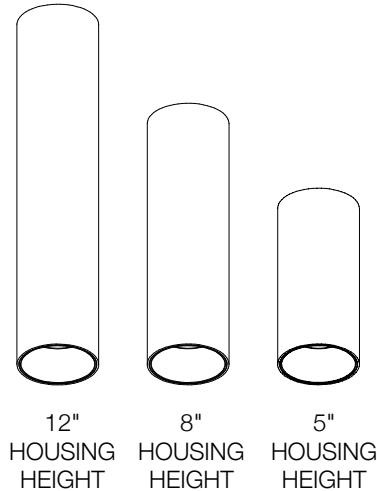


MINI POWER CANOPY

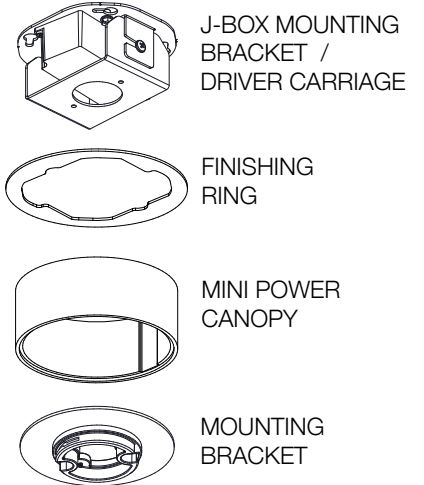

LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING.
ALL GRID LUMINAIRE MUST BE SECURED TO STRUCTURE ABOVE.









4" OCTAGONAL J-BOX REQUIRED

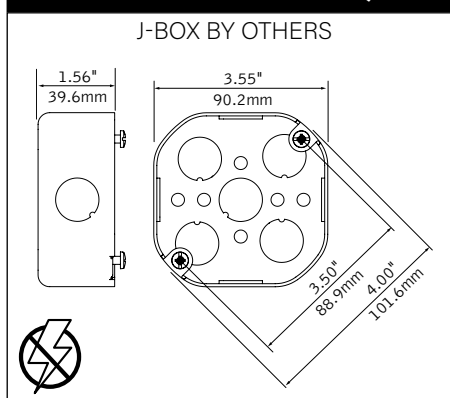




EMERGENCY





PRIOR TO LUMINAIRE INSTALLATION,
SEE **PAGE 4** FOR EMERGENCY
INSTALLATION INSTRUCTIONS.

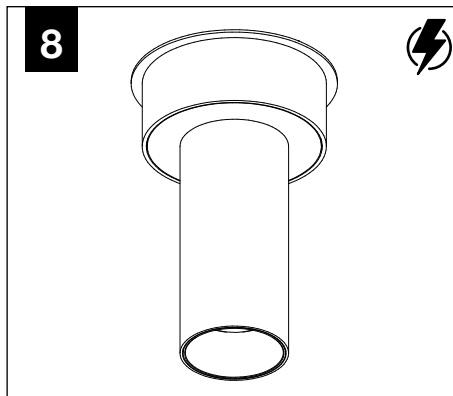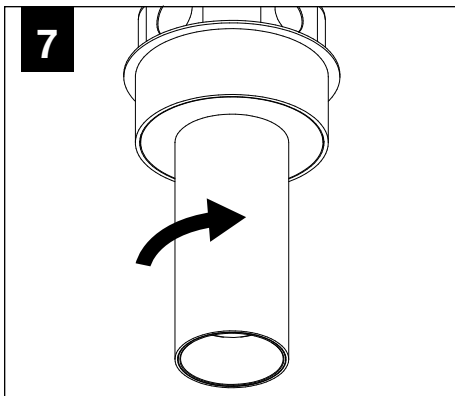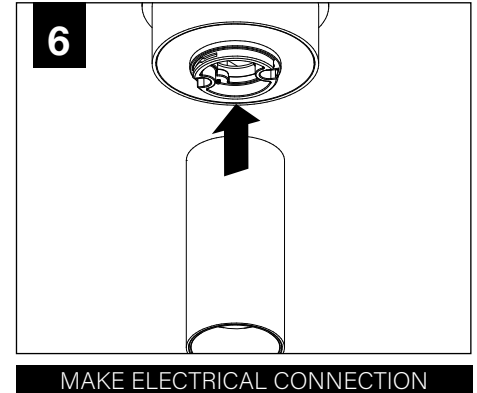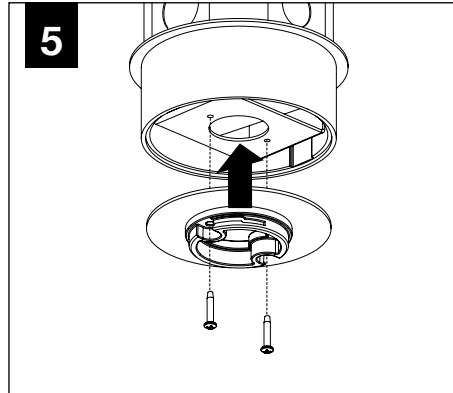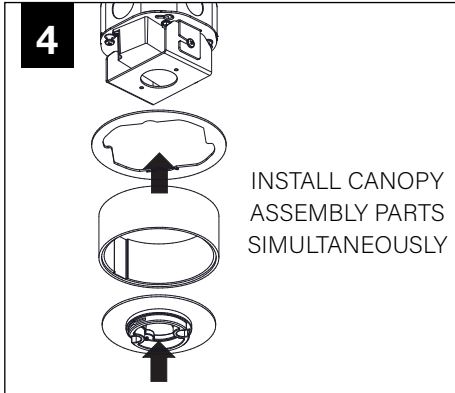
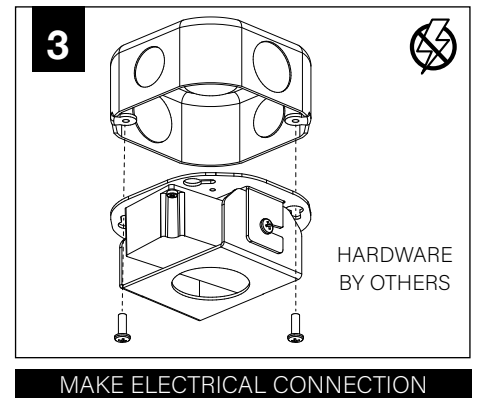
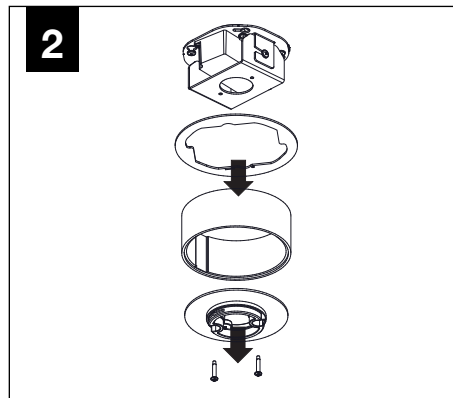
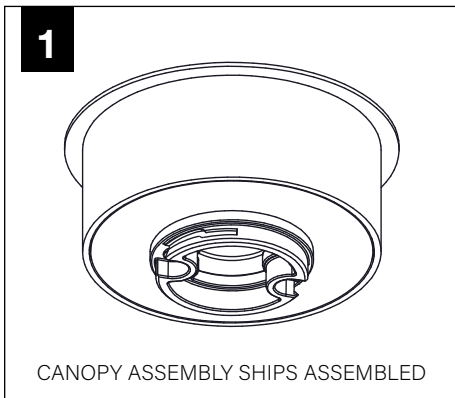


DRIVER SERVICE



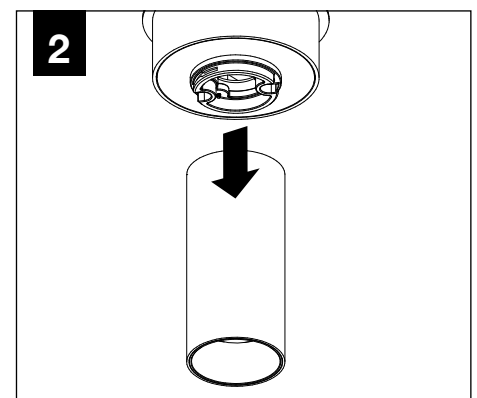
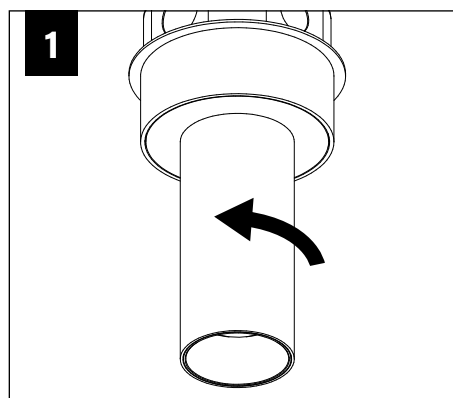
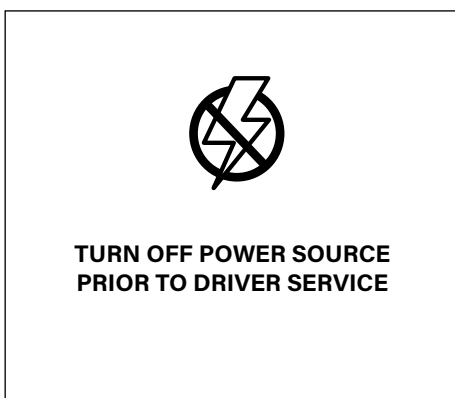


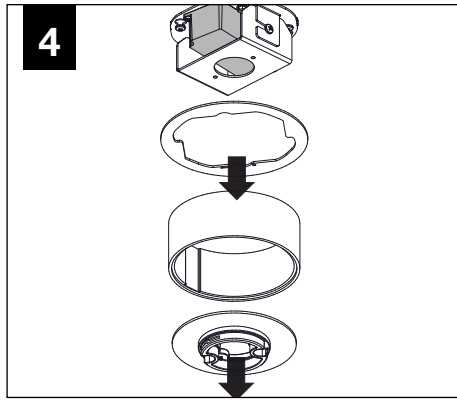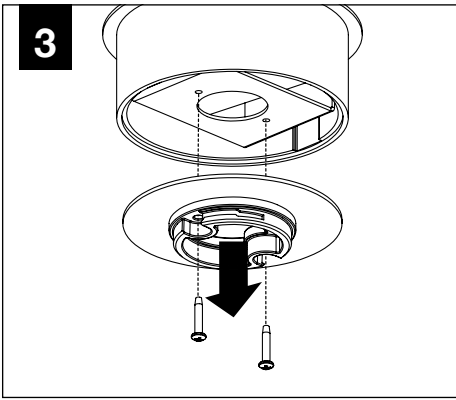

WALL WASH AIMING

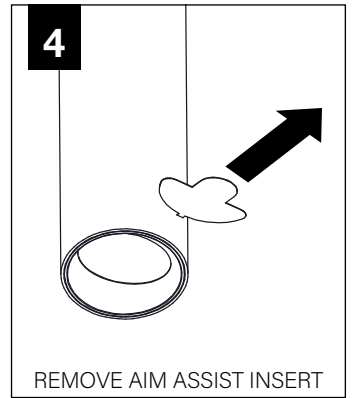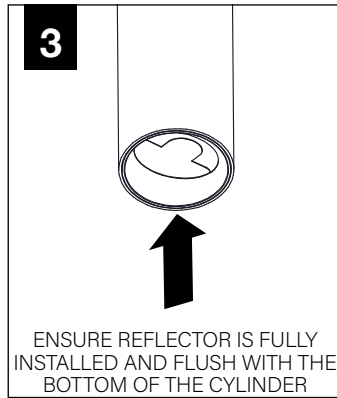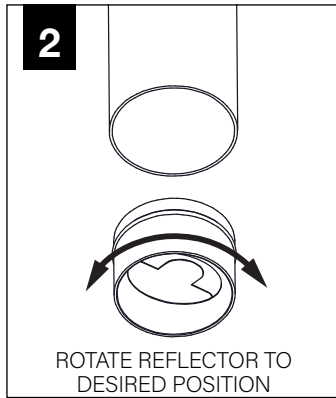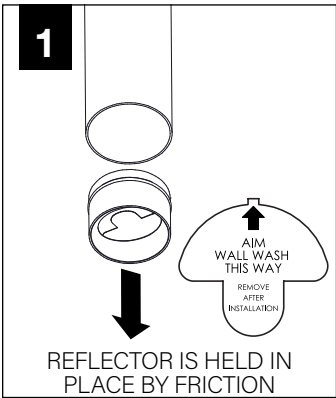

OPTIC SERVICE

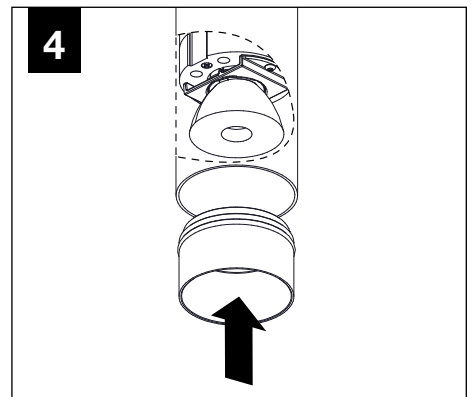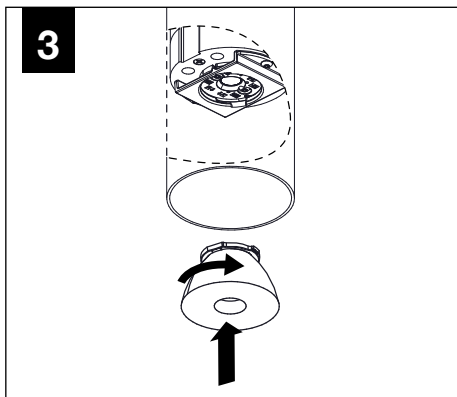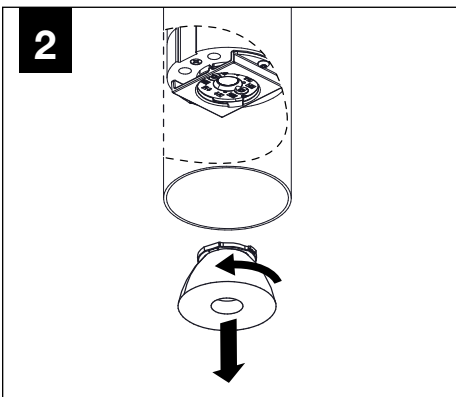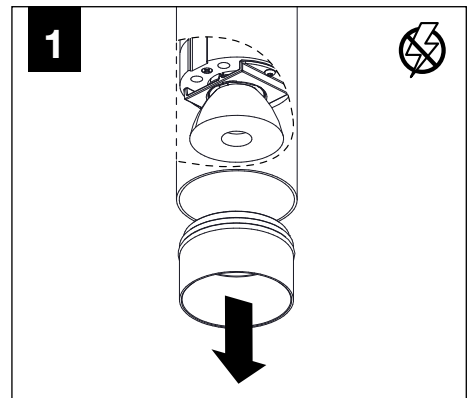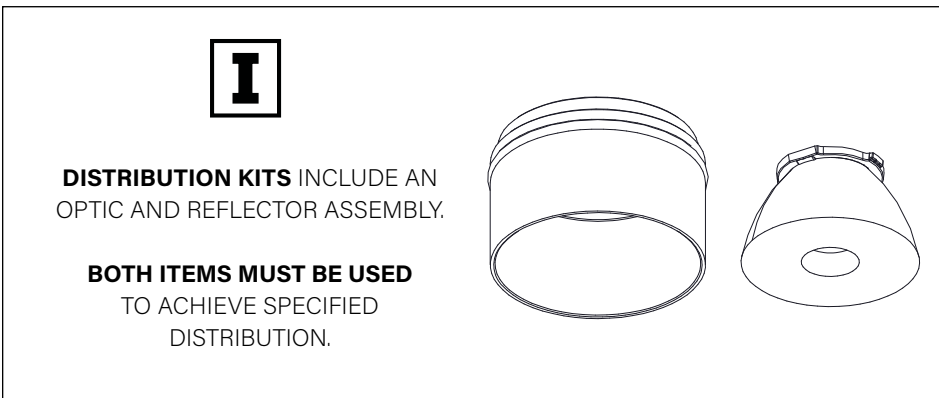

EMERGENCY



SEE BATTERY MANUFACTURER
INSTRUCTIONS


EMERGENCY MAXIMUM MOUNTING HEIGHT:

CD & WH REFLECTORS - 16.73'


WD & BK REFLECTORS - 14.96'

1

HARDWARE
BY OTHERS

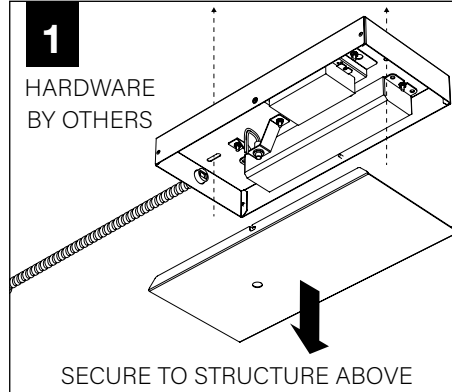


2

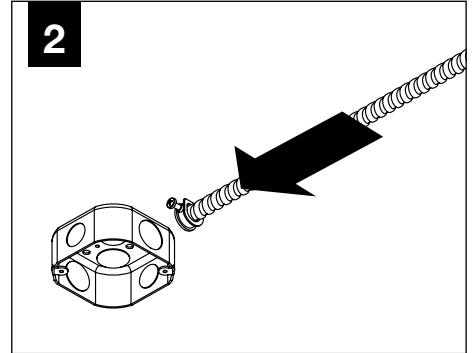


MAKE ELECTRICAL CONNECTION

3

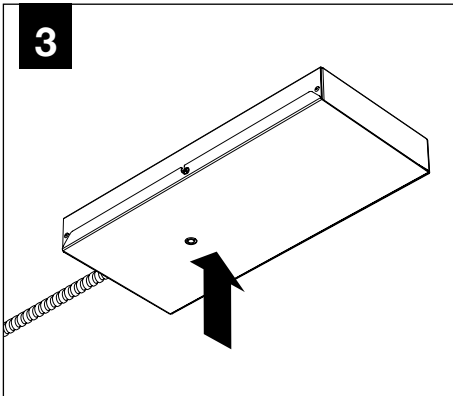

4

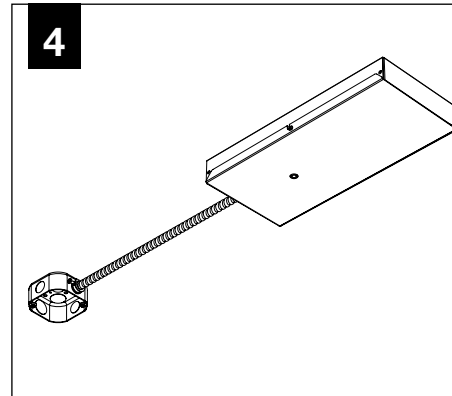

PROCEED TO
LUMINAIRE INSTALLATION