

ID⁺ 3.5" Pure Cylinder - Surface Mount

FLCY3N-RD-4H | FLCY3N-RD-7H - Mini Power Canopy



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON

COMPONENT KEY

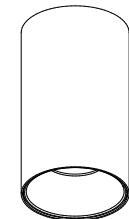


7" HOUSING
HEIGHT

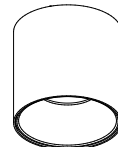

4" HOUSING
HEIGHT


MINI POWER CANOPY

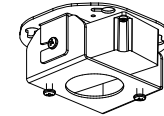


J-BOX MOUNTING
BRACKET /
DRIVER CARRIAGE



FINISHING
RING

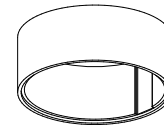

MINI POWER
CANOPY

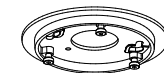


MOUNTING
BRACKET



LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING.
ALL GRID LUMINAIRE MUST BE SECURED TO STRUCTURE ABOVE.

4" OCTAGONAL J-BOX REQUIRED









J-BOX BY OTHERS

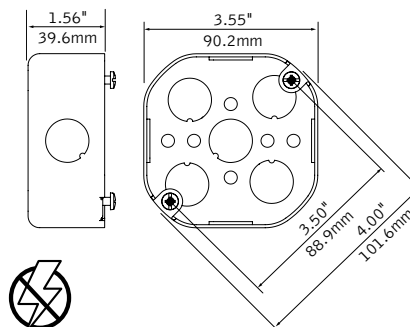




EMERGENCY





PRIOR TO LUMINAIRE INSTALLATION,
SEE **PAGE 4** FOR EMERGENCY
INSTALLATION INSTRUCTIONS.

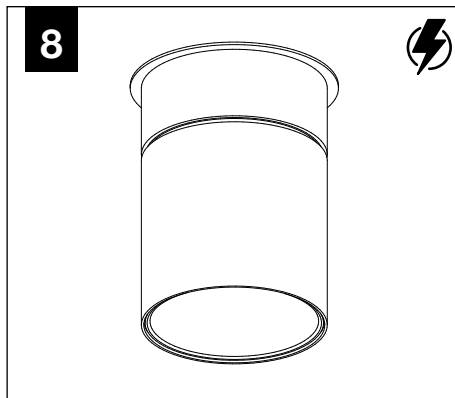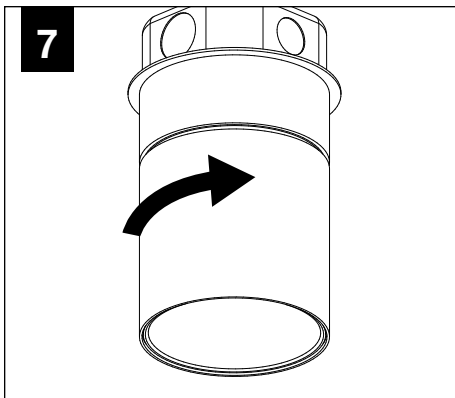
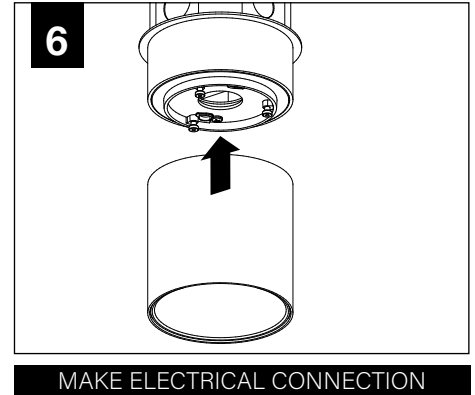
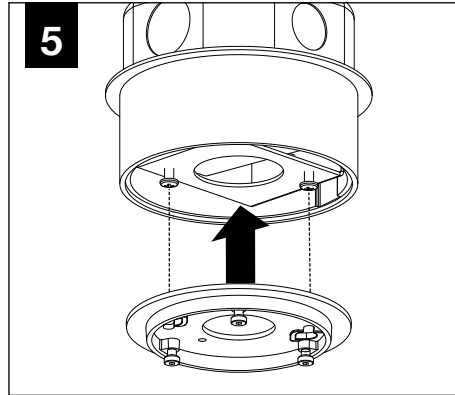
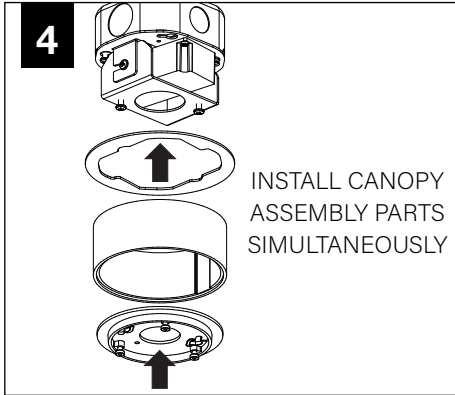
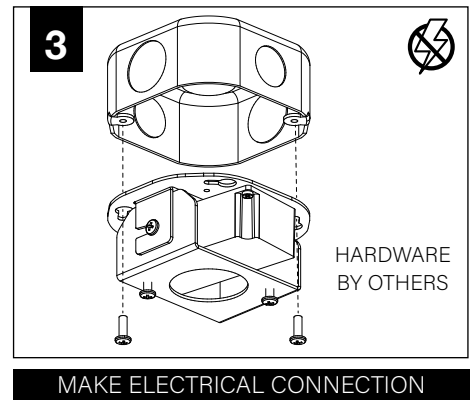
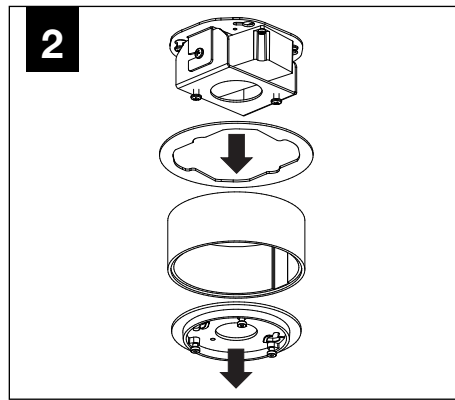
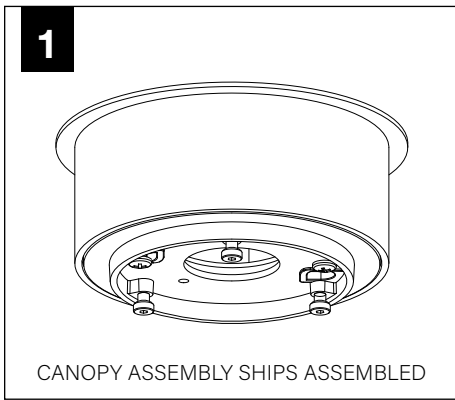






DRIVER SERVICE

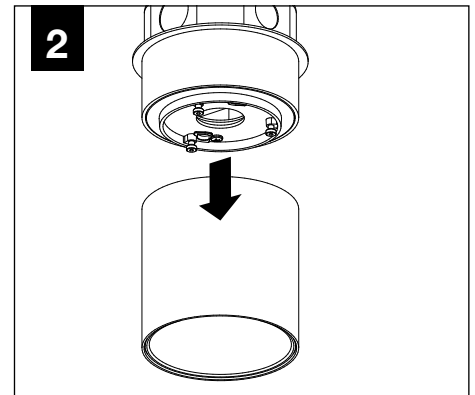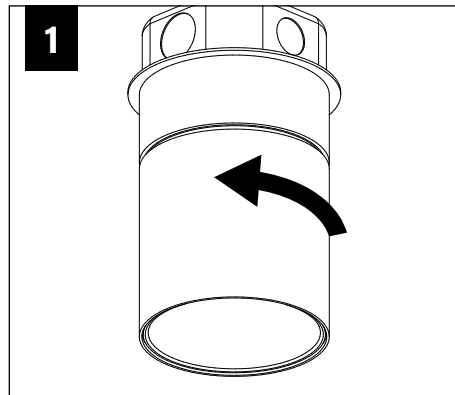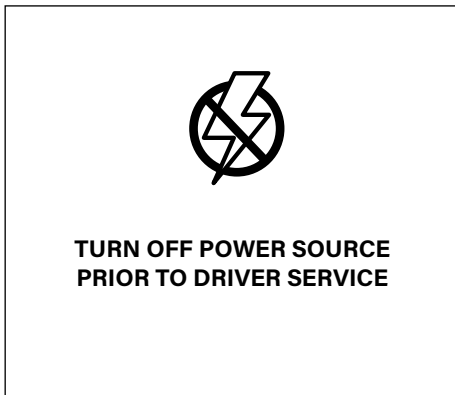

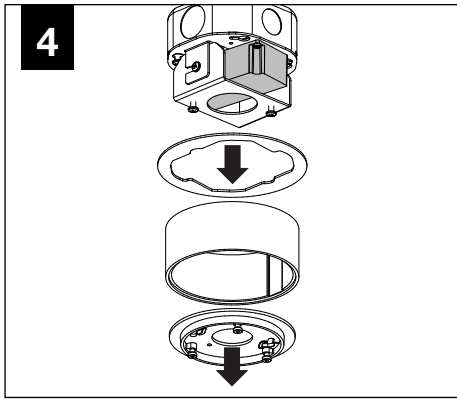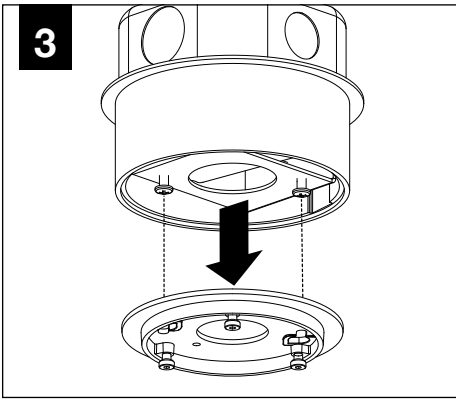

OPTIC SERVICE

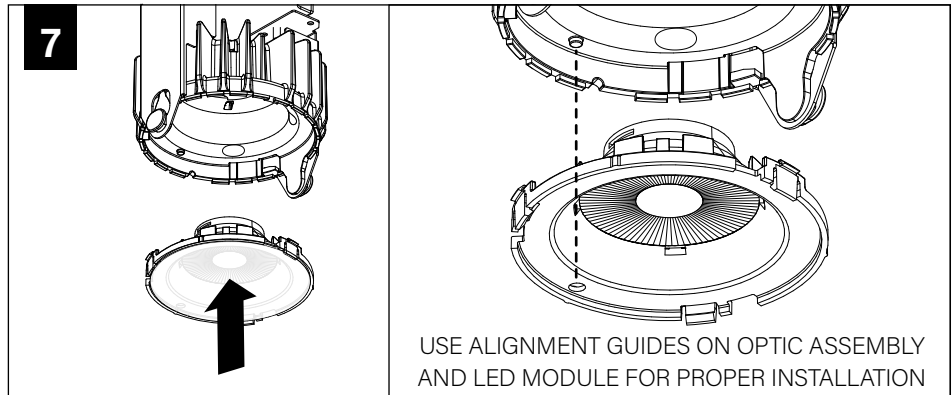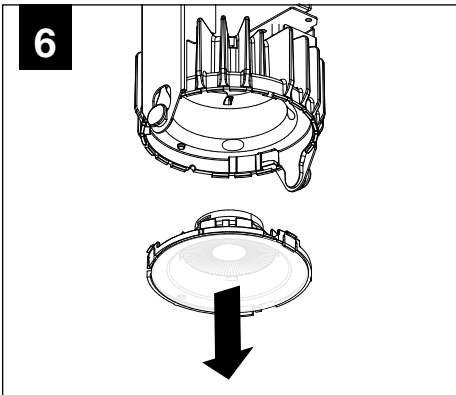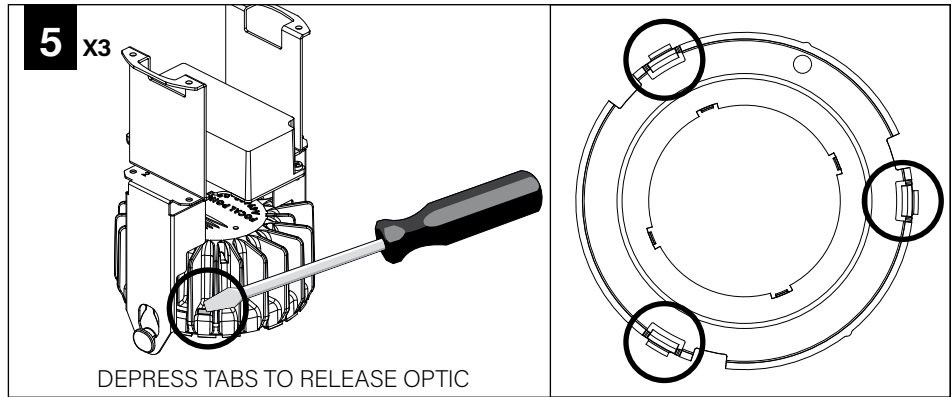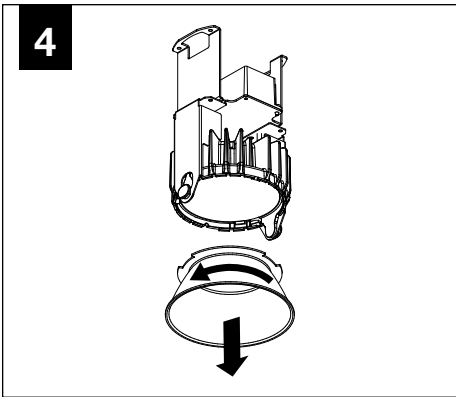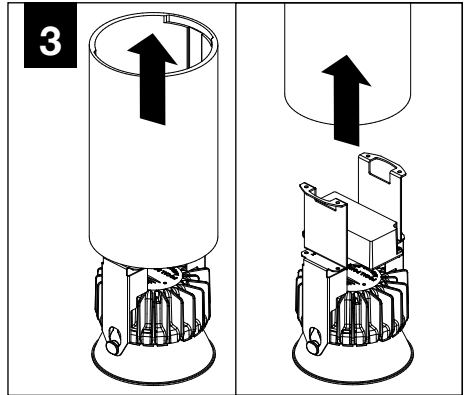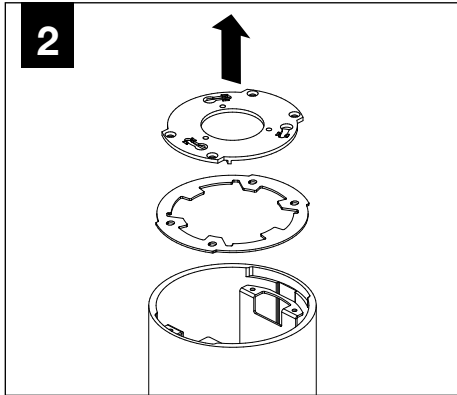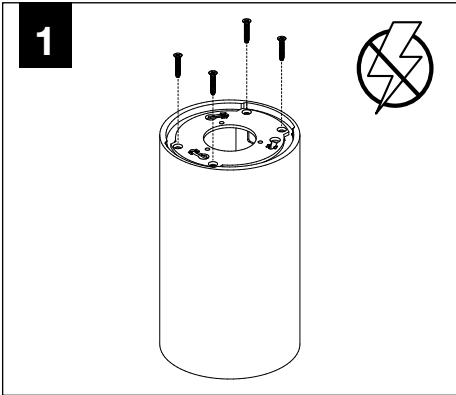

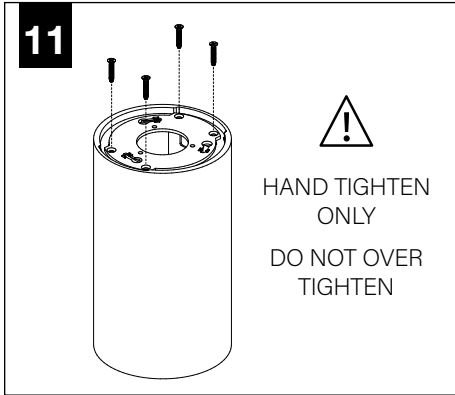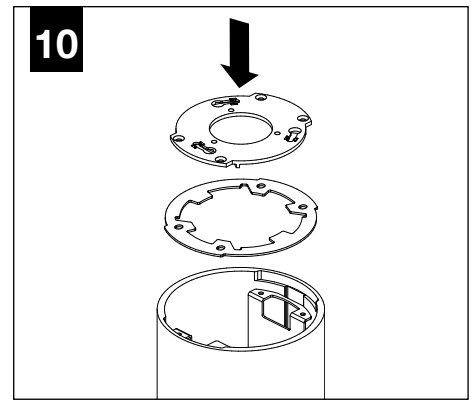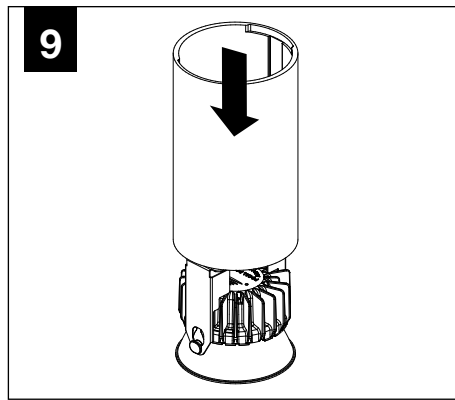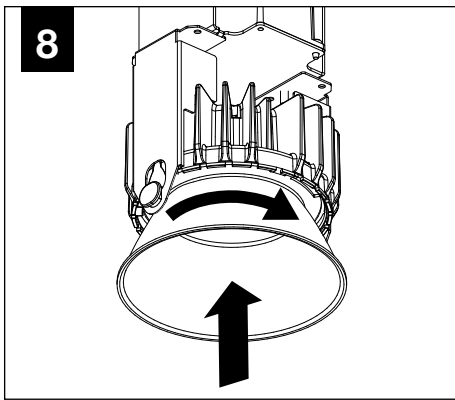

EMERGENCY

