

ID⁺ 3.5" Pure Cylinder - Stem Mount

FLCY3N-RD-4H | FLCY3N-RD-7H- Mini Power Canopy



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



POWER OFF



POWER ON

COMPONENT KEY

STEM MOUNT

Shipped Assembled




STEM MOUNTING BRACKET



FACE PLATE




7" HOUSING HEIGHT

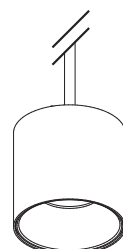

4" HOUSING HEIGHT


MINI POWER CANOPY



J-BOX MOUNTING BRACKET / DRIVER CARRIAGE




FINISHING RING



MINI POWER CANOPY

4" OCTAGONAL J-BOX REQUIRED










J-BOX BY OTHERS

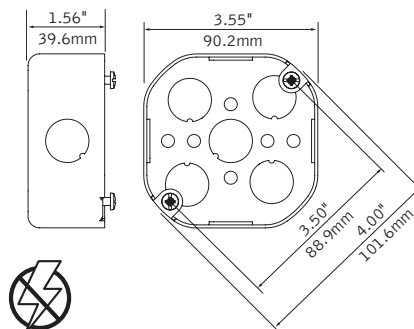



EMERGENCY






PRIOR TO LUMINAIRE INSTALLATION, SEE **PAGE 4** FOR EMERGENCY INSTALLATION INSTRUCTIONS.

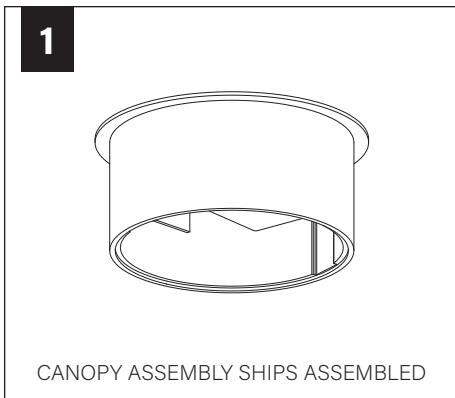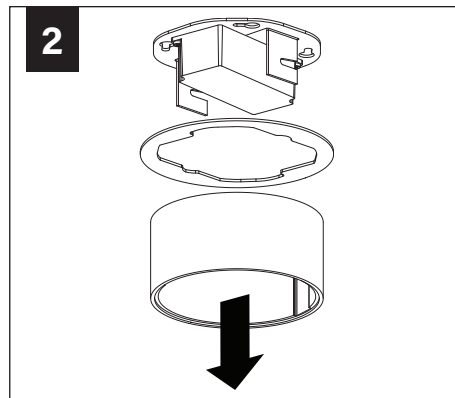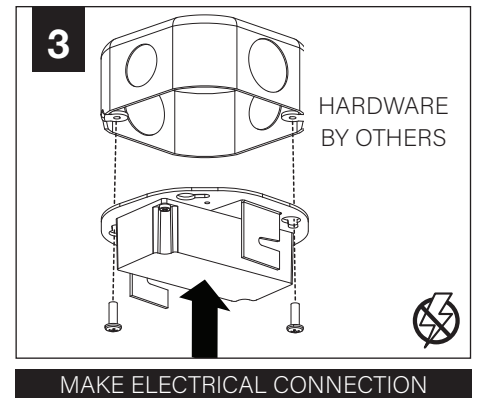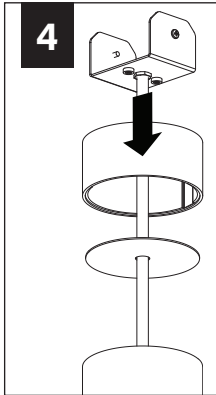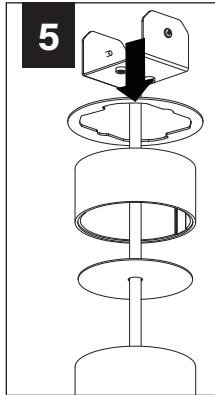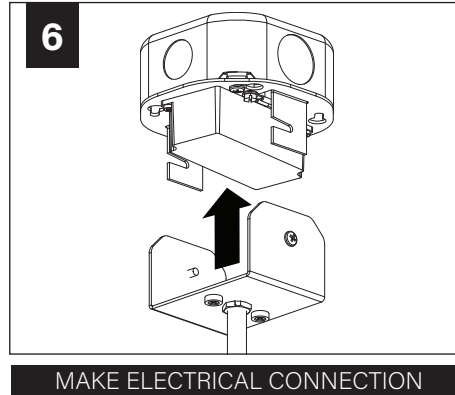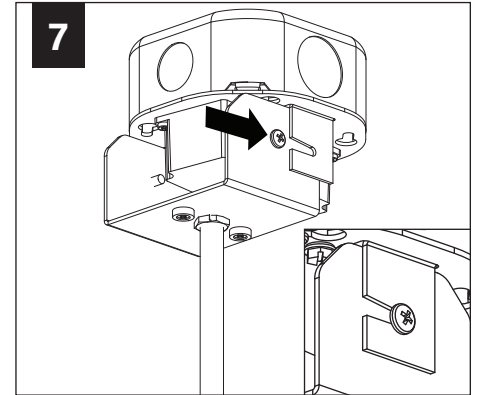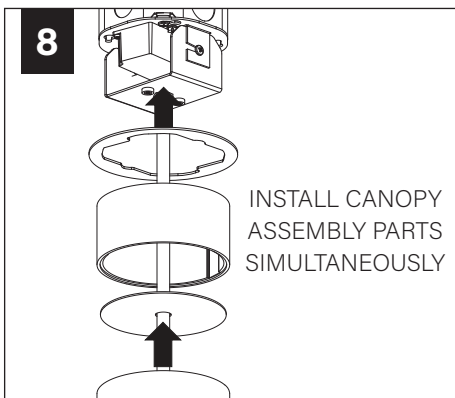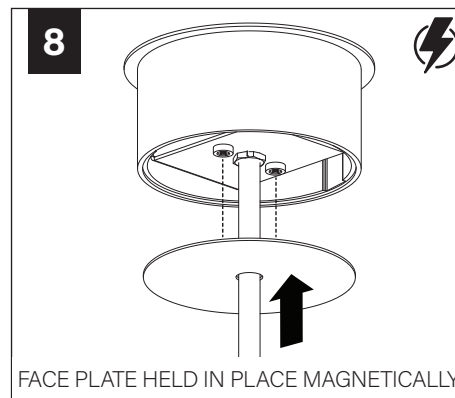








DRIVER SERVICE




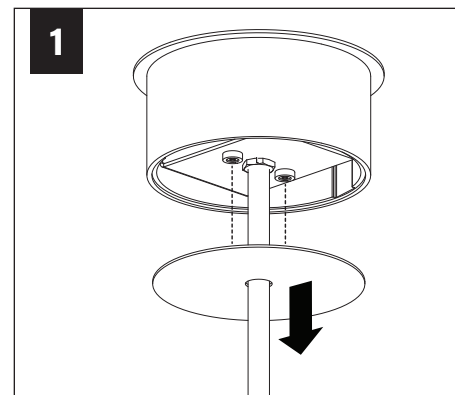
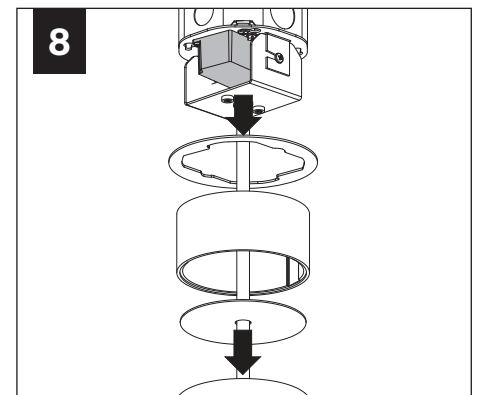


WALL WASH AIMING

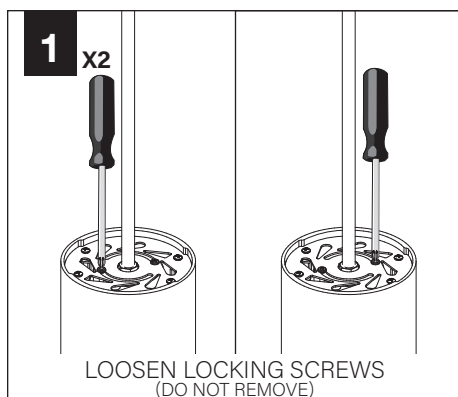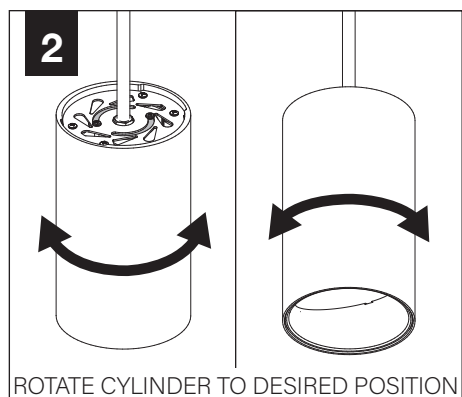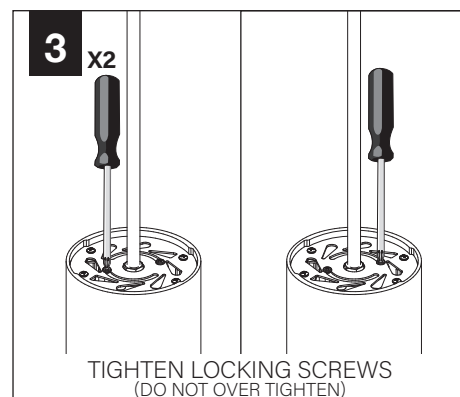

OPTIC SERVICE

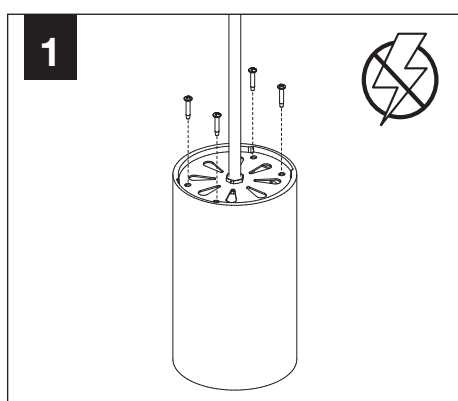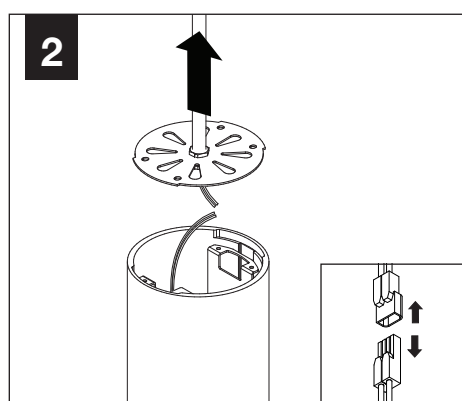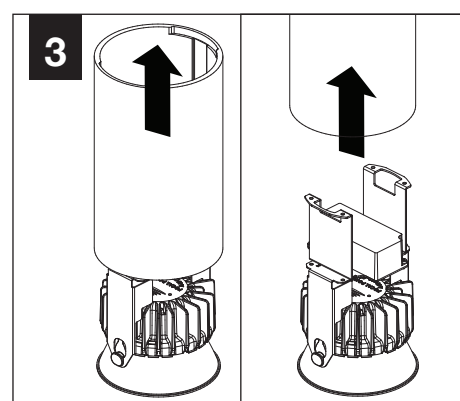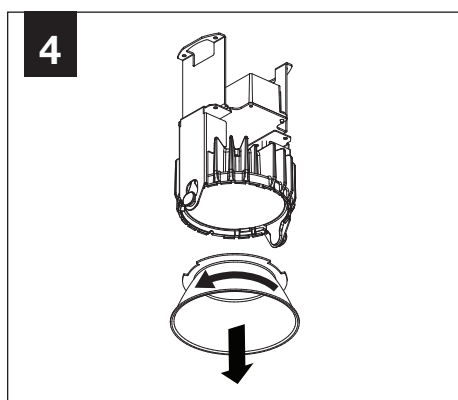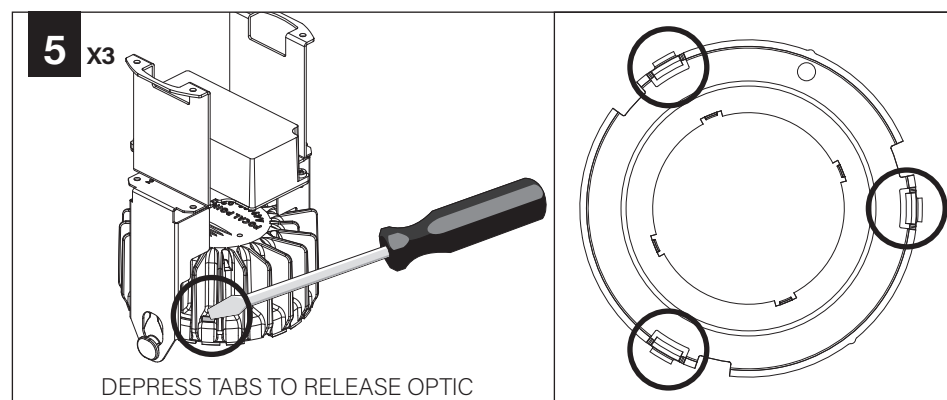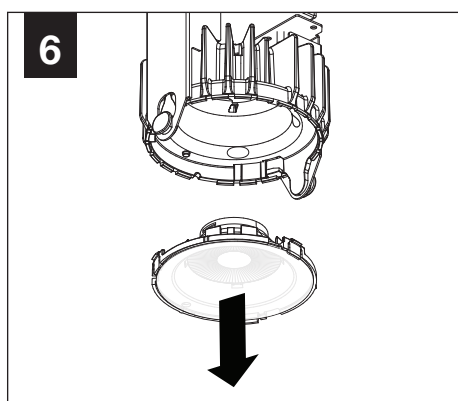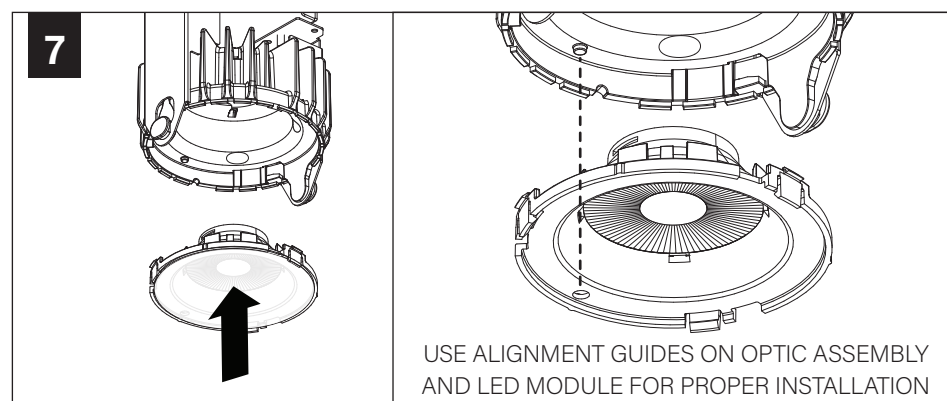

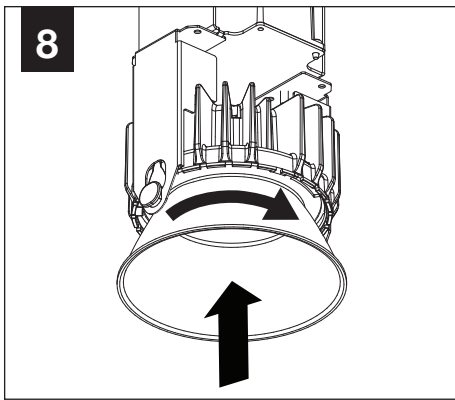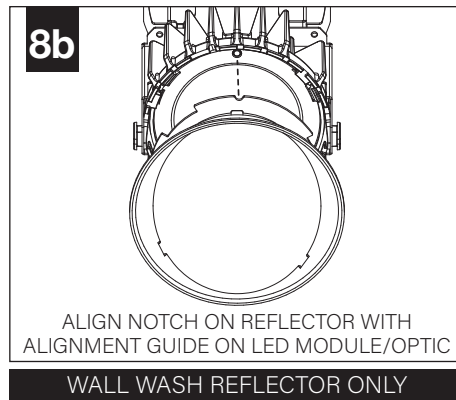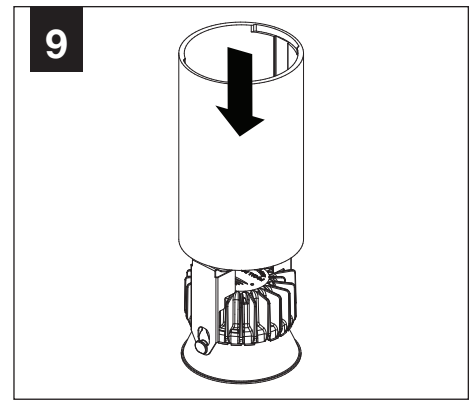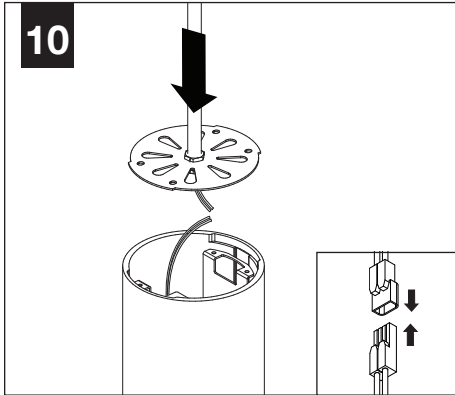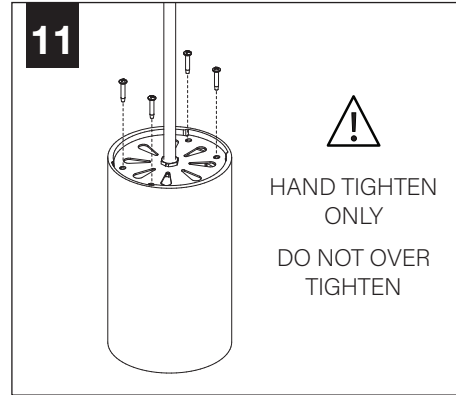

EMERGENCY

