ID+ 3.5" Pure Cylinder - Stem Mount

FLCY3N-RD-4H | FLCY3N-RD-7H- Mini Power Canopy

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS


POWER OFF

POWER ON

COMPONENT KEY

STEM MOUNT

Shipped Assembled

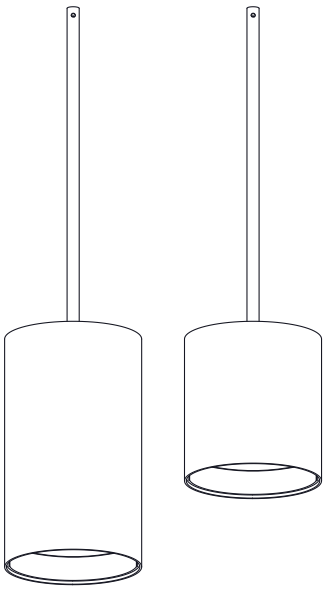


7" HOUSING HEIGHT

4" HOUSING HEIGHT


MINI POWER CANOPY




FINISHING RING



J-BOX MOUNTING BRACKET / DRIVER CARRIAGE

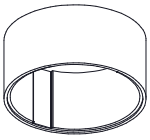

MINI POWER CANOPY

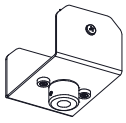

STEM MOUNTING BRACKET



FACE PLATE


SHIPPED INSTALLED



#8-32X5/16" HALF DOG NOSE SET SCREWS

4" OCTAGONAL J-BOX REQUIRED

J-BOX BY OTHERS

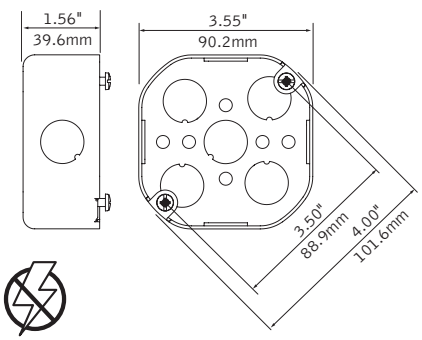


EMERGENCY

PRIOR TO LUMINAIRE INSTALLATION, SEE **PAGE 6** FOR EMERGENCY INSTALLATION INSTRUCTIONS.

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


FIELD CUTTABLE FIXED STEM (OPTIONAL)

1

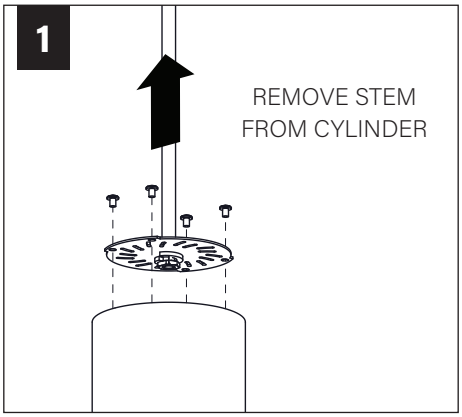

REMOVE STEM FROM CYLINDER


2



MEASURE STEM TO DESIRED LENGTH


MINIMUM CUT LENGTH = 9"

3




CUT STEM AND DEBURR INSIDE EDGE

4

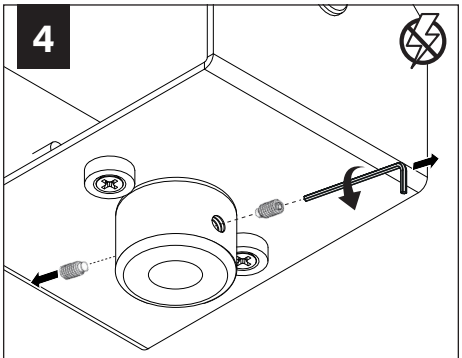


REMOVE SET SCREWS FROM BOTH SIDES

5

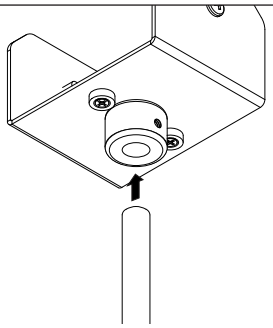


FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

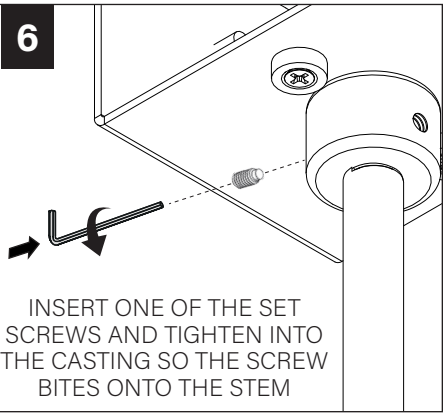


INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM

7

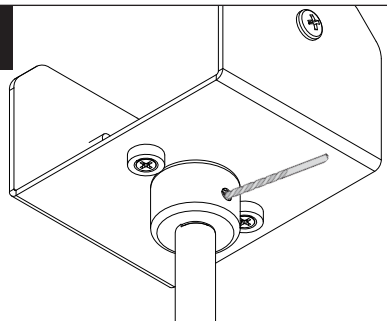


DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

8

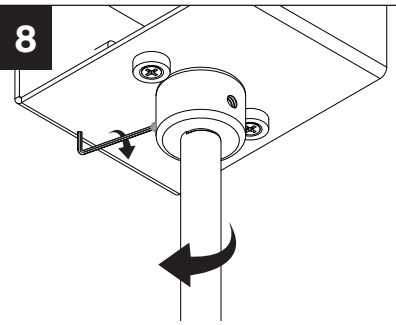


LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

9

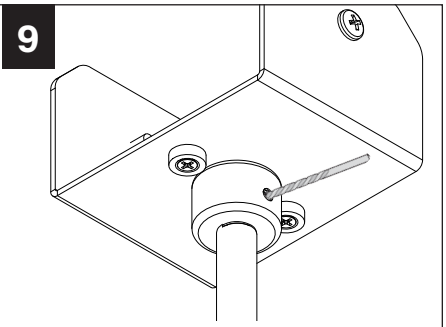

DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

10

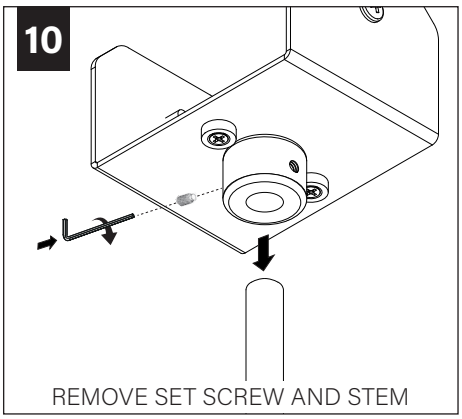

REMOVE SET SCREW AND STEM


11



INSTALL STEM ONTO CYLINDER


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

1

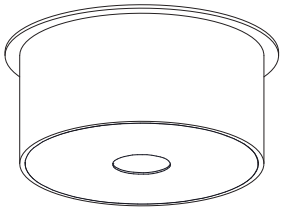


CANOPY ASSEMBLY SHIPS ASSEMBLED

2

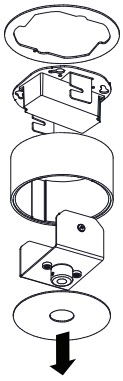


3

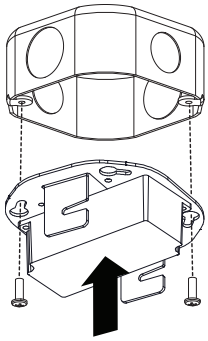


HARDWARE BY OTHERS

MAKE ELECTRICAL CONNECTION


4

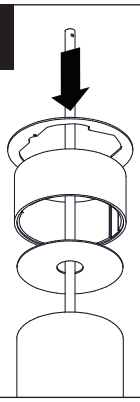

5

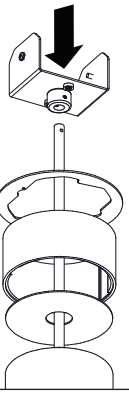


6

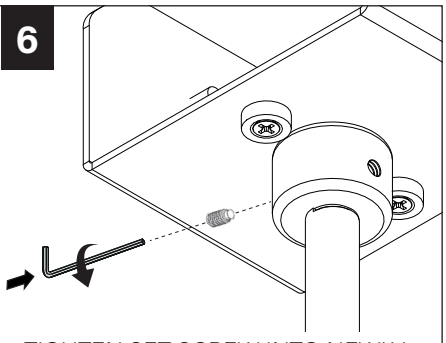


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

7

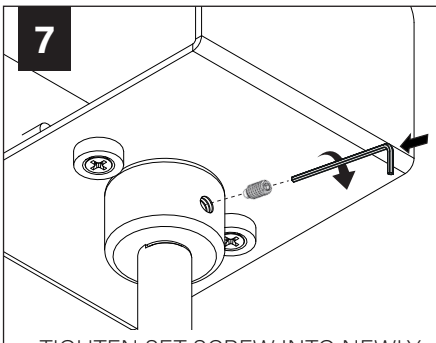


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

8

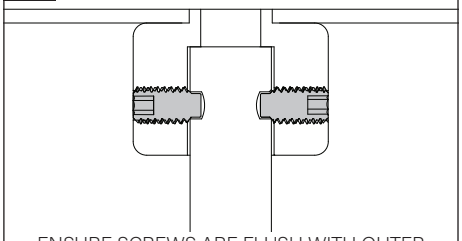


ENSURE SCREWS ARE FLUSH WITH OUTER DIAMETER OF ADAPTER SLEEVE UPON INSTALLATION. IF SCREW(S) WILL NOT INSTALL FLUSH, CHECK STEM HOLE SIZE AND ALIGNMENT.

9

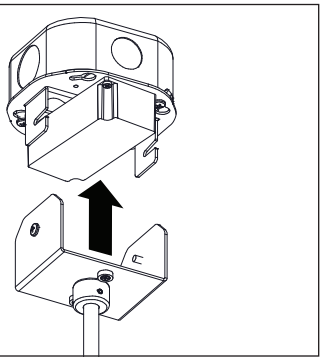


MAKE ELECTRICAL CONNECTION

10

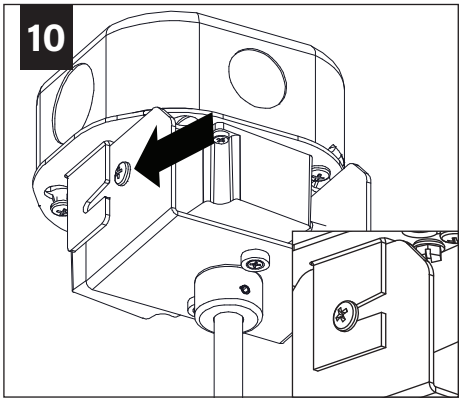


11

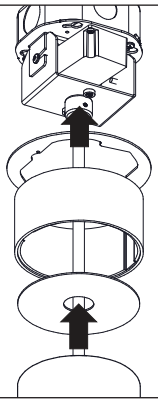

INSTALL CANOPY ASSEMBLY PARTS SIMULTANEOUSLY

12

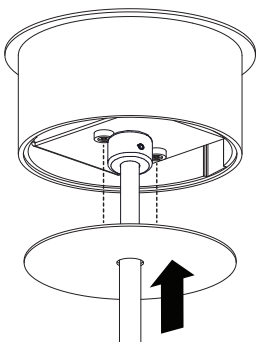


FACE PLATE HELD IN PLACE MAGNETICALLY

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


DRIVER SERVICE

TURN OFF POWER SOURCE PRIOR TO DRIVER SERVICE

1

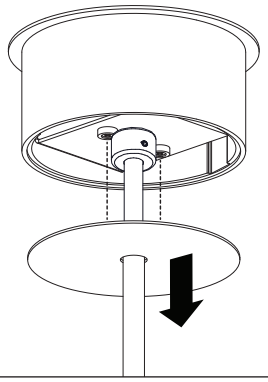


2

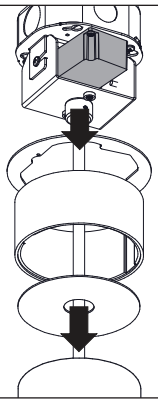


WALL WASH AIMING

1 X2

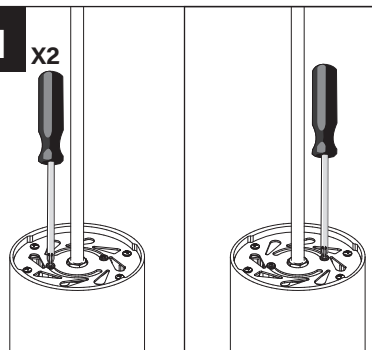


LOOSEN LOCKING SCREWS
(DO NOT REMOVE)

2

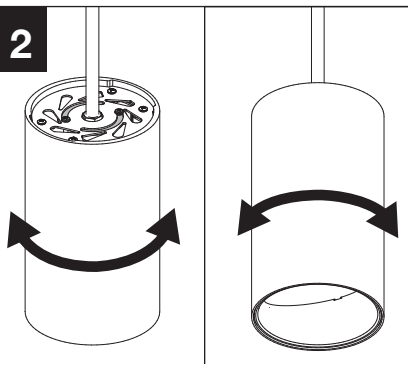

ROTATE CYLINDER TO DESIRED POSITION


3 X2

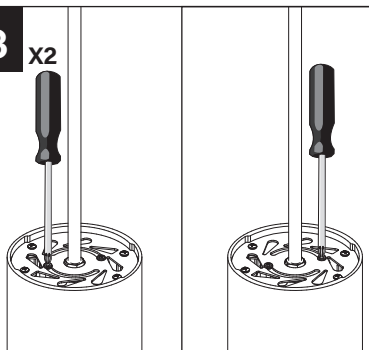


TIGHTEN LOCKING SCREWS
(DO NOT OVER TIGHTEN)

OPTIC SERVICE


1

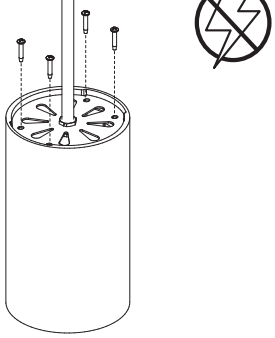


2

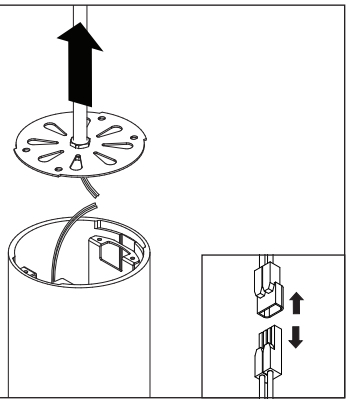


3

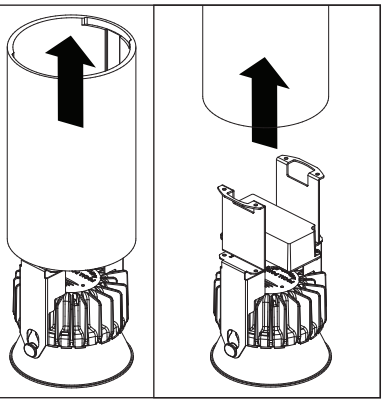


4

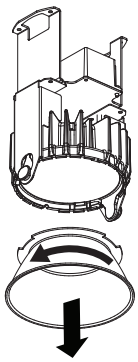

5 X3

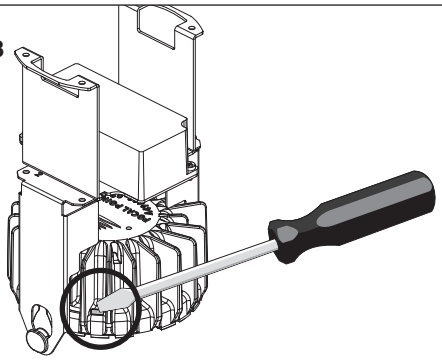


DEPRESS TABS TO RELEASE OPTIC

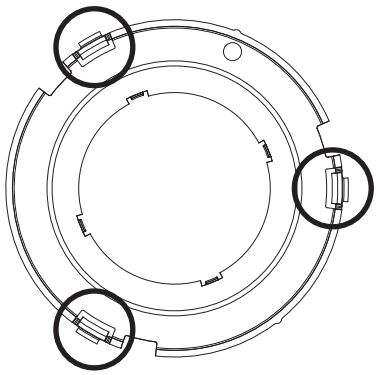



©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

6

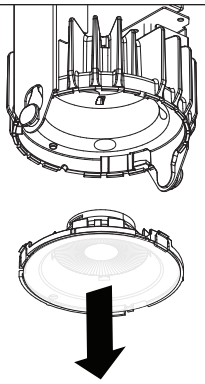


7

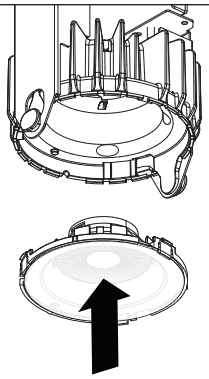

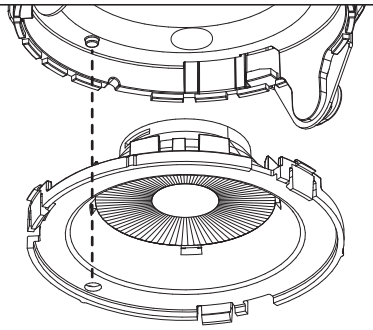


USE ALIGNMENT GUIDES ON OPTIC ASSEMBLY AND LED MODULE FOR PROPER INSTALLATION

8

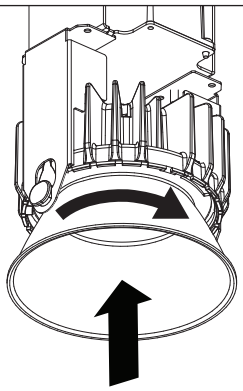


8b

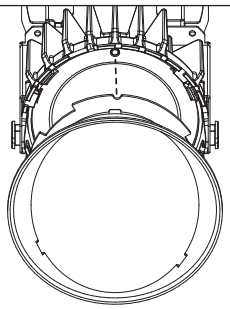


ALIGN NOTCH ON REFLECTOR WITH ALIGNMENT GUIDE ON LED MODULE/OPTIC

WALL WASH REFLECTOR ONLY


9

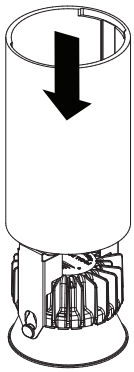

10

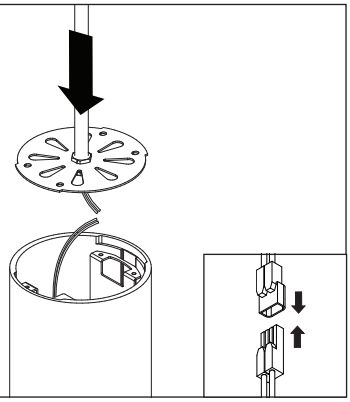

11

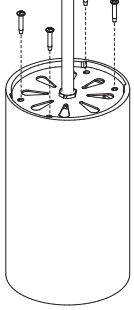

HAND TIGHTEN ONLY

DO NOT OVER TIGHTEN

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

EMERGENCY

SEE BATTERY MANUFACTURER INSTRUCTIONS


EMERGENCY MAXIMUM MOUNTING HEIGHT:

CD & WH REFLECTORS - 17.1'

WD & BK REFLECTORS - 15.1'


1

HARDWARE BY OTHERS

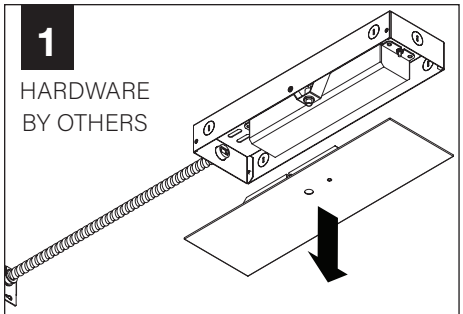


SECURE TO STRUCTURE ABOVE

2

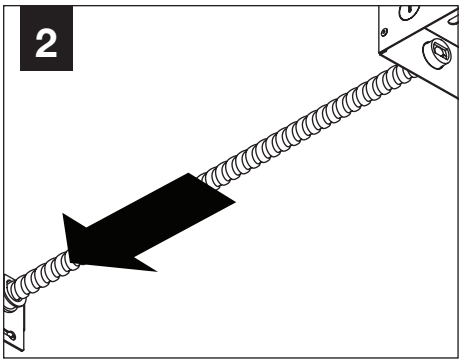


MAKE ELECTRICAL CONNECTION

3

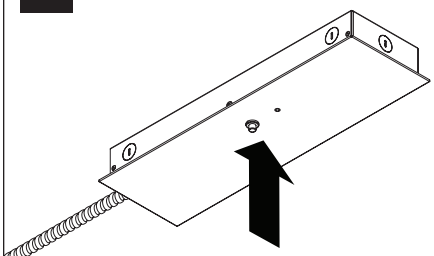

4

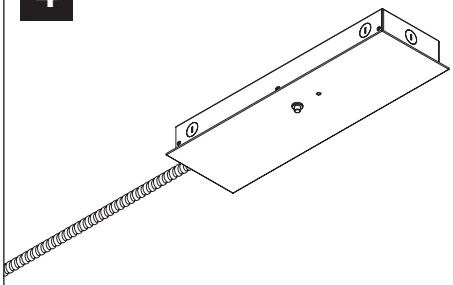

PROCEED TO LUMINAIRE INSTALLATION

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference