ID+ 3.5" Pure Cylinder - Stem Mount

FLCY3N-RD-4H | FLCY3N-RD-7H- Power Canopy

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS

POWER OFF

POWER ON

COMPONENT KEY

STEM MOUNT

Shipped Assembled

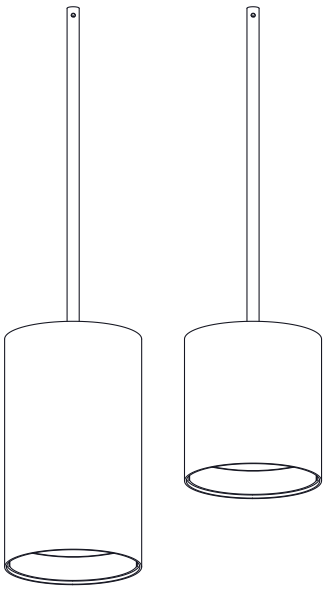

7" HOUSING HEIGHT

4" HOUSING HEIGHT

DECORATIVE POWER CANOPY

POWER CANOPY ASSEMBLY COMPONENTS INCUDED

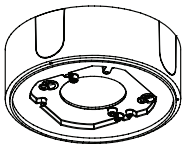

DECORATIVE J-BOX COVER

MOUNTING SCREWS #72029

POWER CANOPY



J-BOX MOUNTING BRACKET

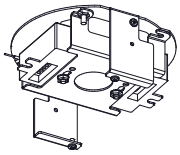

DRIVER CARRIAGE



STEM MOUNTING BRACKET (FIXED STEM)

MOUNTING BRACKET (SWIVEL STEM)

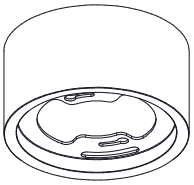

POWER CANOPY



STEM MOUNTING BRACKET (SWIVEL STEM)



FACE PLATE

SHIPPED INSTALLED

#8-32X5/16" HALF DOG NOSE SET SCREWS

4" OCTAGONAL J-BOX REQUIRED

J-BOX BY OTHERS

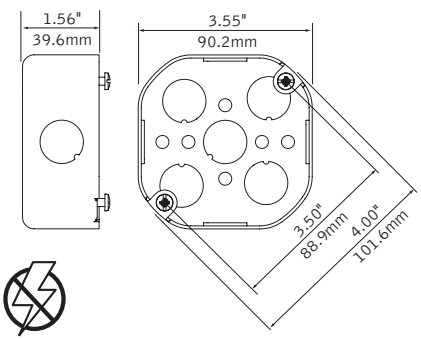

EMERGENCY

PRIOR TO LUMINAIRE INSTALLATION, SEE **PAGE 9** FOR EMERGENCY INSTALLATION INSTRUCTIONS.

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

SWIVEL STEM

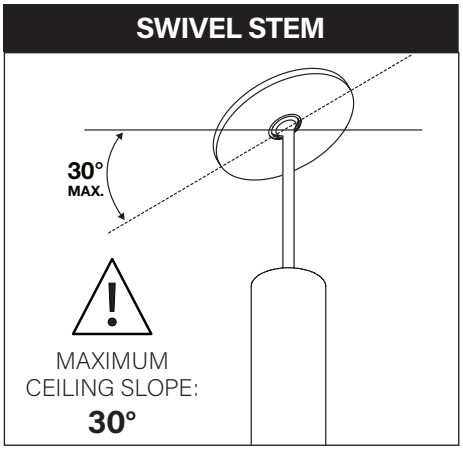

FIELD CUTTABLE SWIVEL STEM (OPTIONAL)

1

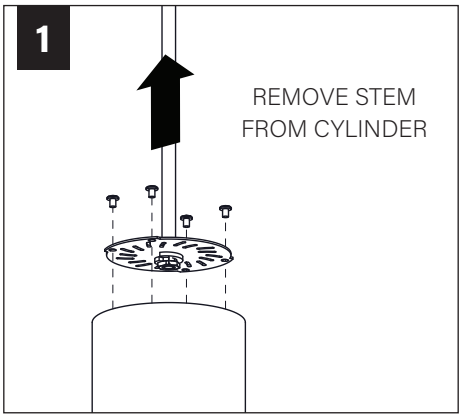

REMOVE STEM
FROM CYLINDER

2

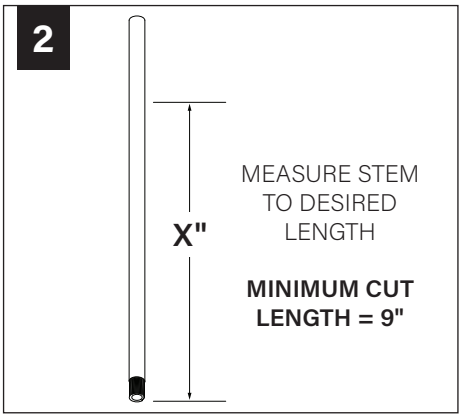

MEASURE STEM
TO DESIRED
LENGTH

**MINIMUM CUT
LENGTH = 9"**

3

CUT STEM
AND DEBURR
INSIDE EDGE

4

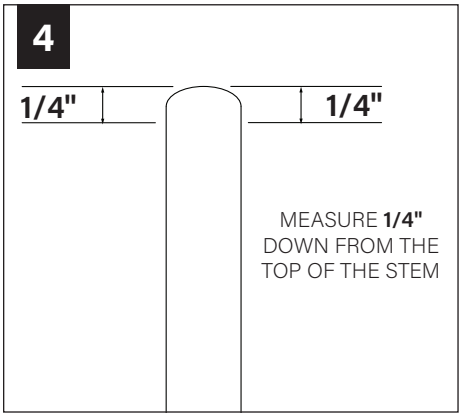

MEASURE **1/4"**
DOWN FROM THE
TOP OF THE STEM

5

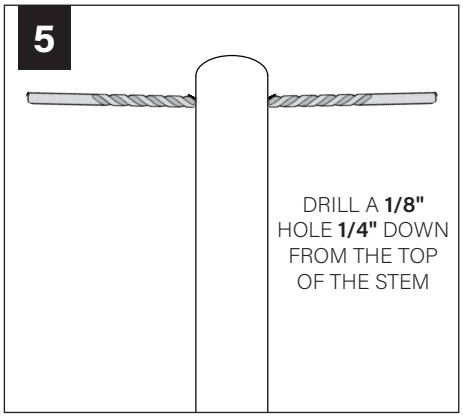

DRILL A **1/8"**
HOLE **1/4"** DOWN
FROM THE TOP
OF THE STEM

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

FIELD CUTTABLE FIXED STEM (OPTIONAL)

1

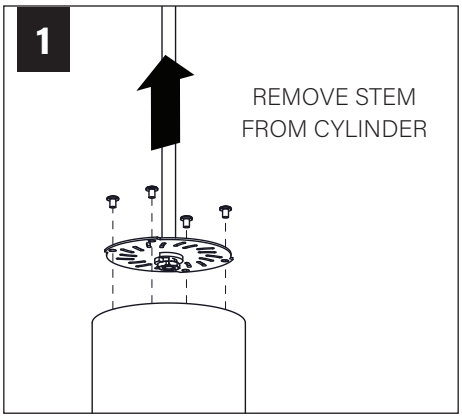

REMOVE STEM FROM CYLINDER

2

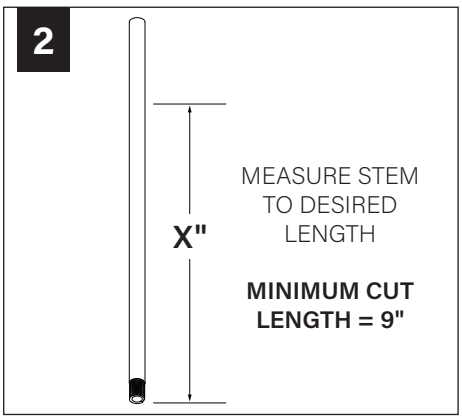

MEASURE STEM TO DESIRED LENGTH

MINIMUM CUT LENGTH = 9"

3

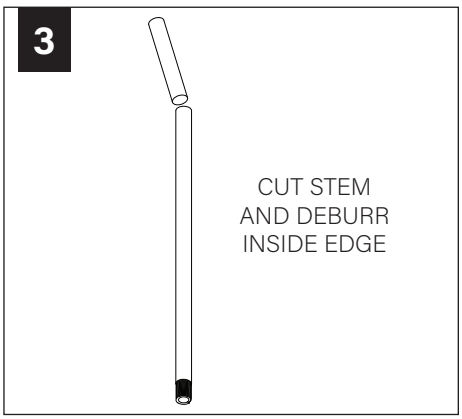

CUT STEM AND DEBURR INSIDE EDGE

4

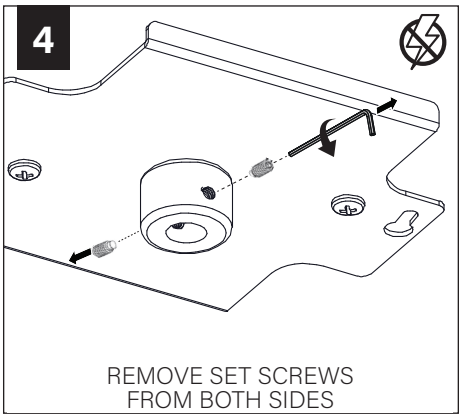

REMOVE SET SCREWS FROM BOTH SIDES

5

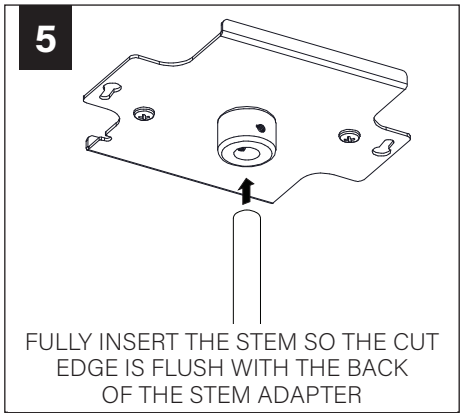

FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

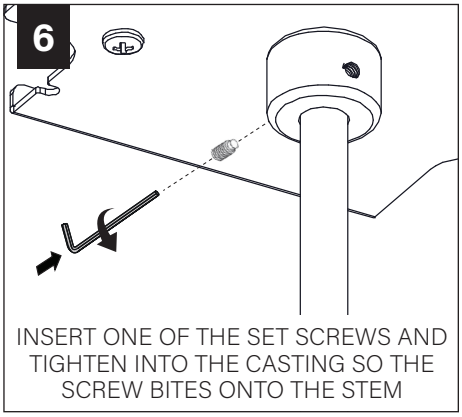

INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM

7

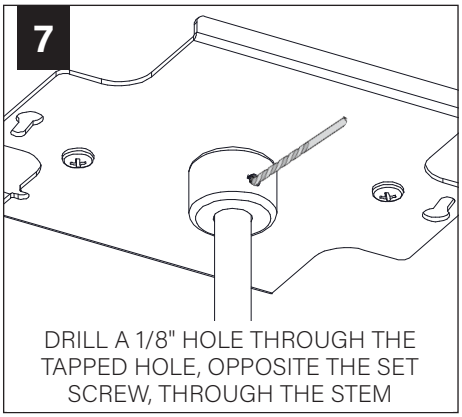

DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

8

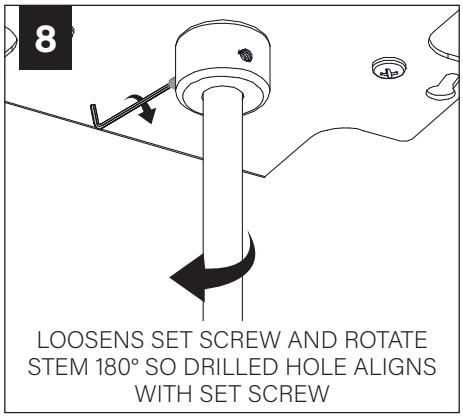

LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

9

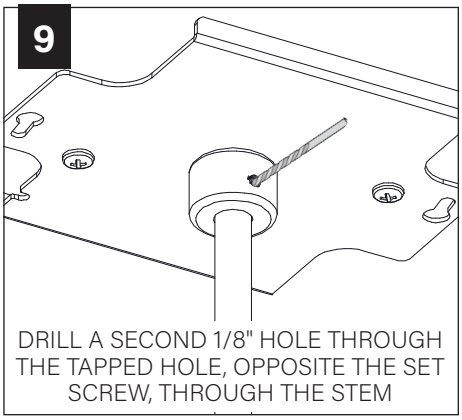

DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

10

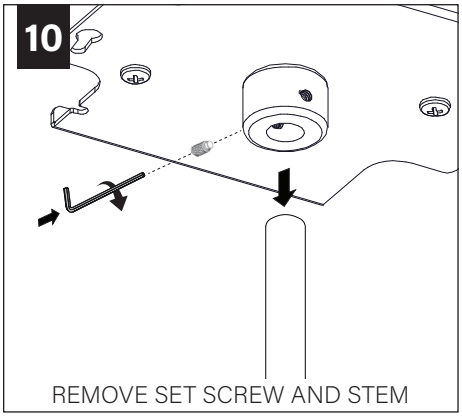

REMOVE SET SCREW AND STEM

11

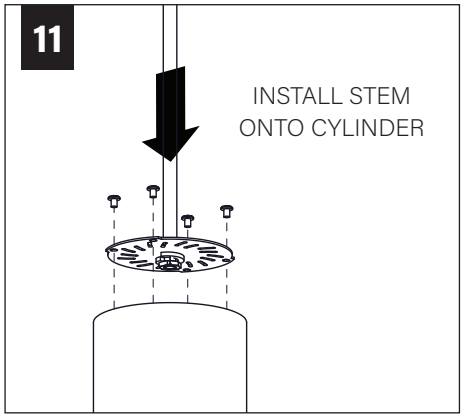

INSTALL STEM ONTO CYLINDER

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

DECORATIVE POWER CANOPY

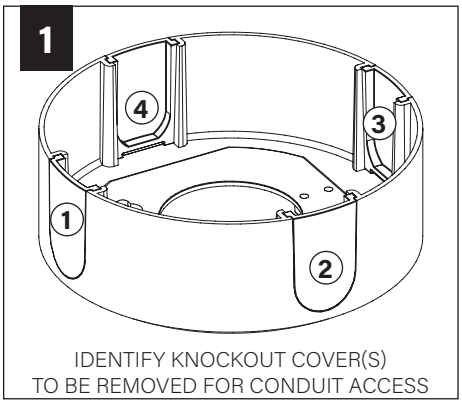

IDENTIFY KNOCKOUT COVER(S)
TO BE REMOVED FOR CONDUIT ACCESS

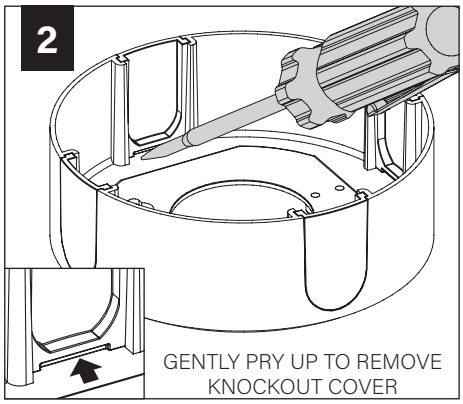

GENTLY PRY UP TO REMOVE
KNOCKOUT COVER

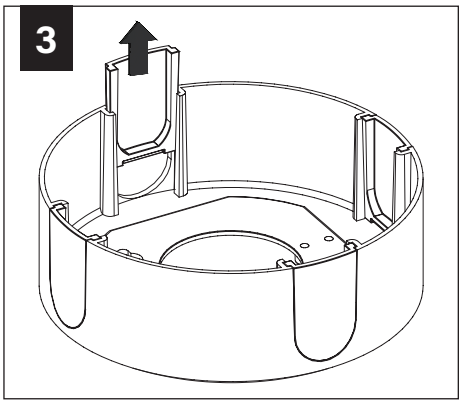

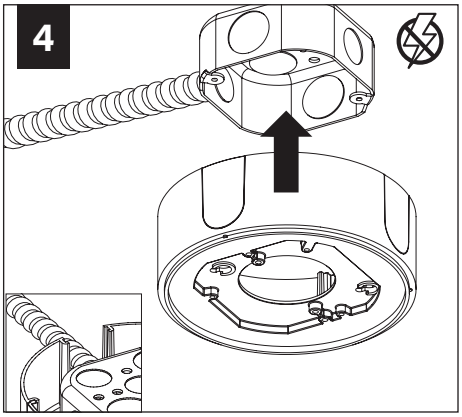

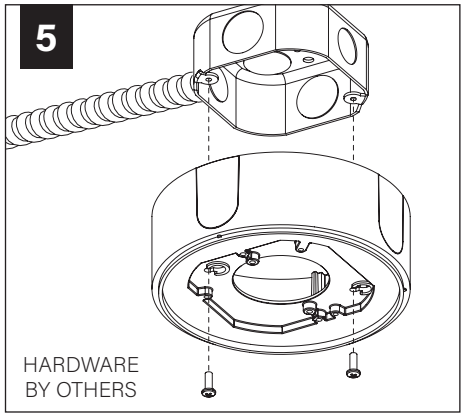

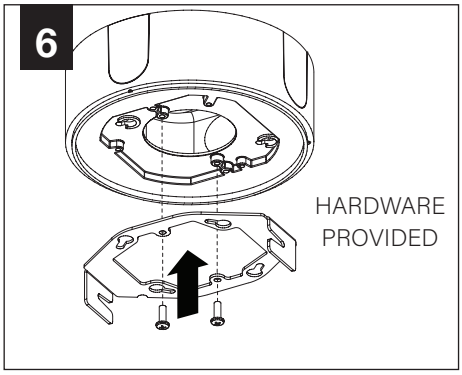

CONTINUE: **POWER CANOPY STEP 2**

POWER CANOPY

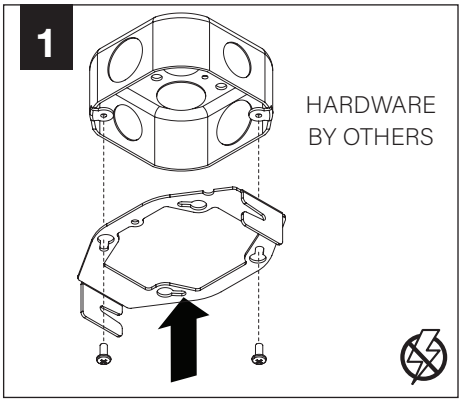

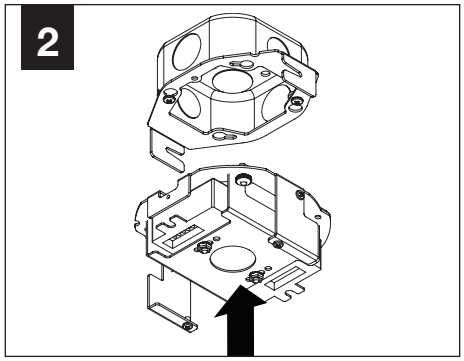

MAKE ELECTRICAL CONNECTION

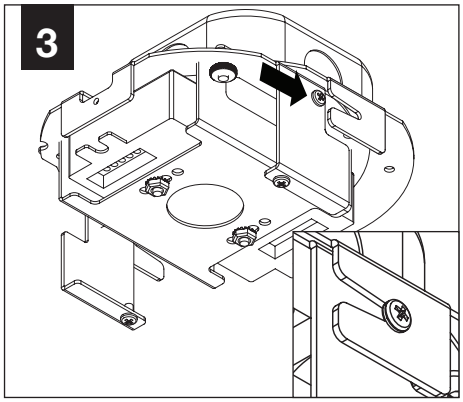

SWIVEL STEM

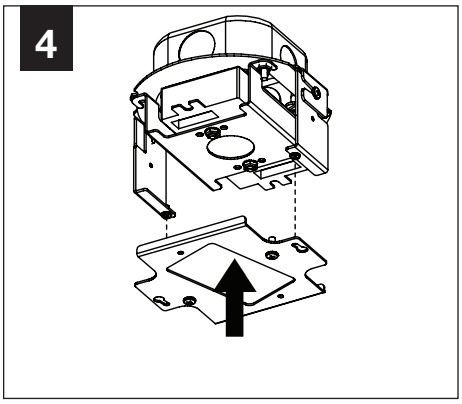

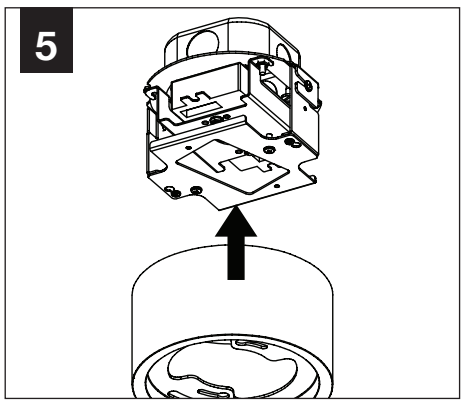

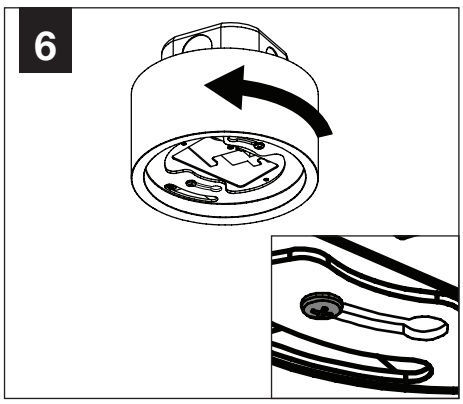

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

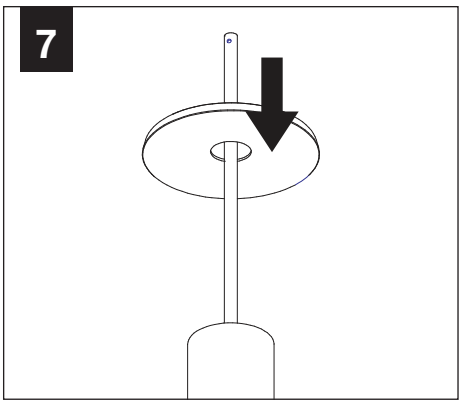

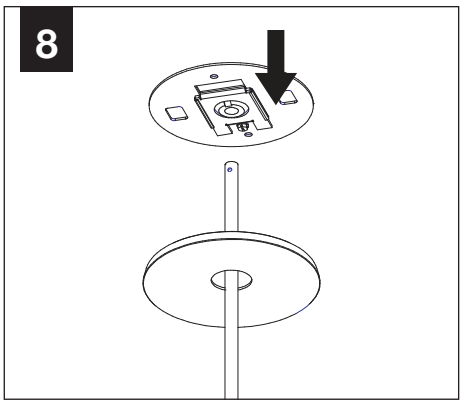

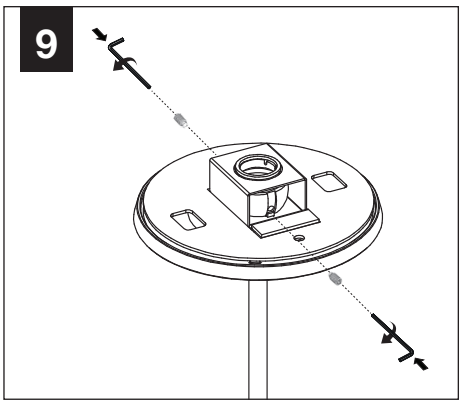

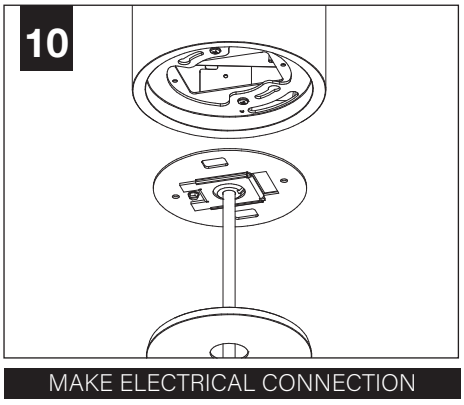

MAKE ELECTRICAL CONNECTION

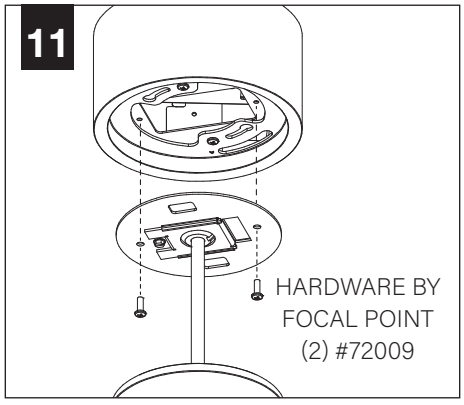

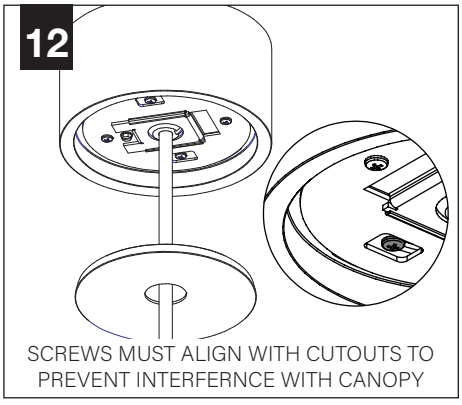

SCREWS MUST ALIGN WITH CUTOUTS TO PREVENT INTERFERNCE WITH CANOPY

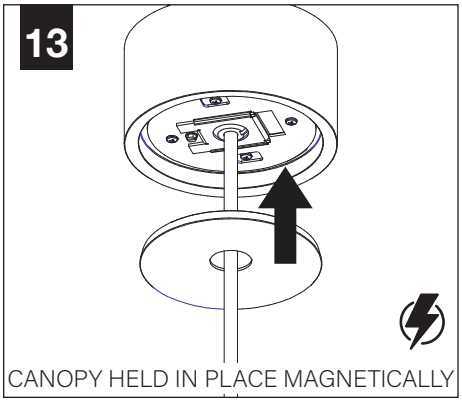

CANOPY HELD IN PLACE MAGNETICALLY

FIXED STEM

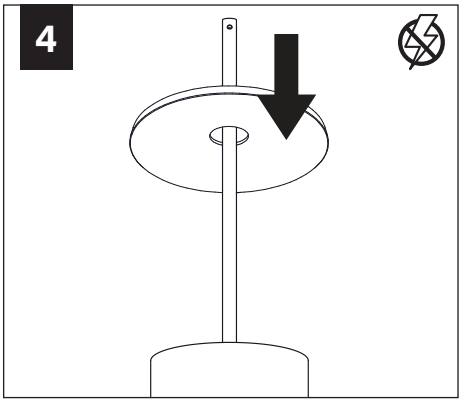

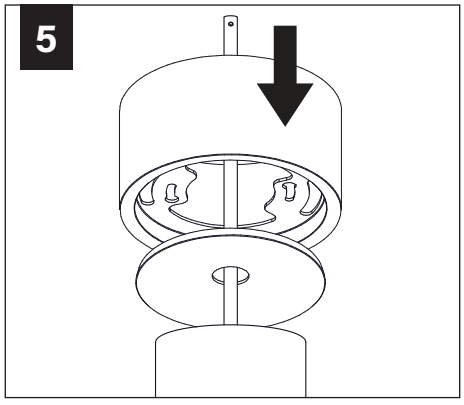

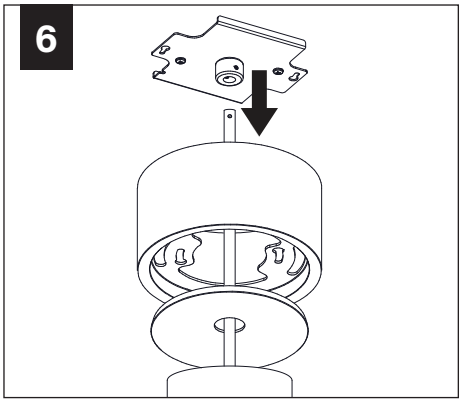

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

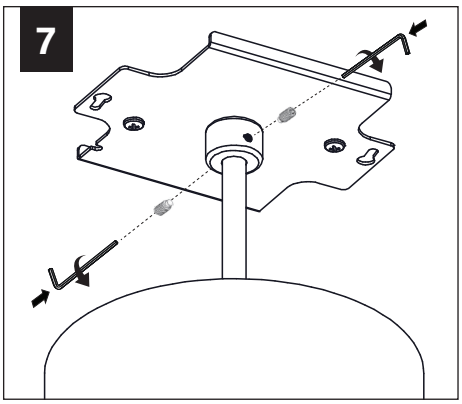

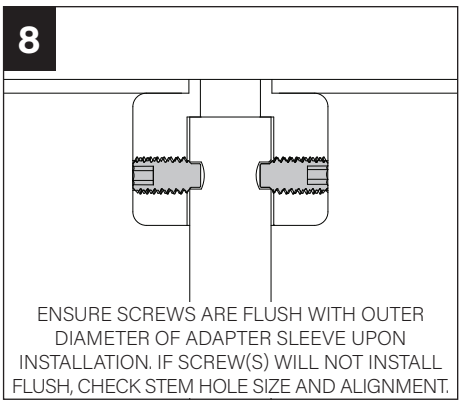

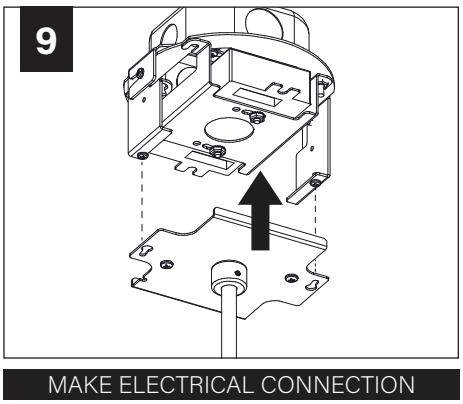

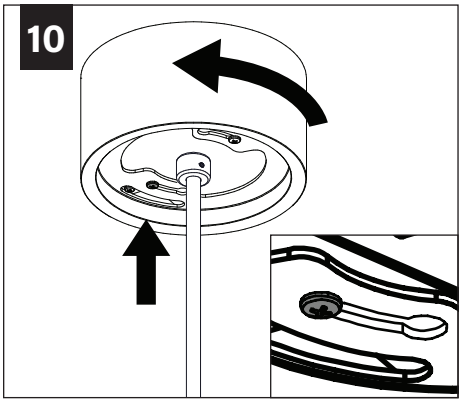

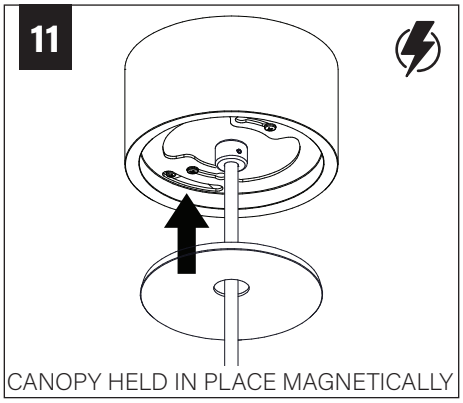

FIXED STEM DRIVER SERVICE

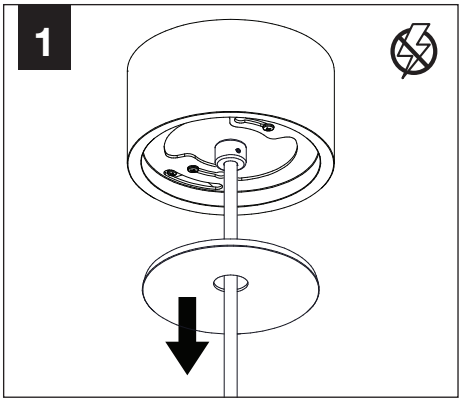

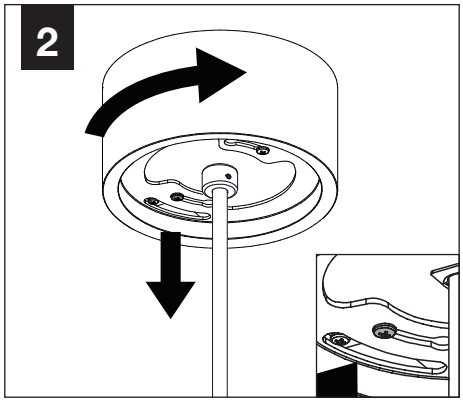

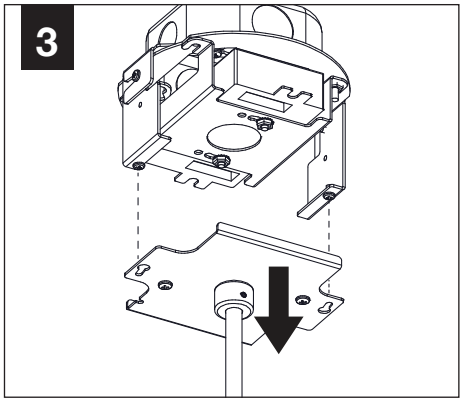

SWIVEL STEM DRIVER SERVICE

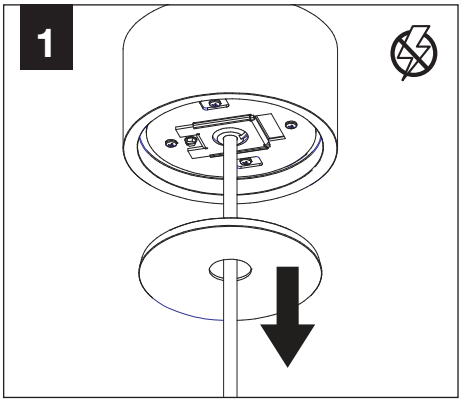

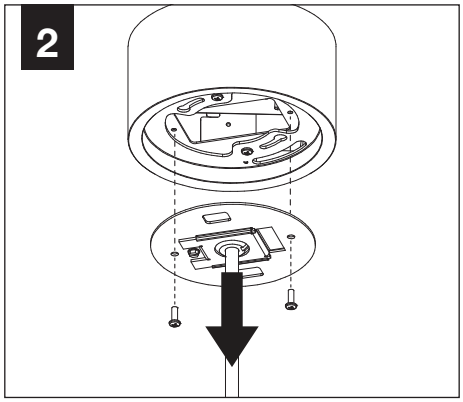

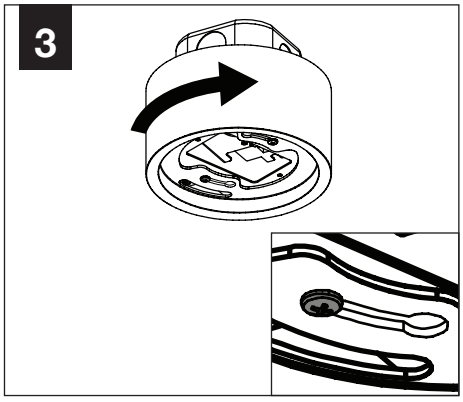

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

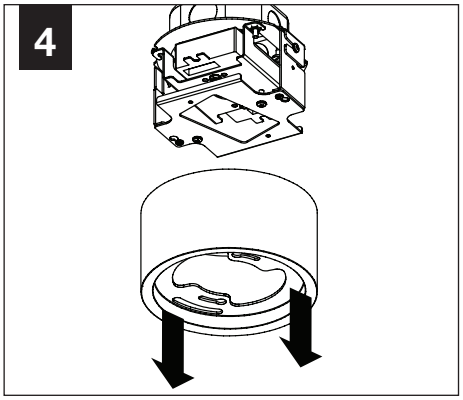

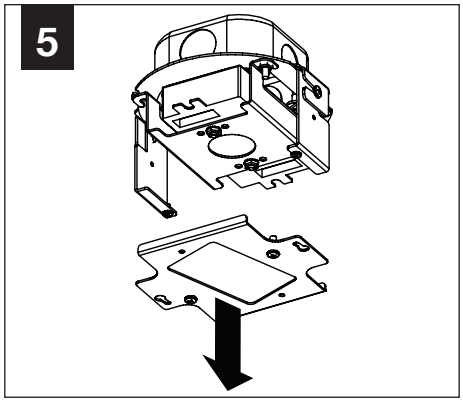

WALL WASH AIMING

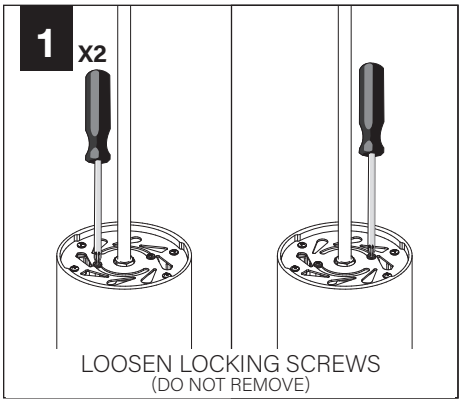

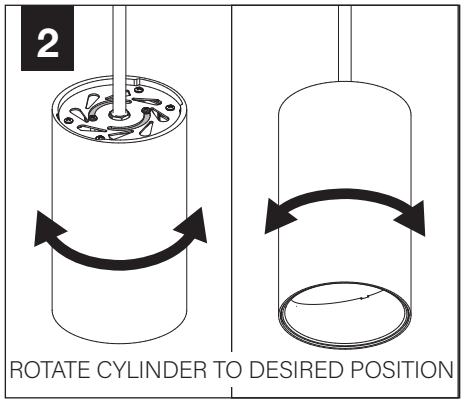

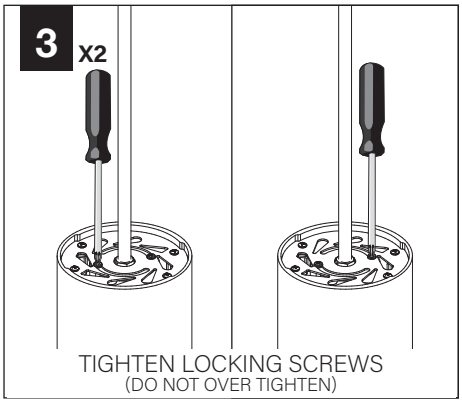

OPTIC SERVICE

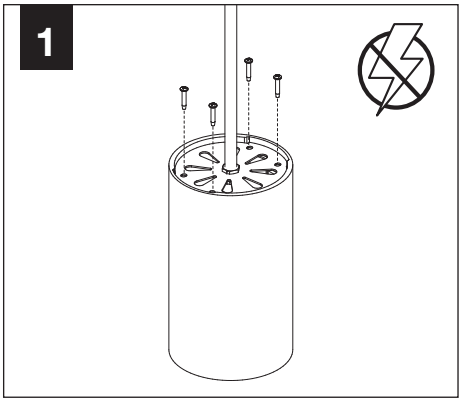

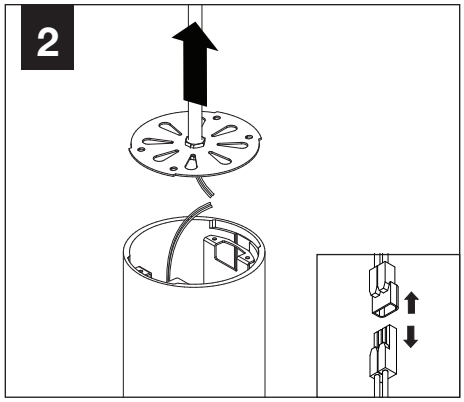

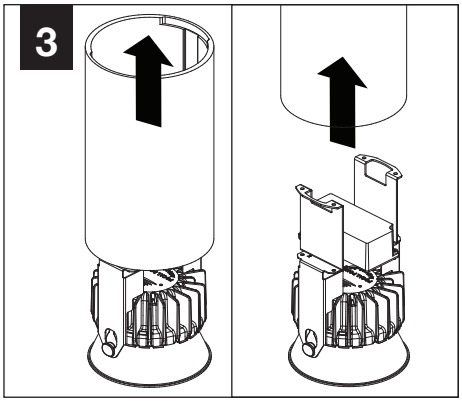

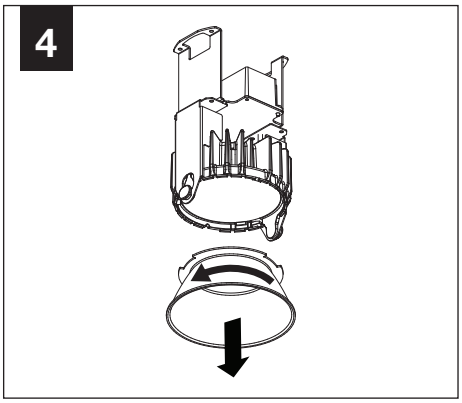

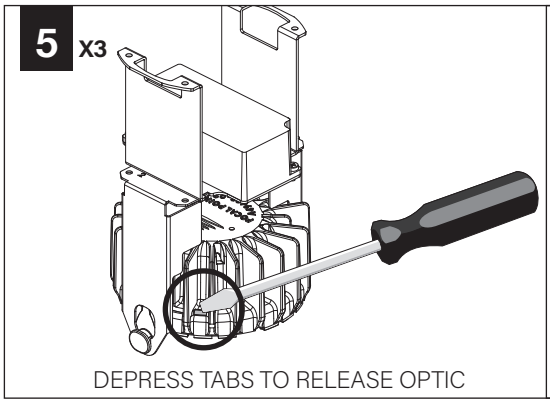

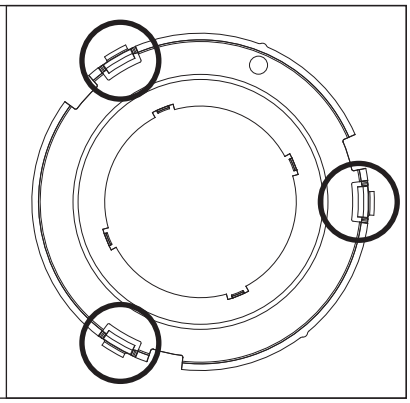

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

6

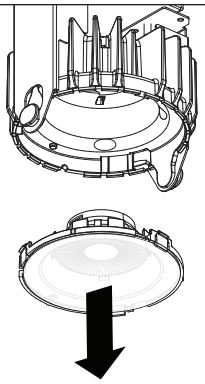

7

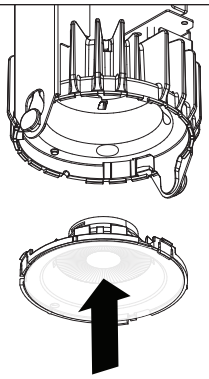

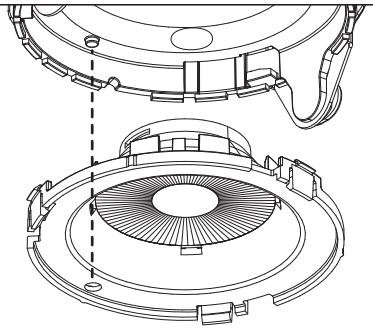

USE ALIGNMENT GUIDES ON OPTIC ASSEMBLY AND LED MODULE FOR PROPER INSTALLATION

8

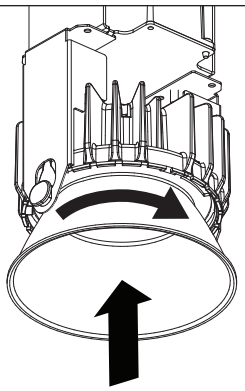

8b

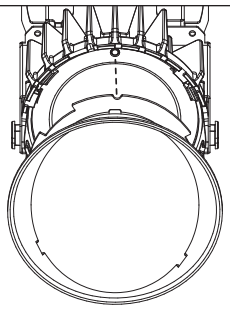

ALIGN NOTCH ON REFLECTOR WITH ALIGNMENT GUIDE ON LED MODULE/OPTIC

WALL WASH REFLECTOR ONLY

9

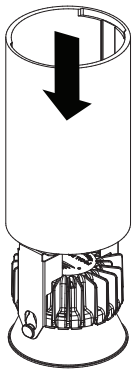

10

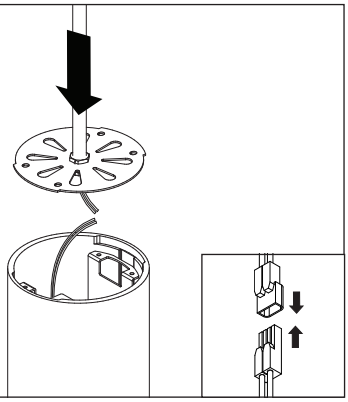

11

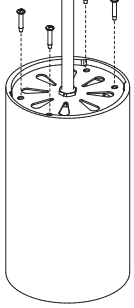

⚠

HAND TIGHTEN ONLY

DO NOT OVER TIGHTEN

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

EMERGENCY

SEE BATTERY MANUFACTURER INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT:

CD & WH REFLECTORS - 17.1'

WD & BK REFLECTORS - 15.1'

1

HARDWARE BY OTHERS

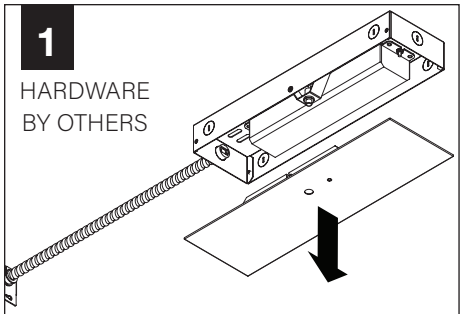

SECURE TO STRUCTURE ABOVE

2

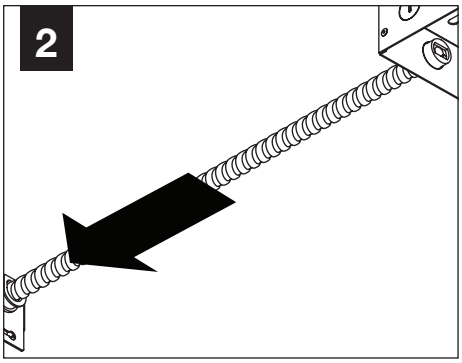

MAKE ELECTRICAL CONNECTION

3

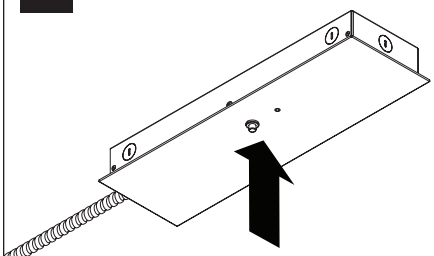

4

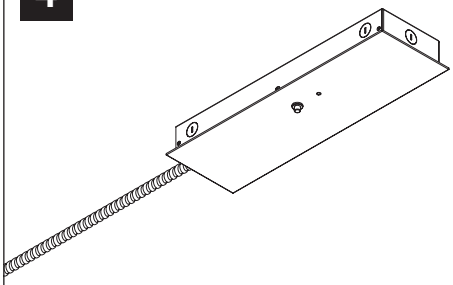

PROCEED TO LUMINAIRE INSTALLATION

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference