

# ID+ Cylinder Surface Mount

FLCY3 | FLCY4



FOCAL POINT®



## BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

## INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



POWER OFF




POWER ON




LEVEL


## COMPONENT KEY

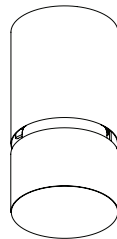

### SHALLOW CANOPY

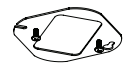


J-BOX  
MOUNTING  
BRACKET

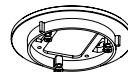


SHALLOW  
CANOPY


### POWER CANOPY

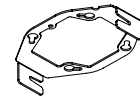


J-BOX  
MOUNTING  
BRACKET

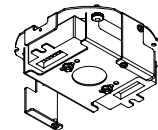


DRIVER  
CARRIAGE

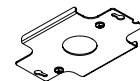

POWER CORD  
MOUNTING  
BRACKET

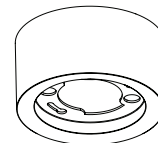

POWER  
CANOPY

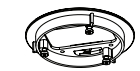


MOUNTING  
BRACKET



LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING.  
ALL GRID LUMINAIRE MUST BE SECURED TO STRUCTURE ABOVE.

## INSTALL 4" OCTAGONAL J-BOX (BY OTHERS)

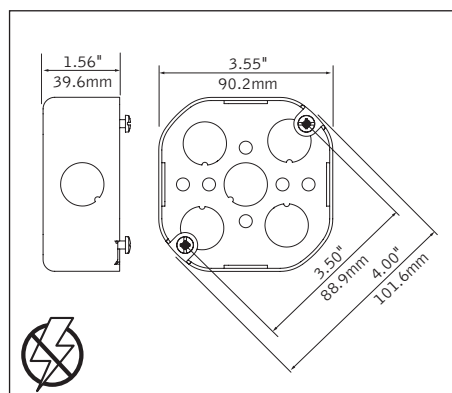

## EMERGENCY




PRIOR TO LUMINAIRE INSTALLATION,  
SEE **PAGE 5** FOR EMERGENCY  
INSTALLATION INSTRUCTIONS.


## SHALLOW CANOPY INSTALLATION

### 3.5" CYLINDER

1a

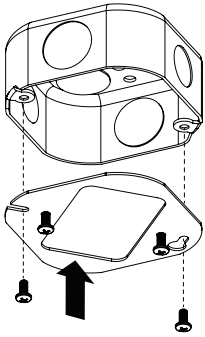


1b

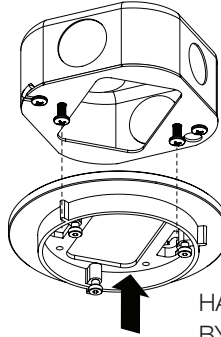


HARDWARE  
BY OTHERS

### 4.5" CYLINDER

2

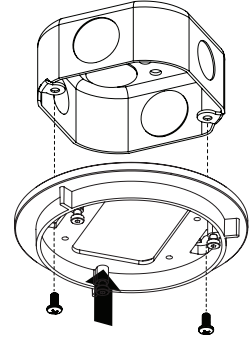


3

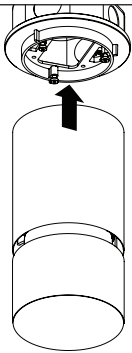


MAKE ELECTRICAL CONNECTION

4

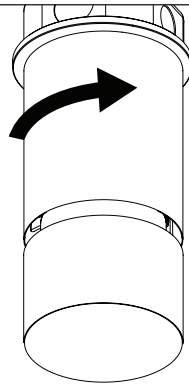


5

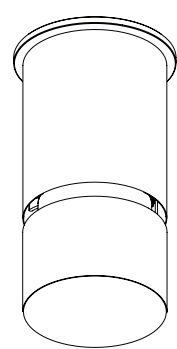


## SHALLOW CANOPY DRIVER SERVICE


1

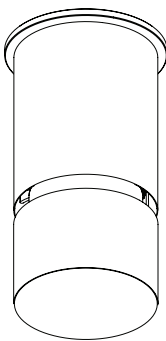


2

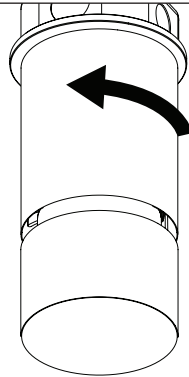


3

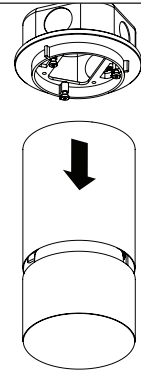











4

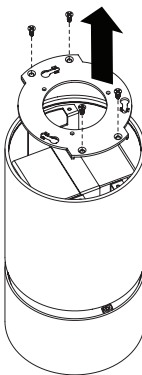








5

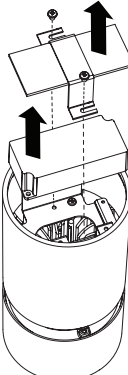




## POWER CANOPY INSTALLATION

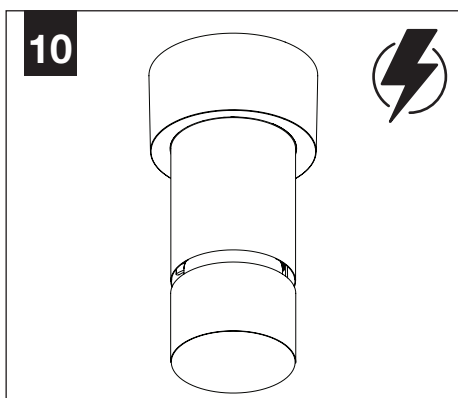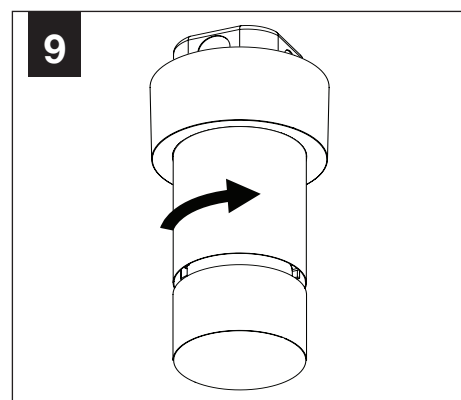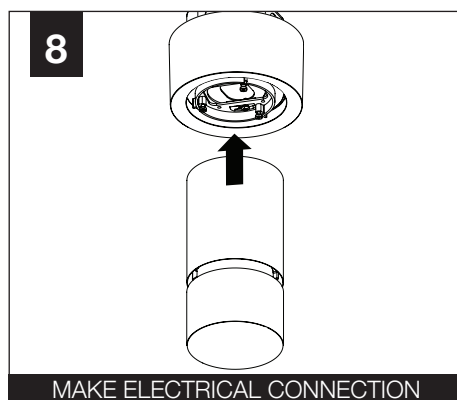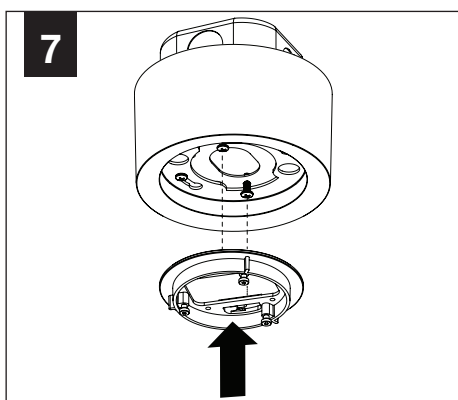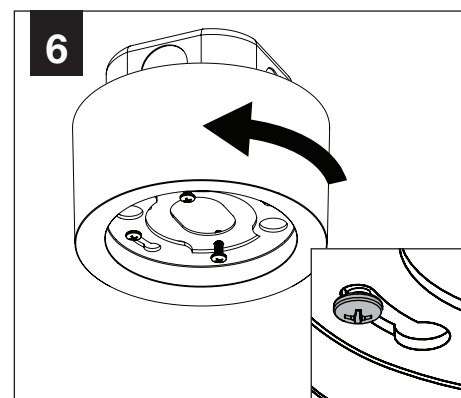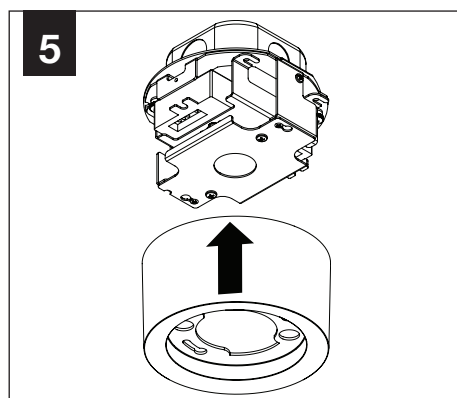
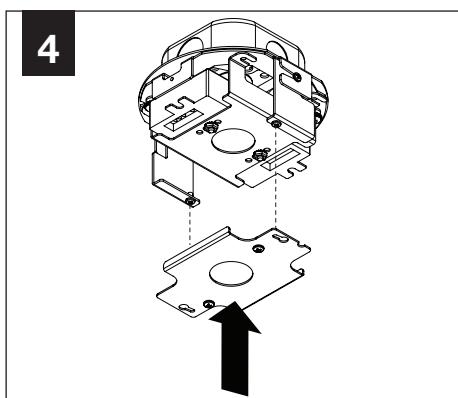
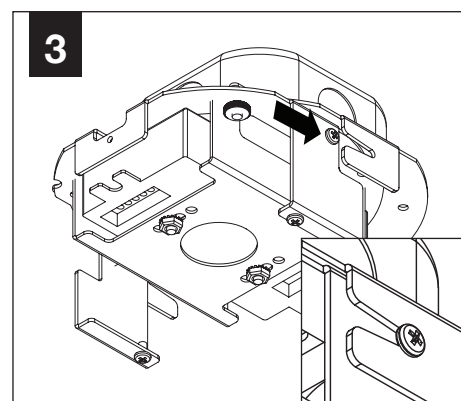
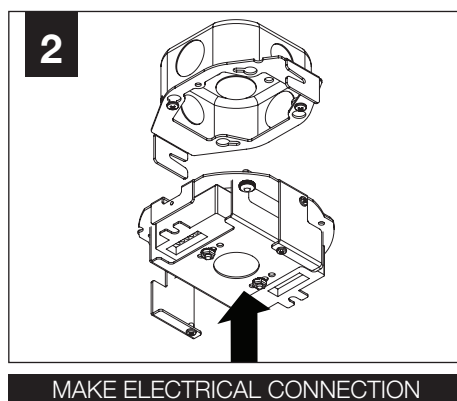
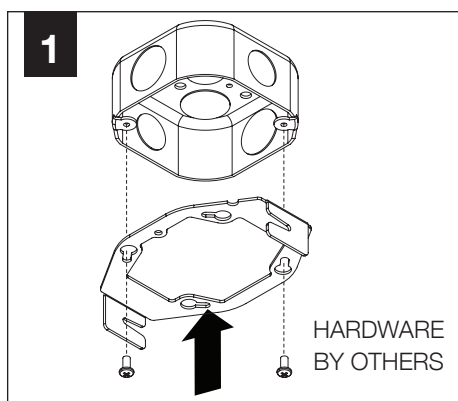


## POWER CANOPY DRIVER SERVICE

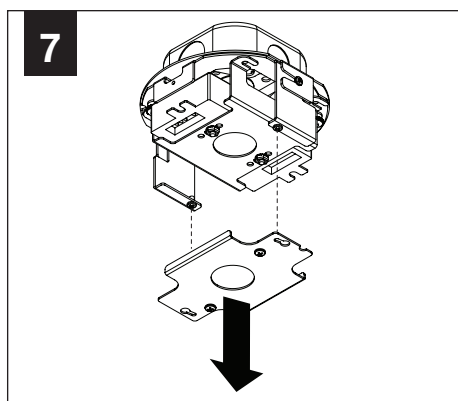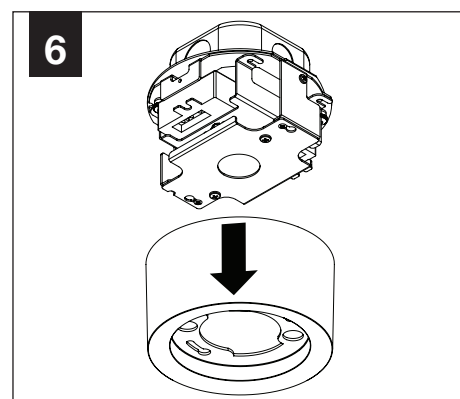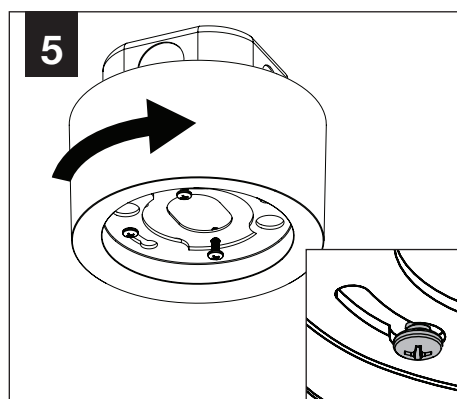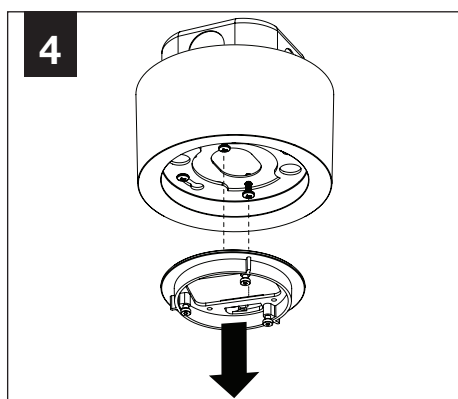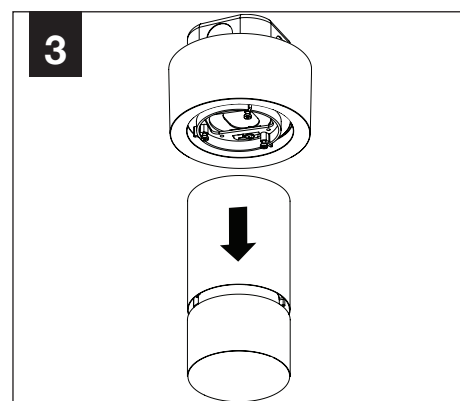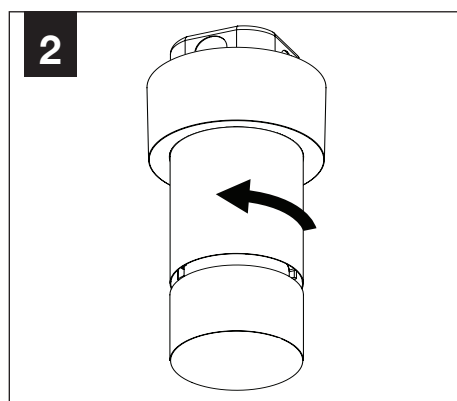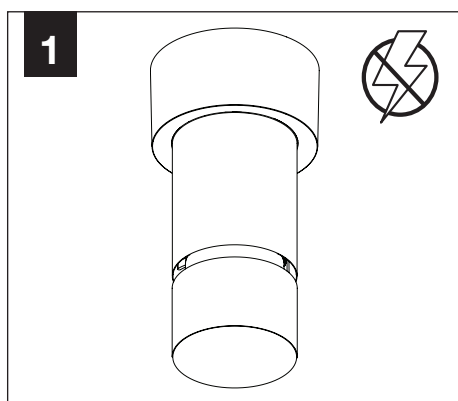

## OPTIC SERVICE

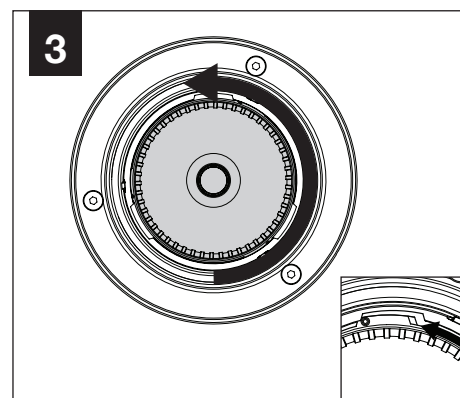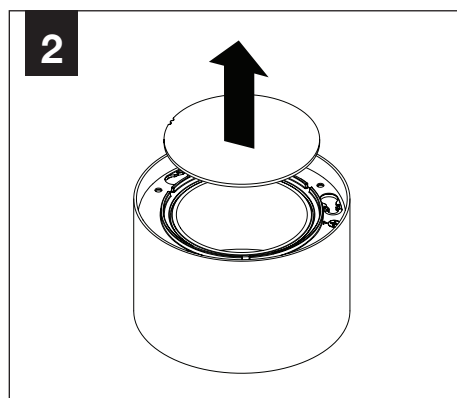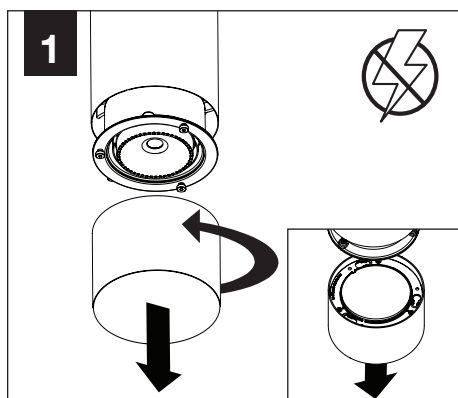

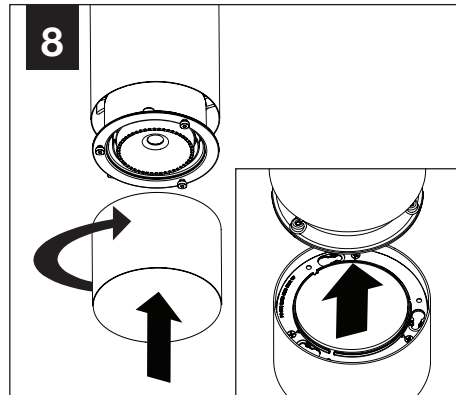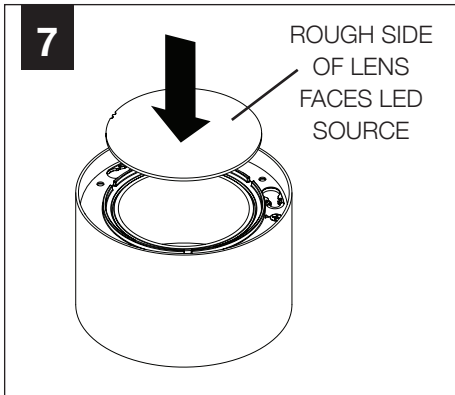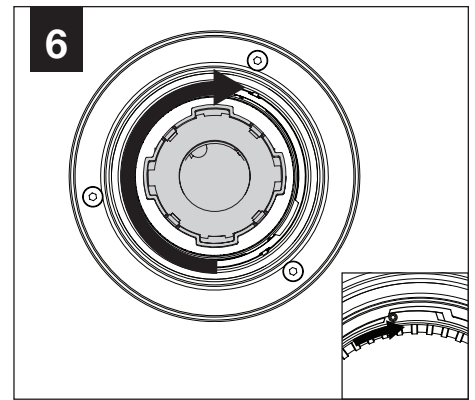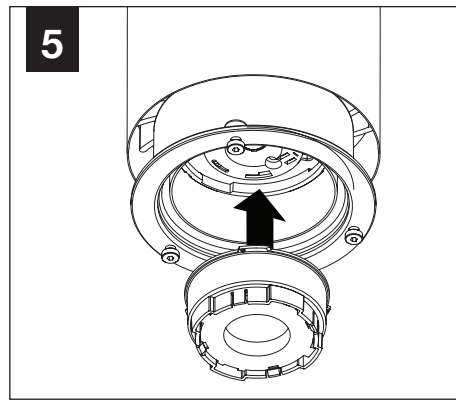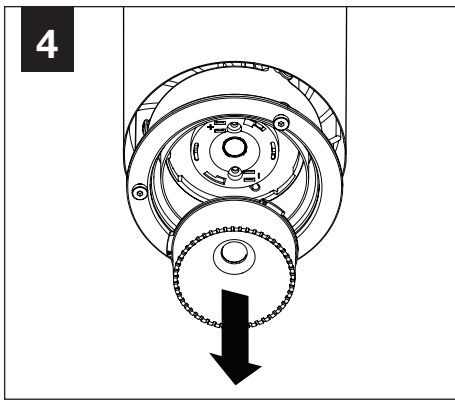

## EMERGENCY







SEE BATTERY MANUFACTURER  
INSTRUCTIONS

**EMERGENCY MAXIMUM MOUNTING HEIGHT:**

**3.5" CYLINDERS - 16.98'**

**4.5" CYLINDERS - 16'**

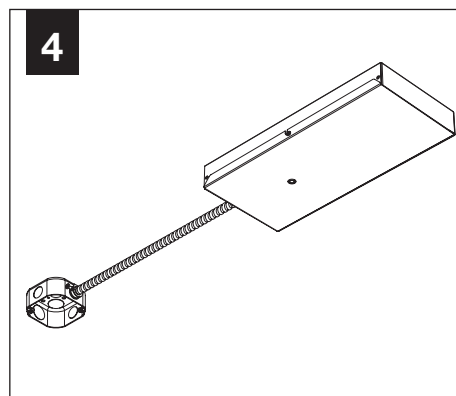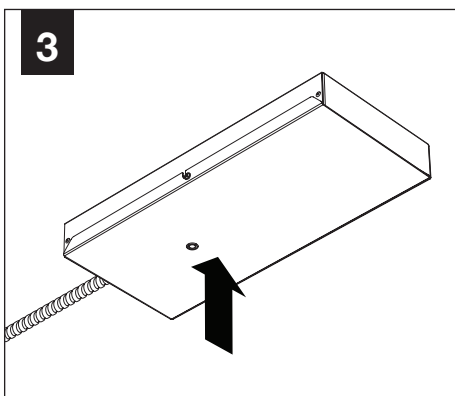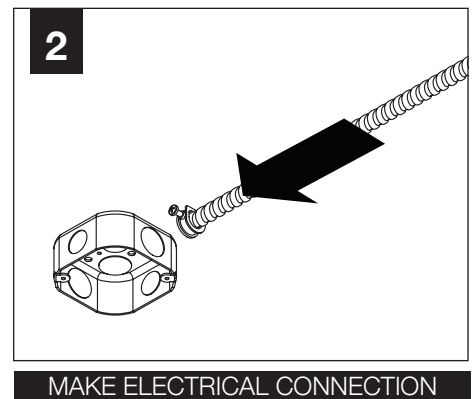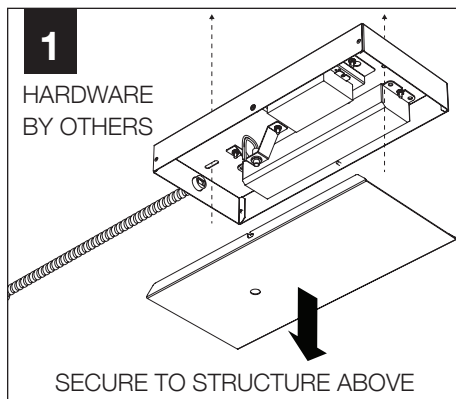

PROCEED TO  
LUMINAIRE INSTALLATION  
**SHALLOW CANOPY, PAGE 2**  
**POWER CANOPY, PAGE 3**