ID+ Cylinder - Stem Mount

FLCY2 | FLCY3 | FLCY4 - Power Canopy

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS


POWER OFF

POWER ON

COMPONENT KEY


STEM MOUNT

Shipped Assembled

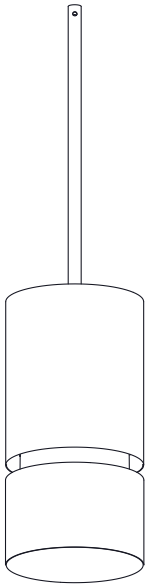

DECORATIVE POWER CANOPY

POWER CANOPY ASSEMBLY COMPONENTS INCUDED

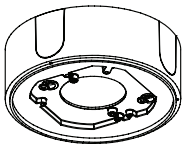


DECORATIVE J-BOX COVER




MOUNTING SCREWS #72029


POWER CANOPY



J-BOX MOUNTING BRACKET

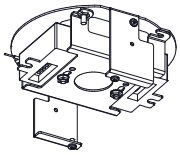


DRIVER CARRIAGE




STEM MOUNTING BRACKET (FIXED STEM)




MOUNTING BRACKET (SWIVEL STEM)

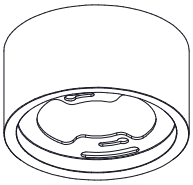

POWER CANOPY



STEM MOUNTING BRACKET (SWIVEL STEM)



FACE PLATE


SHIPPED INSTALLED



#8-32X5/16" HALF DOG NOSE SET SCREWS

4" OCTAGONAL J-BOX REQUIRED

J-BOX BY OTHERS

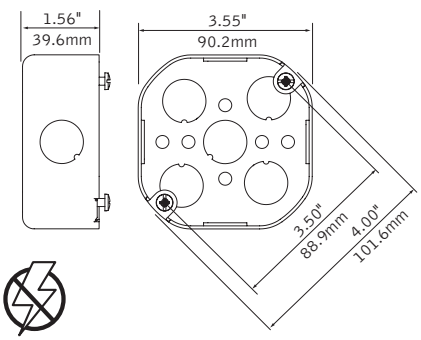


EMERGENCY

PRIOR TO LUMINAIRE INSTALLATION, SEE **PAGE 8** FOR EMERGENCY INSTALLATION INSTRUCTIONS.


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

SWIVEL STEM

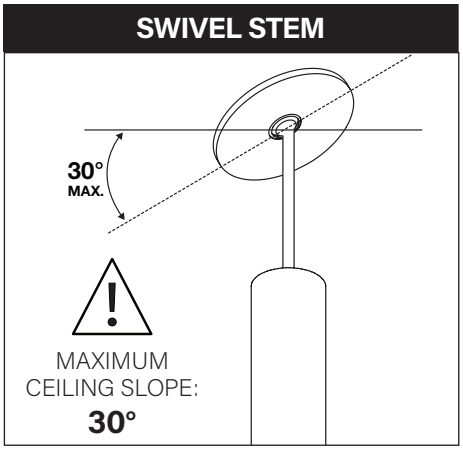


FIELD CUTTABLE SWIVEL STEM (OPTIONAL)

1

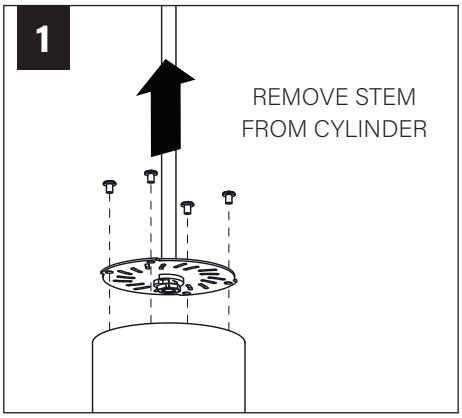

REMOVE STEM
FROM CYLINDER

2

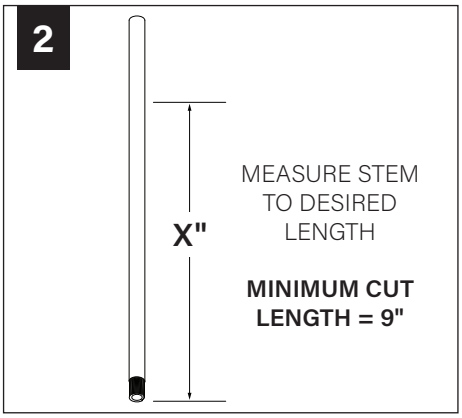

MEASURE STEM
TO DESIRED
LENGTH


**MINIMUM CUT
LENGTH = 9"**

3




CUT STEM
AND DEBURR
INSIDE EDGE

4

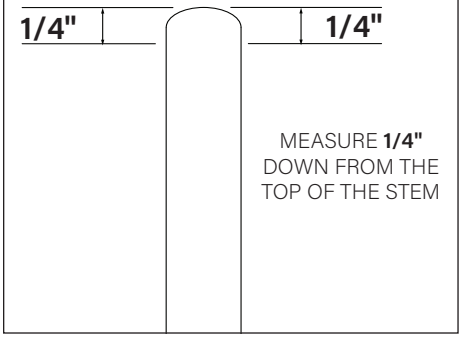

MEASURE **1/4"**
DOWN FROM THE
TOP OF THE STEM

5

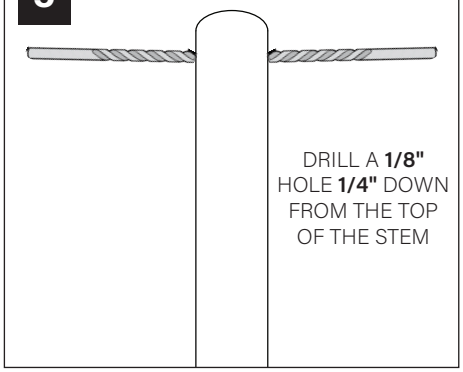


DRILL A **1/8"**
HOLE **1/4"** DOWN
FROM THE TOP
OF THE STEM

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


FIELD CUTTABLE FIXED STEM (OPTIONAL)

1

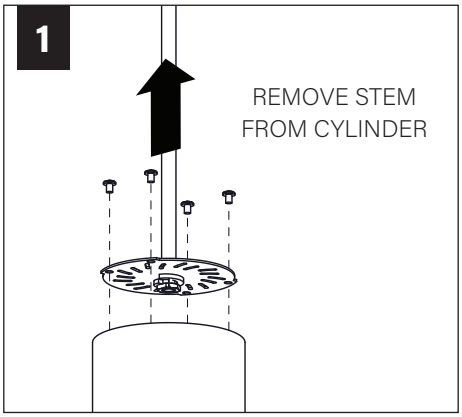

REMOVE STEM FROM CYLINDER

2

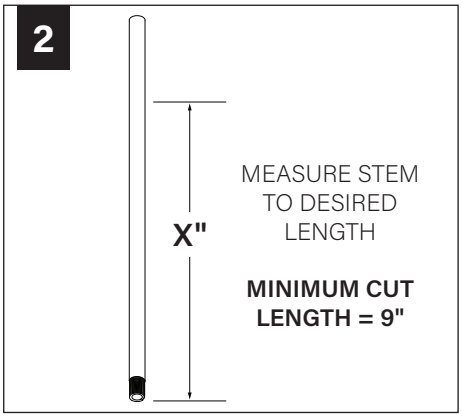

MEASURE STEM TO DESIRED LENGTH


MINIMUM CUT LENGTH = 9"

3




CUT STEM AND DEBURR INSIDE EDGE

4

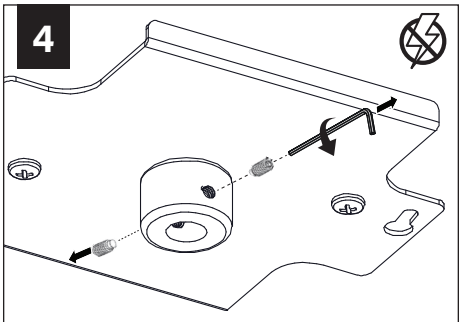


REMOVE SET SCREWS FROM BOTH SIDES

5

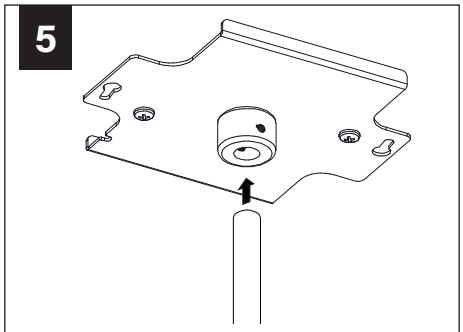


FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

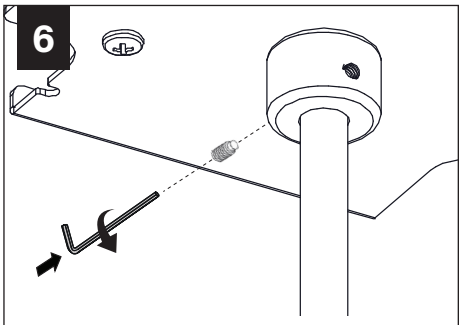


INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM

7

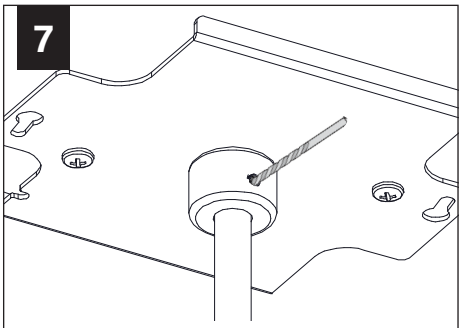


DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

8

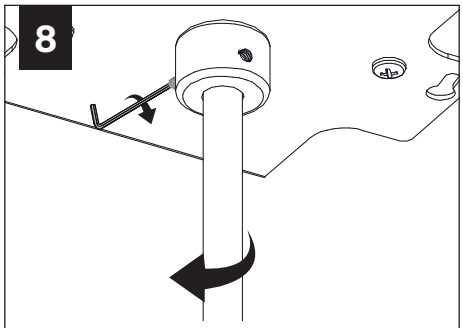


LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

9

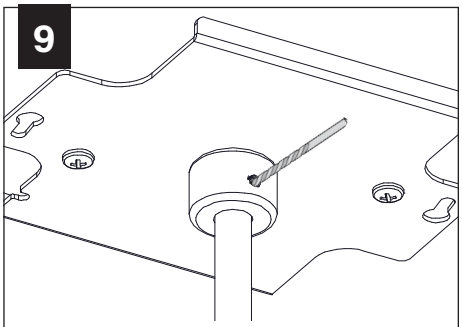


DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

10

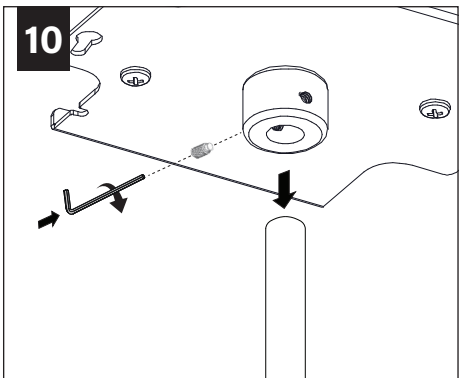

REMOVE SET SCREW AND STEM


11

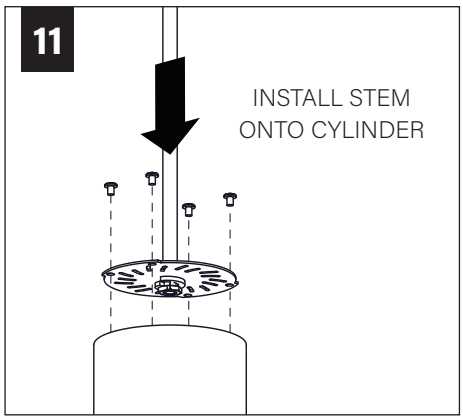


INSTALL STEM ONTO CYLINDER

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


DECORATIVE POWER CANOPY

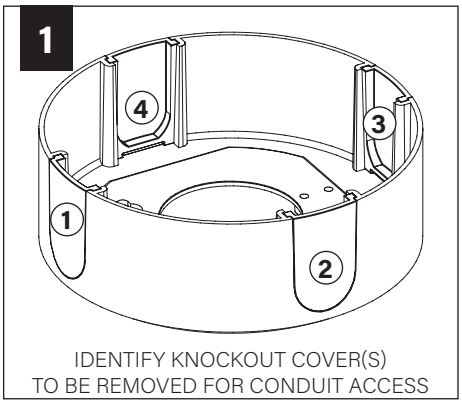



IDENTIFY KNOCKOUT COVER(S)
TO BE REMOVED FOR CONDUIT ACCESS

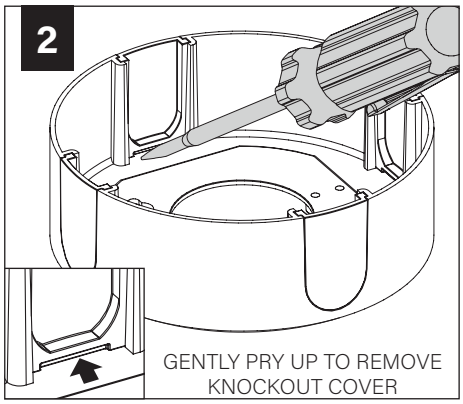


GENTLY PRY UP TO REMOVE
KNOCKOUT COVER

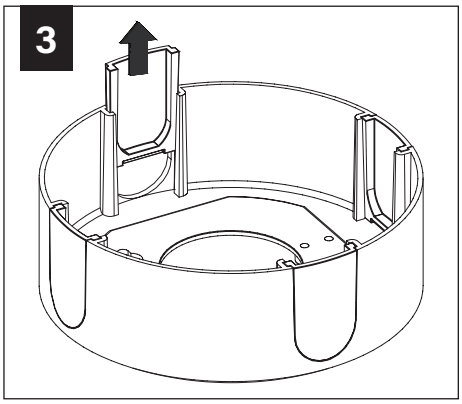

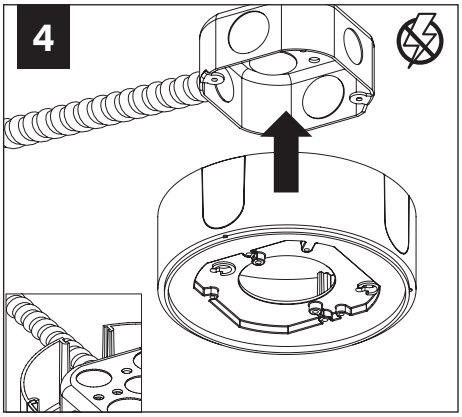


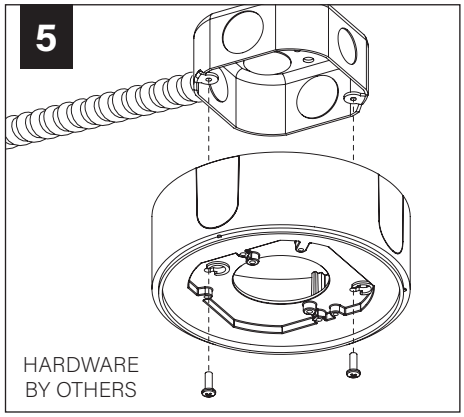


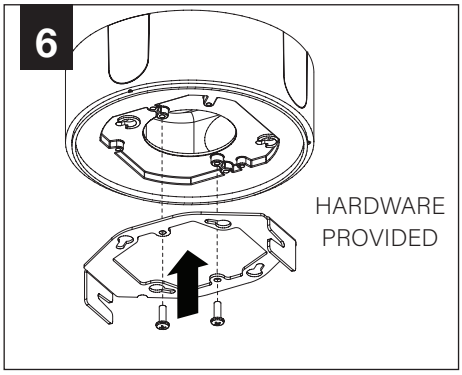


CONTINUE: **POWER CANOPY STEP 2**

POWER CANOPY

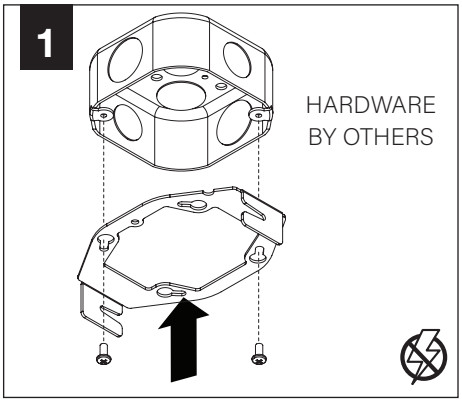


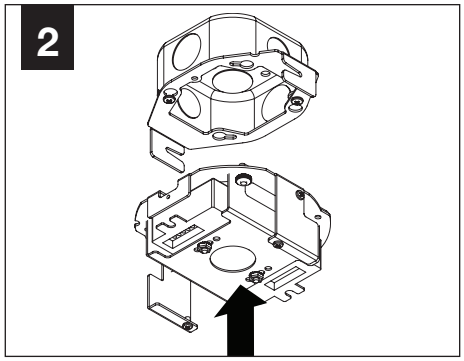



MAKE ELECTRICAL CONNECTION

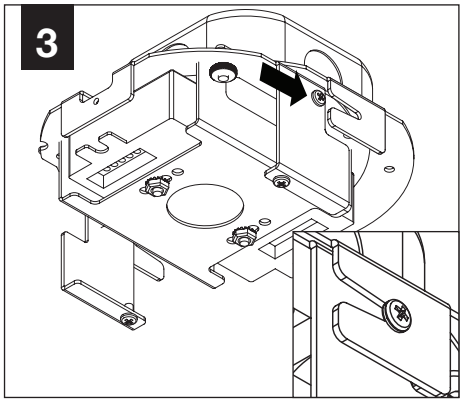


SWIVEL STEM

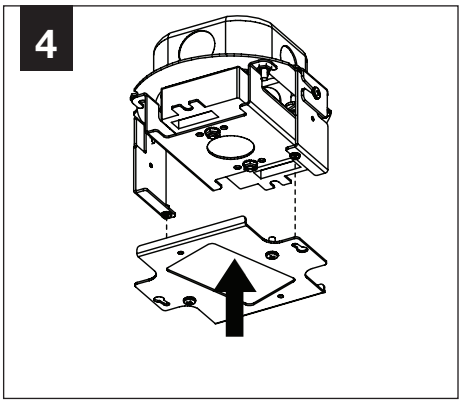


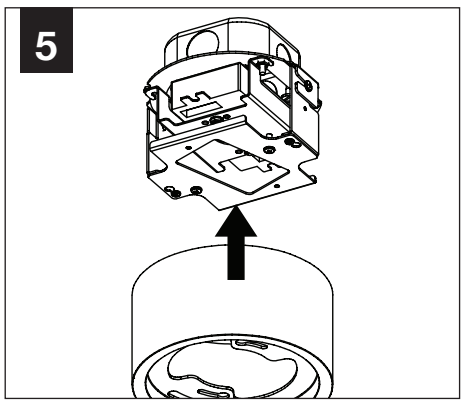


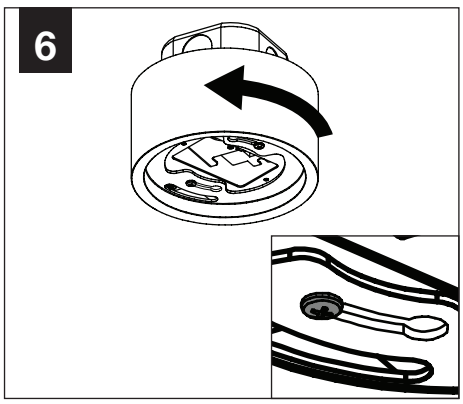


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

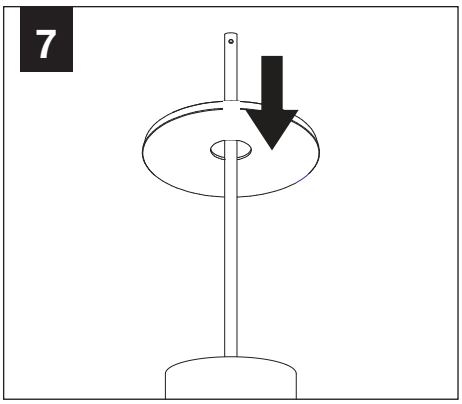


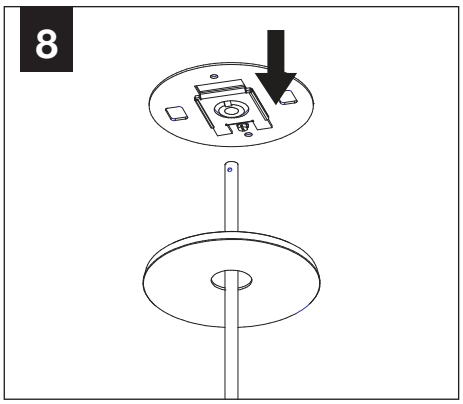


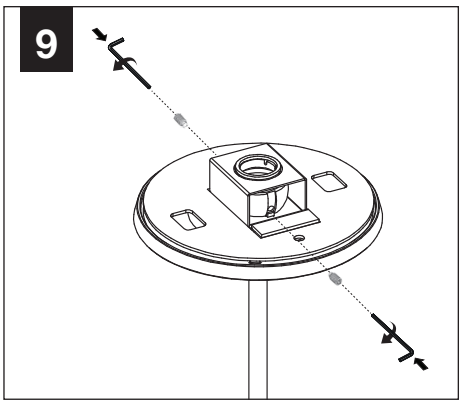

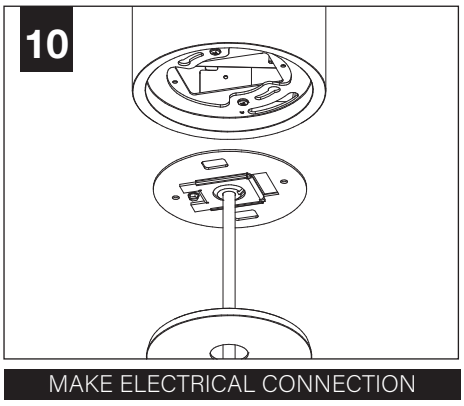


MAKE ELECTRICAL CONNECTION

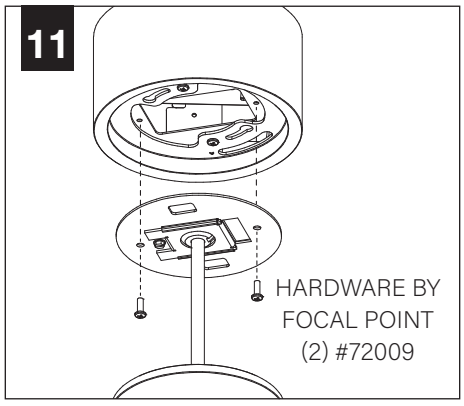

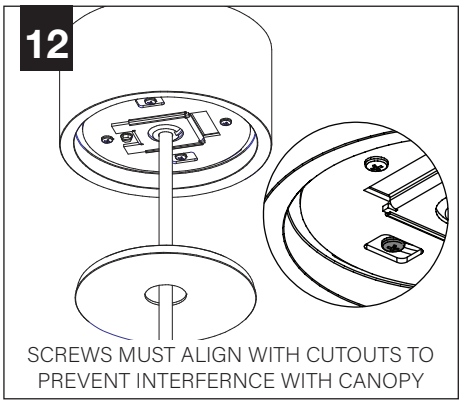



SCREWS MUST ALIGN WITH CUTOUTS TO PREVENT INTERFERNCE WITH CANOPY

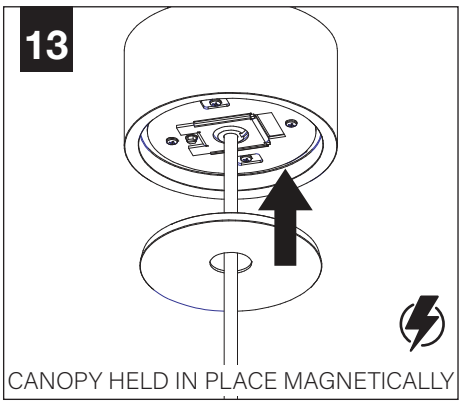


CANOPY HELD IN PLACE MAGNETICALLY


FIXED STEM

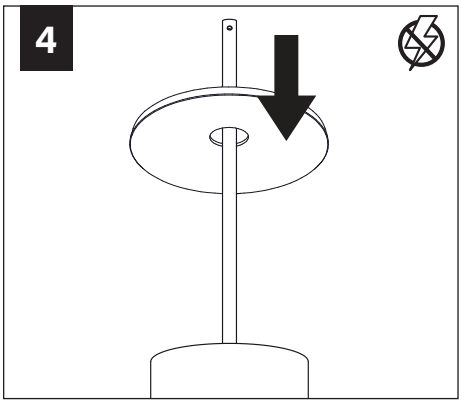


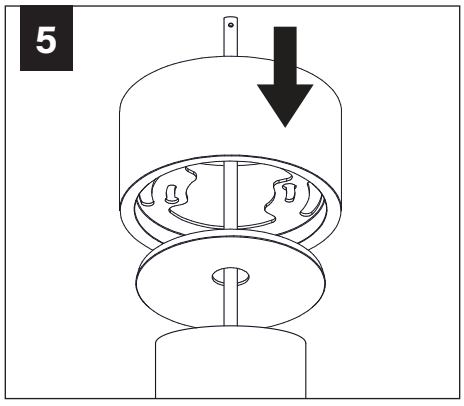


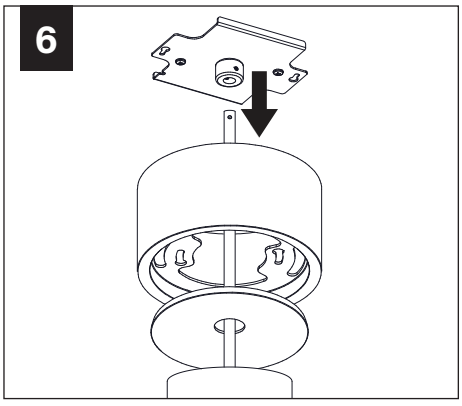



©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

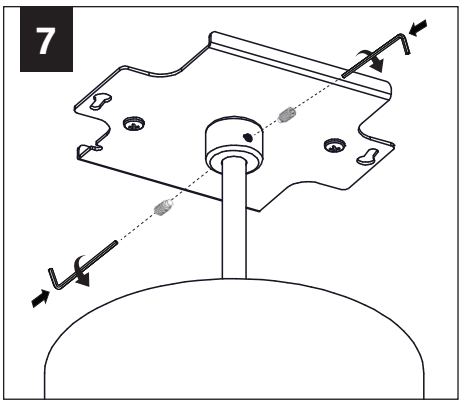

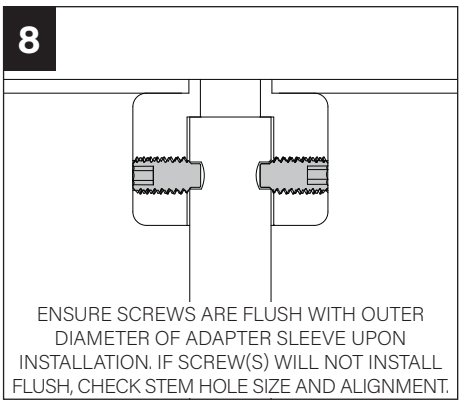


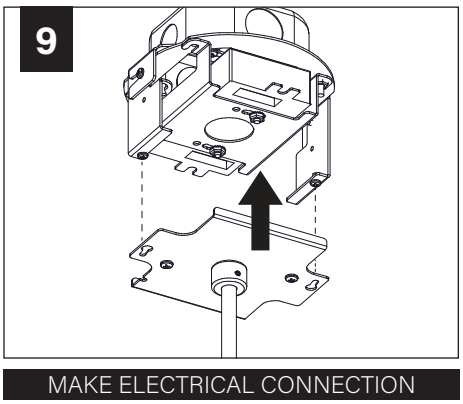


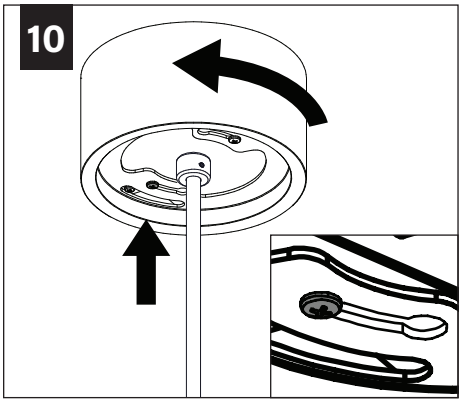


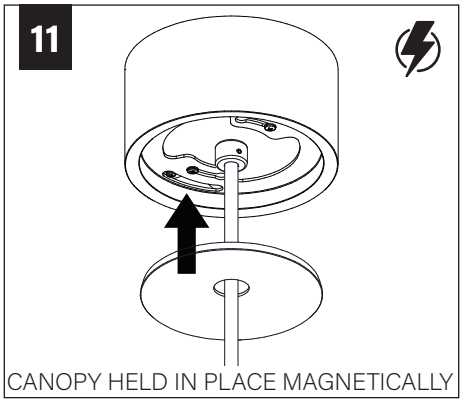


FIXED STEM DRIVER SERVICE

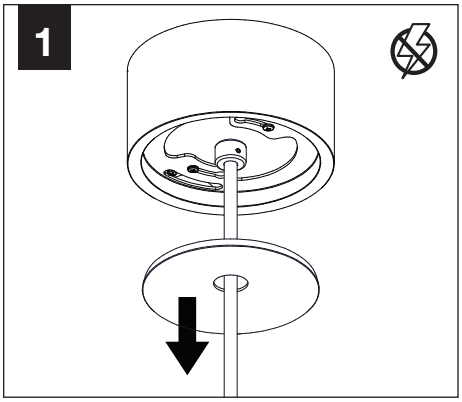


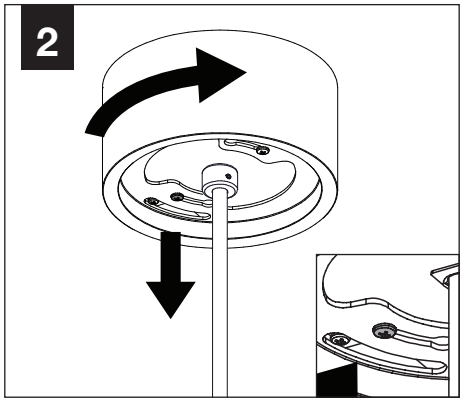


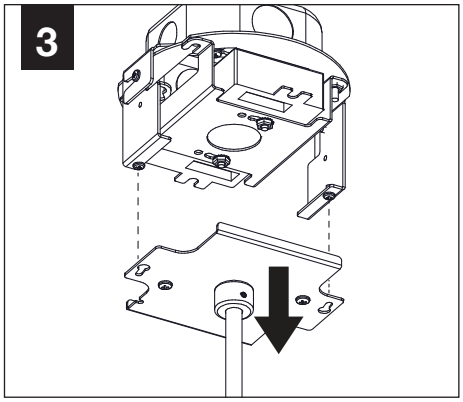

SWIVEL STEM DRIVER SERVICE

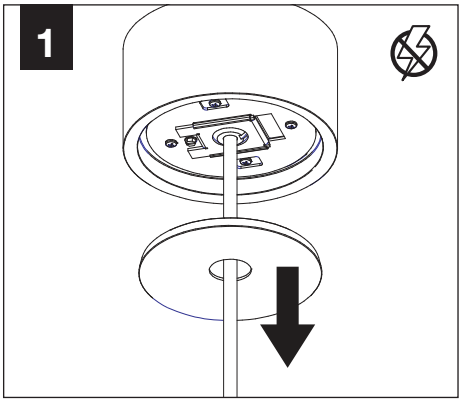

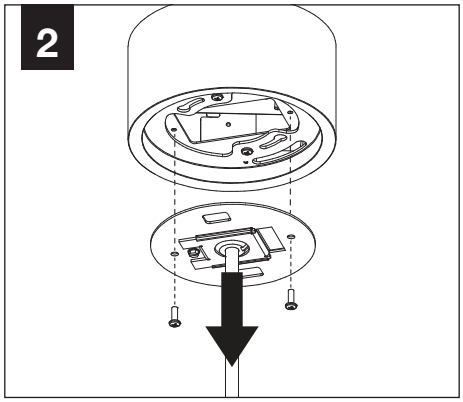

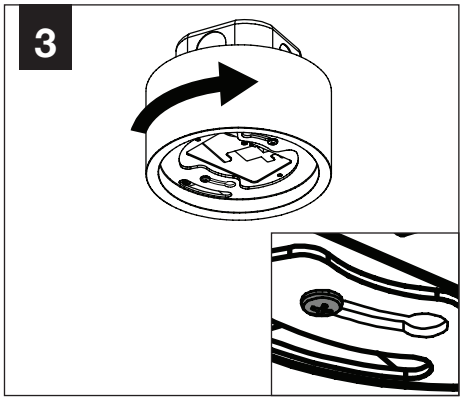


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


FLCY2 - OPTIC SERVICE

DISTRIBUTION KITS INCLUDE AN OPTIC AND REFLECTOR ASSEMBLY.


BOTH ITEMS MUST BE USED TO ACHIEVE SPECIFIED DISTRIBUTION.

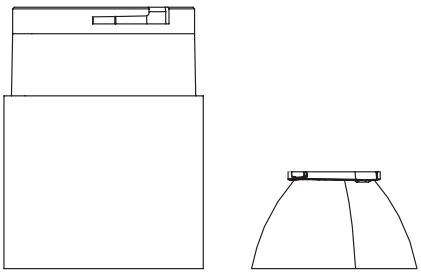


1

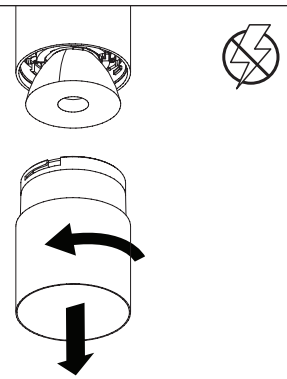


2

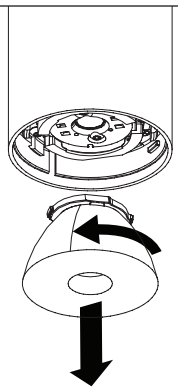

3

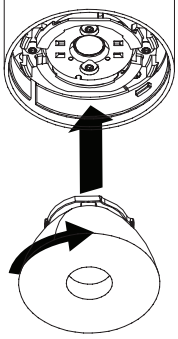


4

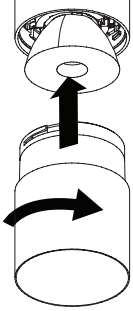


FLCY2 - WALL WASH AIMING

1

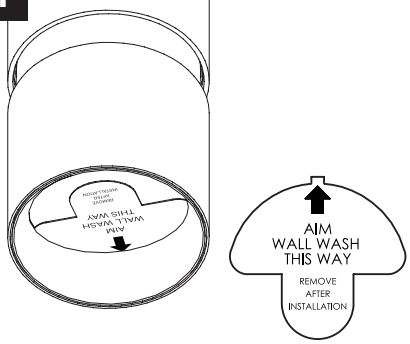


2

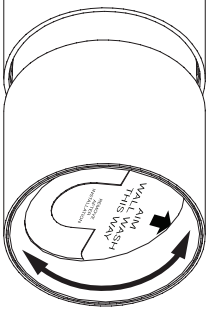

ROTATE INNER BEZEL TO ADJUST


3

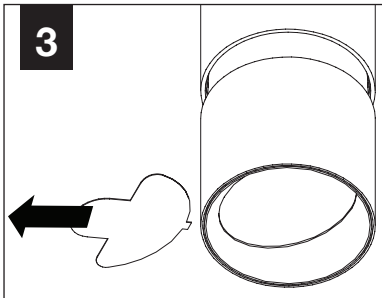


REMOVE AIM ASSIST INSERT

FLCY3 / FLCY4 - OPTIC SERVICE


1

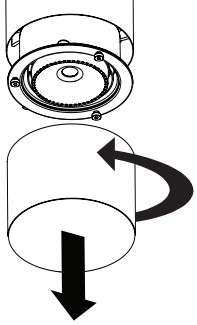

2

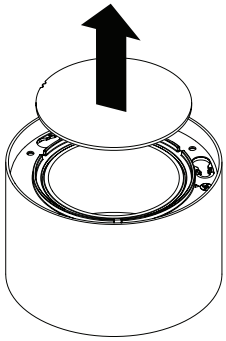


3

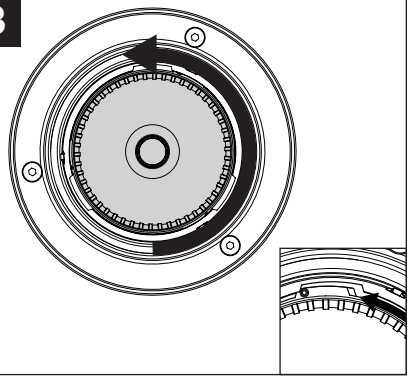


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


4

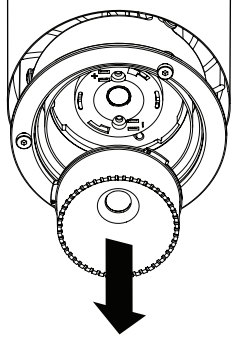


5

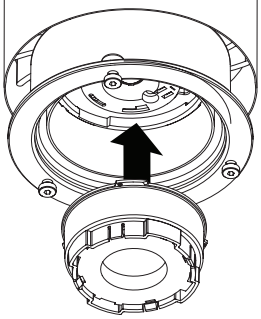


6

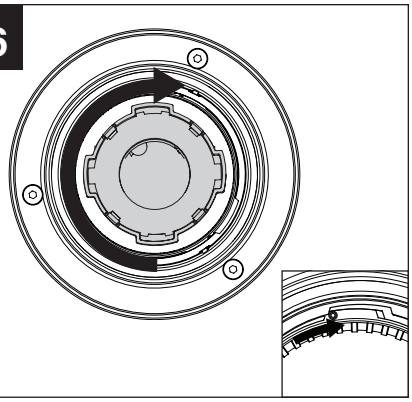

7

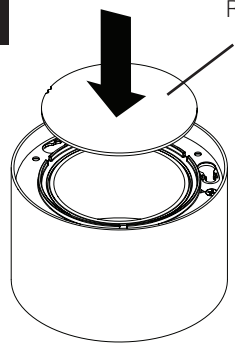

8

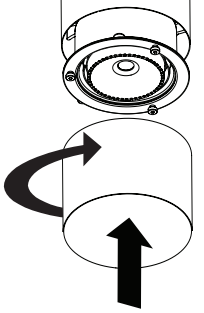

EMERGENCY

SEE BATTERY MANUFACTURER INSTRUCTIONS


EMERGENCY MAXIMUM MOUNTING HEIGHT:

2" CYLINDERS - 14.5'

3.5" CYLINDERS - 16.98'


4.5" CYLINDERS - 16'

1

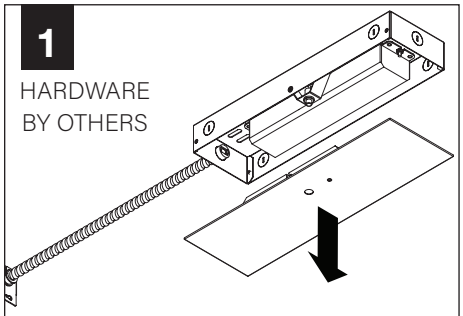


SECURE TO STRUCTURE ABOVE

2

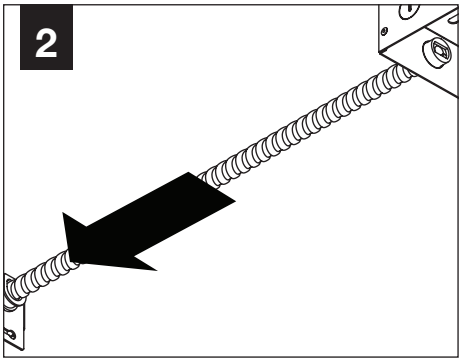


MAKE ELECTRICAL CONNECTION

3

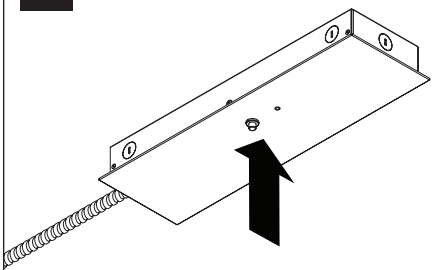

4

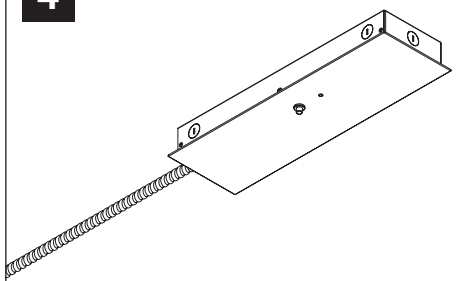

PROCEED TO
LUMINAIRE INSTALLATION

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference