ID+ Cylinder - Stem Mount

FLCY2 | FLCY3 | FLCY4 - Shallow Canopy

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS


POWER OFF

POWER ON

COMPONENT KEY

STEM MOUNT

Shipped Assembled

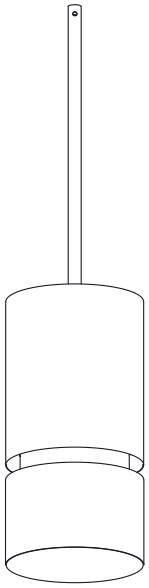


SHIPPED INSTALLED



#8-32X5/16" HALF DOG NOSE SET SCREWS

SHALLOW CANOPY




STEM MOUNTING BRACKET (FIXED STEM)



STEM MOUNTING BRACKET (SWIVEL STEM)

DECORATIVE SHALLOW CANOPY

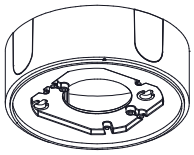

DECORATIVE J-BOX COVER



STEM MOUNTING BRACKET (FIXED STEM)




MOUNTING SCREWS (FIXED STEM) #72023



STEM MOUNTING BRACKET (SWIVEL STEM)




MOUNTING SCREWS (SWIVEL STEM) #72029



FACEPLATE

4" OCTAGONAL J-BOX REQUIRED


J-BOX BY OTHERS

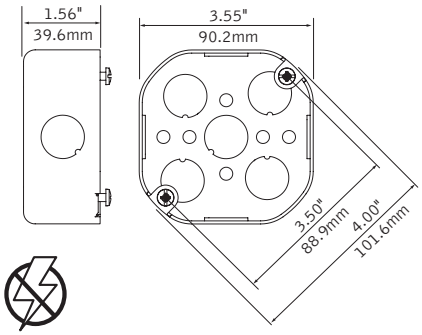

EMERGENCY

PRIOR TO LUMINAIRE INSTALLATION, SEE **PAGE 9** FOR EMERGENCY INSTALLATION INSTRUCTIONS.


SWIVEL STEM

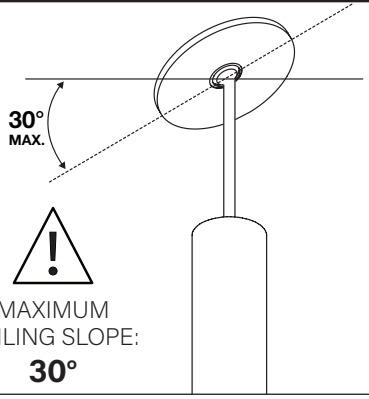

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


FIELD CUTTABLE SWIVEL STEM (OPTIONAL)

1

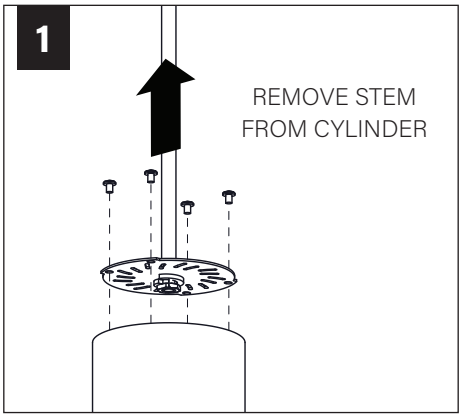

REMOVE STEM FROM CYLINDER

2



MEASURE STEM TO DESIRED LENGTH


MINIMUM CUT LENGTH = 9"

3




CUT STEM AND DEBURR INSIDE EDGE

4

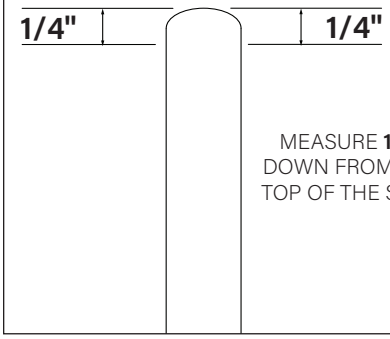

MEASURE **1/4"** DOWN FROM THE TOP OF THE STEM


5

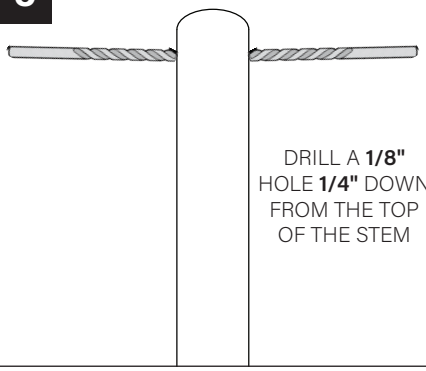

DRILL A **1/8"** HOLE **1/4"** DOWN FROM THE TOP OF THE STEM


FIELD CUTTABLE FIXED STEM (OPTIONAL)

1

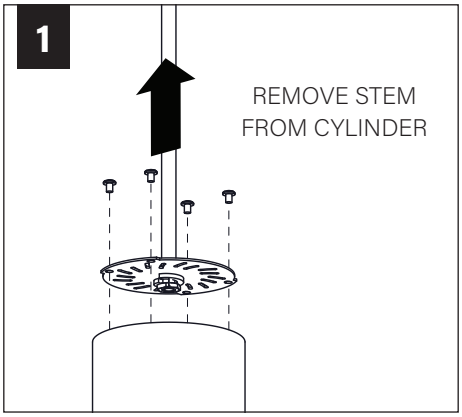

REMOVE STEM FROM CYLINDER

2



MEASURE STEM TO DESIRED LENGTH


MINIMUM CUT LENGTH = 9"

3




CUT STEM AND DEBURR INSIDE EDGE

4

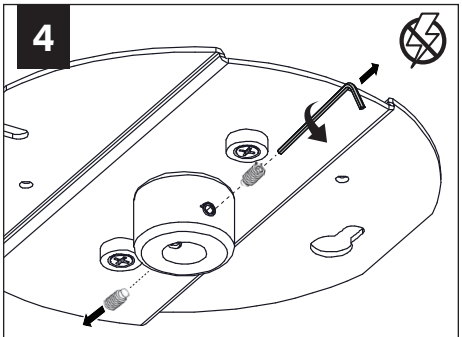


REMOVE SET SCREWS FROM BOTH SIDES

5

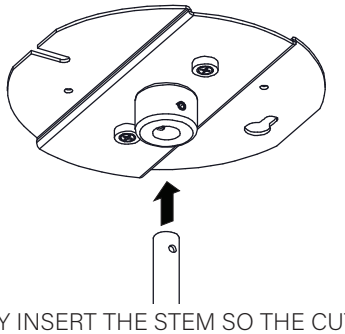


FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

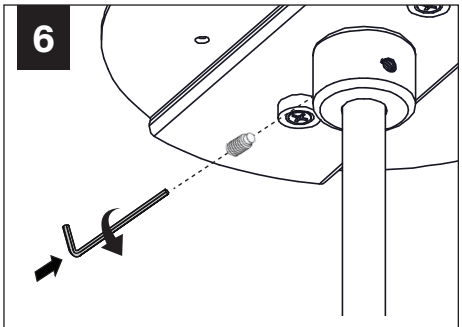


INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

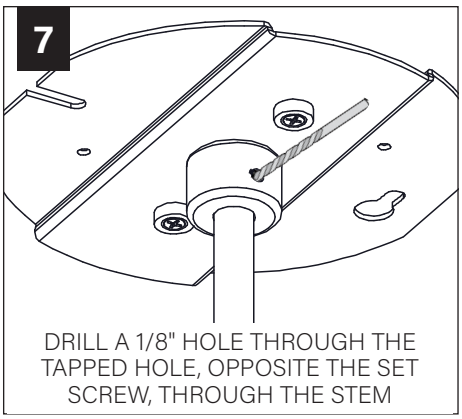


DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

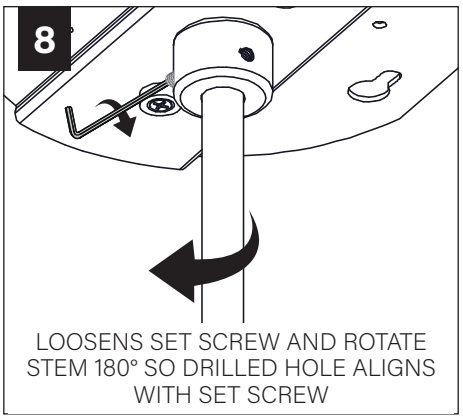


LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

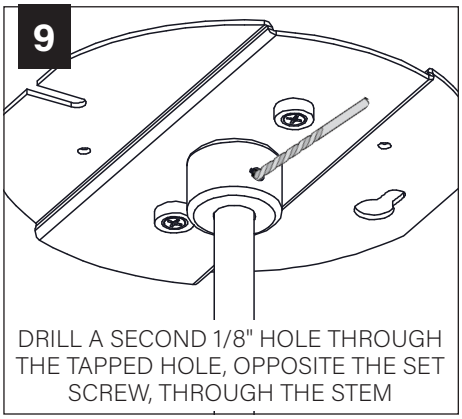

DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

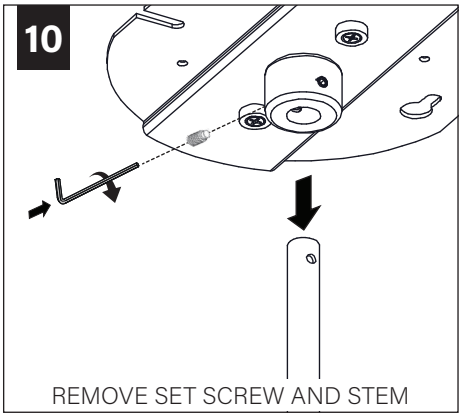



REMOVE SET SCREW AND STEM

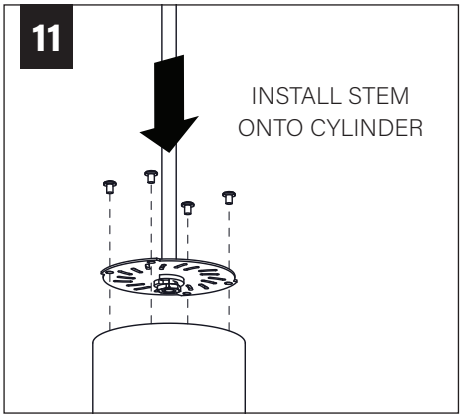



SHALLOW CANOPY

FIXED STEM

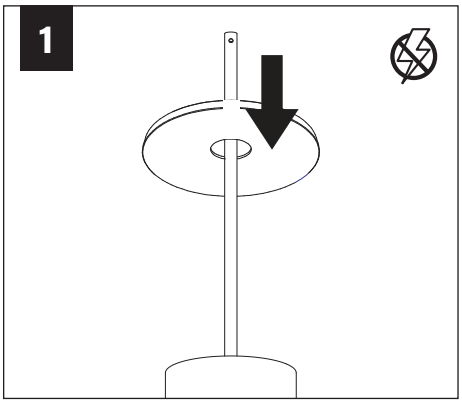


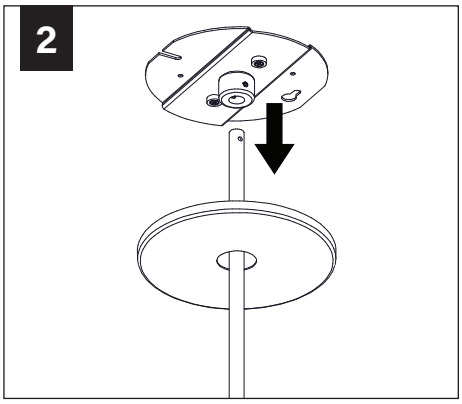

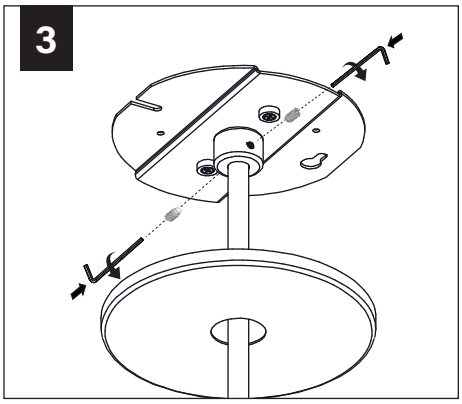


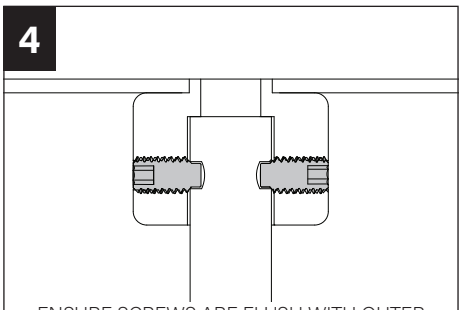


ENSURE SCREWS ARE FLUSH WITH OUTER DIAMETER OF ADAPTER SLEEVE UPON INSTALLATION. IF SCREW(S) WILL NOT INSTALL FLUSH, CHECK STEM HOLE SIZE AND ALIGNMENT.

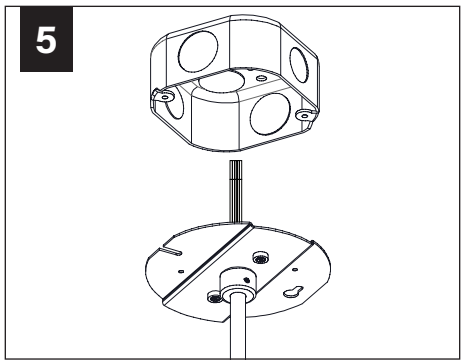


MAKE ELECTRICAL CONNECTION

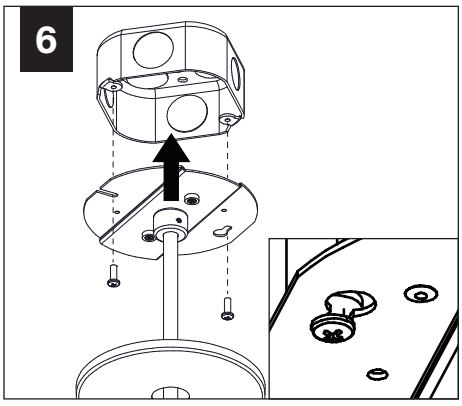



©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

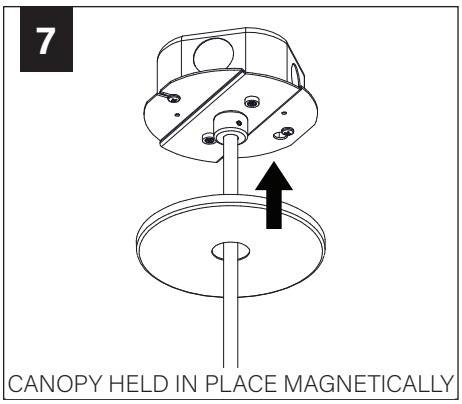


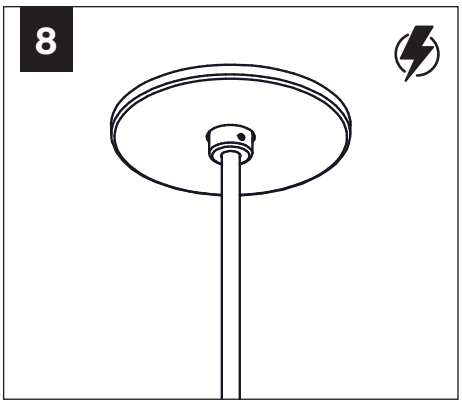



SWIVEL STEM

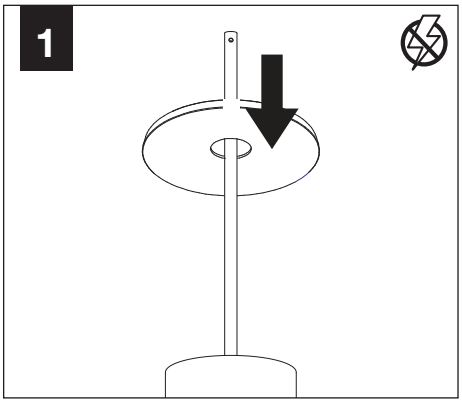


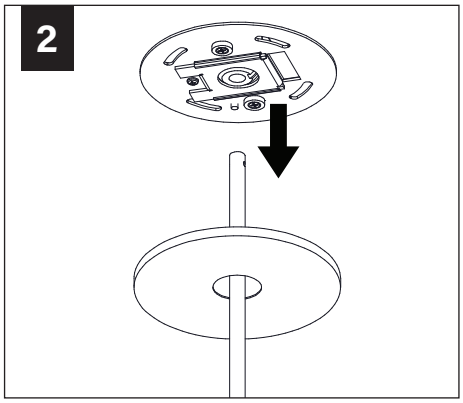


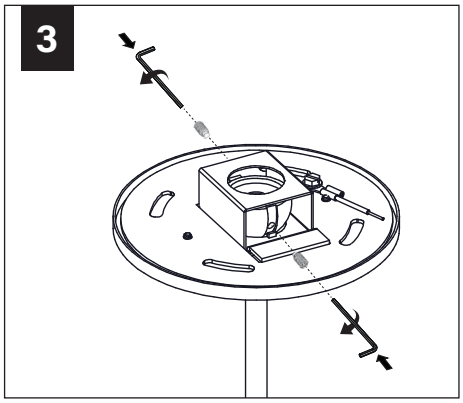


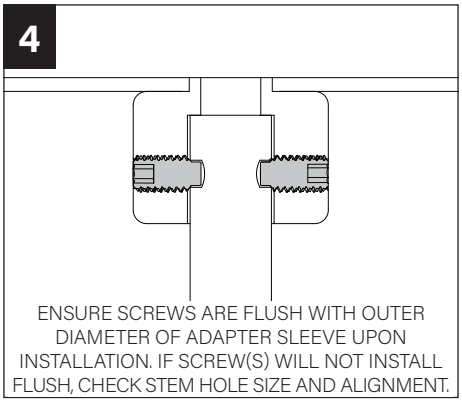

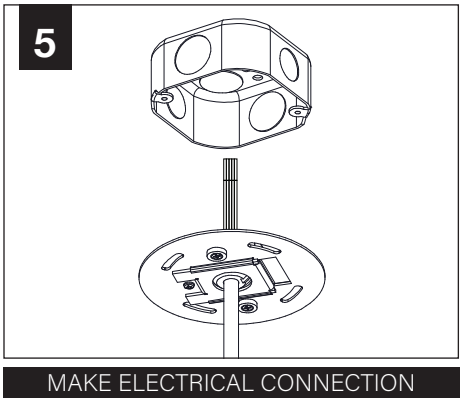

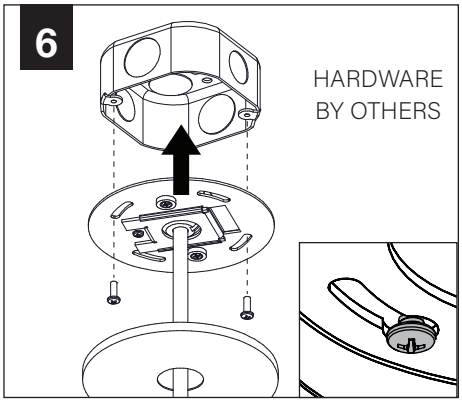


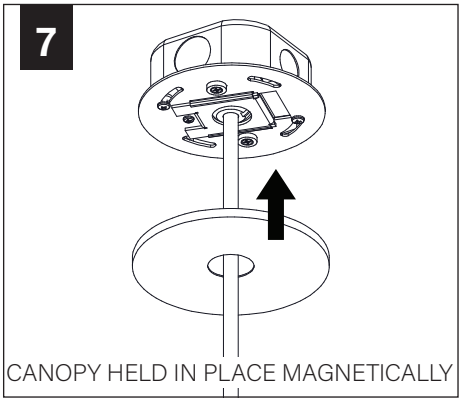

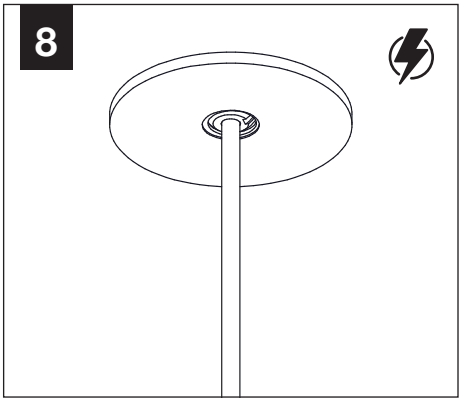


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


DECORATIVE SHALLOW CANOPY

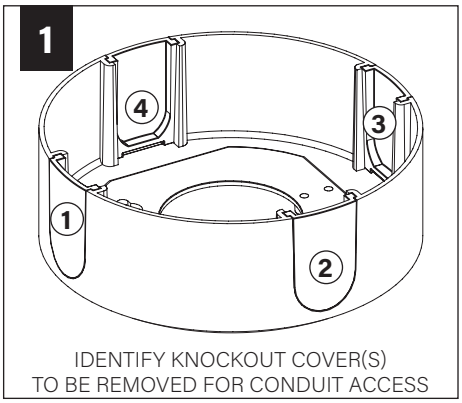



IDENTIFY KNOCKOUT COVER(S)
TO BE REMOVED FOR CONDUIT ACCESS

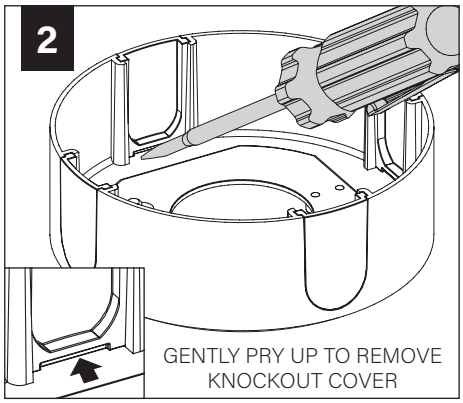

GENTLY PRY UP TO REMOVE
KNOCKOUT COVER

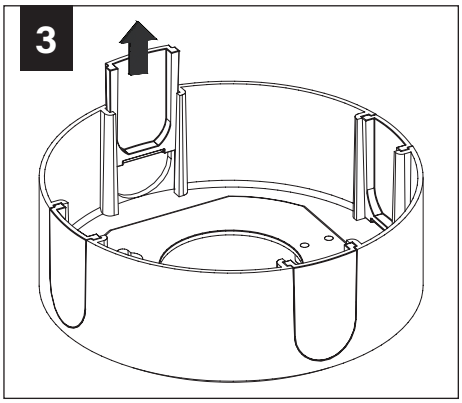


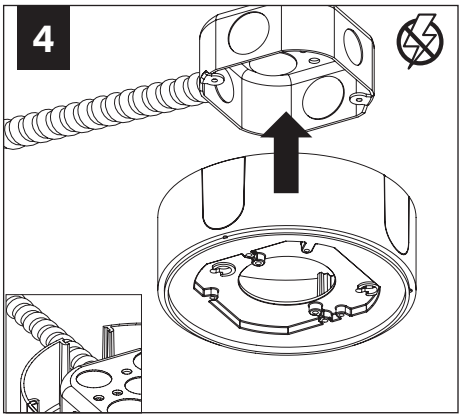


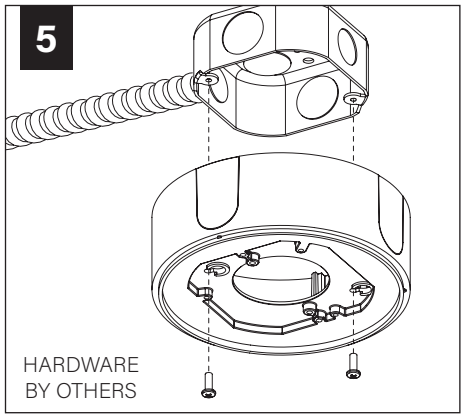



HARDWARE
BY OTHERS

FIXED STEM

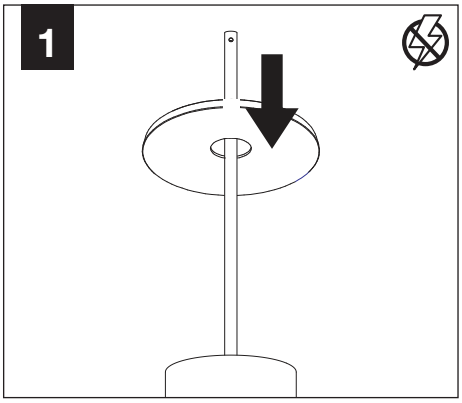


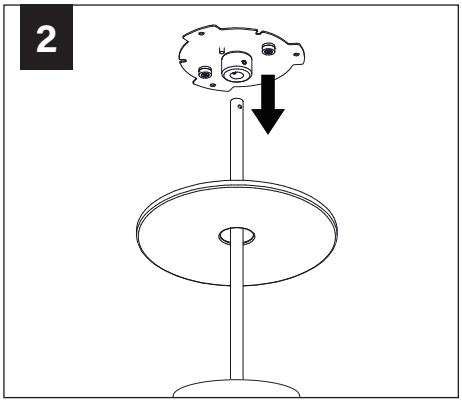

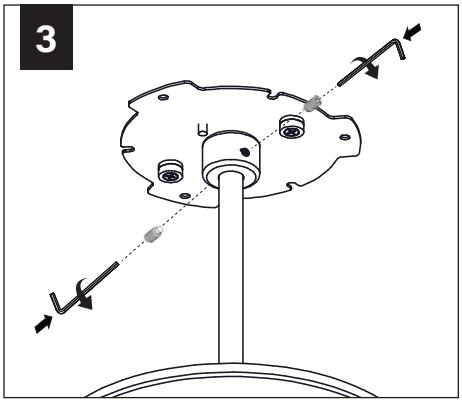


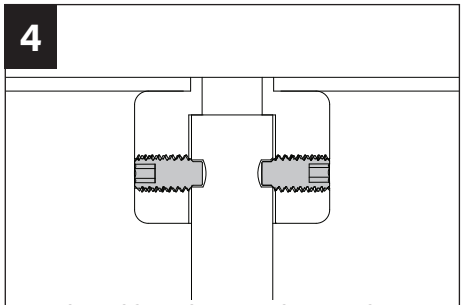


ENSURE SCREWS ARE FLUSH WITH OUTER
DIAMETER OF ADAPTER SLEEVE UPON
INSTALLATION. IF SCREW(S) WILL NOT INSTALL
FLUSH, CHECK STEM HOLE SIZE AND ALIGNMENT.

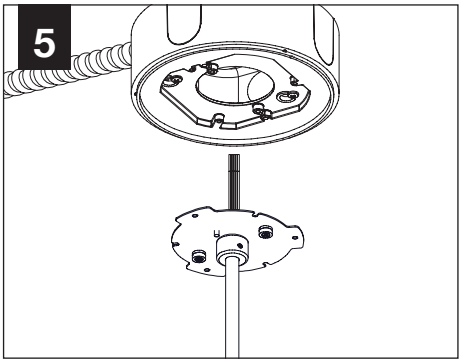


MAKE ELECTRICAL CONNECTION

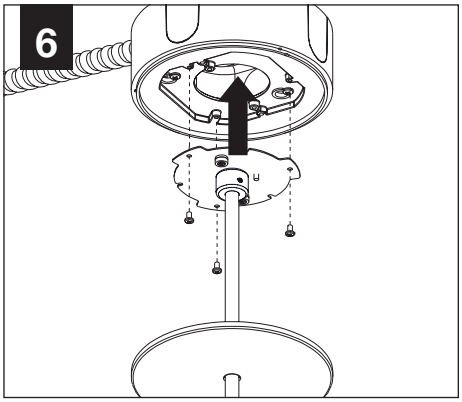



©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

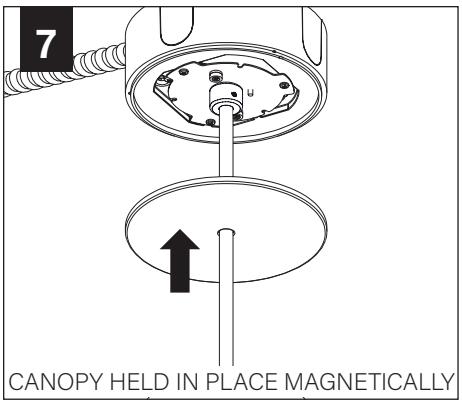


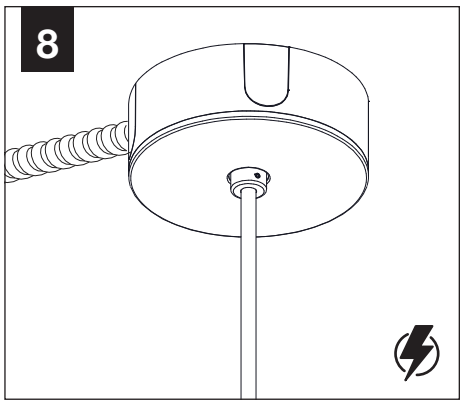



SWIVEL STEM

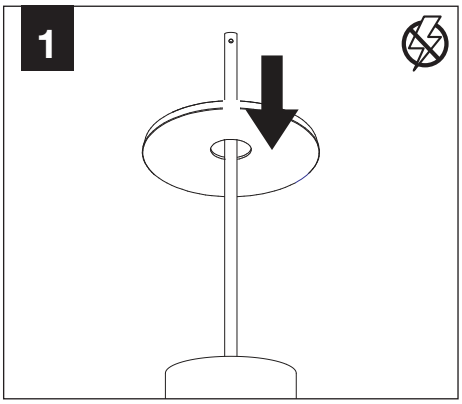


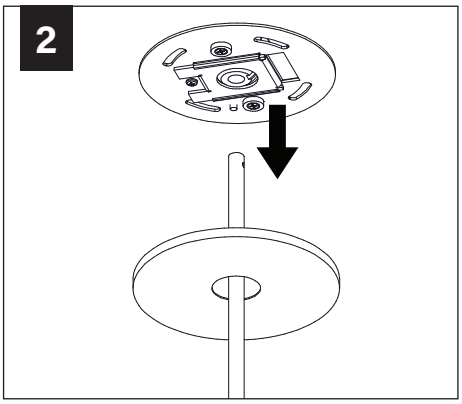


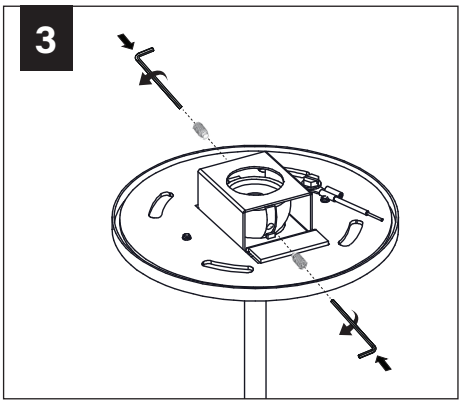


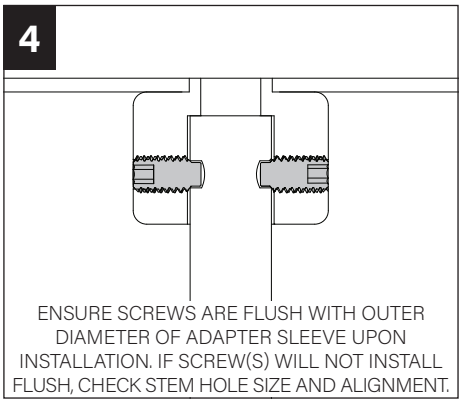

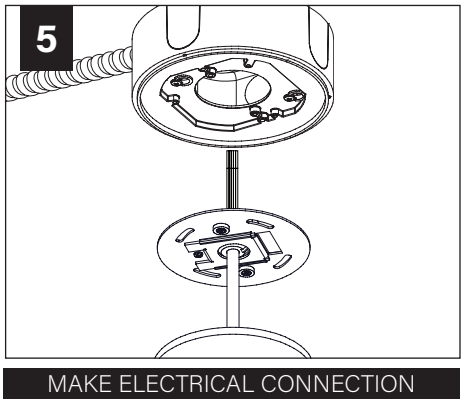

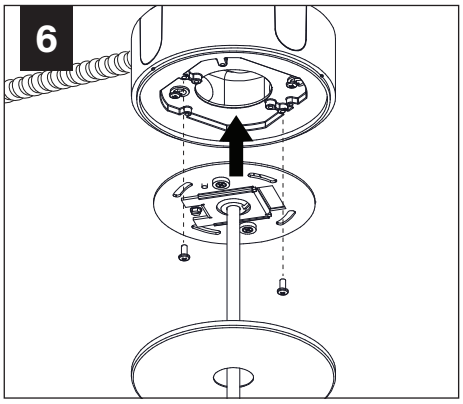

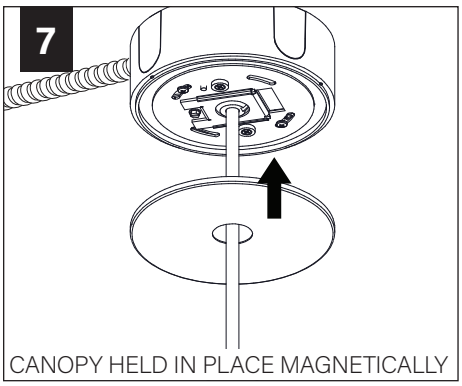

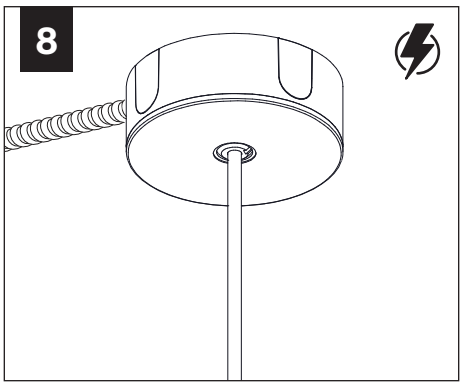



©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


DRIVER SERVICE - ALL


TURN OFF POWER SOURCE PRIOR TO DRIVER SERVICE

FLCY2

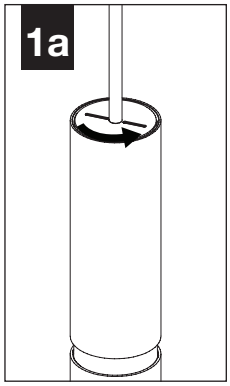


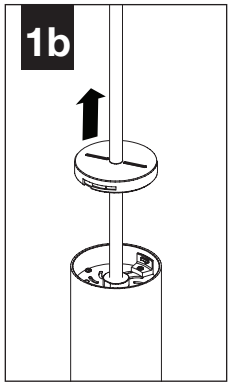


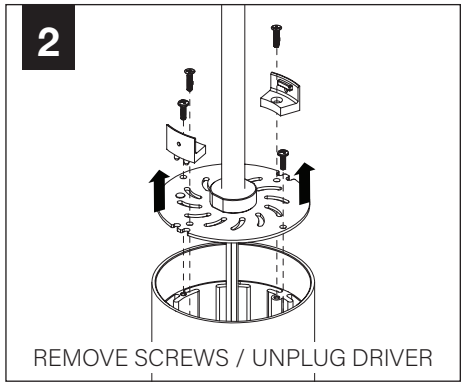

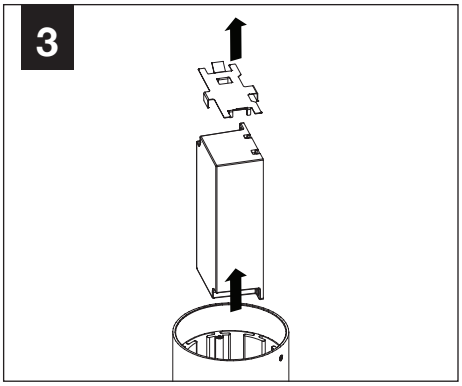

FLCY3 / FLCY4 - SHALLOW CANOPY

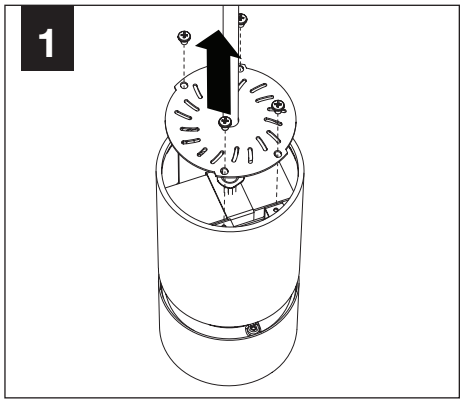


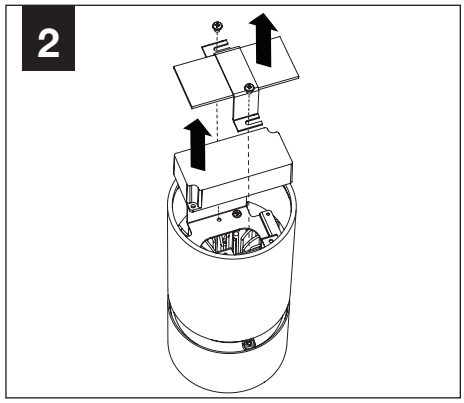



FLCY2 - OPTIC SERVICE


DISTRIBUTION KITS INCLUDE AN OPTIC AND REFLECTOR ASSEMBLY.


BOTH ITEMS MUST BE USED TO ACHIEVE SPECIFIED DISTRIBUTION.

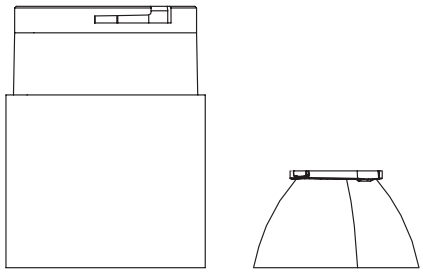

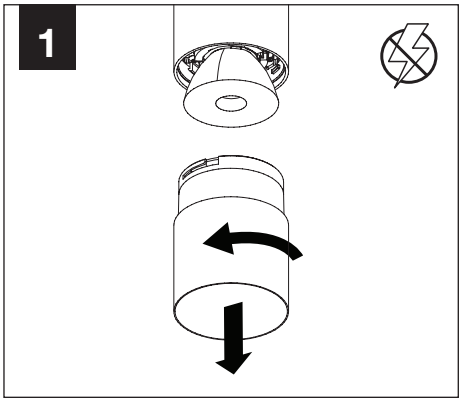

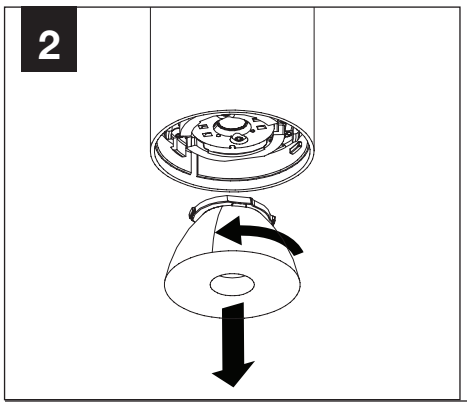


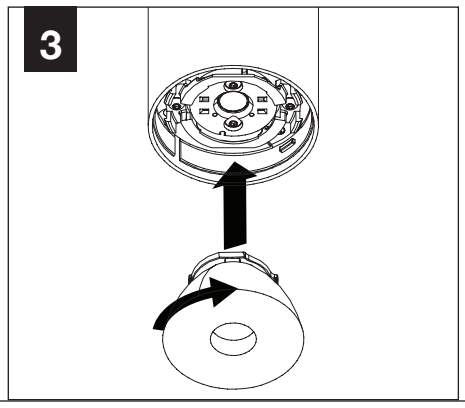


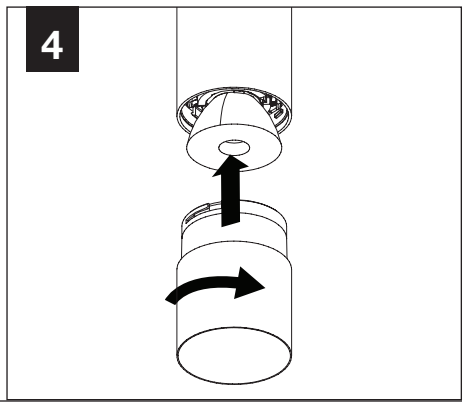


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

FLCY2 - WALL WASH AIMING

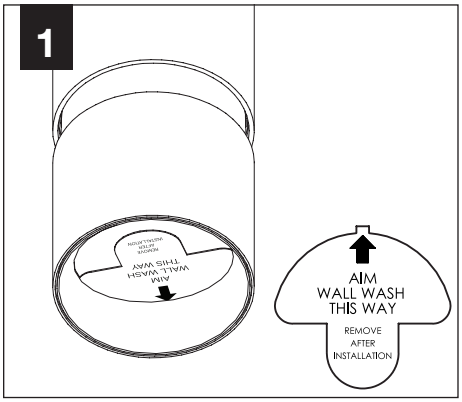

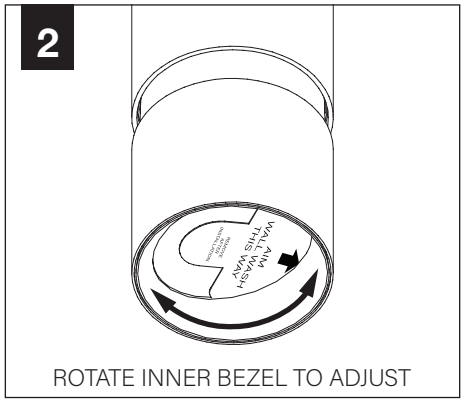



ROTATE INNER BEZEL TO ADJUST

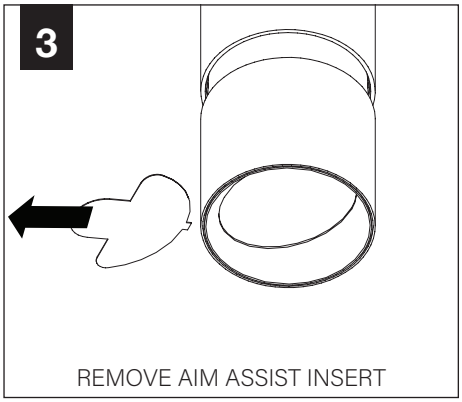



REMOVE AIM ASSIST INSERT


FLCY3 / FLCY4 - OPTIC SERVICE

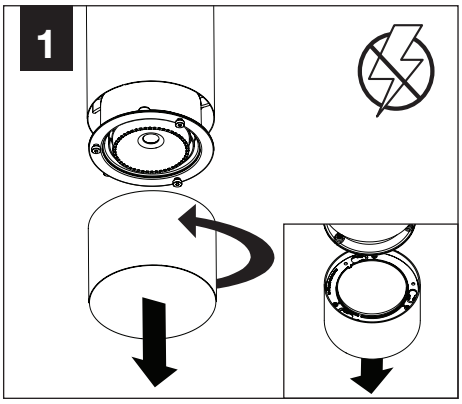


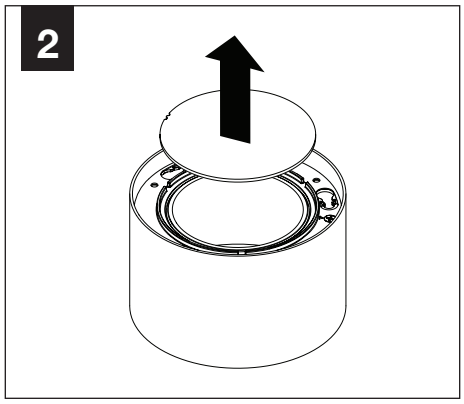


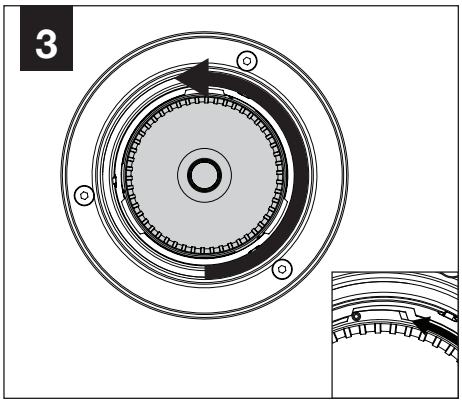


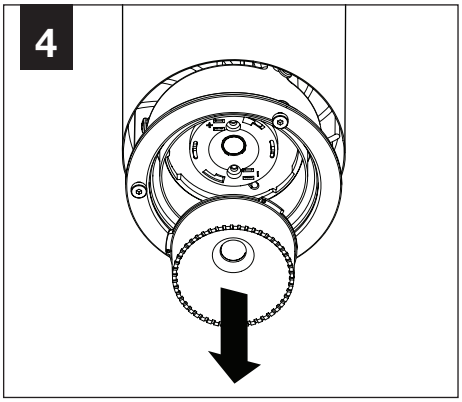

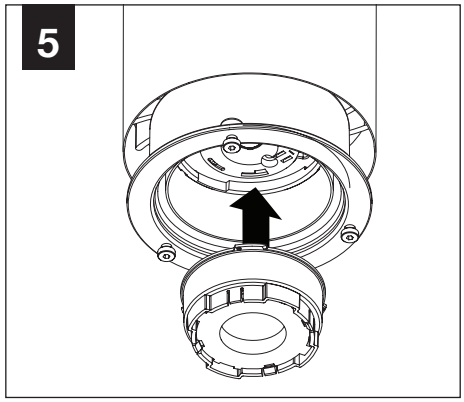

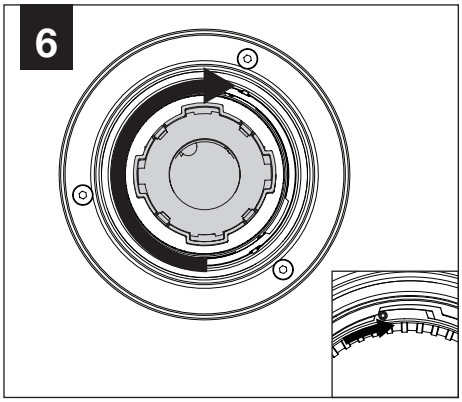

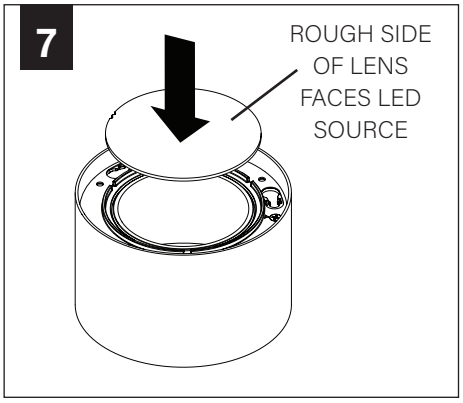

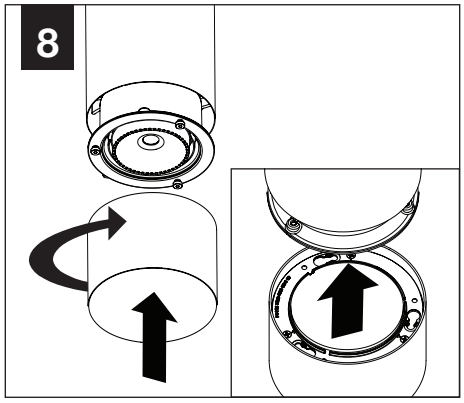

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

EMERGENCY

SEE BATTERY MANUFACTURER INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT:


2" CYLINDERS - 14.5'

3.5" CYLINDERS - 16.98'

4.5" CYLINDERS - 16'


1

HARDWARE BY OTHERS

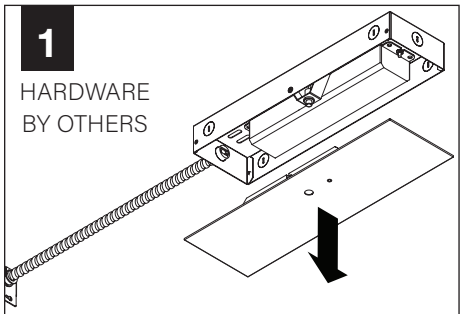


SECURE TO STRUCTURE ABOVE

2

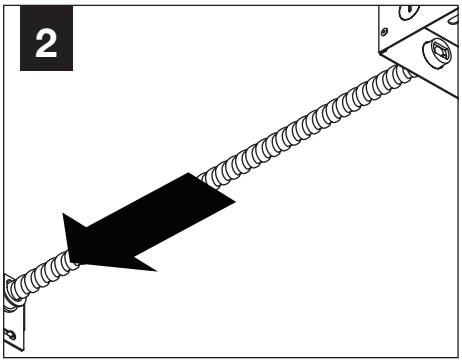


MAKE ELECTRICAL CONNECTION

3

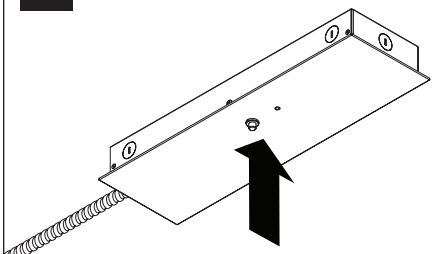

4

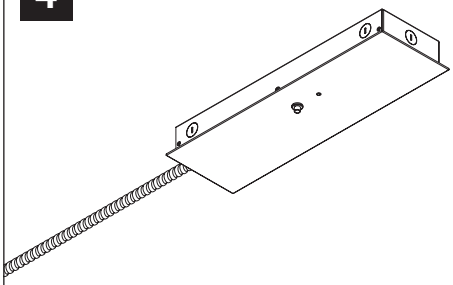

PROCEED TO LUMINAIRE INSTALLATION

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference