

# Polina™ Indirect Pendant

PENDANT | FPOLP-SHX-10-MPC



## BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

## INSTRUCTION KEY



### ATTENTION



### SEE ADDITIONAL INSTRUCTIONS




### POWER OFF




### POWER ON

## COMPONENT KEY

### LIGHT ENGINE

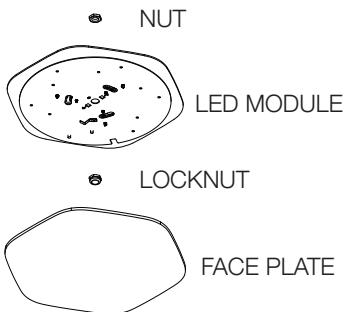

### STEM MOUNT

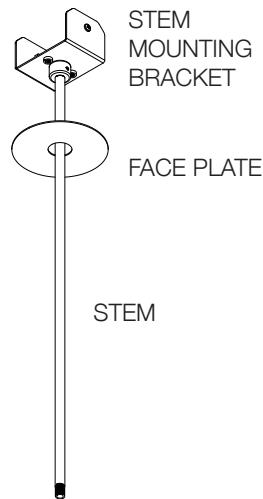


### SHIPPED INSTALLED



#273 SET SCREWS

### MINI POWER CANOPY

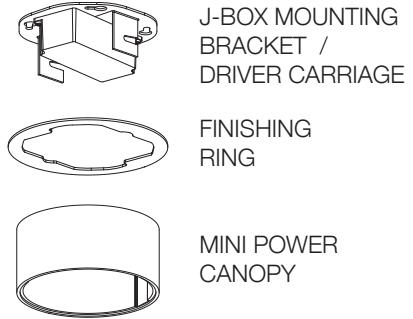

## HANDLING & CLEANING




Use can of compressed air to remove dust and debris from dust cover.






Lightly wipe dust cover with damp cloth. Do not leave excess moisture on surface.












### 4" OCTAGONAL J-BOX REQUIRED

J-BOX BY OTHERS

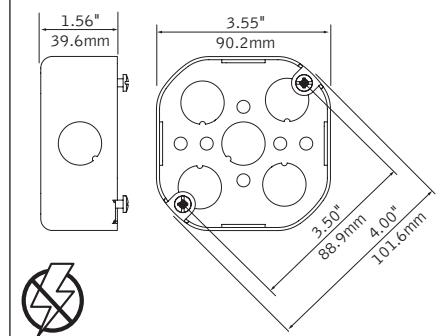

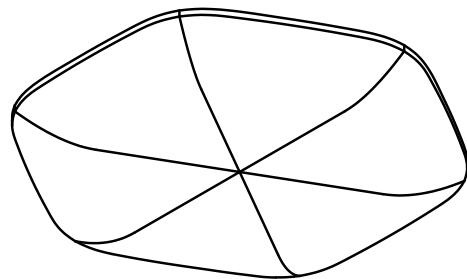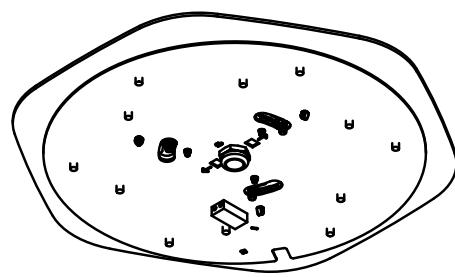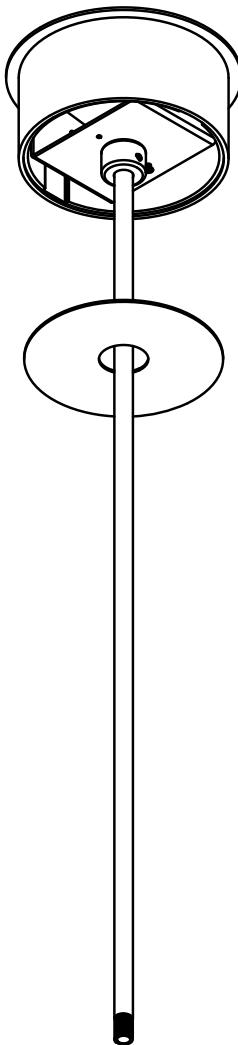


## FIELD CUTTABLE STEM (OPTIONAL)

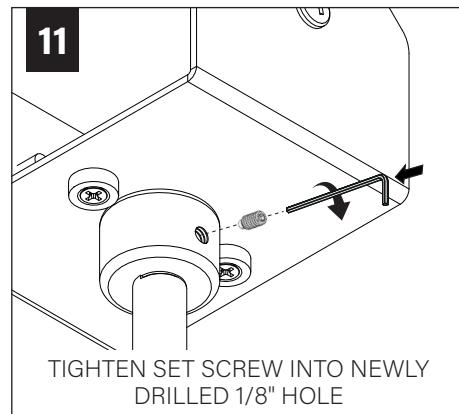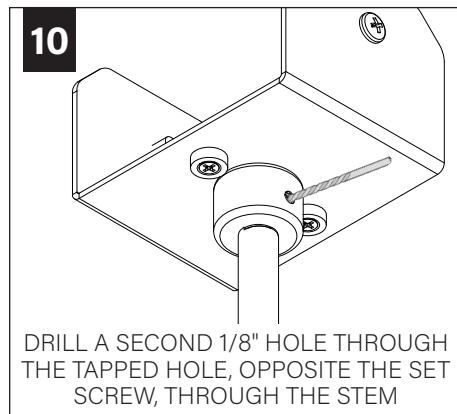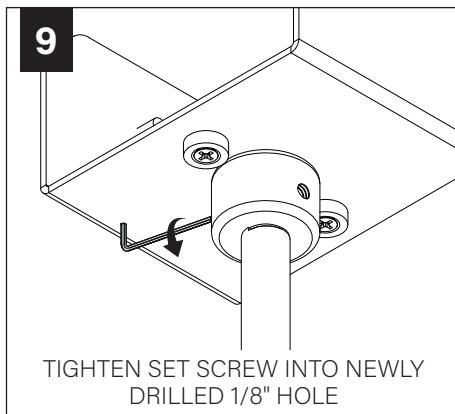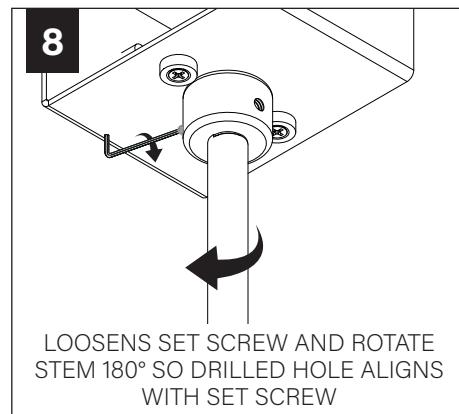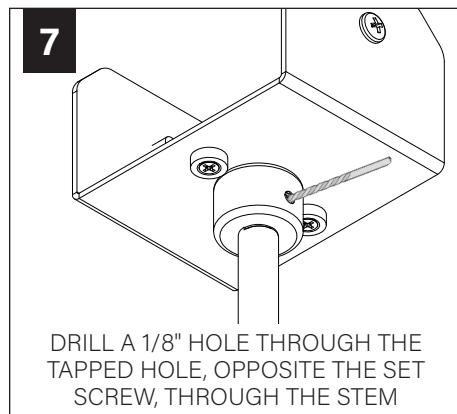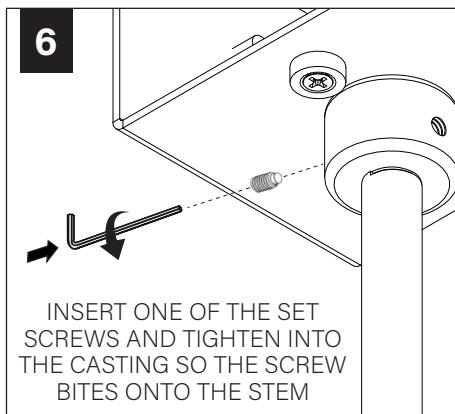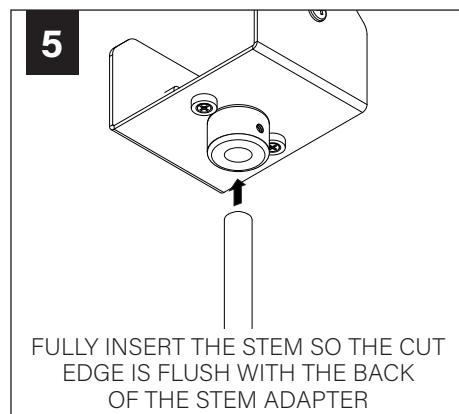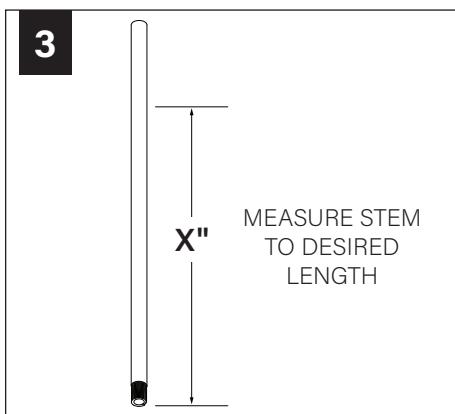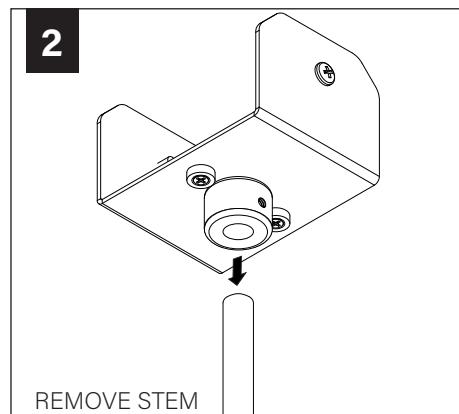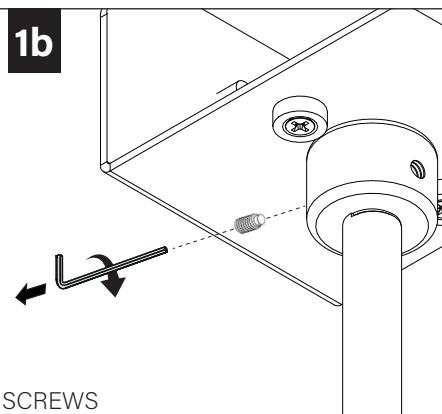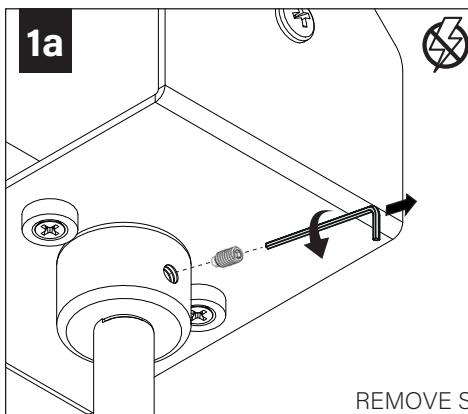


## MINI POWER CANOPY INSTALLATION

1

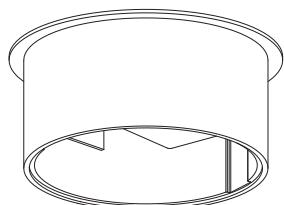


CANOPY ASSEMBLY SHIPS ASSEMBLED

2

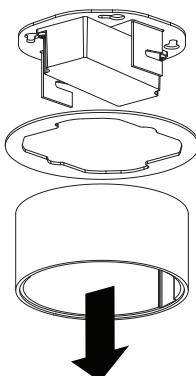


3

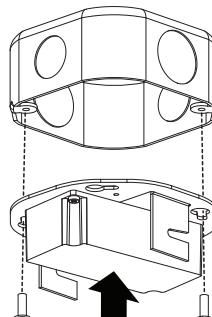

HARDWARE  
BY OTHERS


MAKE ELECTRICAL CONNECTION

4

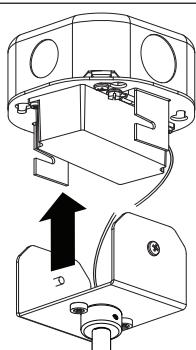


MAKE ELECTRICAL CONNECTION

5

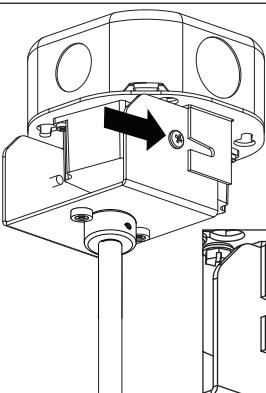


6

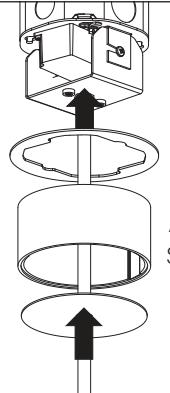

INSTALL CANOPY  
ASSEMBLY PARTS  
SIMULTANEOUSLY

7

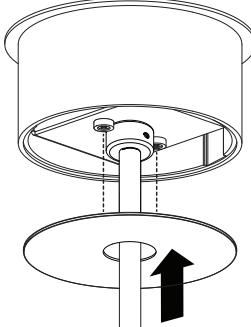


FACE PLATE HELD IN PLACE MAGNETICALLY

## DRIVER SERVICE




TURN OFF POWER SOURCE  
PRIOR TO DRIVER SERVICE

1

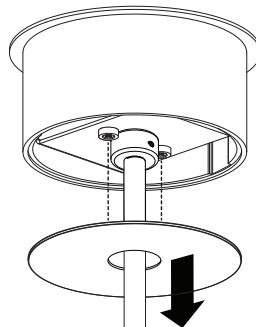


2

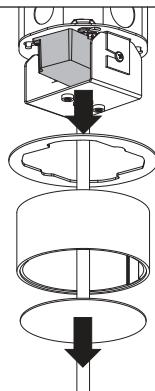


## LED MODULE


1a

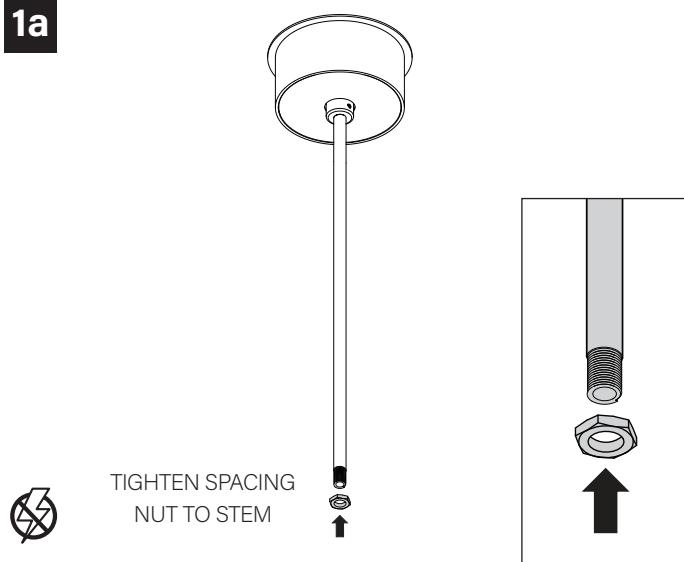


1b

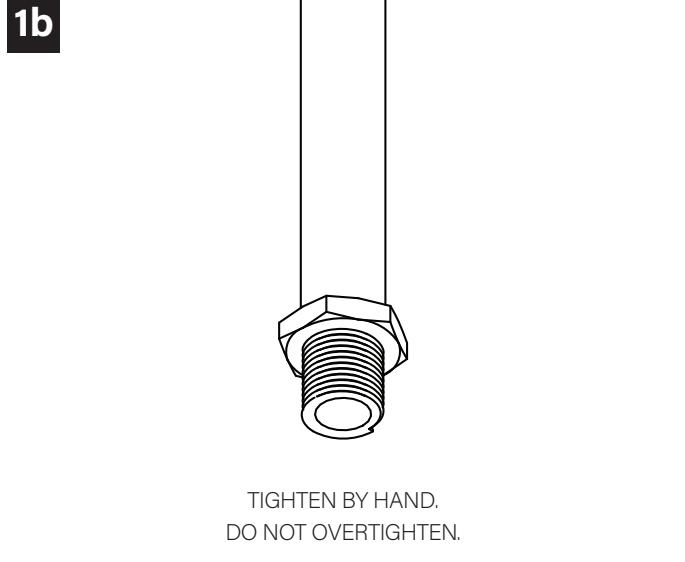


2

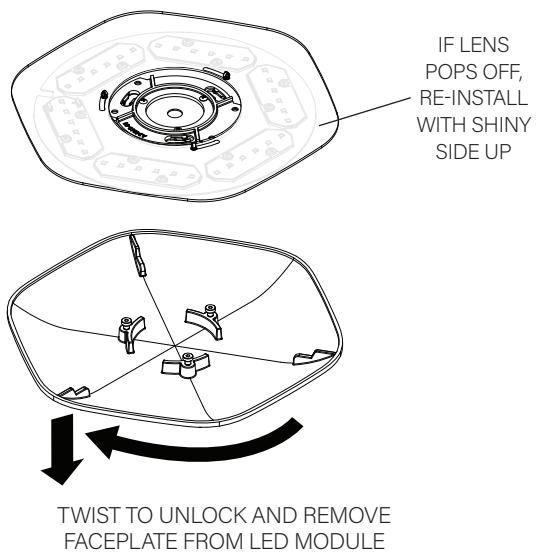


3

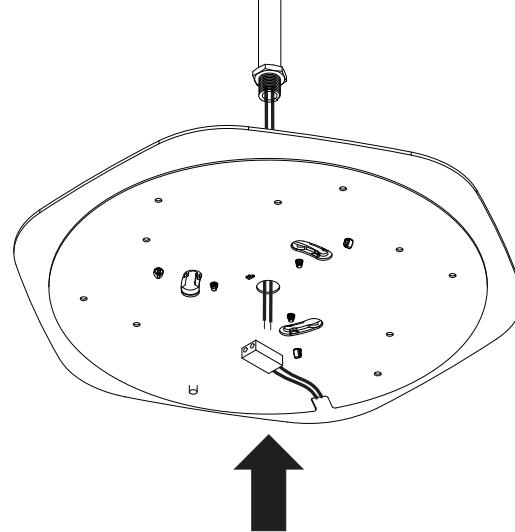


4

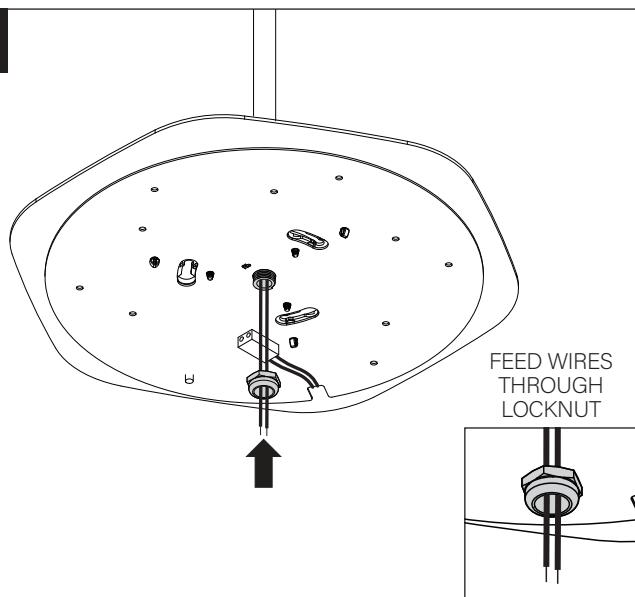


5

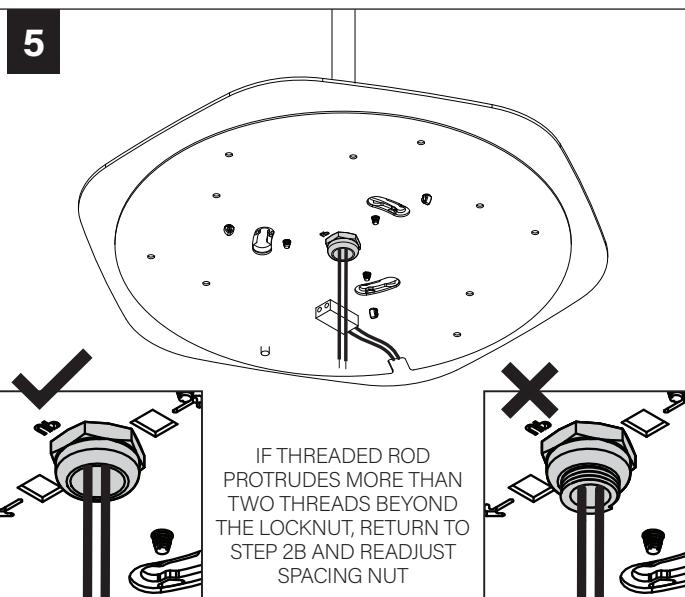

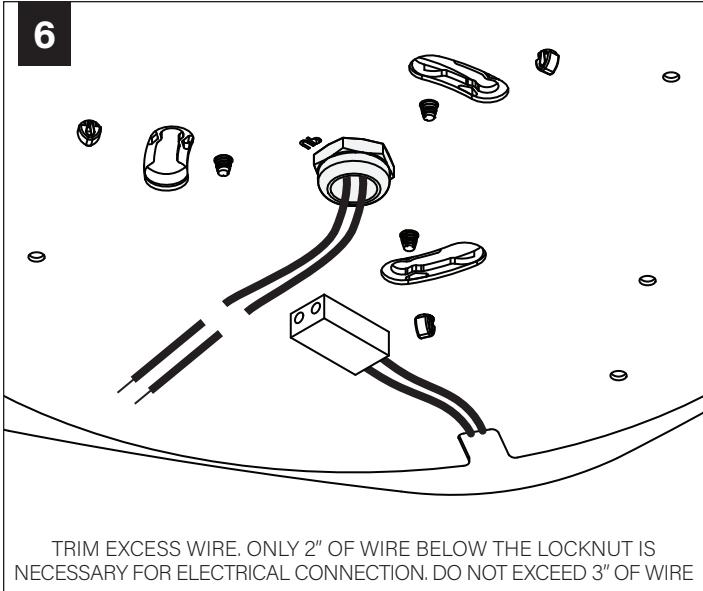
**6**

TRIM EXCESS WIRE. ONLY 2" OF WIRE BELOW THE LOCKNUT IS  
NECESSARY FOR ELECTRICAL CONNECTION. DO NOT EXCEED 3" OF WIRE

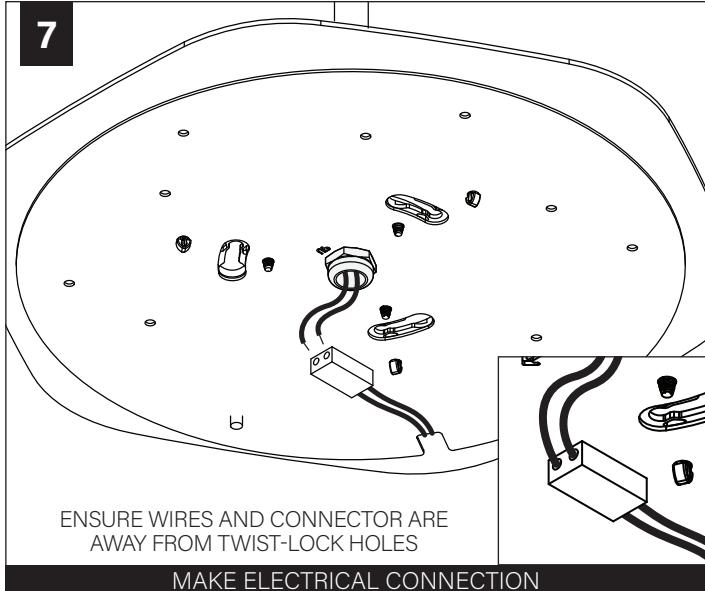
**7**

ENSURE WIRES AND CONNECTOR ARE  
AWAY FROM TWIST-LOCK HOLES

MAKE ELECTRICAL CONNECTION

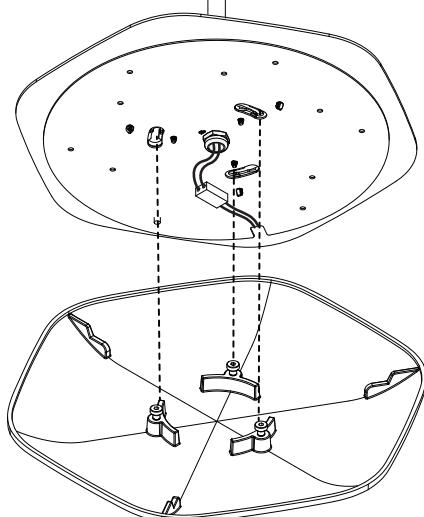**8**

ALIGN PEGS ON FACE PLATE TO SLOTS ON LED MODULE.  
ENSURE LENS ALIGNS WITH FACE PLATE UPON FINAL INSTALLATION.

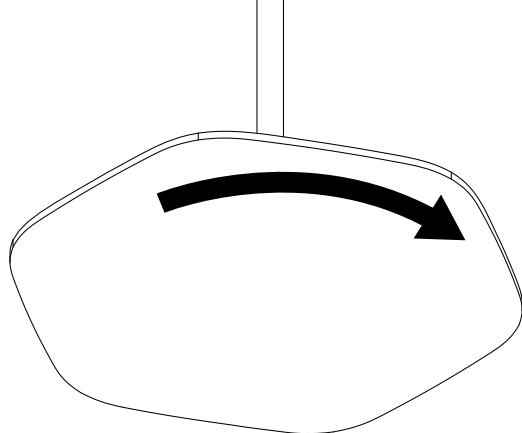**9**

TWIST AND LOCK FACEPLATE INTO PLACE.  
FOR MINOR ADJUSTMENTS TO ORIENTATION, CONTINUE  
ROTATING CLOCKWISE AFTER LOCKING INTO PLACE.  
FOR LARGER ADJUSTMENTS, REMOVE FACEPLATE/LOCKNUT,  
REPOSITION LED MODULE AND RETURN TO STEP 4 ABOVE.

**10**