Polina® Indirect Pendant

PENDANT | FPOLP-SHX-10-MPC | FPOLP-RND-9-MPC

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION


SEE ADDITIONAL INSTRUCTIONS

POWER OFF


POWER ON

COMPONENT KEY

LIGHT ENGINE - SOFT HEXAGON

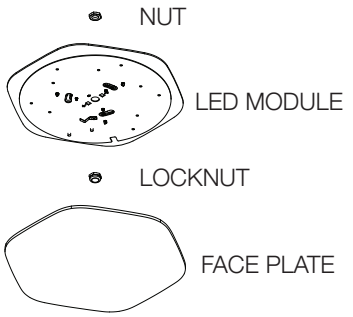

LIGHT ENGINE - ROUND

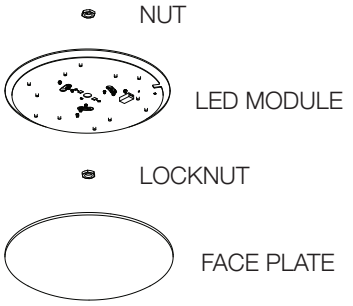


SHIPPED INSTALLED




#273 SET SCREWS

STEM MOUNT

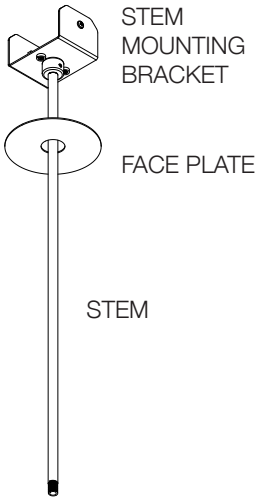


MINI POWER CANOPY

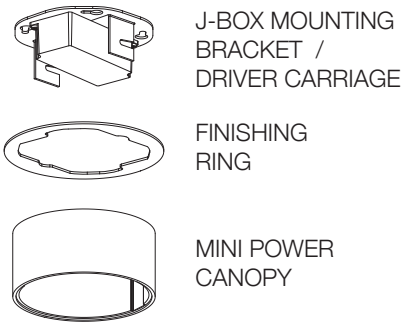

HANDLING & CLEANING




Use can of compressed air to remove dust and debris from dust cover.




Lighty wipe dust cover with damp cloth. Do not leave excess moisture on surface.


4" OCTAGONAL J-BOX REQUIRED


J-BOX BY OTHERS

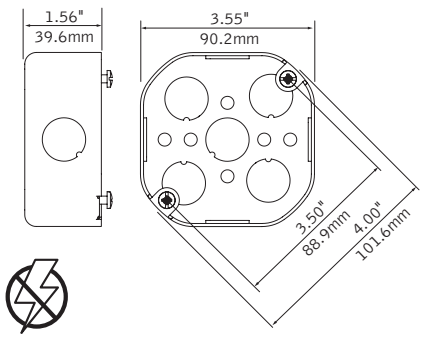

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

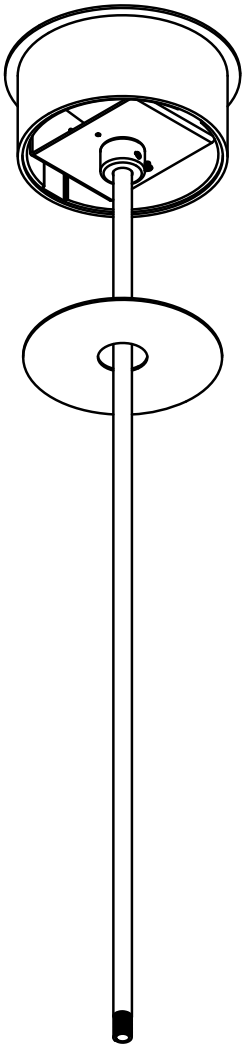

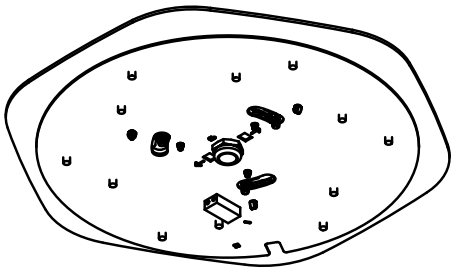


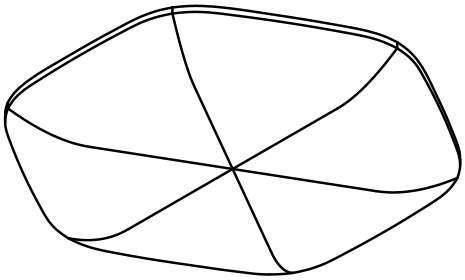


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

FIELD CUTTABLE STEM (OPTIONAL)

1a

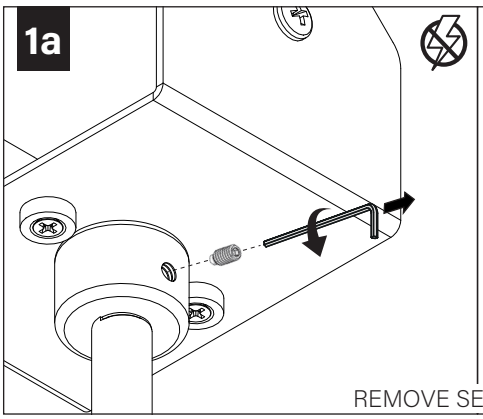


1b

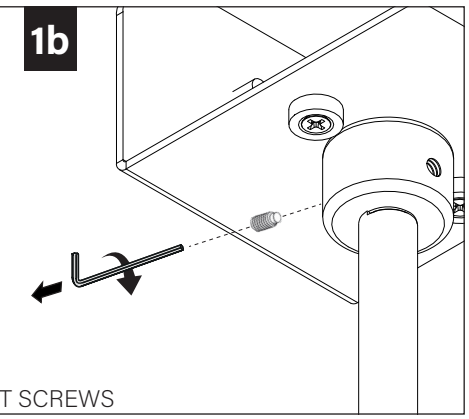


REMOVE SET SCREWS

2

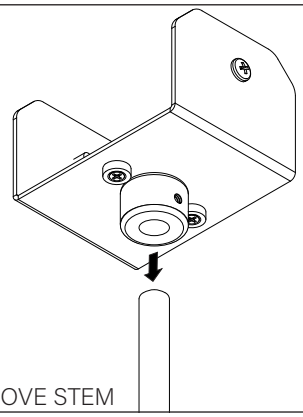


REMOVE STEM

3




MEASURE STEM TO DESIRED LENGTH

4




CUT STEM AND DEBURR INSIDE EDGE

5

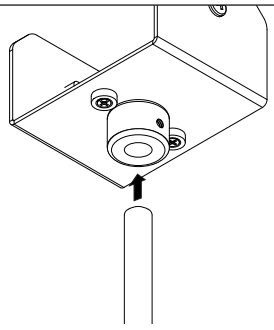


FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

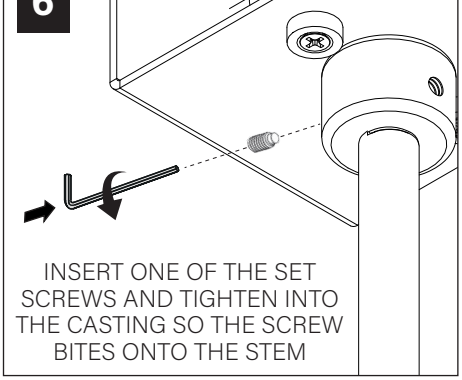


INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM

7

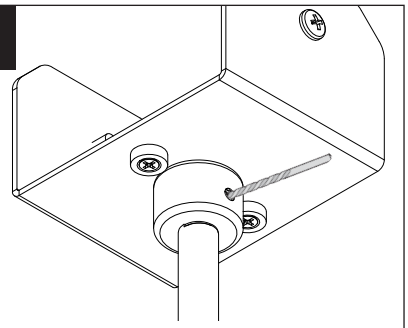


DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

8

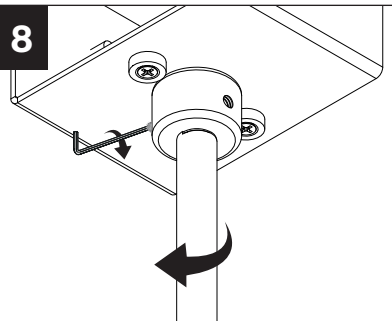


LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

9

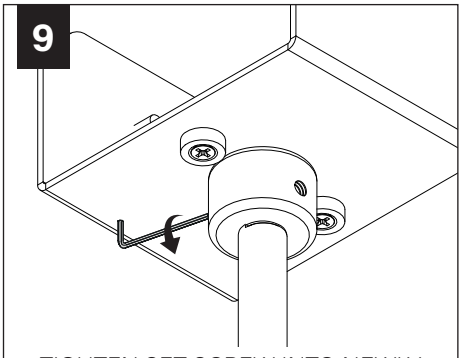


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

10

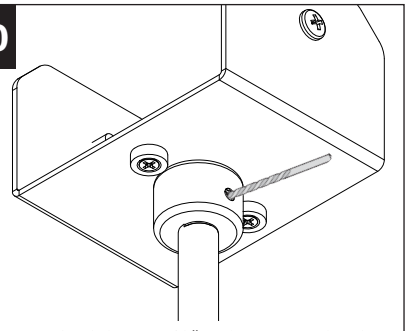

DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

11

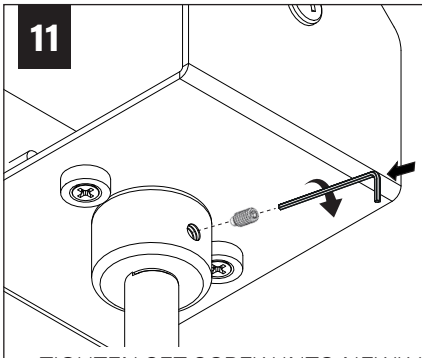


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


MINI POWER CANOPY INSTALLATION

1

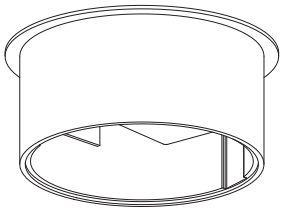


CANOPY ASSEMBLY SHIPS ASSEMBLED

2

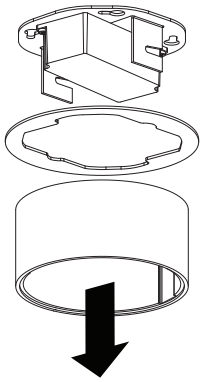


3

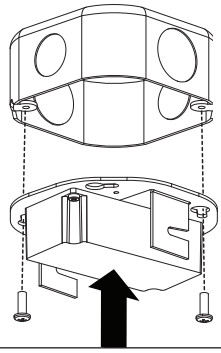

HARDWARE BY OTHERS


MAKE ELECTRICAL CONNECTION

4

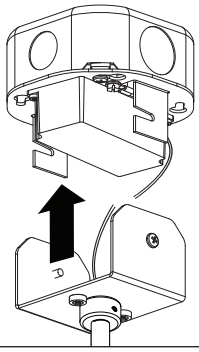


MAKE ELECTRICAL CONNECTION

5

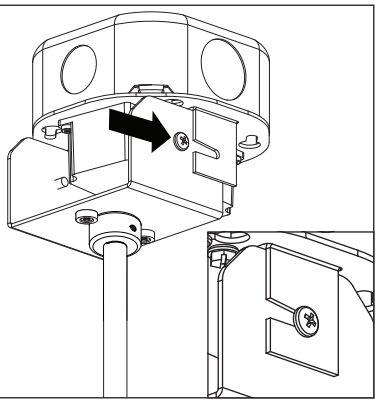


6

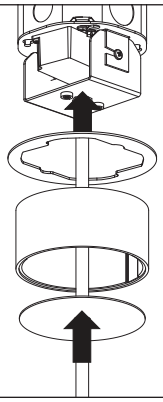

INSTALL CANOPY ASSEMBLY PARTS SIMULTANEOUSLY

7

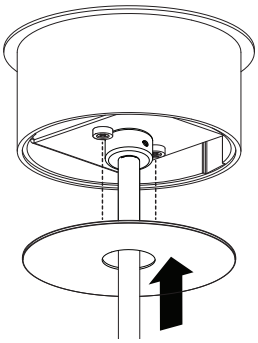


FACE PLATE HELD IN PLACE MAGNETICALLY


DRIVER SERVICE

TURN OFF POWER SOURCE PRIOR TO DRIVER SERVICE

1

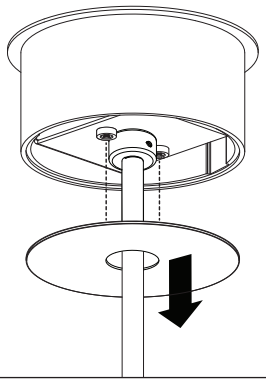


2

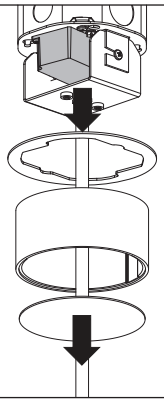


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

LED MODULE


1a

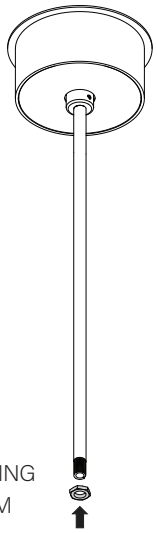

TIGHTEN SPACING NUT TO STEM

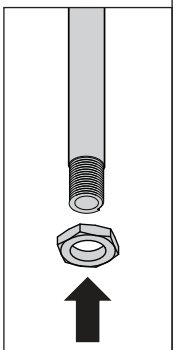


1b

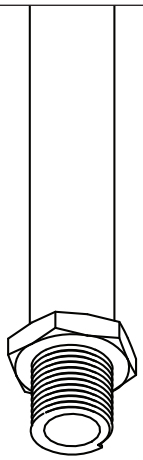


TIGHTEN BY HAND.
DO NOT OVERTIGHTEN.

2

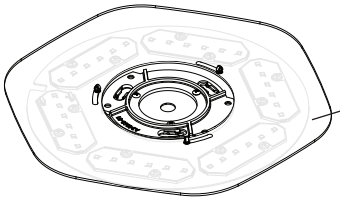


IF LENS POPS OFF, RE-INSTALL WITH SHINY SIDE UP

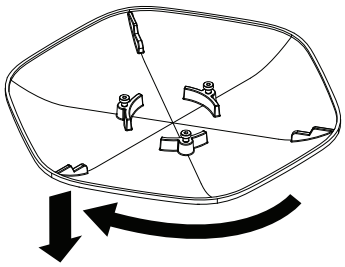


TWIST TO UNLOCK AND REMOVE FACEPLATE FROM LED MODULE


3

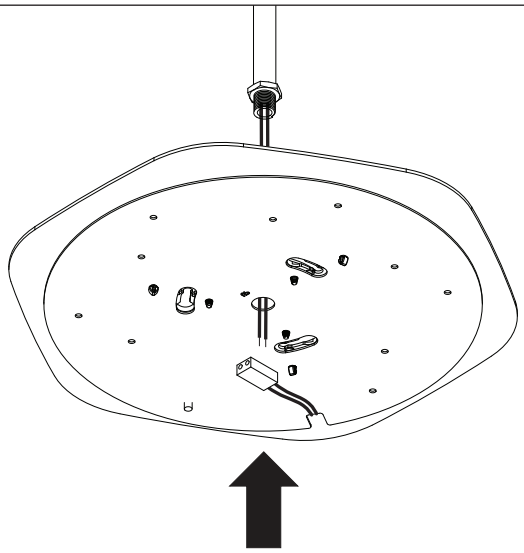


4

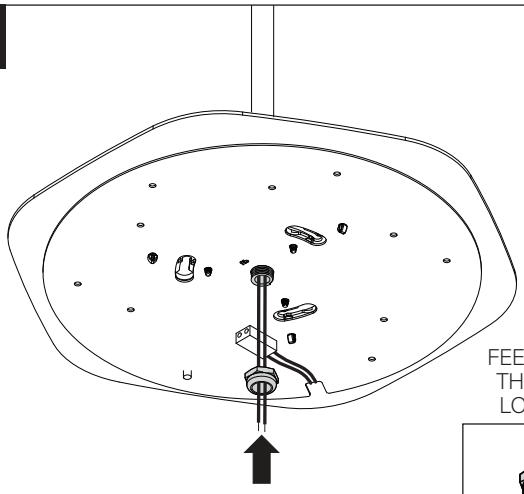

FEED WIRES THROUGH LOCKNUT

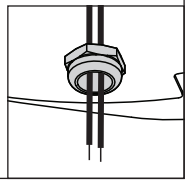


5

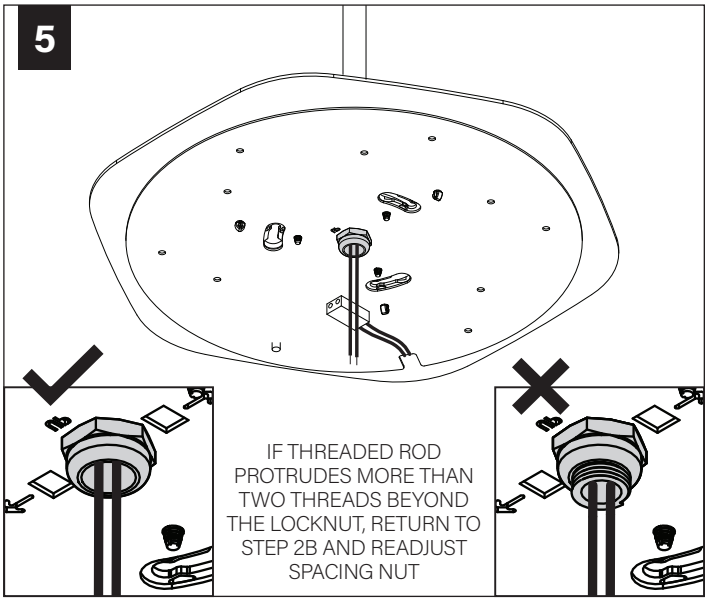

IF THREADED ROD PROTRUDES MORE THAN TWO THREADS BEYOND THE LOCKNUT, RETURN TO STEP 2B AND READJUST SPACING NUT


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

6

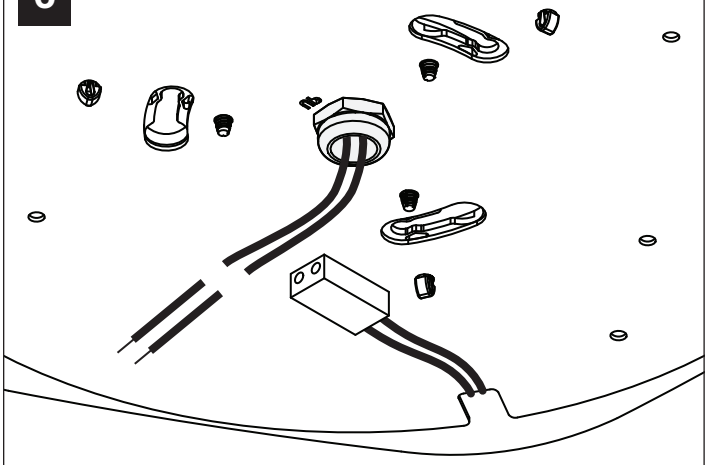

TRIM EXCESS WIRE. ONLY 2" OF WIRE BELOW THE LOCKNUT IS NECESSARY FOR ELECTRICAL CONNECTION. DO NOT EXCEED 3" OF WIRE


7

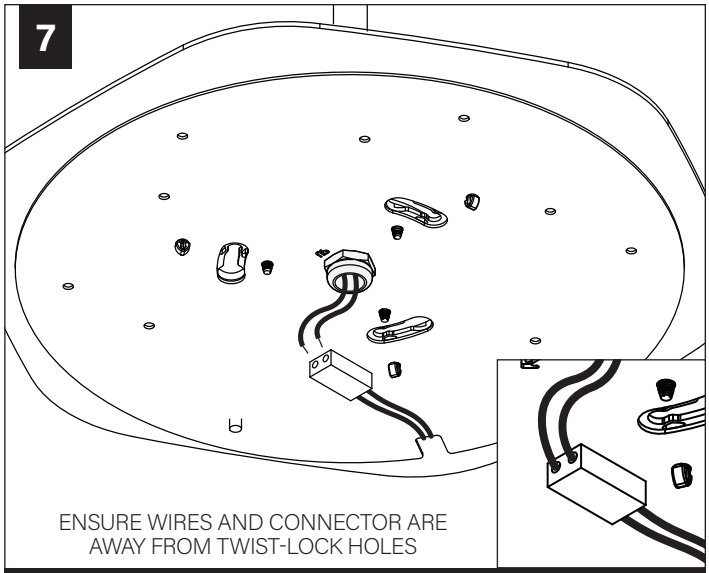

ENSURE WIRES AND CONNECTOR ARE AWAY FROM TWIST-LOCK HOLES


MAKE ELECTRICAL CONNECTION

8

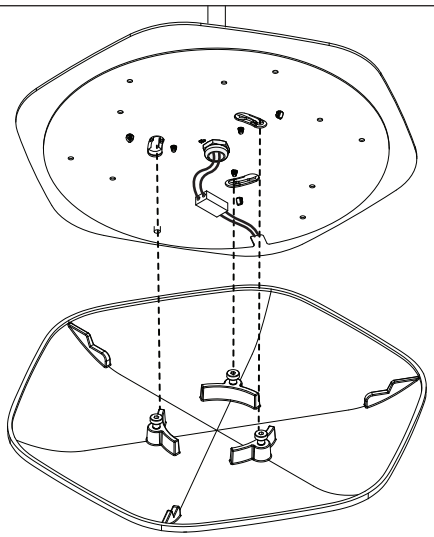


ALIGN PEGS ON FACE PLATE TO SLOTS ON LED MODULE.
ENSURE LENS ALIGNS WITH FACE PLATE UPON FINAL INSTALLATION.

9

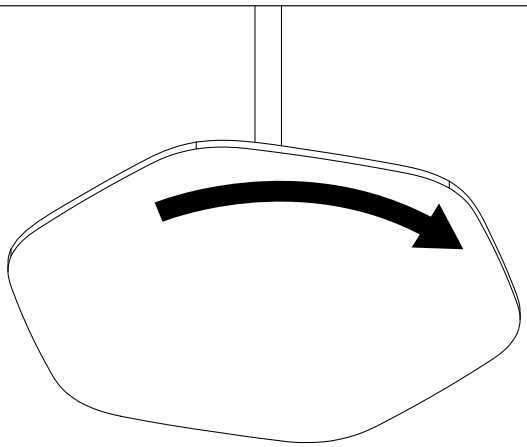

TWIST AND LOCK FACEPLATE INTO PLACE.
FOR MINOR ADJUSTMENTS TO ORIENTATION, CONTINUE ROTATING CLOCKWISE AFTER LOCKING INTO PLACE.
FOR LARGER ADJUSTMENTS, REMOVE FACEPLATE/LOCKNUT, REPOSITION LED MODULE AND RETURN TO STEP 4 ABOVE.

10

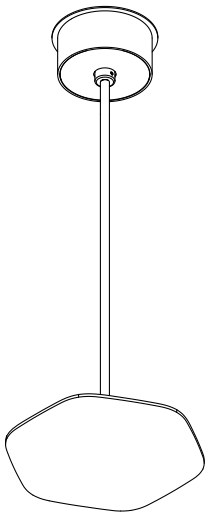

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference