

# Polina™ Indirect Pendant

PENDANT | FPOLP-SHX-10-RPS



## BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

## INSTRUCTION KEY



**ATTENTION**



**SEE ADDITIONAL  
INSTRUCTIONS**



**POWER OFF**



**POWER ON**

## HANDLING & CLEANING




Use can of compressed air to remove dust and debris from dust cover.




Lightly wipe dust cover with damp cloth. Do not leave excess moisture on surface.

## LIGHT ENGINE

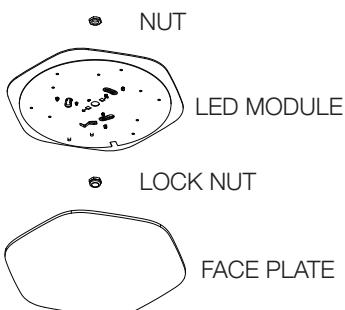


## STEM MOUNT

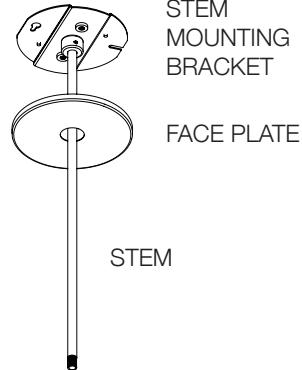


## SHIPPED INSTALLED

#8-32X5/16" HALF DOG NOSE  
SET SCREWS


## REMOTE POWER SYSTEM

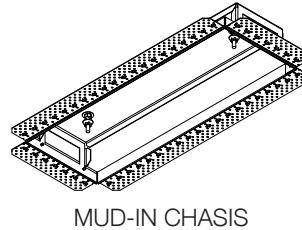


MUD-IN CHASIS

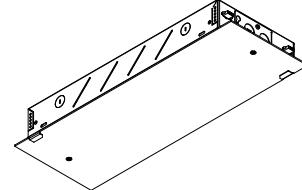


MUD-IN REMOTE POWER BOX

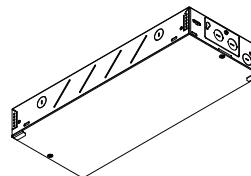


OPEN CEILING REMOTE POWER BOX

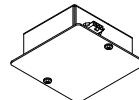


CONVERTER J-BOX

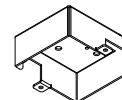

RPS J-BOX

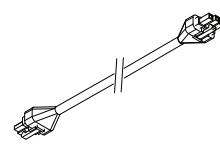


LOW VOLTAGE CABLE

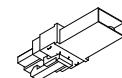


TERMINATOR

## REMOTE POWER SYSTEM - MUD-IN DRYWALL

1

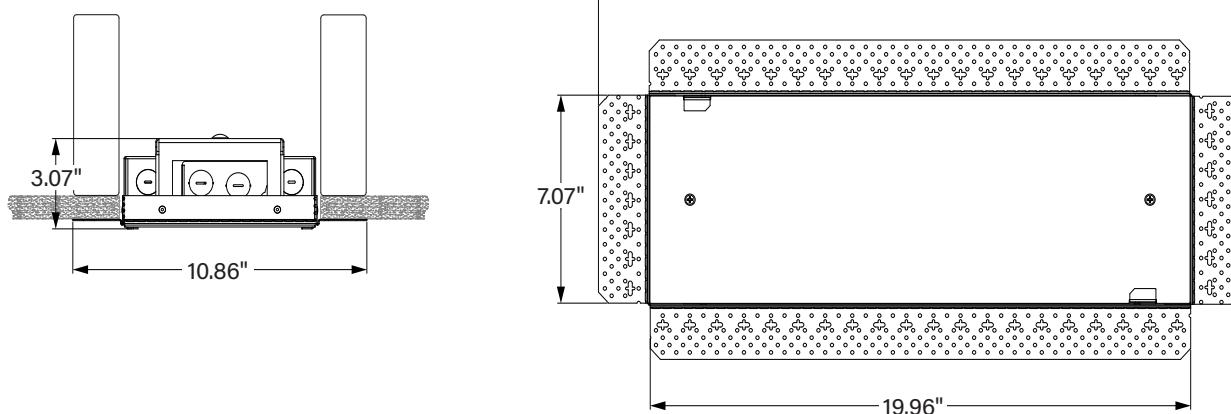


1

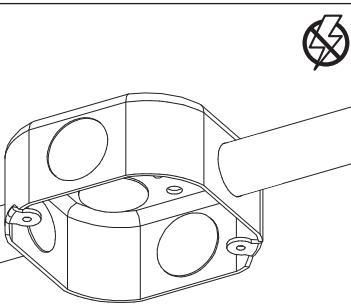


INSTALL J-BOX AND WIRING PRIOR TO DRYWALL INSTALLATION

2

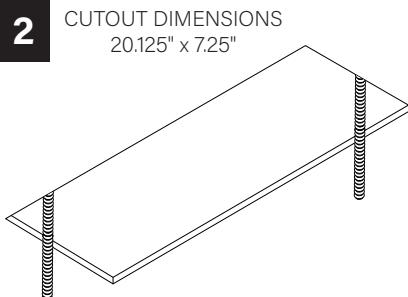


CUTOUT DIMENSIONS  
20.125" x 7.25"

3

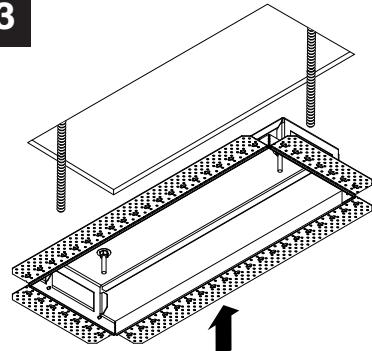


4

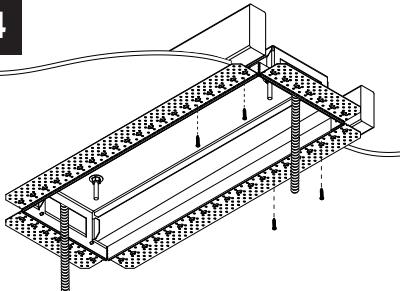


DRYWALL INSTALLS BEHIND MUD FLANGE  
STAGGER SCREWS (#8 FLAT UNDERCUT  
HEAD SCREW BY OTHERS)

5

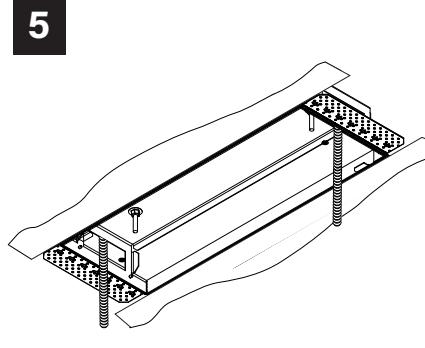


MUD AND TAPE


6

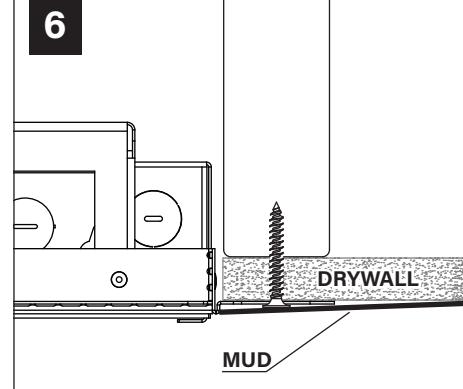


7

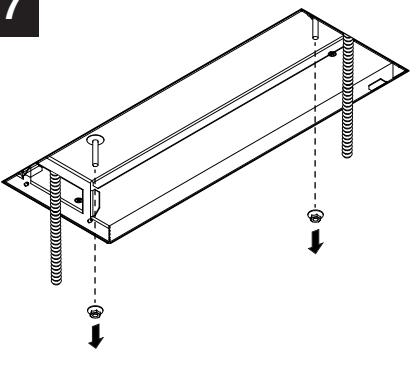







8

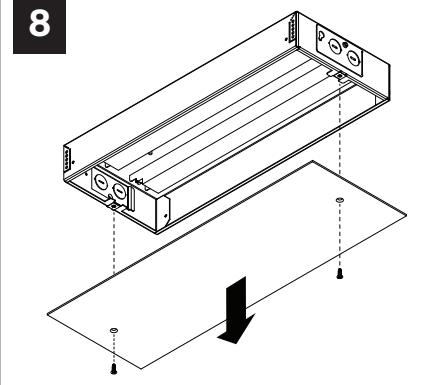




9

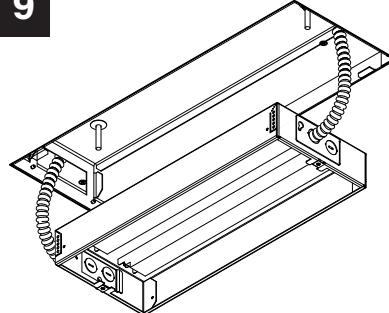



MAKE ELECTRICAL CONNECTION

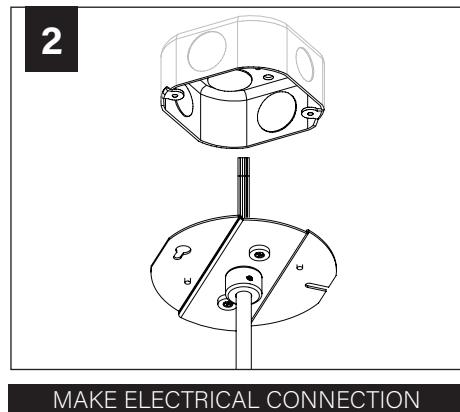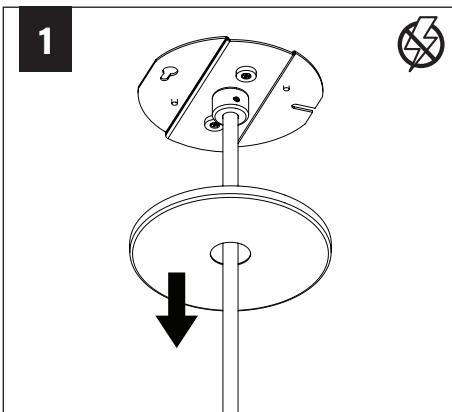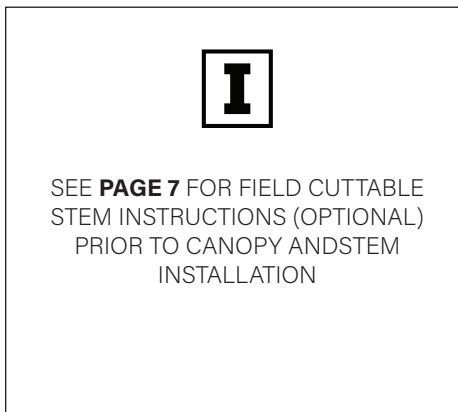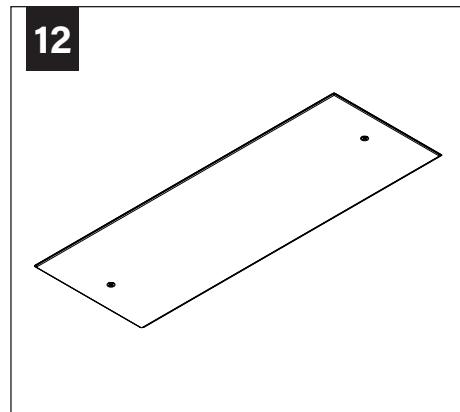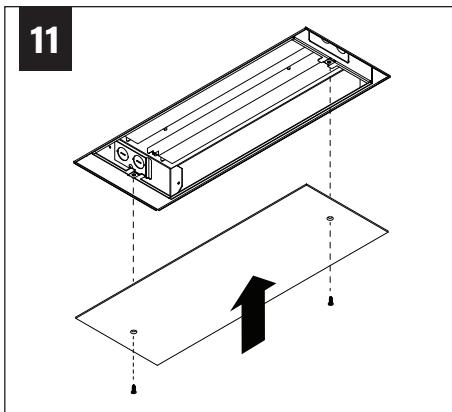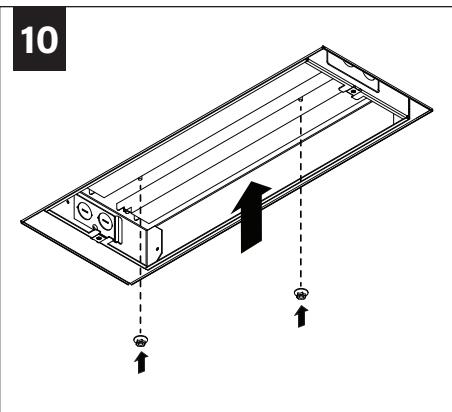

MAKE ELECTRICAL CONNECTION

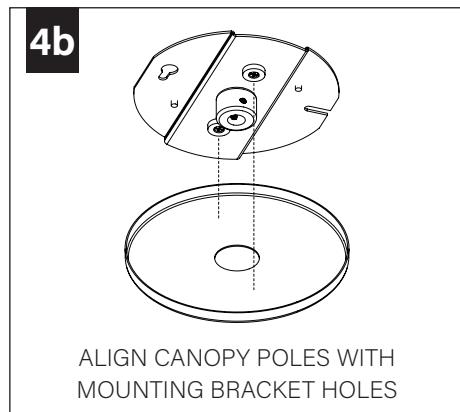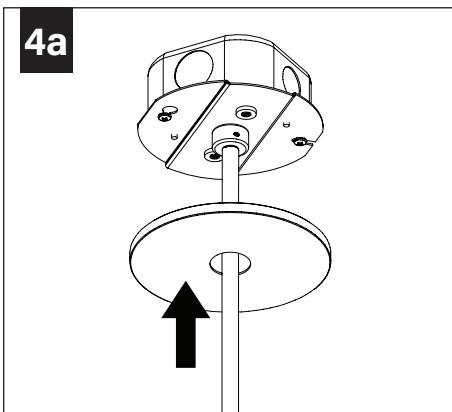
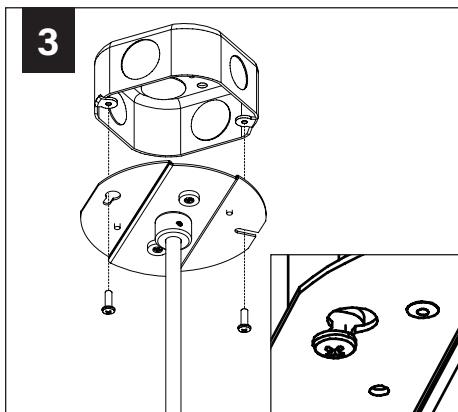


ALIGN CANOPY POLES WITH  
MOUNTING BRACKET HOLES

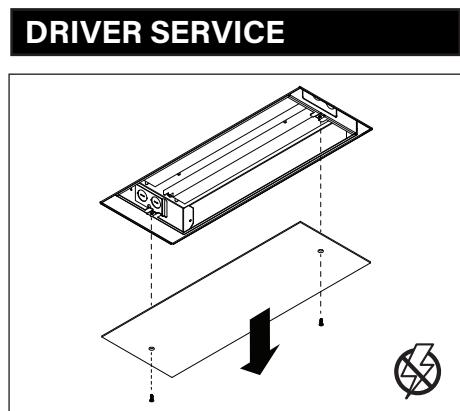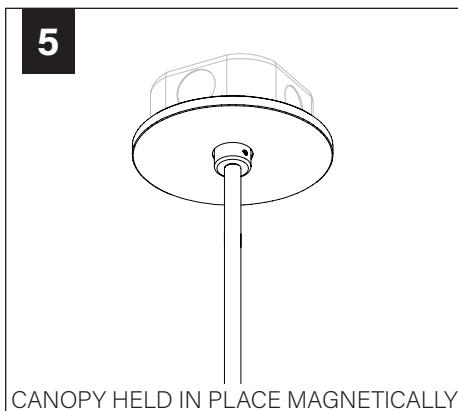


## REMOTE POWER SYSTEM - OPEN CEILING


1

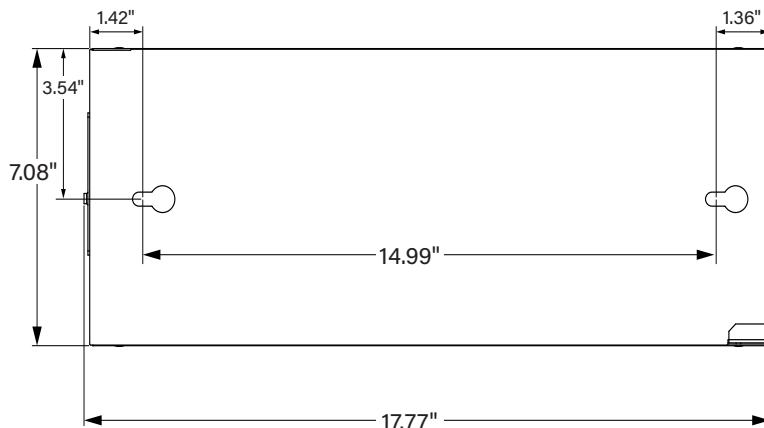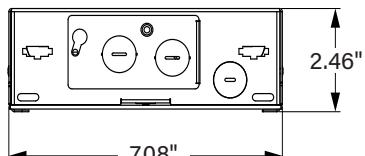


2

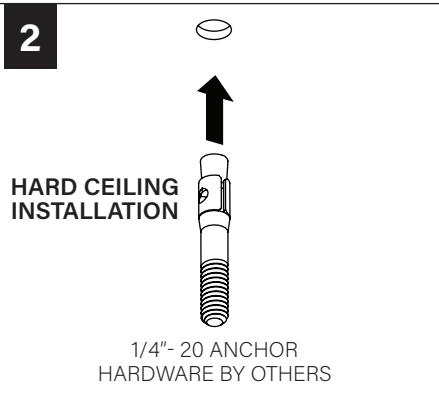


2

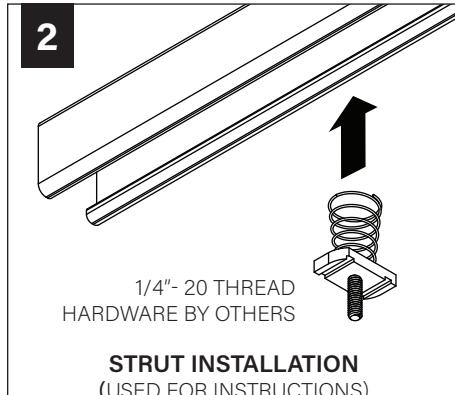


3

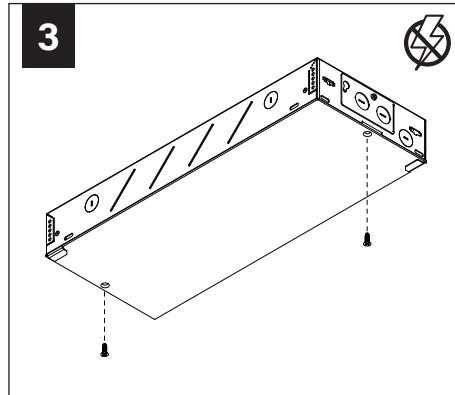


4

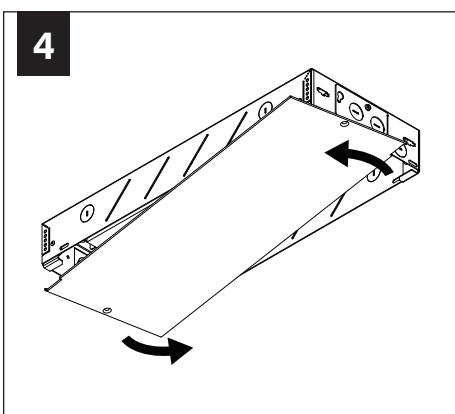


5

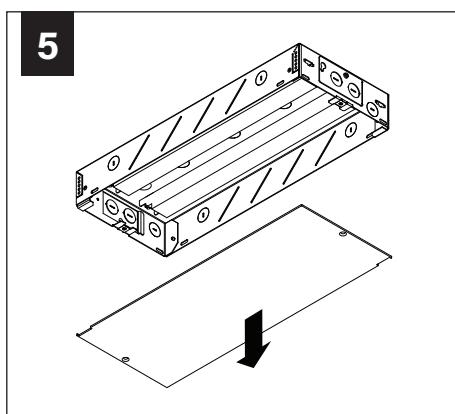


6

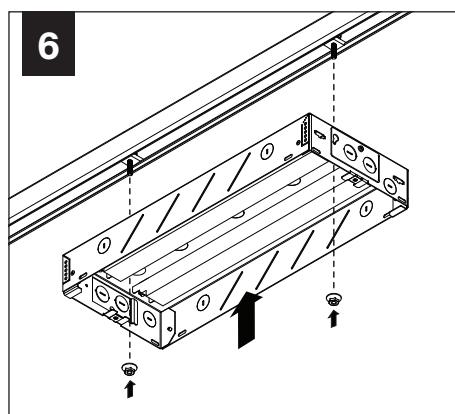


7

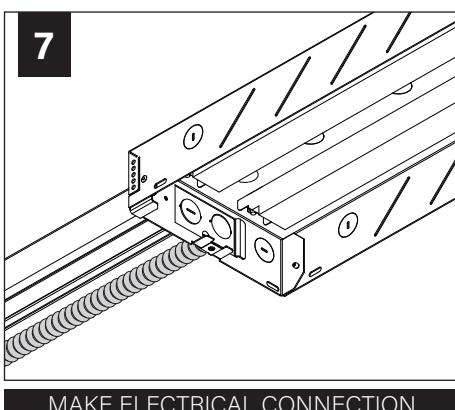







8

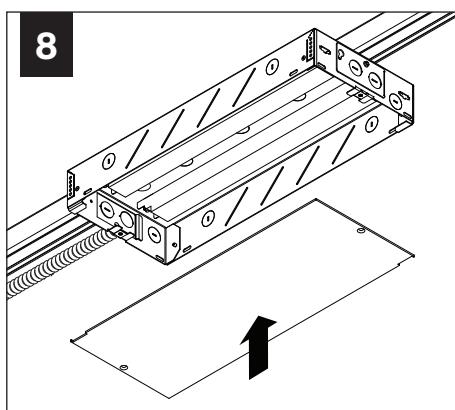


9

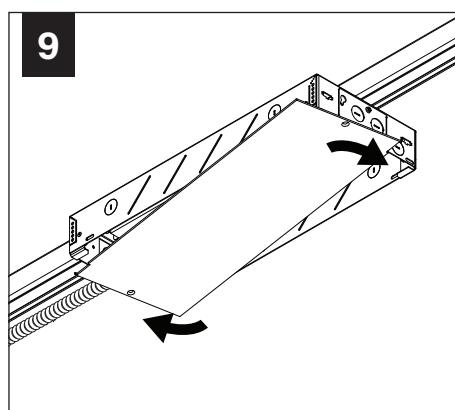


MAKE ELECTRICAL CONNECTION

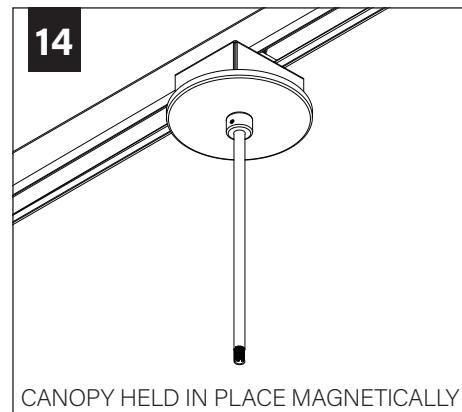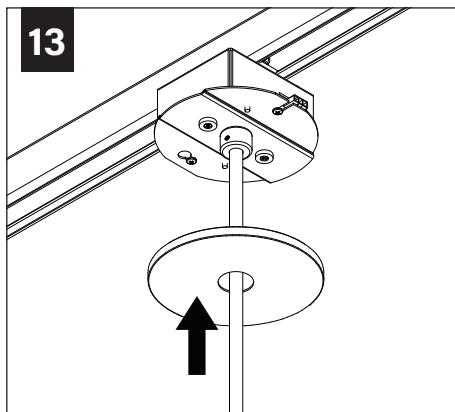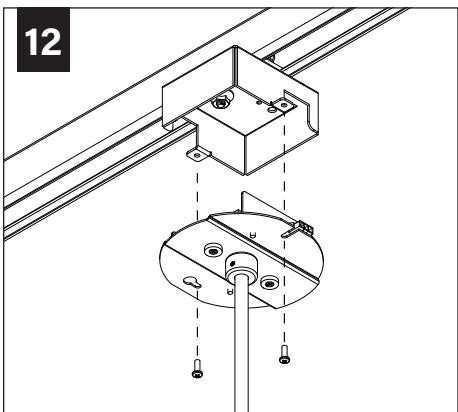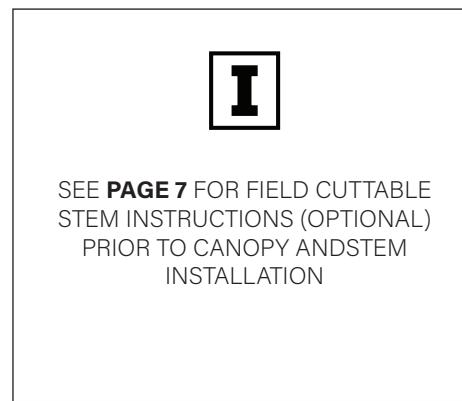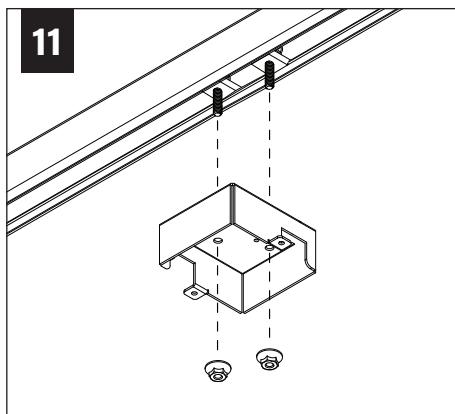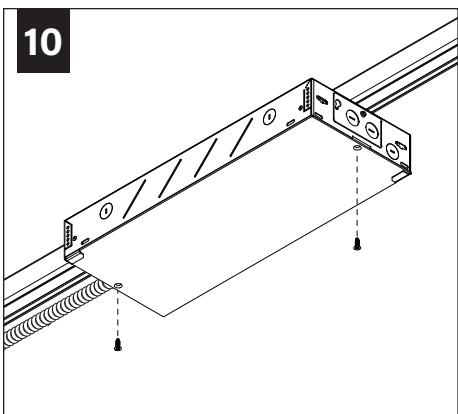


CANOPY HELD IN PLACE MAGNETICALLY

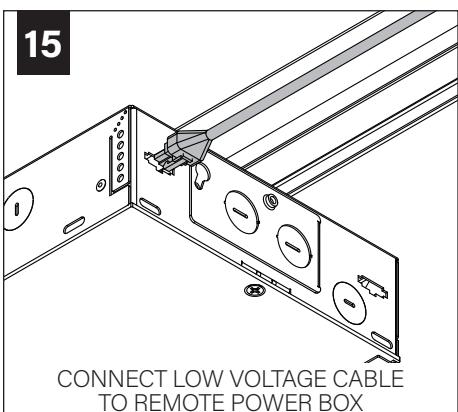


CONNECT LOW VOLTAGE CABLE TO REMOTE POWER BOX

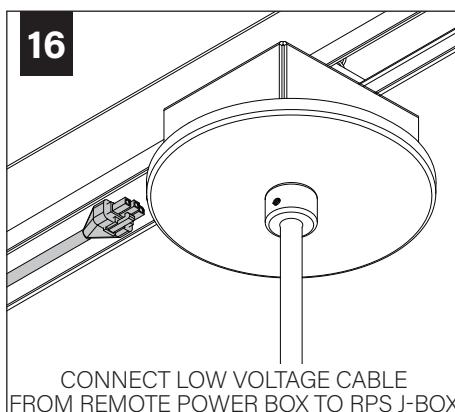


CONNECT LOW VOLTAGE CABLE FROM REMOTE POWER BOX TO RPS J-BOX

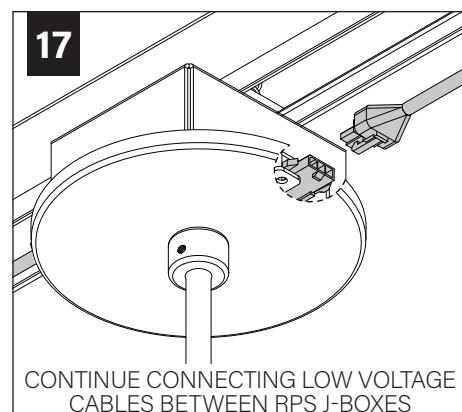




CONTINUE CONNECTING LOW VOLTAGE CABLES BETWEEN RPS J-BOXES

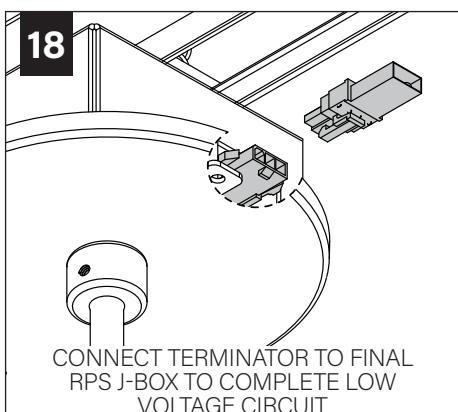








CONNECT TERMINATOR TO FINAL RPS J-BOX TO COMPLETE LOW VOLTAGE CIRCUIT

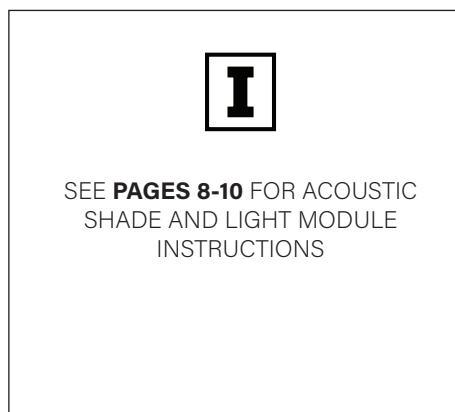












## DRIVER SERVICE

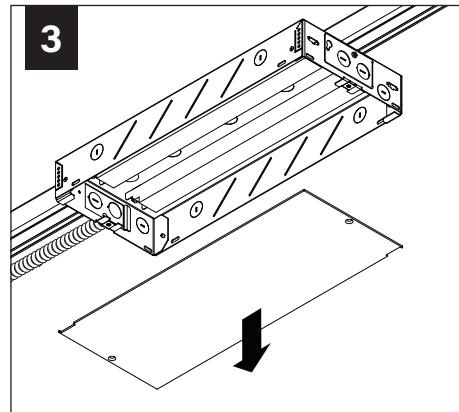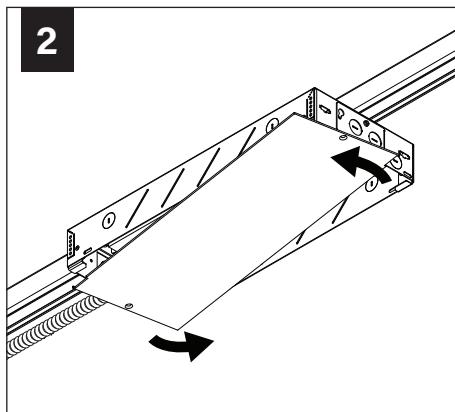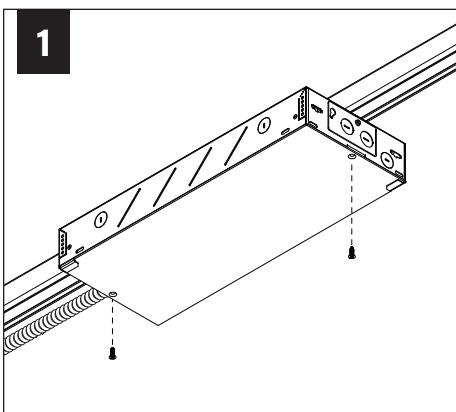







## TRANSITIONAL CEILING

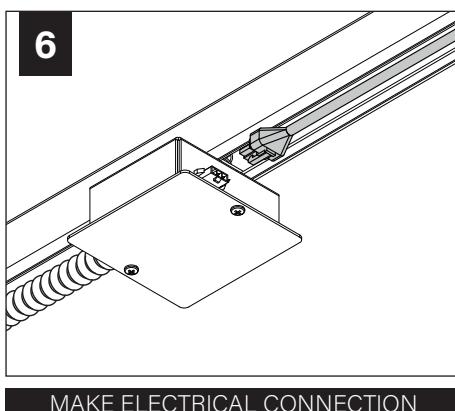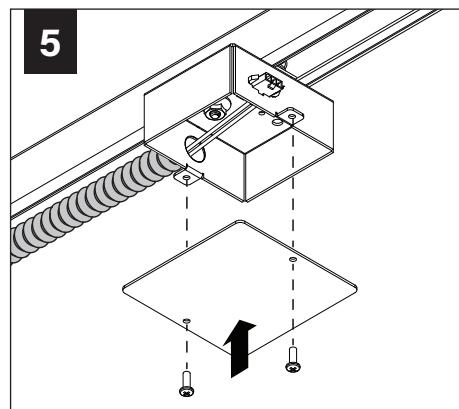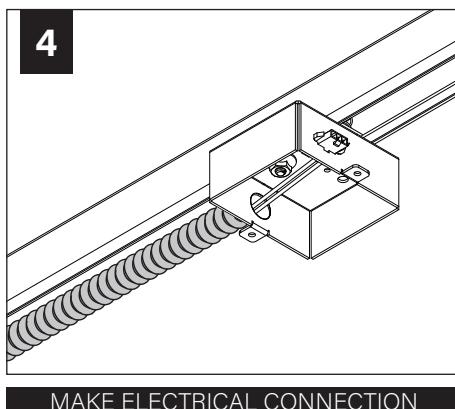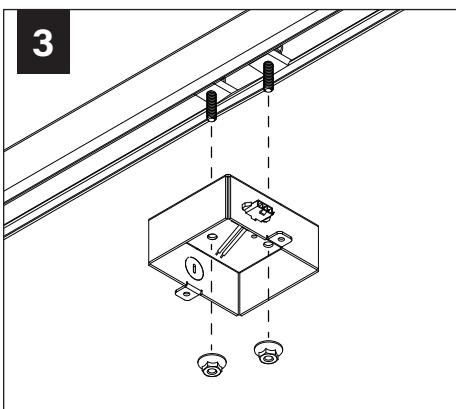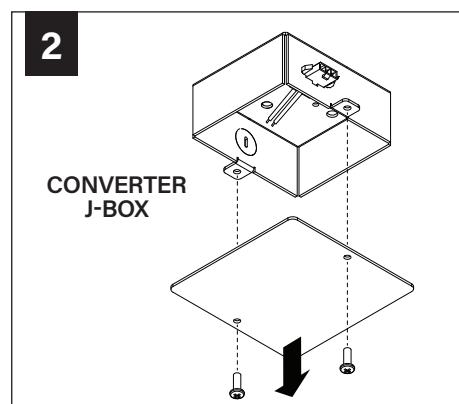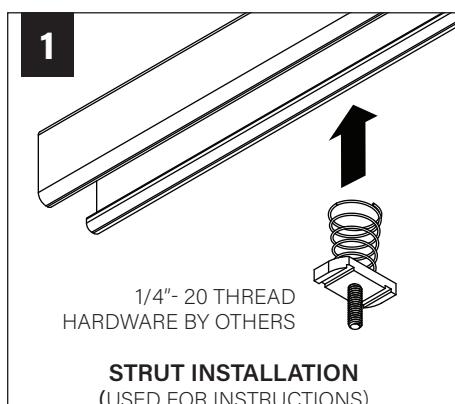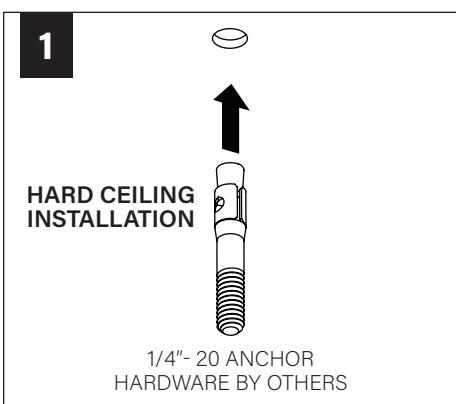


## FIELD CUTTABLE STEM (OPTIONAL)

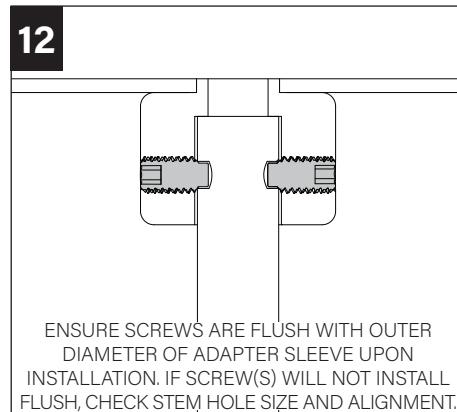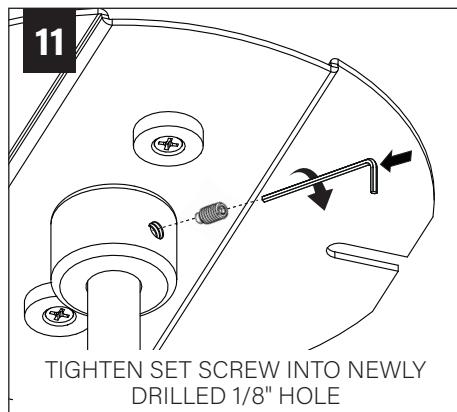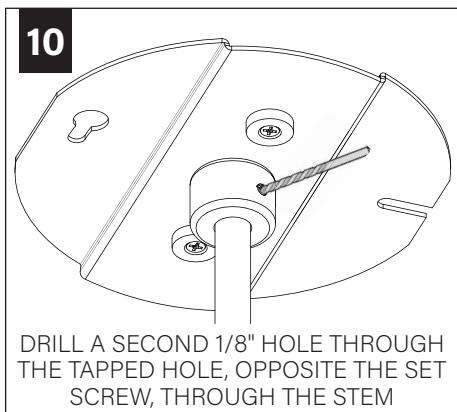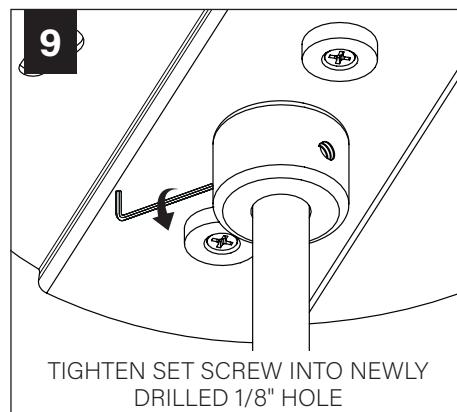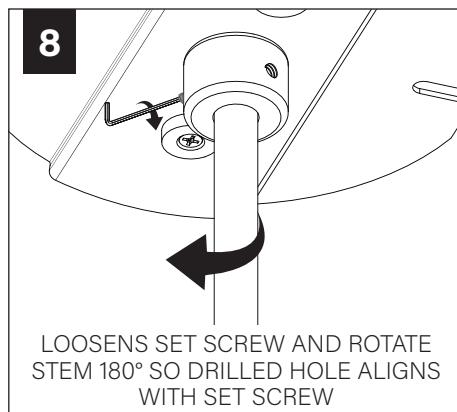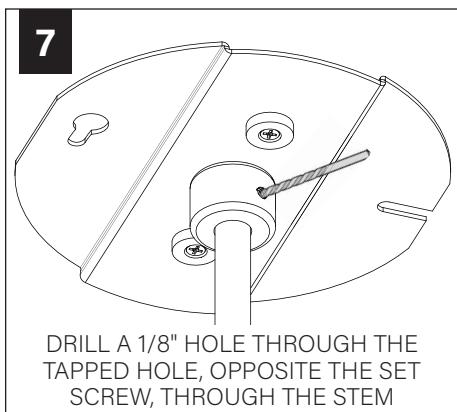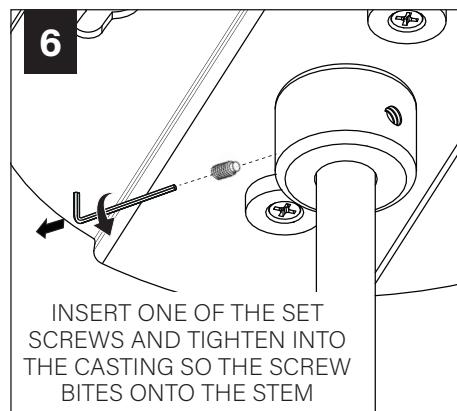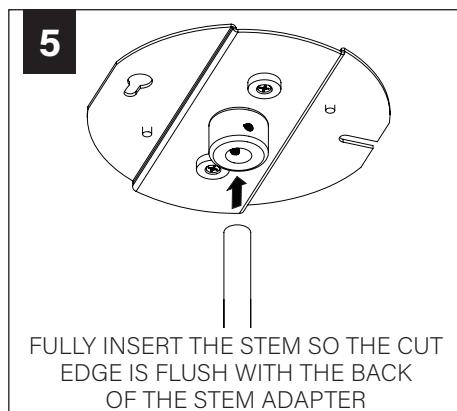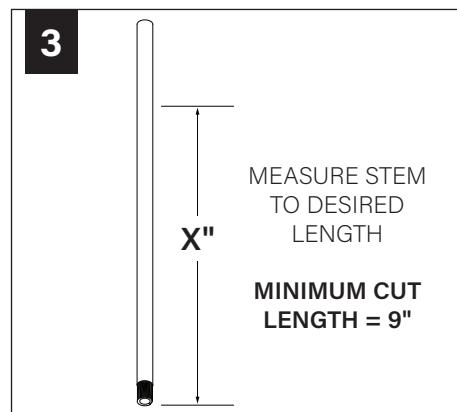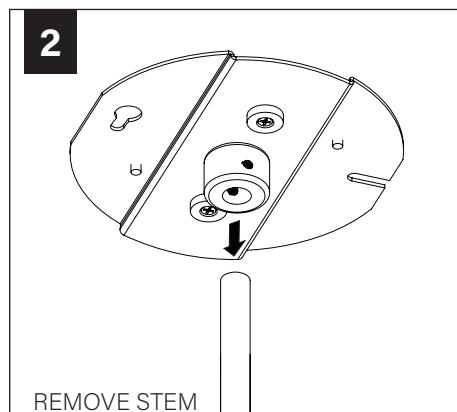
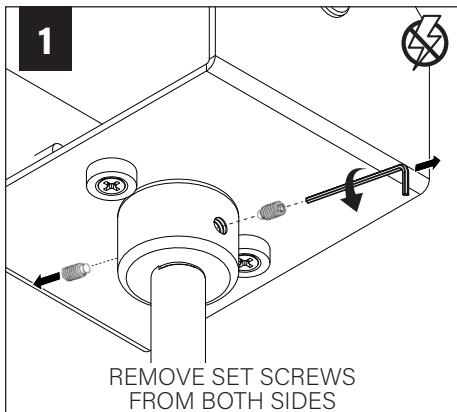


## LED MODULE

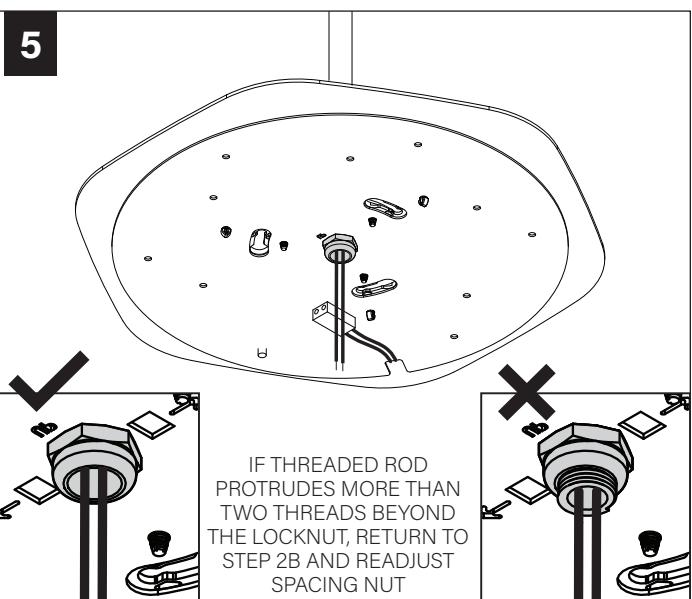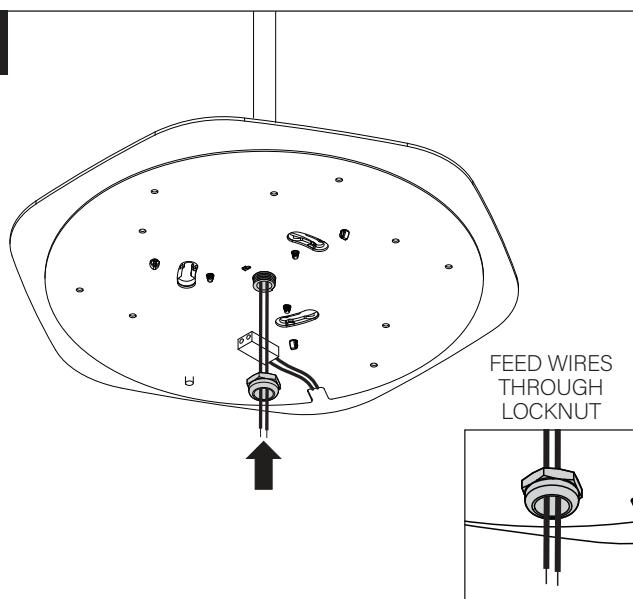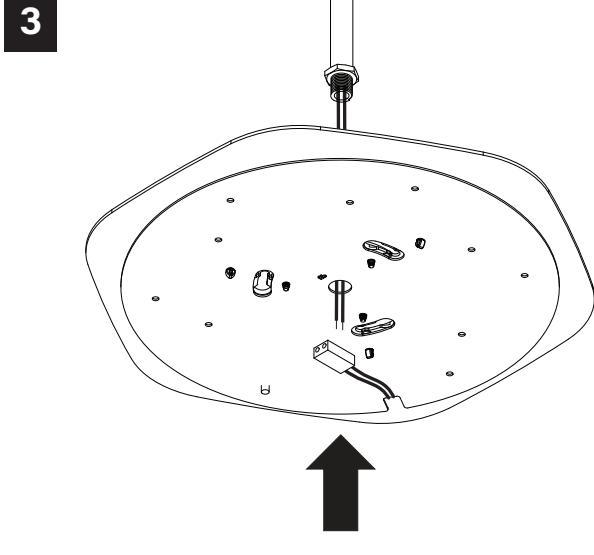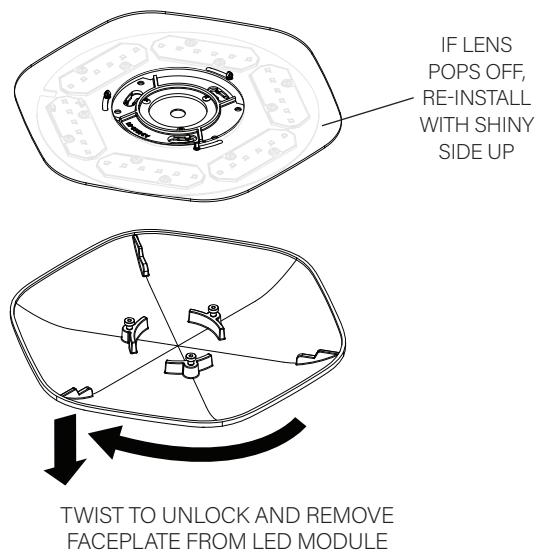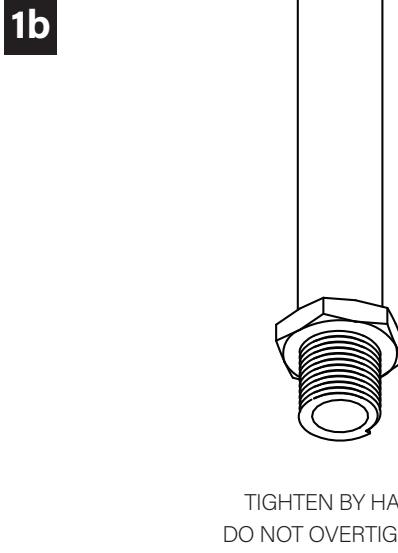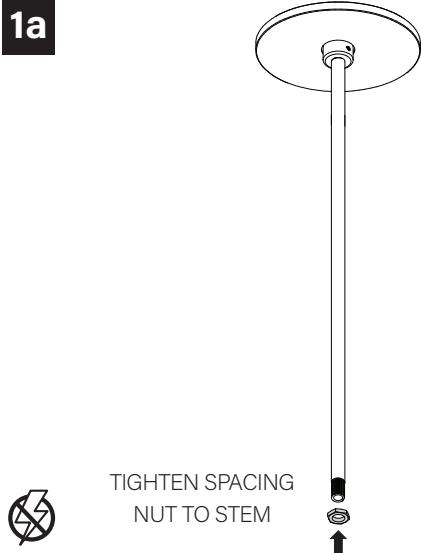


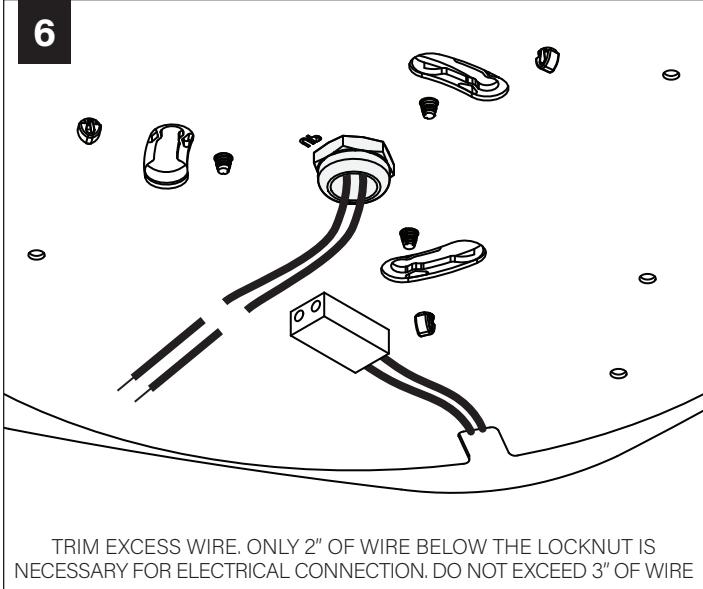**6**

TRIM EXCESS WIRE. ONLY 2" OF WIRE BELOW THE LOCKNUT IS  
NECESSARY FOR ELECTRICAL CONNECTION. DO NOT EXCEED 3" OF WIRE

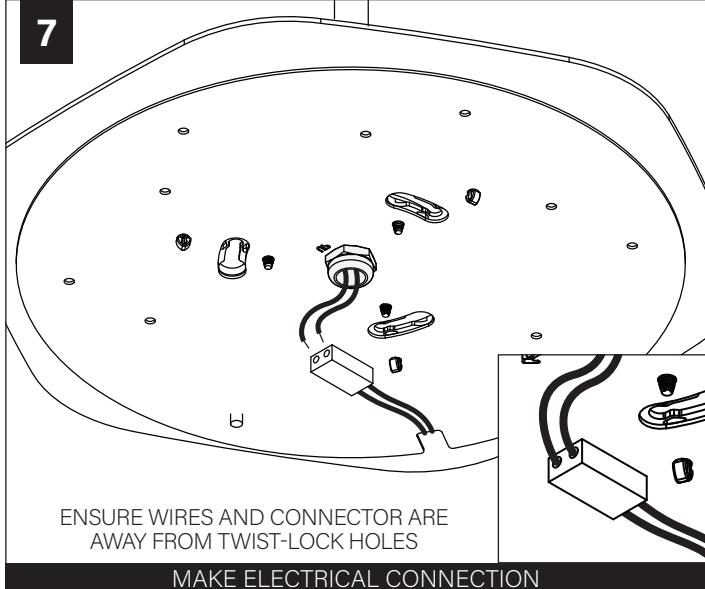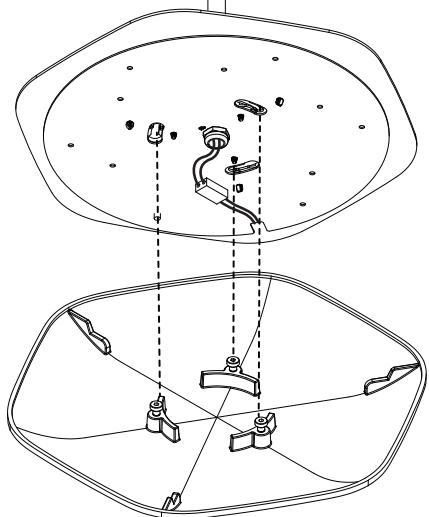**7****8**

ALIGN PEGS ON FACE PLATE TO SLOTS ON LED MODULE.  
ENSURE LENS ALIGNS WITH FACE PLATE UPON FINAL INSTALLATION.

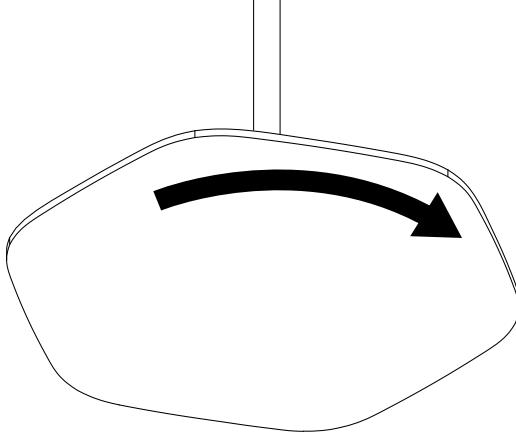**9**

TWIST AND LOCK FACEPLATE UNTIL IT CLICKS INTO PLACE.  
FOR MINOR ADJUSTMENTS TO ORIENTATION, CONTINUE  
ROTATING CLOCKWISE AFTER LOCKING INTO PLACE.  
FOR LARGER ADJUSTMENTS, REMOVE FACEPLATE/LOCKNUT,  
REPOSITION LED MODULE AND RETURN TO STEP 4 ABOVE.

**10**