Polina® Indirect Pendant

PENDANT | FPOLP-SHX-10-RSC | FPOLP-RND-9-RSC | RPSPOL

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS

POWER OFF

POWER ON


HANDLING & CLEANING

Use can of compressed air to remove dust and debris from dust cover.


Lighty wipe dust cover with damp cloth. Do not leave excess moisture on surface.

COMPONENT KEY

LIGHT ENGINE - SOFT HEXAGON

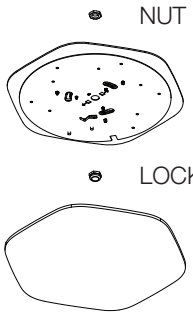

LIGHT ENGINE - ROUND

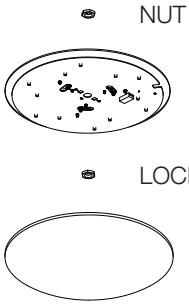


SHIPPED INSTALLED




#8-32X5/16" HALF DOG NOSE SET SCREWS


STEM MOUNT

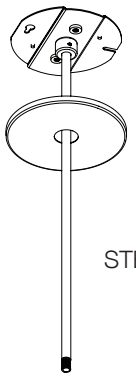


REMOTE POWER SYSTEM

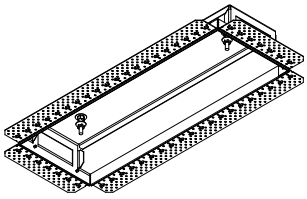


MUD-IN CHASIS

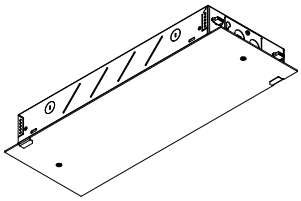


MUD-IN REMOTE POWER BOX

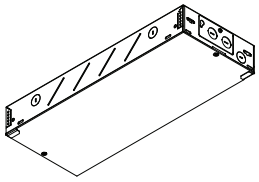


OPEN CEILING REMOTE POWER BOX




CONVERTER J-BOX



RPS J-BOX

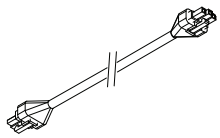

LOW VOLTAGE CABLE




TERMINATOR


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

REMOTE POWER SYSTEM - MUD-IN DRYWALL

1

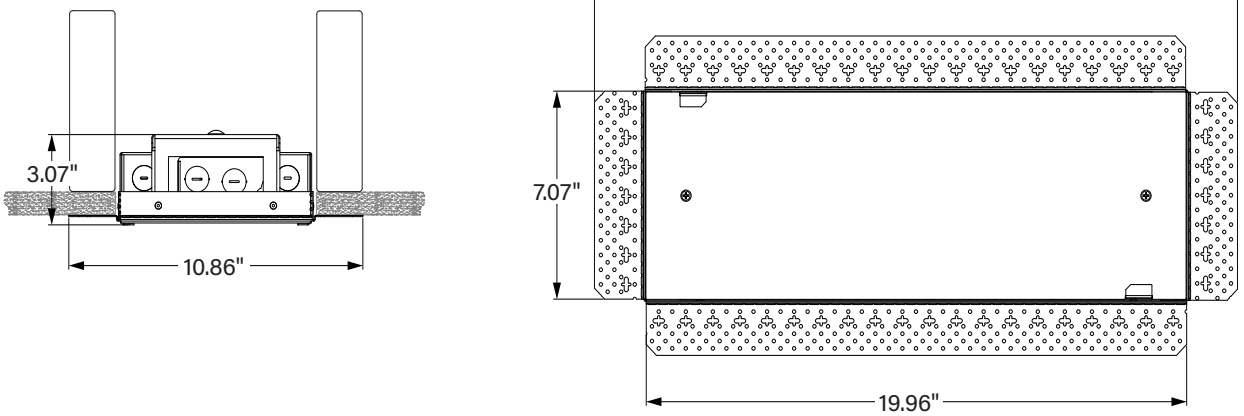


1

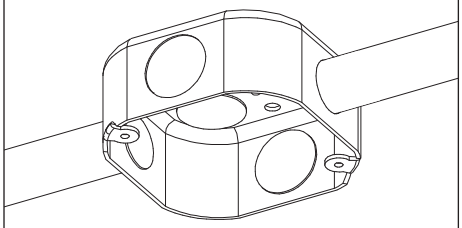

INSTALL J-BOX AND WIRING PRIOR TO DRYWALL INSTALLATION


2

CUTOUT DIMENSIONS
20.125" x 7.25"

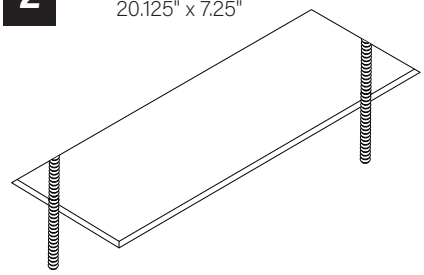


MAIN POWER FEED AND FEED TO J-BOXES MUST BE ACCESSABLE FROM BELOW CEILING POST DRYWALL

3

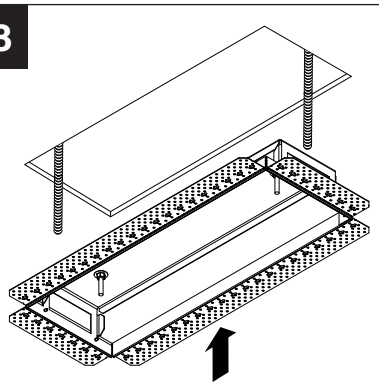


4

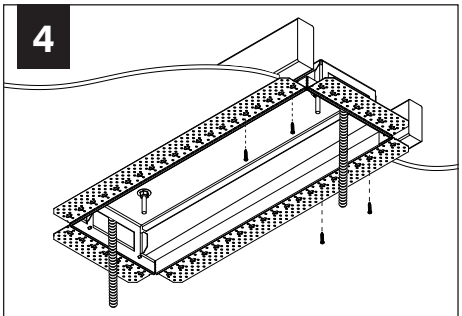


DRYWALL INSTALLS BEHIND MUD FLANGE STAGGER SCREWS (#8 FLAT UNDERCUT HEAD SCREW BY OTHERS)

5

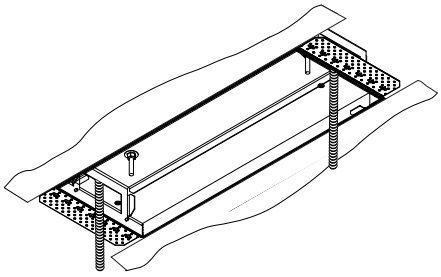


MUD AND TAPE


6

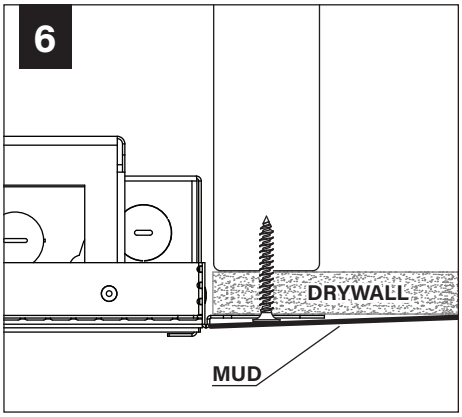


7

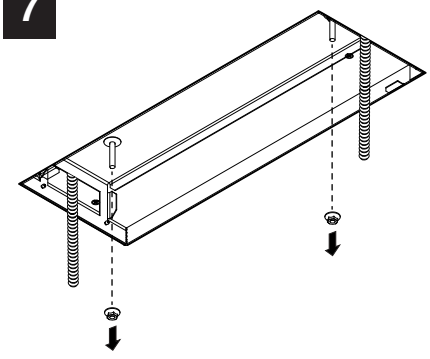

8

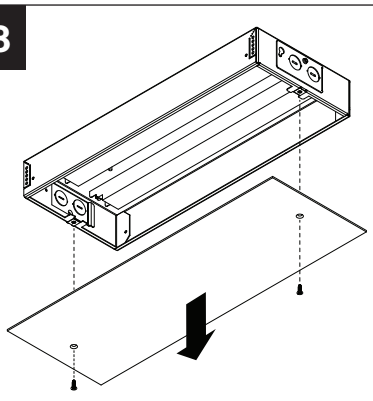


9

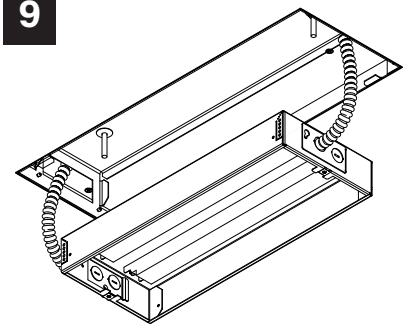


MAKE ELECTRICAL CONNECTION

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


10

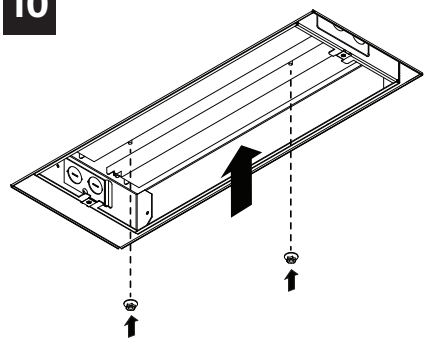

11

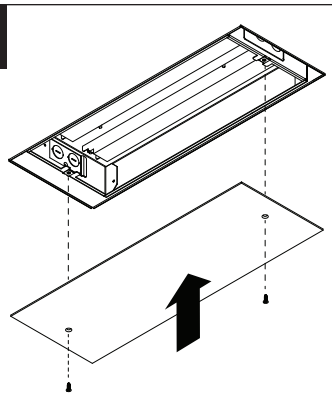


12

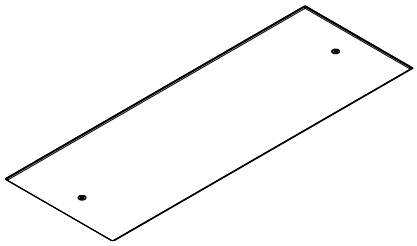


SEE **PAGE 7** FOR FIELD CUTTABLE STEM INSTRUCTIONS (OPTIONAL) PRIOR TO CANOPY ANDSTEM INSTALLATION

1

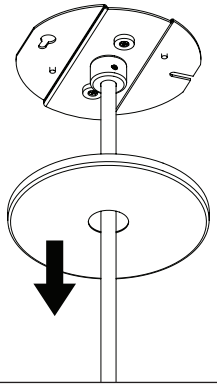


2

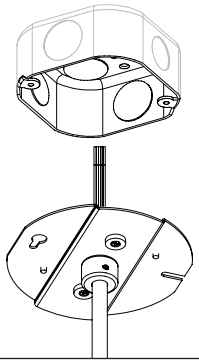


MAKE ELECTRICAL CONNECTION


3

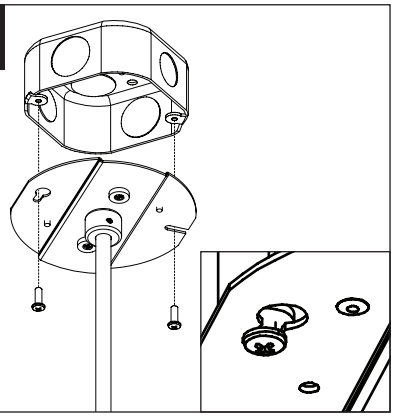

4a

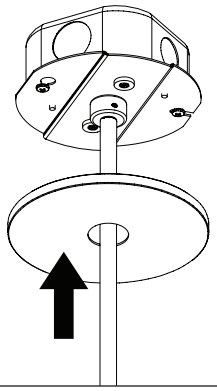


4b

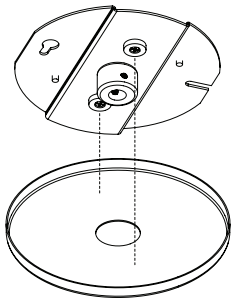

ALIGN CANOPY POLES WITH MOUNTING BRACKET HOLES


5

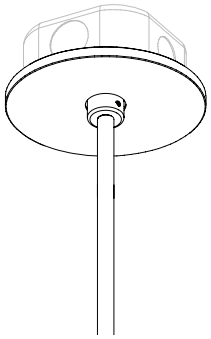

CANOPY HELD IN PLACE MAGNETICALLY

SEE **PAGES 8-10** FOR ACOUSTIC SHADE AND LIGHT MODULE INSTRUCTIONS


DRIVER SERVICE

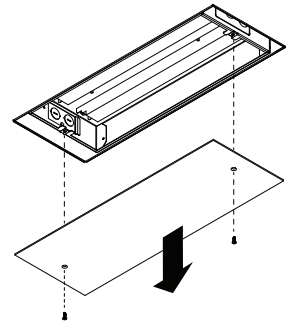


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

REMOTE POWER SYSTEM - OPEN CEILING

1

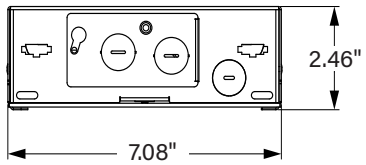

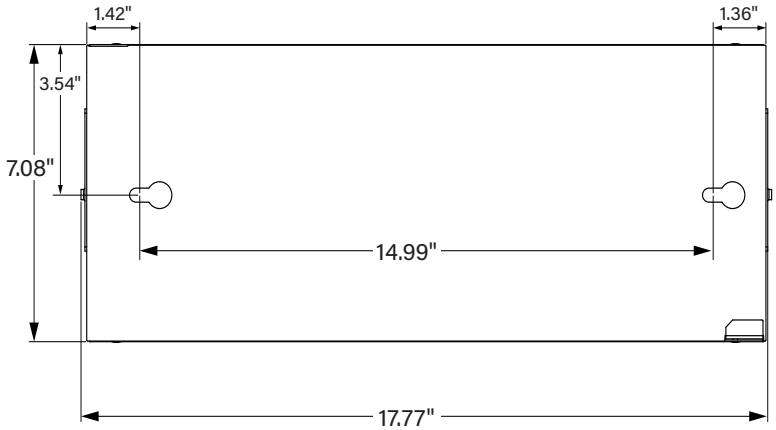


2



HARD CEILING INSTALLATION

1/4"- 20 ANCHOR
HARDWARE BY OTHERS


2

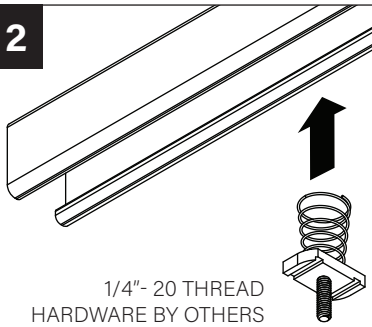


1/4"- 20 THREAD
HARDWARE BY OTHERS

STRUT INSTALLATION
(USED FOR INSTRUCTIONS)


3

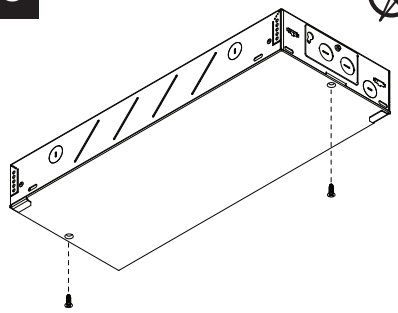


4

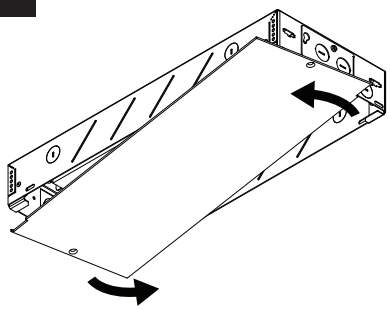


5

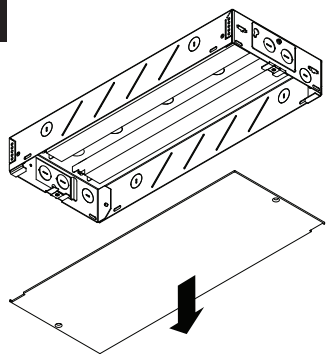

6

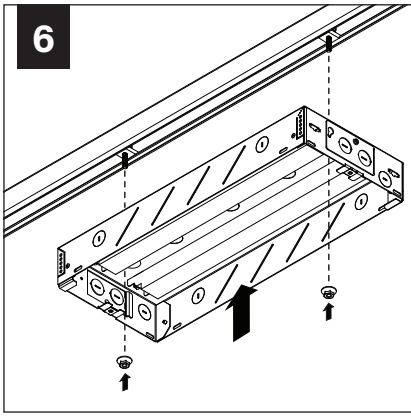


7

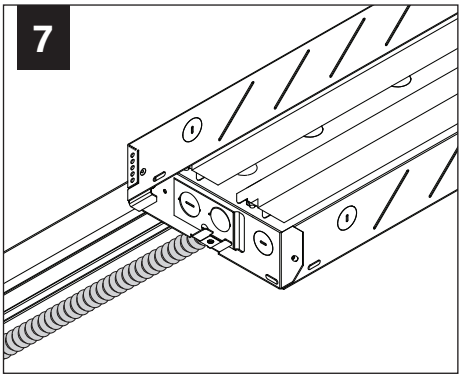


MAKE ELECTRICAL CONNECTION

8

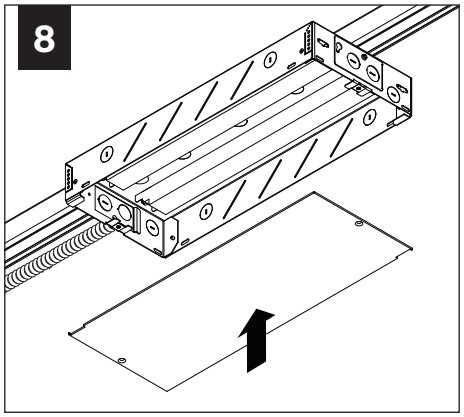


9

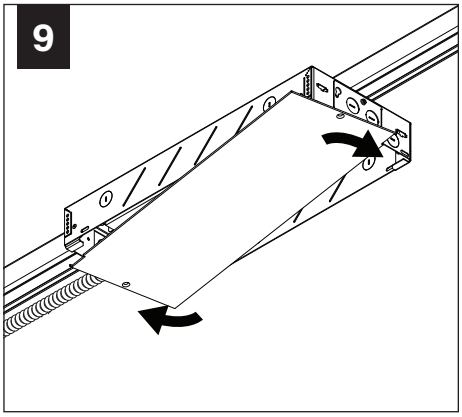


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

10

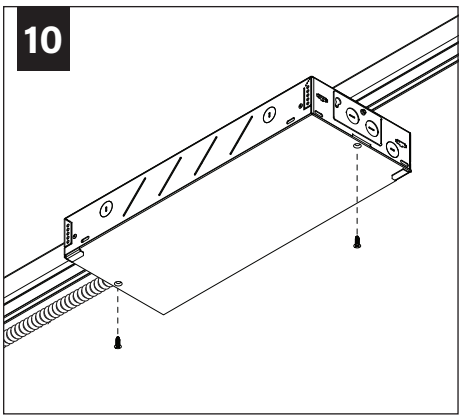


11

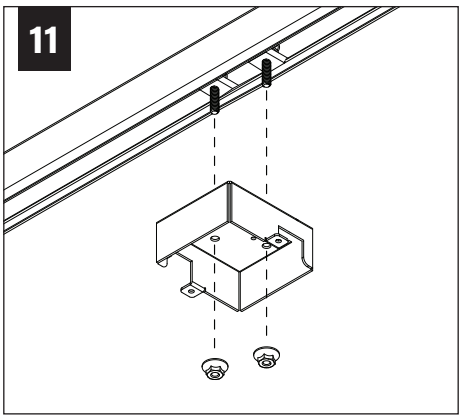


SEE **PAGE 7** FOR FIELD CUTTABLE STEM INSTRUCTIONS (OPTIONAL) PRIOR TO CANOPY ANDSTEM INSTALLATION


12

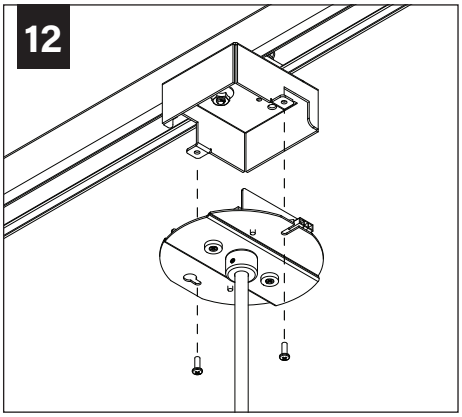

13

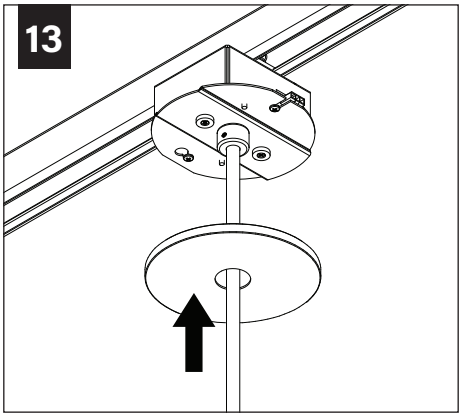


14

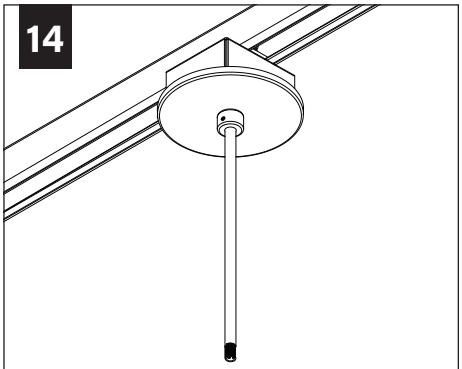


CANOPY HELD IN PLACE MAGNETICALLY

15

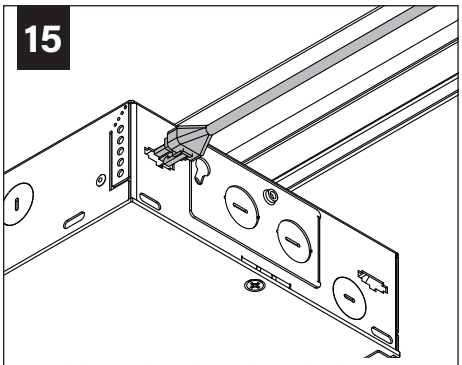


CONNECT LOW VOLTAGE CABLE TO REMOTE POWER BOX

16

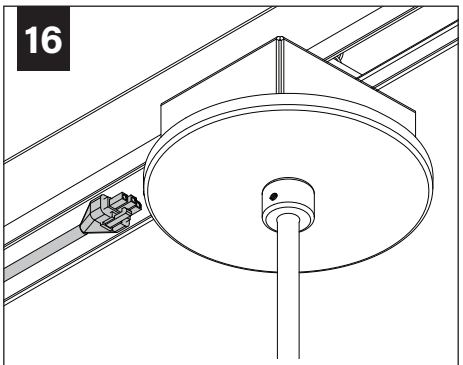


CONNECT LOW VOLTAGE CABLE FROM REMOTE POWER BOX TO RPS J-BOX

17

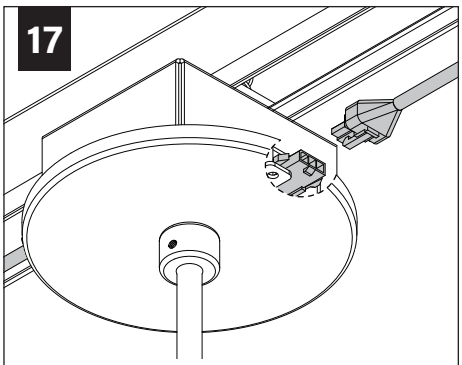

CONTINUE CONNECTING LOW VOLTAGE CABLES BETWEEN RPS J-BOXES

18

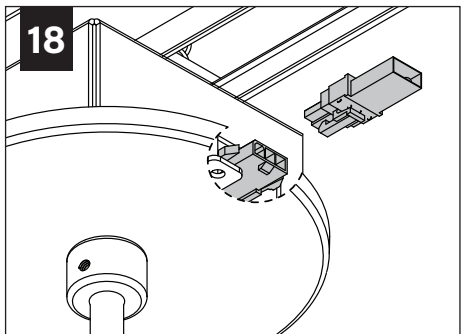



CONNECT TERMINATOR TO FINAL RPS J-BOX TO COMPLETE LOW VOLTAGE CIRCUIT


SEE **PAGES 8-10** FOR ACOUSTIC SHADE AND LIGHT MODULE INSTRUCTIONS

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


DRIVER SERVICE

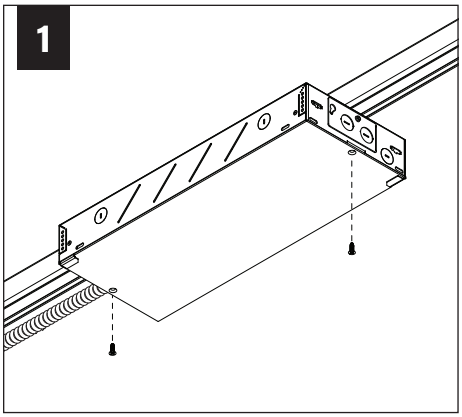


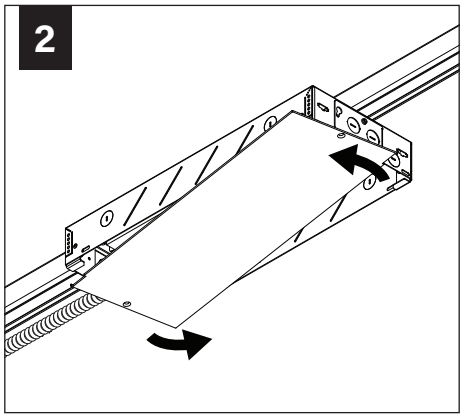


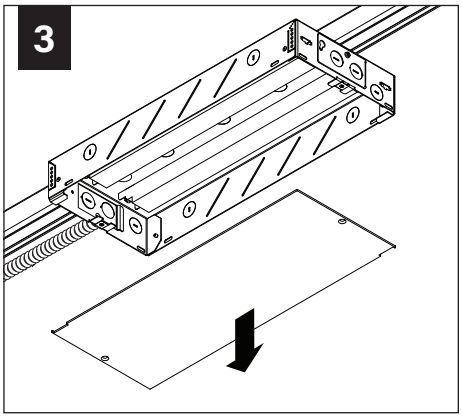



TRANSITIONAL CEILING

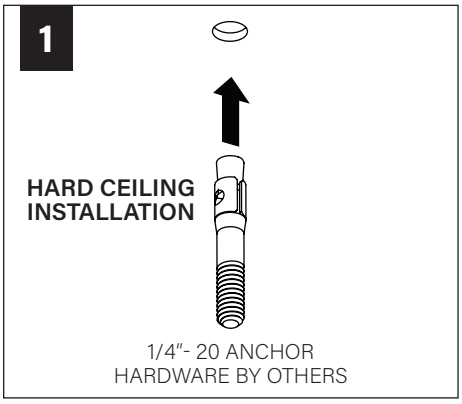

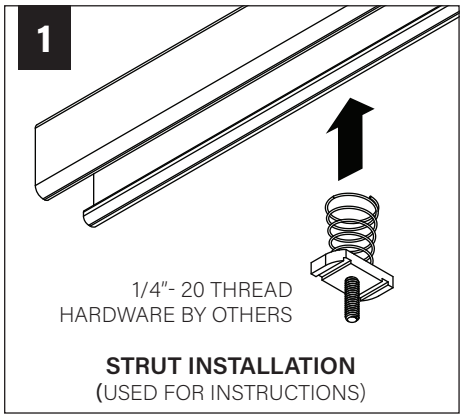


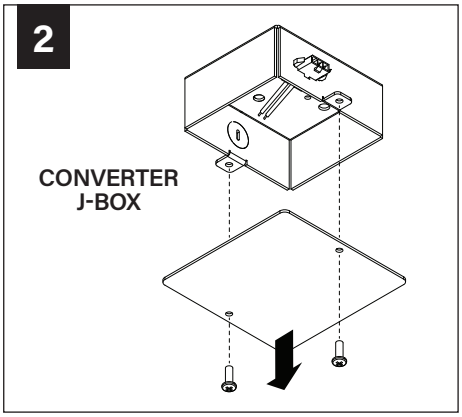

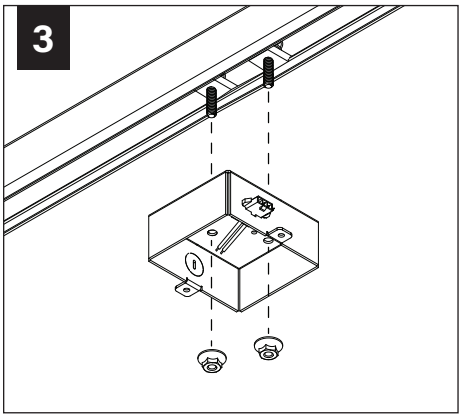


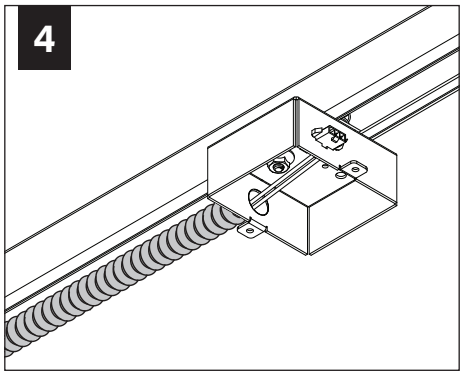

MAKE ELECTRICAL CONNECTION

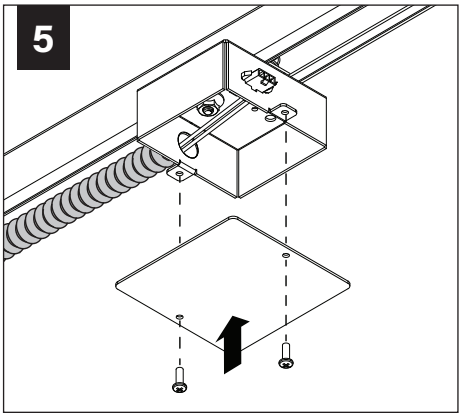

SEE **PAGES 2 & 3** AND FOLLOW **STEPS 2-12** FOR REMOTE POWER BOX INSTALLATION

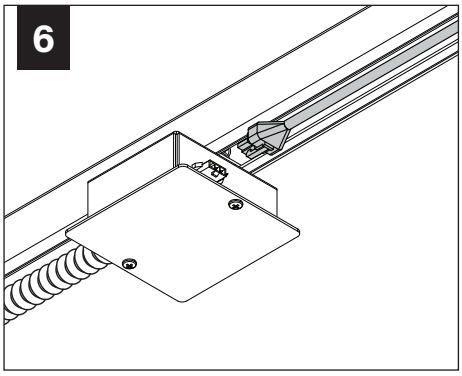


MAKE ELECTRICAL CONNECTION

SEE **PAGEE 5** AND FOLLOW **STEPS 11-14 & 16-18** FOR OPEN CEILING J-BOX AND CANOPY INSTALLATION

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference


FIELD CUTTABLE STEM (OPTIONAL)

1

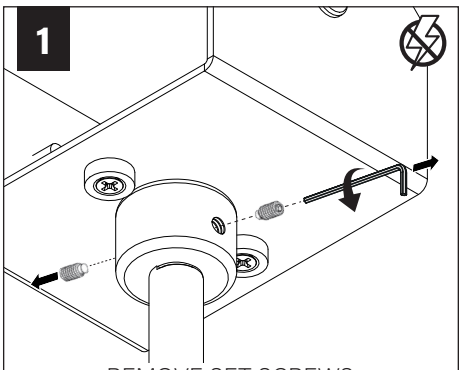


REMOVE SET SCREWS FROM BOTH SIDES

2

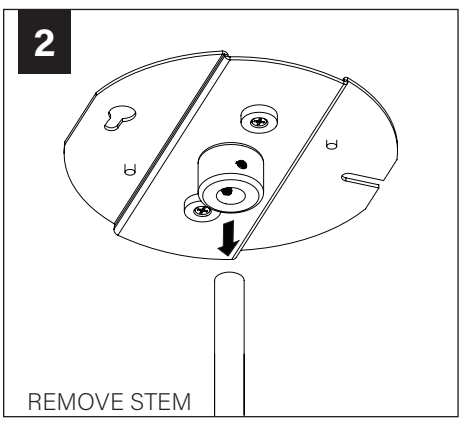

REMOVE STEM


3

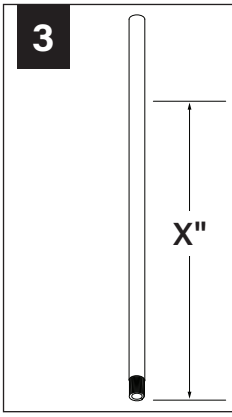

MEASURE STEM TO DESIRED LENGTH


MINIMUM CUT LENGTH = 9"

4




CUT STEM AND DEBURR INSIDE EDGE

5

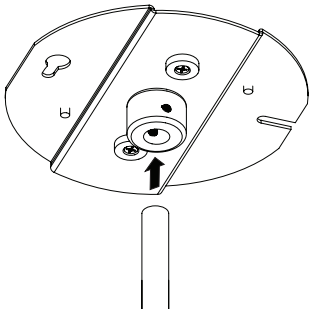


FULLY INSERT THE STEM SO THE CUT EDGE IS FLUSH WITH THE BACK OF THE STEM ADAPTER

6

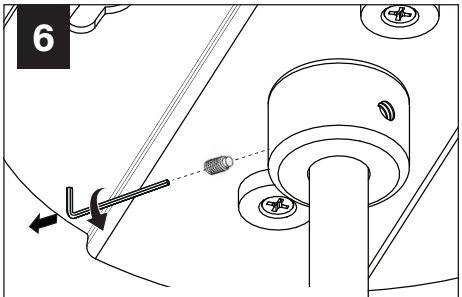


INSERT ONE OF THE SET SCREWS AND TIGHTEN INTO THE CASTING SO THE SCREW BITES ONTO THE STEM

7

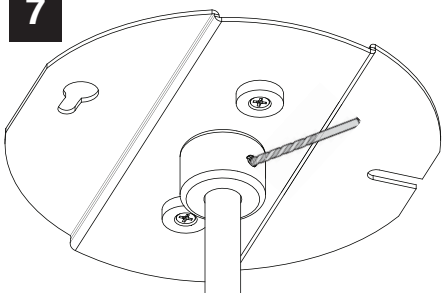


DRILL A 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

8

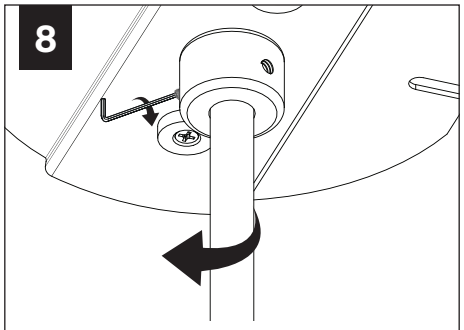


LOOSENS SET SCREW AND ROTATE STEM 180° SO DRILLED HOLE ALIGNS WITH SET SCREW

9

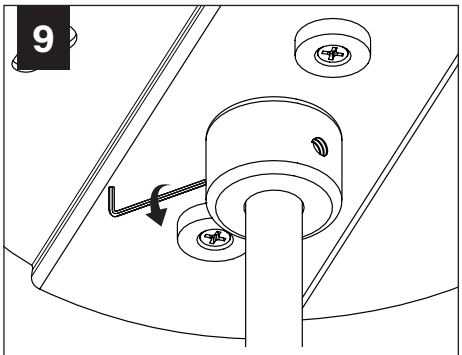


TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

10

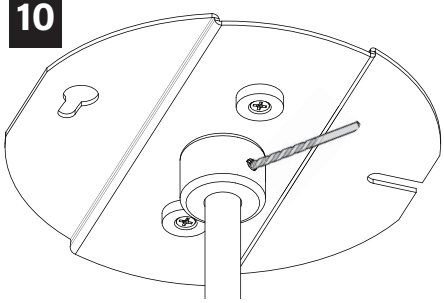


DRILL A SECOND 1/8" HOLE THROUGH THE TAPPED HOLE, OPPOSITE THE SET SCREW, THROUGH THE STEM

11

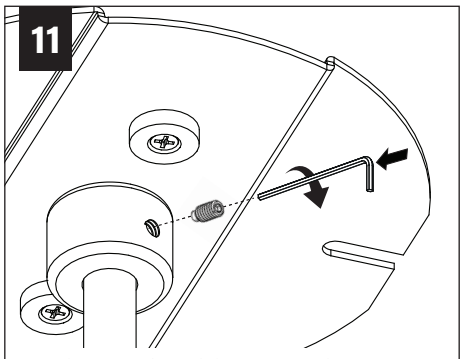

TIGHTEN SET SCREW INTO NEWLY DRILLED 1/8" HOLE

12

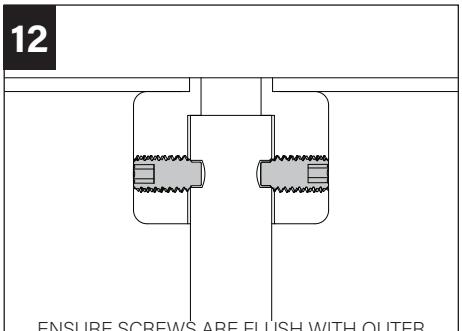


ENSURE SCREWS ARE FLUSH WITH OUTER DIAMETER OF ADAPTER SLEEVE UPON INSTALLATION. IF SCREW(S) WILL NOT INSTALL FLUSH, CHECK STEM HOLE SIZE AND ALIGNMENT.


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

LED MODULE


1a

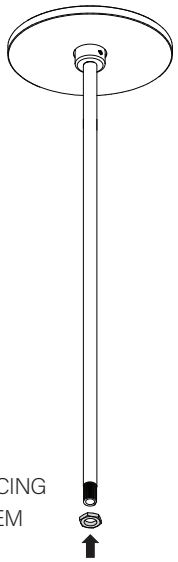

TIGHTEN SPACING NUT TO STEM

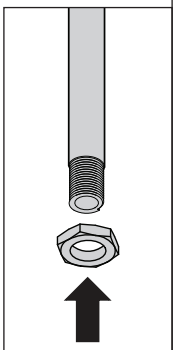


1b

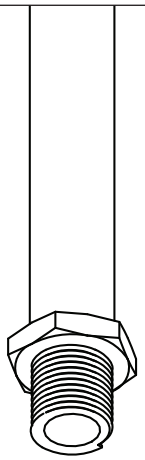


TIGHTEN BY HAND.
DO NOT OVERTIGHTEN.

2

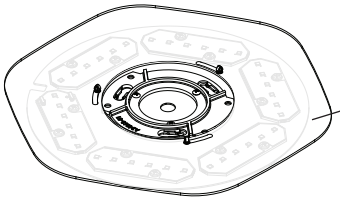


IF LENS POPS OFF, RE-INSTALL WITH SHINY SIDE UP

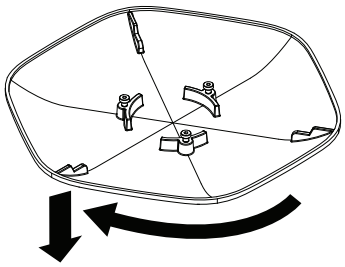


TWIST TO UNLOCK AND REMOVE FACEPLATE FROM LED MODULE


3

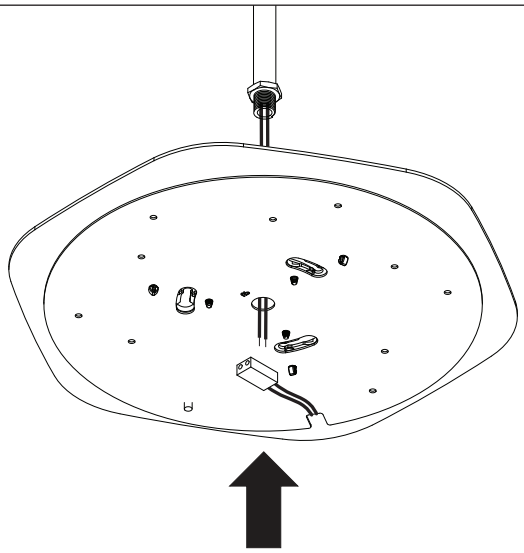


4

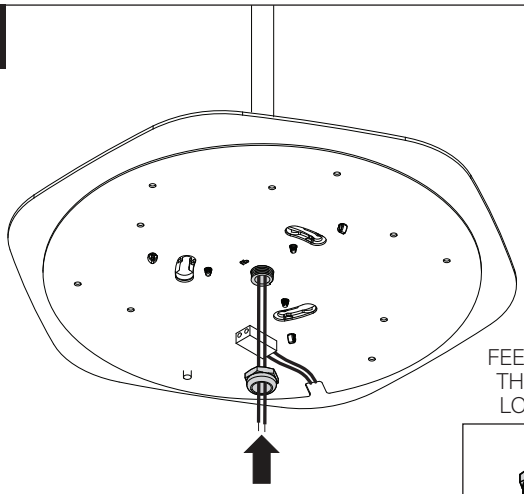

FEED WIRES THROUGH LOCKNUT

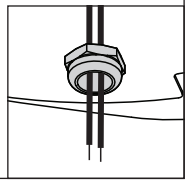


5

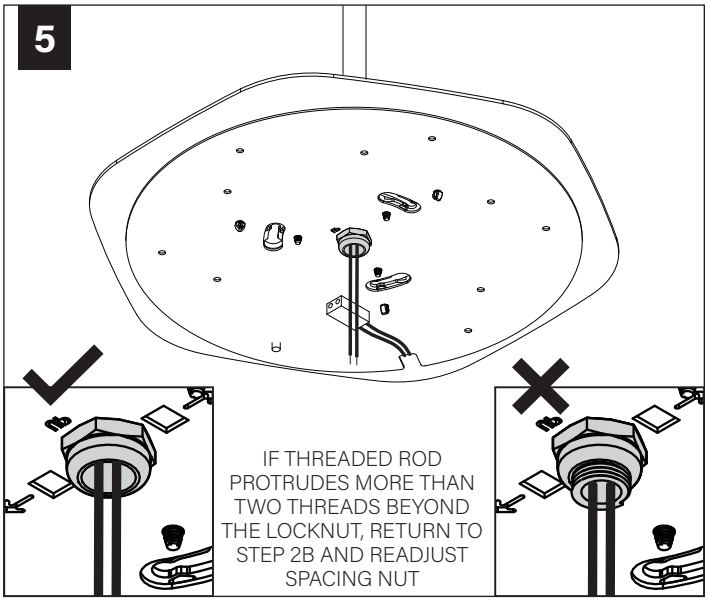

IF THREADED ROD PROTRUDES MORE THAN TWO THREADS BEYOND THE LOCKNUT, RETURN TO STEP 2B AND READJUST SPACING NUT


©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

6

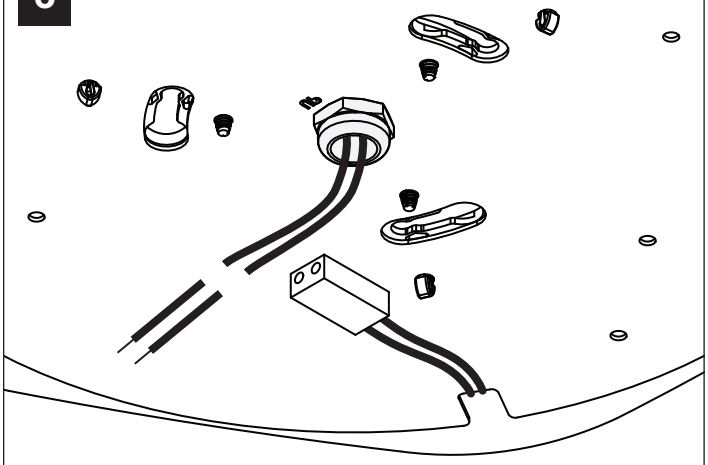

TRIM EXCESS WIRE. ONLY 2" OF WIRE BELOW THE LOCKNUT IS NECESSARY FOR ELECTRICAL CONNECTION. DO NOT EXCEED 3" OF WIRE


7

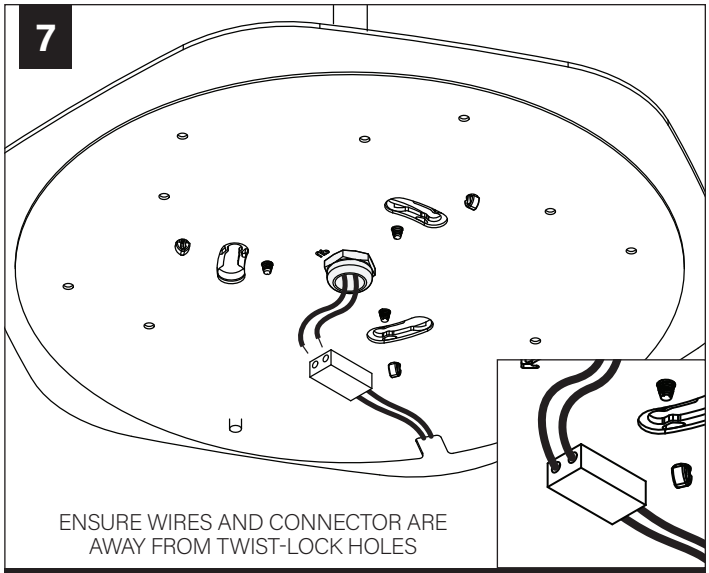

ENSURE WIRES AND CONNECTOR ARE AWAY FROM TWIST-LOCK HOLES


MAKE ELECTRICAL CONNECTION

8

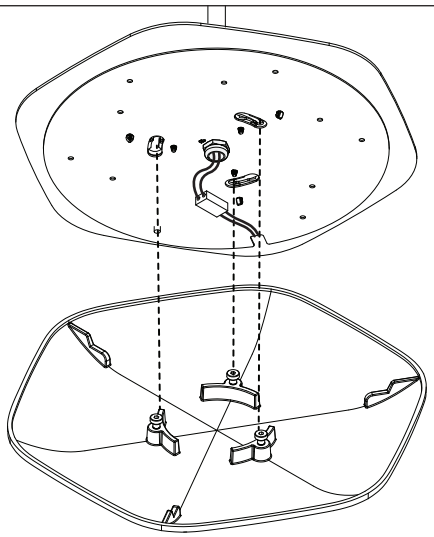


ALIGN PEGS ON FACE PLATE TO SLOTS ON LED MODULE.
ENSURE LENS ALIGNS WITH FACE PLATE UPON FINAL INSTALLATION.

9

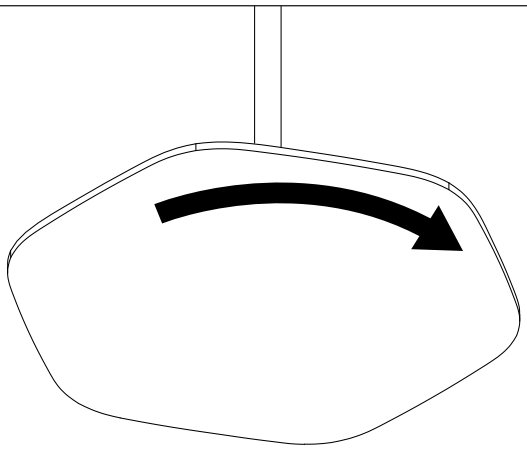

TWIST AND LOCK FACEPLATE UNTIL IT CLICKS INTO PLACE.
FOR MINOR ADJUSTMENTS TO ORIENTATION, CONTINUE ROTATING CLOCKWISE AFTER LOCKING INTO PLACE.
FOR LARGER ADJUSTMENTS, REMOVE FACEPLATE/LOCKNUT, REPOSITION LED MODULE AND RETURN TO STEP 4 ABOVE.

10

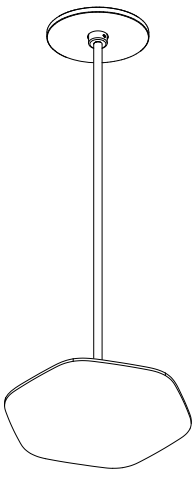

©2026 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference