

Score™ 2 Suspended

FSC2S | FSC2BS | Integrated Power



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF



POWER ON

COMPONENT KEY

FOCAL POINT

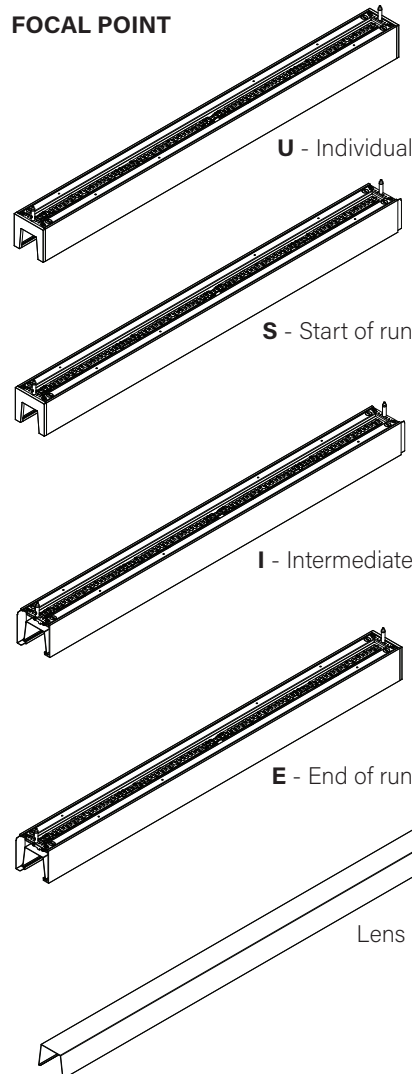


SHIPPED INSTALLED



Light Blocker Bracket
(A72120-01)

SHIPPED IN PARTS BAG



Joiner Bracket
(A72280-01)



Joiner Bracket
Assembly Screw
(72010)




INDIVIDUAL INSTALLATIONS FOLLOW STEPS 1-3

1




Follow Focal Point instructions for Universal Suspension System assembly.
See IS0166

2





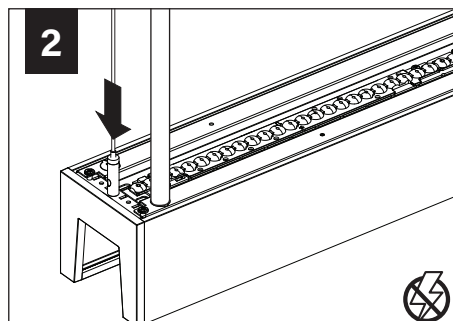


Two cable grippers each for individual and start, one for intermediate and end housings.

3

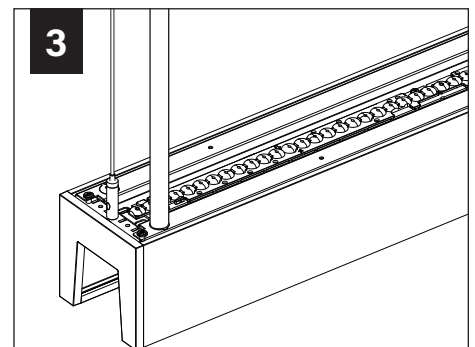

MAKE ELECTRICAL CONNECTION

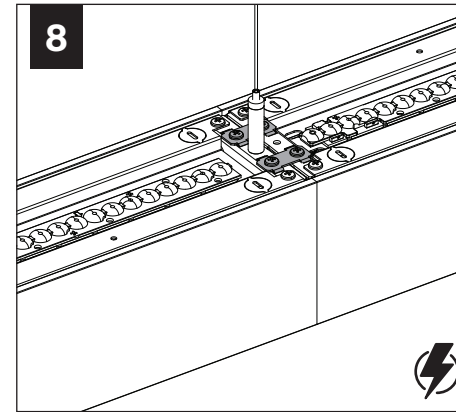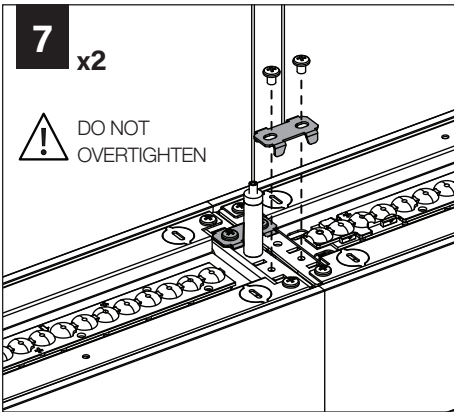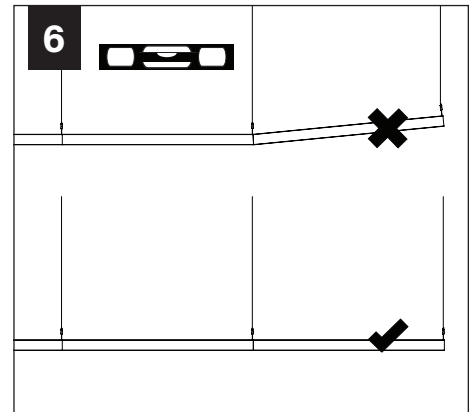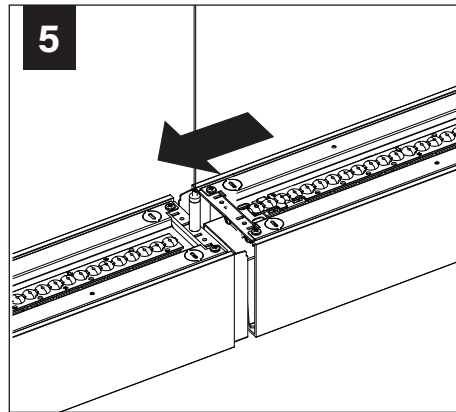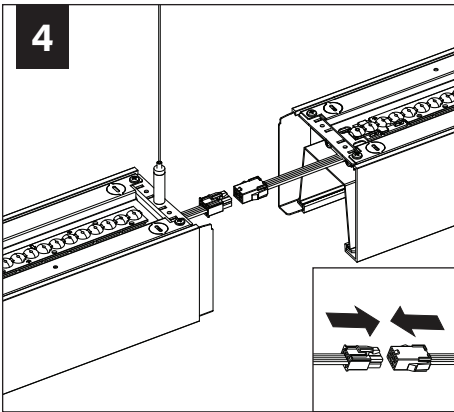

DRIVER SERVICE

