

Seem® 2 LED Asymmetric

FSM2AL-XF | Mud-In Drywall



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON


FOCAL POINT

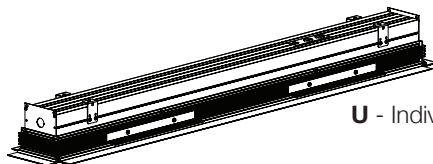


U - Individual Unit

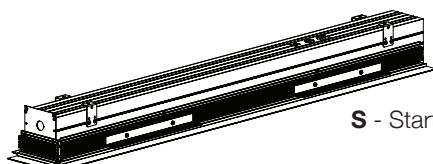

S - Start of Run

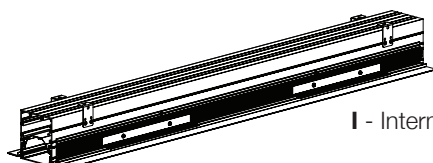


I - Intermediate

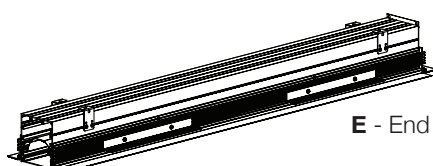

E - End Of Run

Backer Flange
(May Be Pre-Installed
Or Shipped Loose)

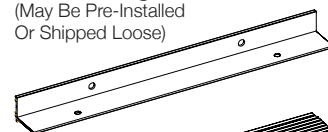

Mud Flange
(Shipped Loose)



CONFIGURATIONS ARE
RUN SPECIFIC, CONSULT
FACTORY DRAWINGS BEFORE
BEGINNING INSTALLATION.





PARTS LIST

INCLUDED HARDWARE


Reflector Screw (72010)
(8-18 X 1/4 Self Tapping Screw)


Reflector (70008)
(6-32 x 5/16 Pan-Head
Machine Screw)

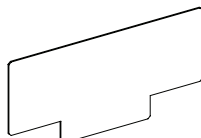

Lens Tool
(A09052-01)
(Affixed To Housing.
One Per Run)


Mud Flange (70005)
(8-32 x 5/16 Flat
Undercut Head Screw)



Backer Flange (72001)
(8-32 x 3/8 Washer
Hex Head Screw)

SHIPPED INSTALLED


Tie-Wire
Bracket Screw (72010)
(8-18 X 1/4 Self Tapping Screw)


Lens End Piece
(A08608)



Tie-Wire
Bracket
(12547)

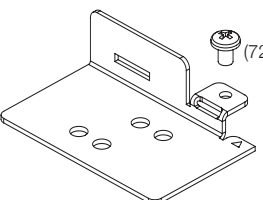
(72010)




Joiner Pin
(70058)

Joiner Bracket Assembly
(A11623-01)



BACKER FLANGE PLACEMENT GUIDE

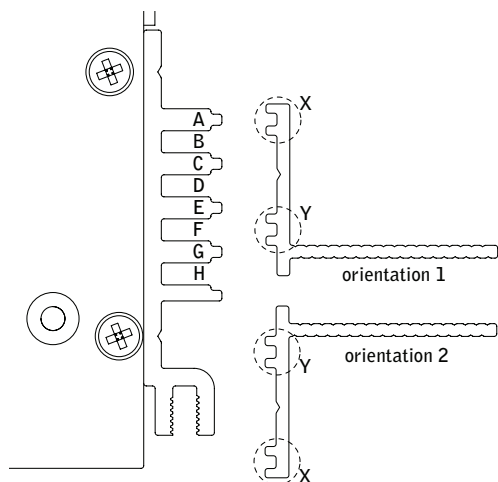

DRYWALL THICKNESS	ORIENTATION	GUIDE POINT	POSITION
3/8"	1	X	F
1/2"	1	X	E
5/8"	1	X	D
3/4"	1	X	C
7/8"	1	X	B
1"	1	X	A
1 1/8"	1	Y	G
1 1/4"	2	Y	F
1 3/8"	2	Y	E
1 1/2"	2	Y	D
1 5/8"	2	Y	C
1 3/4"	2	Y	B
1 7/8"	2	Y	A
2"	2	X	E
2 1/8"	2	X	D

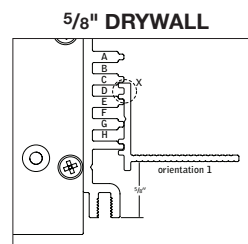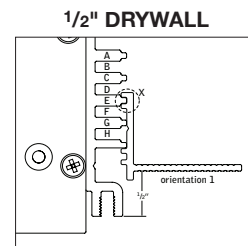

LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL

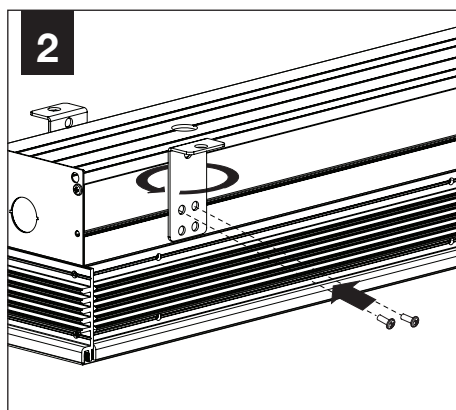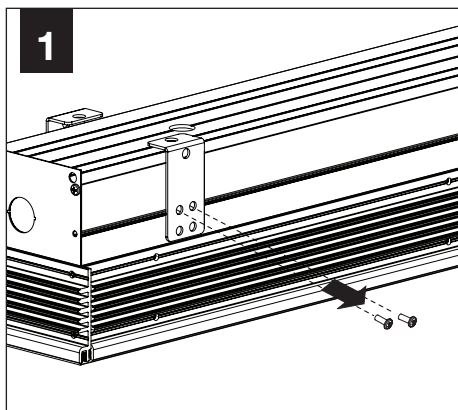


3


Using the backer flange placement guide ABOVE to determine the proper placement of the backer flange for your drywall thickness.

IF BACKER FLANGES WERE PRE-INSTALLED SKIP TO STEP 5


4

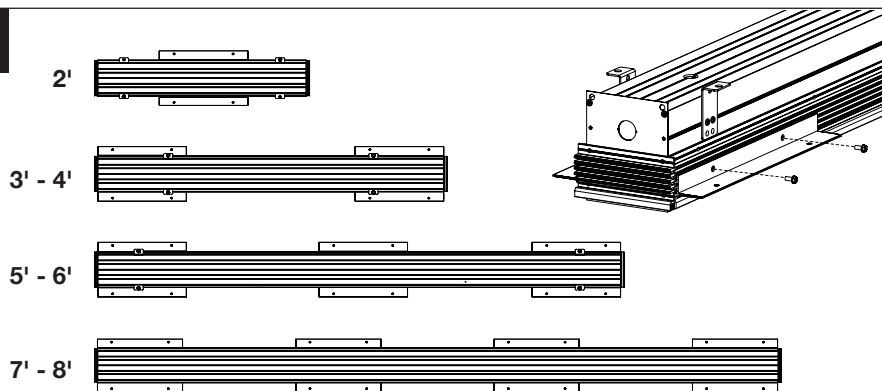









5

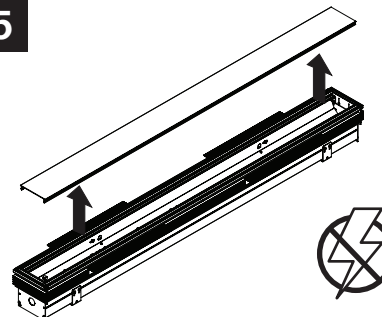

AVOID ALL CONTACT WITH LED SURFACE, LEDs ARE EASILY DAMAGED!

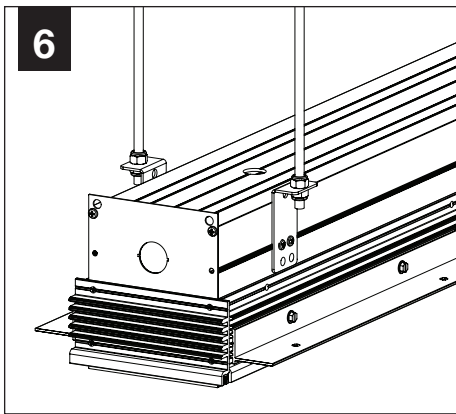

INDIVIDUAL INSTALLATIONS
Skip To Step 10

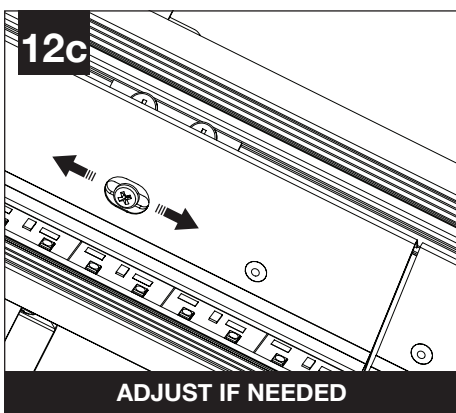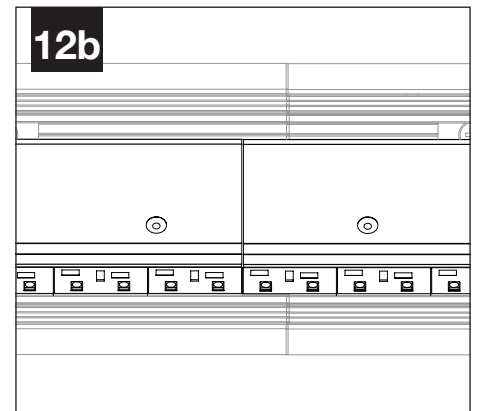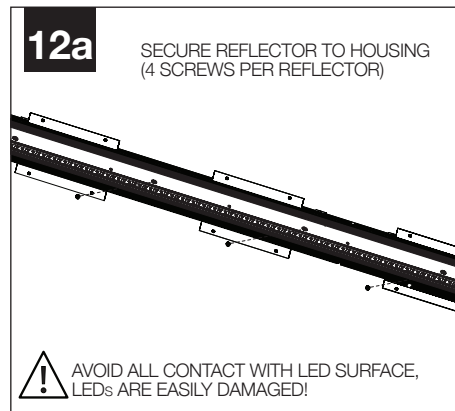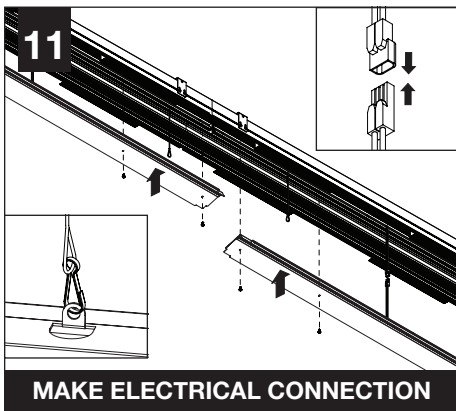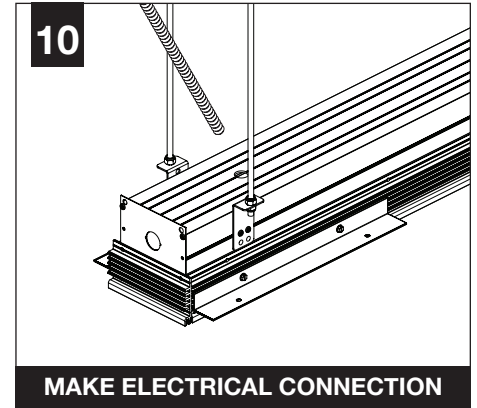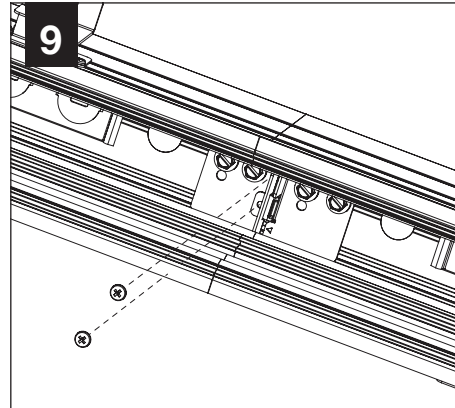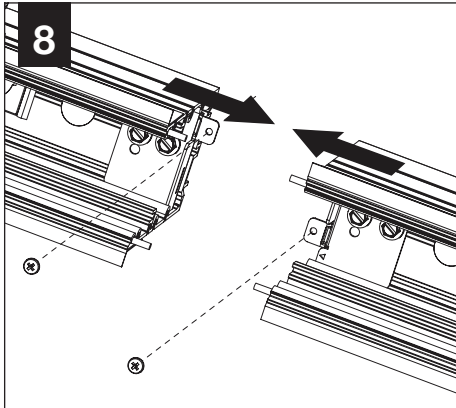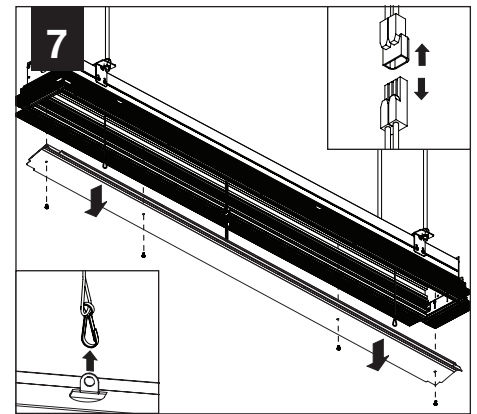


14




ATTENTION
BEFORE BEGINNING DRYWALL
INSTALLATION CONSULT
GUIDE ON PAGE 2 TO ENSURE
THE BACKER FLANGE IS SET
AT THE CORRECT DEPTH FOR
THE DRYWALL.


15

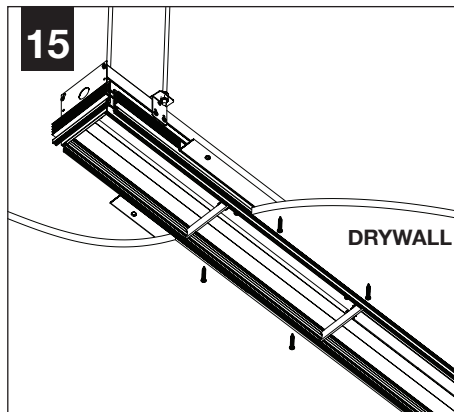


16

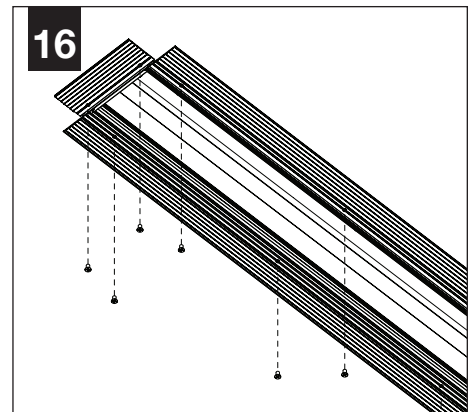


17

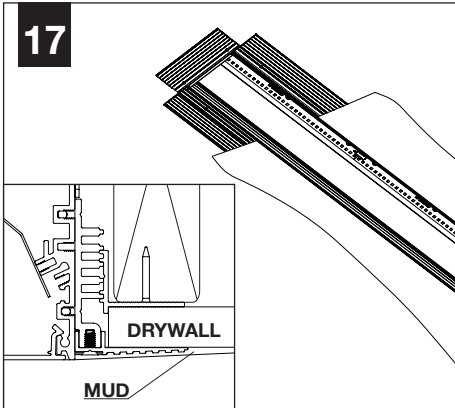

18

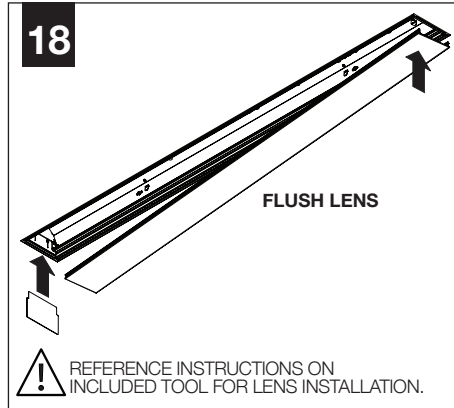

19

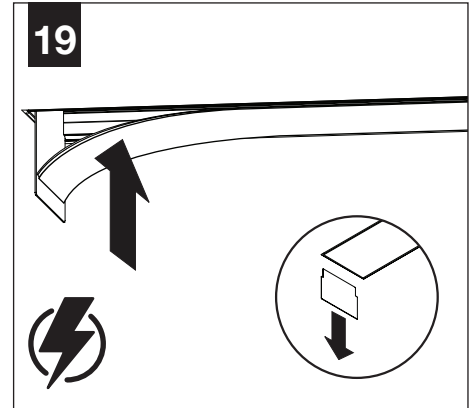

EMERGENCY




SEE BATTERY MANUFACTURER
INSTRUCTIONS


**EMERGENCY MAXIMUM
MOUNTING HEIGHT:**
19.08'

DRIVER SERVICE

1

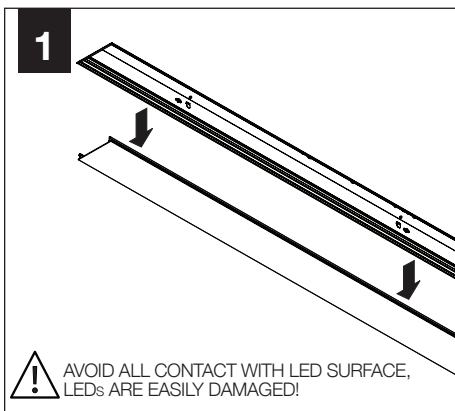

2

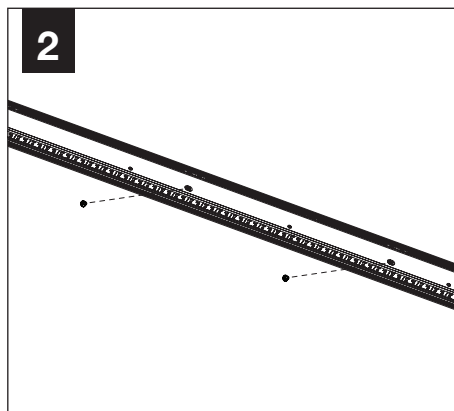

3

