

# seem 2™ led wall to ceiling corners

FSM2L-CXF




**! LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL. !**

**! CONFIGURATIONS ARE RUN SPECIFIC, PLEASE CONSULT FACTORY DRAWINGS BEFORE BEGINNING INSTALLATION. !**

## FOCAL POINT



S - START OF RUN

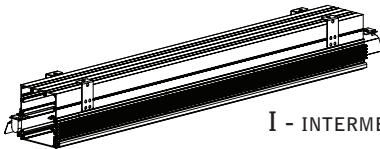


I - INTERMEDIATE



E - END OF RUN

## CORNER UNITS

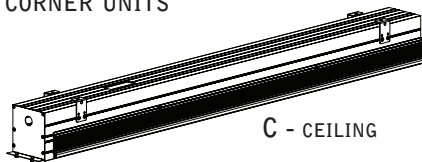

C - CEILING




W - WALL

## PARTS LISTS


### INCLUDED HARDWARE




REFLECTOR 72010)  
(8-18 x 1/4 SELF TAPPING  
SCREW)

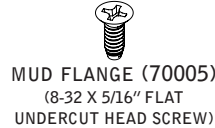

MUD FLANGE (70005)  
(8-32 X 5/16" FLAT  
UNDERCUT HEAD SCREW)

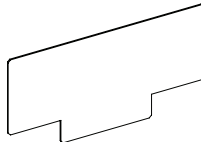

LENS TOOL  
(A10554-01)  
(AFFIXED TO HOUSING.  
ONE PER RUN)

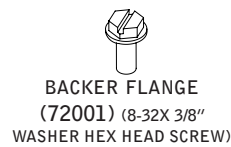


BACKER FLANGE  
(72001) (8-32X 3/8"  
WASHER HEX HEAD SCREW)

### SHIPPED INSTALLED




TIE-WIRE BRACKET  
SCREW (72010)  
(8-18 x 1/4 SELF TAPPING  
SCREW)



TIE WIRE BRACKET  
(12547)



LENS END PIECE  
(A08608)

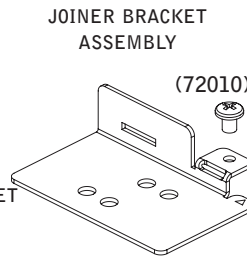

JOINER BRACKET  
ASSEMBLY  
(72010)  
(A11623-01)



JOINER PIN  
(70058)

## KEY




POWER OFF




POWER ON



ATTENTION

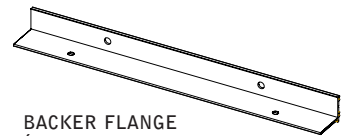



BACKER FLANGE  
(MAY BE PRE-INSTALLED  
OR SHIPPED LOOSE)

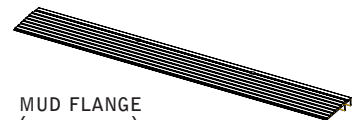



MUD FLANGE  
(SHIPPED LOOSE)





**2"x6" FRAMING REQUIRED ON BOTH SIDES OF WALL MOUNTED HOUSINGS**

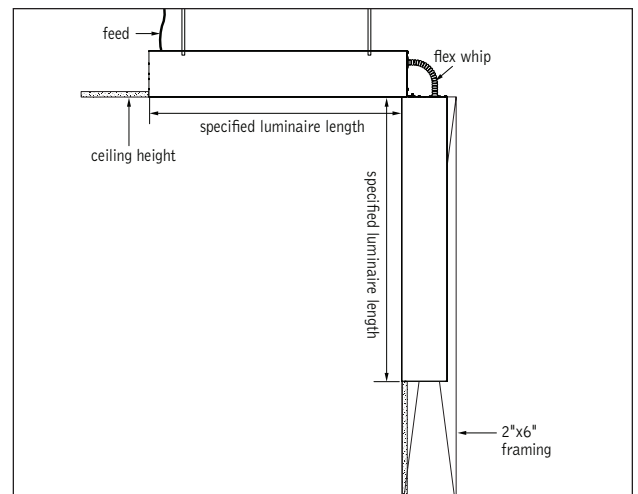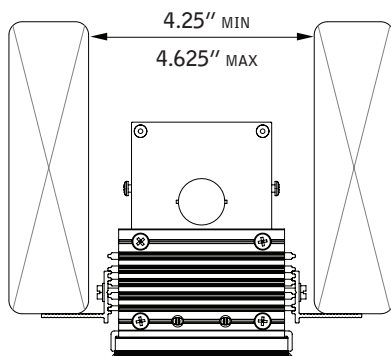

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

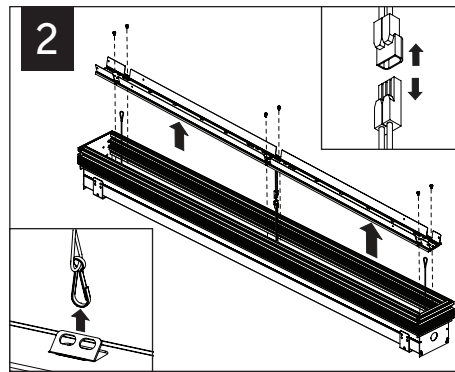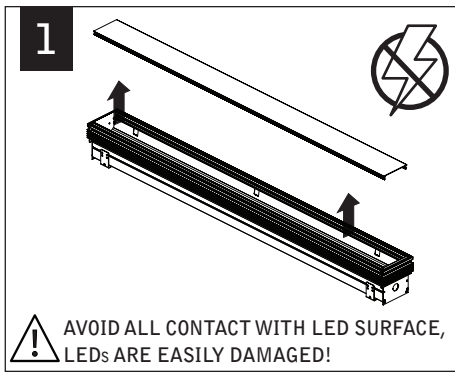


**CEILING UNITS ONLY**

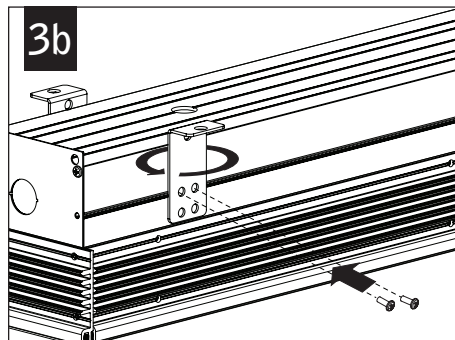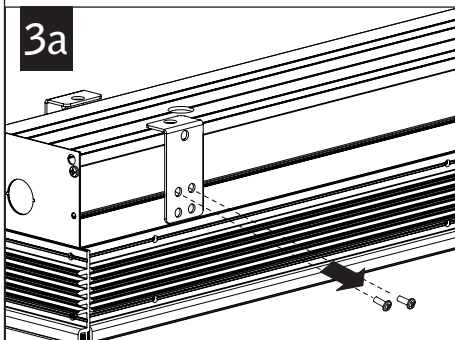




**4** USING THE BACKER FLANGE PLACEMENT GUIDE FROM **PAGE 1** DETERMINE THE PROPER PLACEMENT OF THE BACKER FLANGE FOR YOUR DRYWALL THICKNESS.

IF BACKER FLANGES WERE PRE-INSTALLED SKIP TO STEP 6

**BACKER FLANGE PLACEMENT GUIDE**





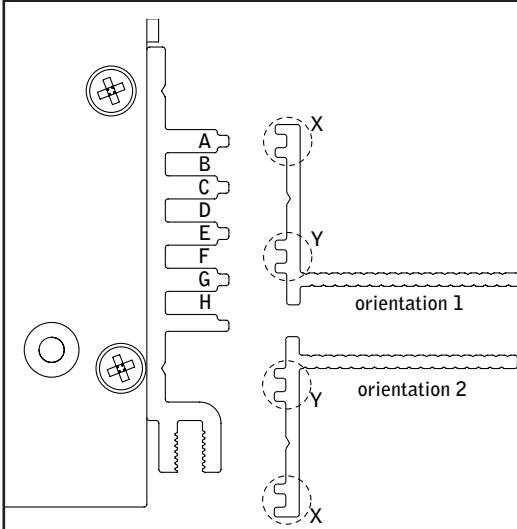


DRYWALL THICKNESS	ORIENTATION	GUIDE POINT	POSITION
3/8"	1	X	F
1/2"	1	X	E
5/8"	1	X	D
3/4"	1	X	C
7/8"	1	X	B
1"	1	X	A
1 1/8"	1	Y	G
1 1/4"	2	Y	F
1 3/8"	2	Y	E
1 1/2"	2	Y	D
1 5/8"	2	Y	C
1 3/4"	2	Y	B
1 7/8"	2	Y	A
2"	2	X	E
2 1/8"	2	X	D


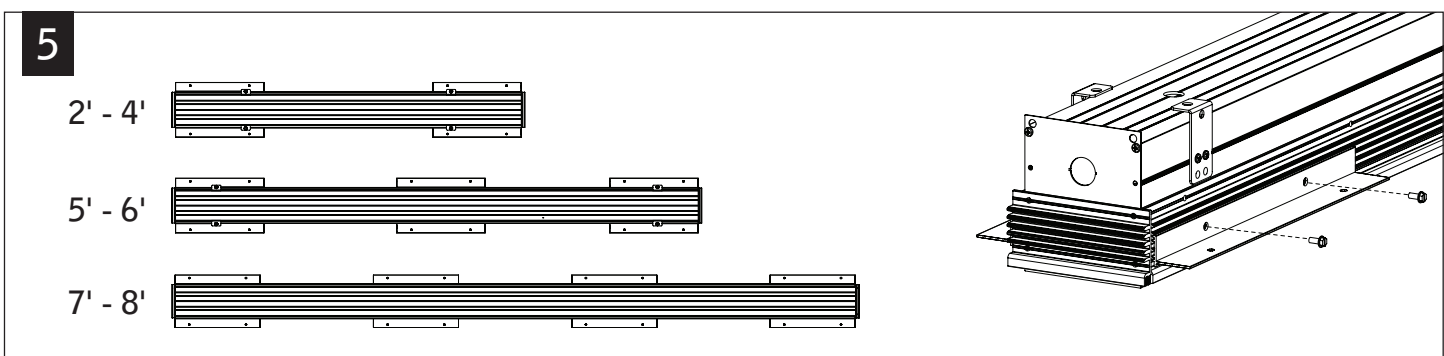
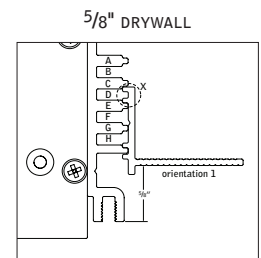
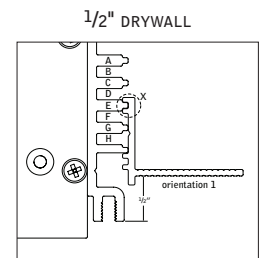


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.


## CORNER UNITS (C & W) INSTALLATION

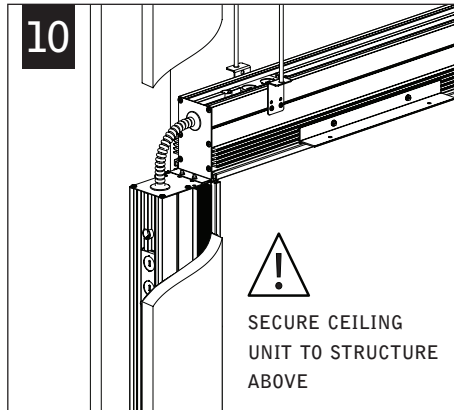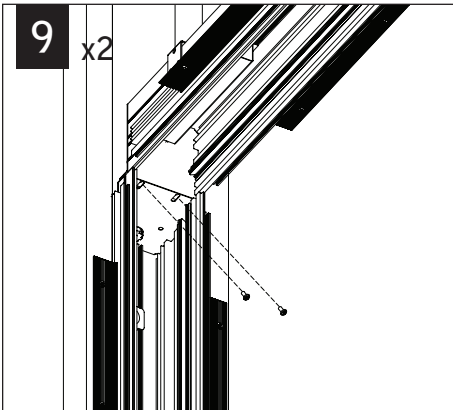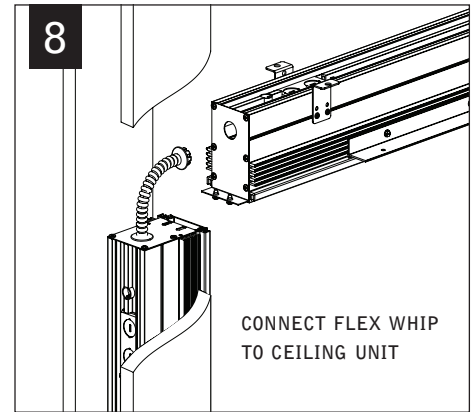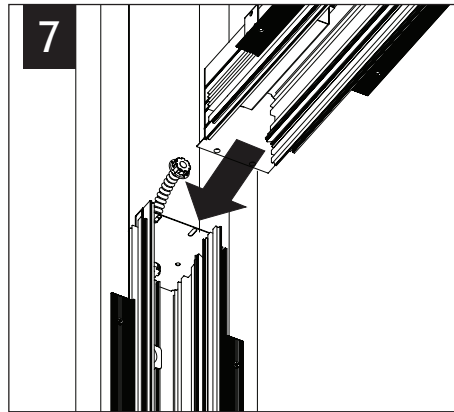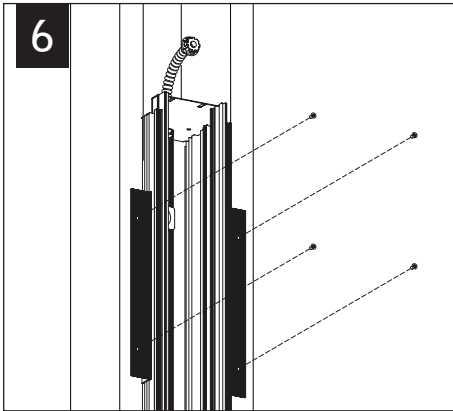

## CONTINUE INSTALLING REMAINING CEILING UNITS






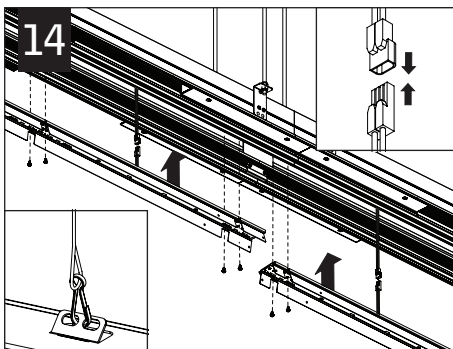
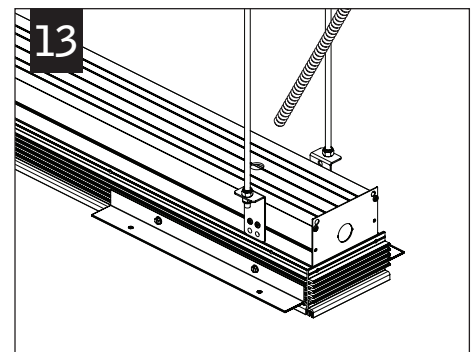
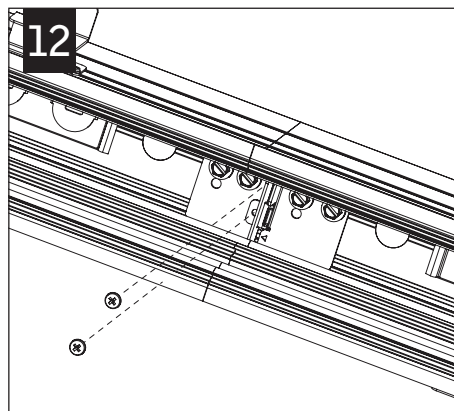
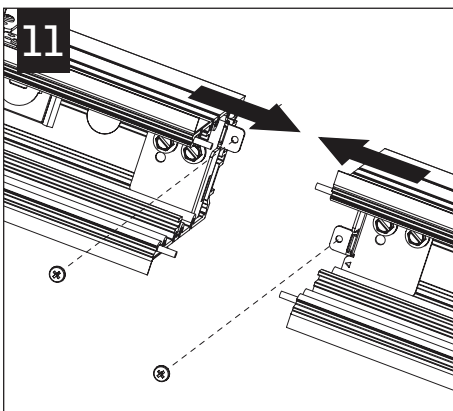


MAKE ELECTRICAL CONNECTION

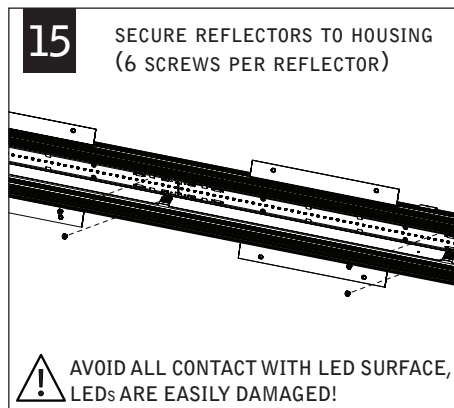




Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## INSTALL REMAINING WALL HOUSINGS

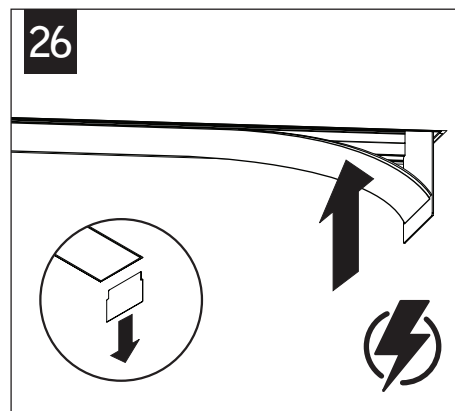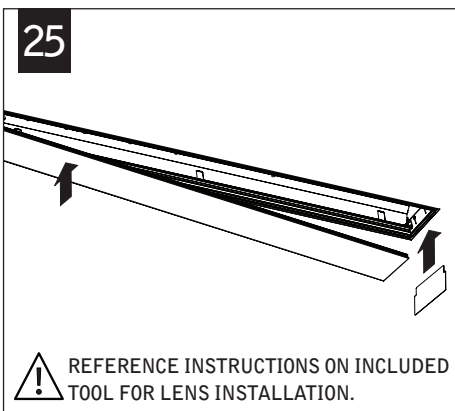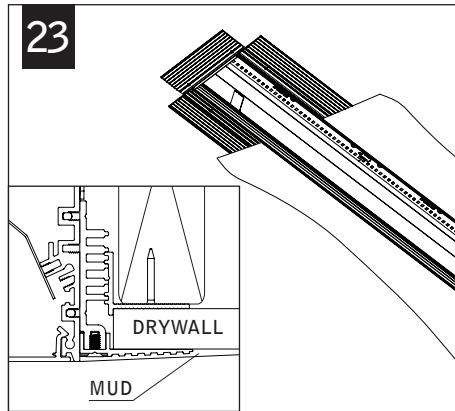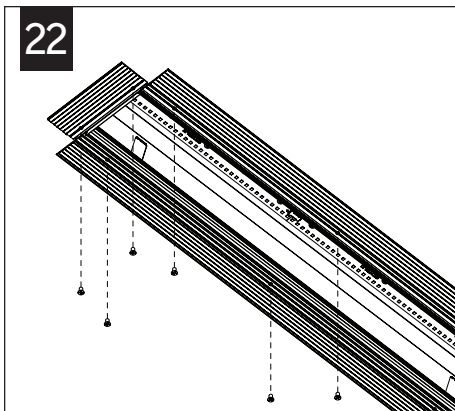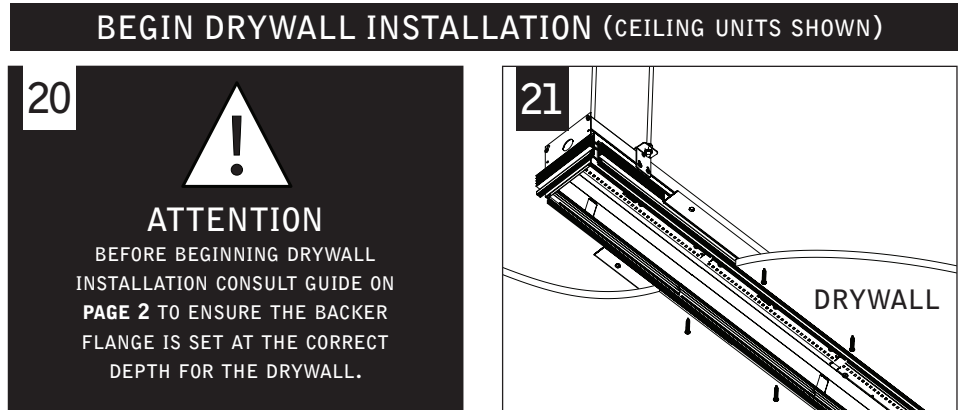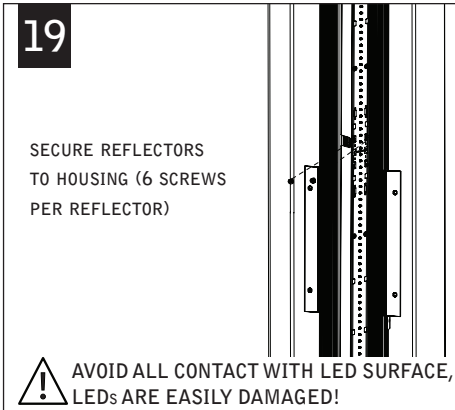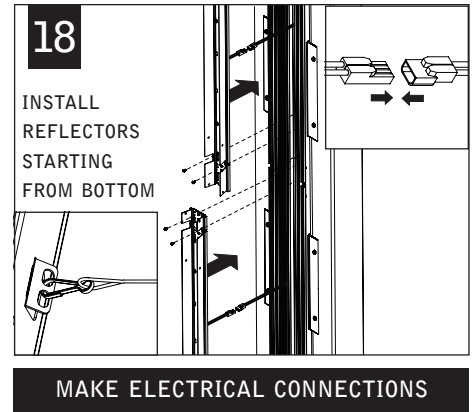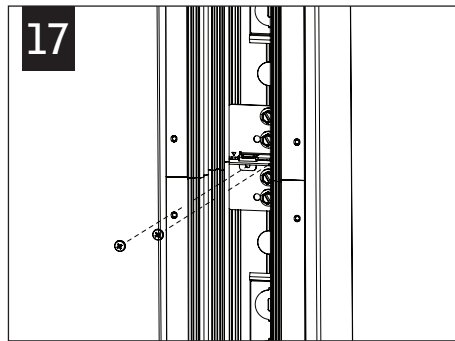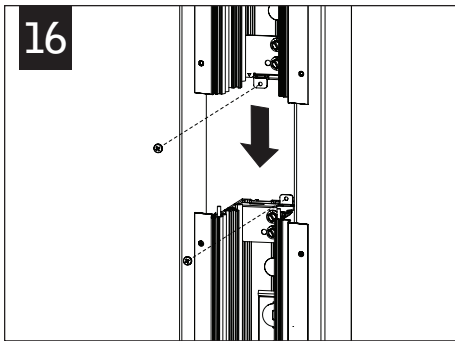

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## DRIVER SERVICE

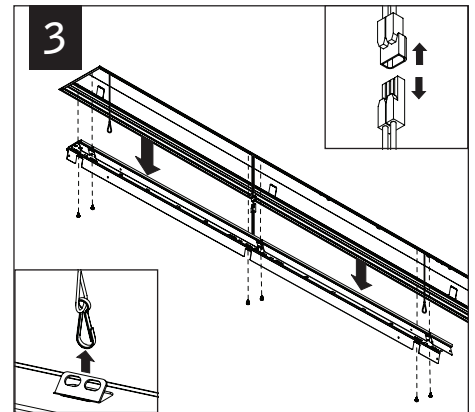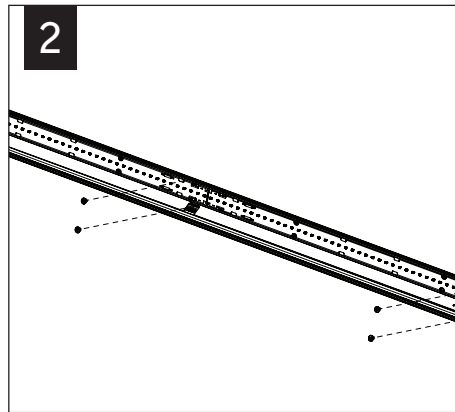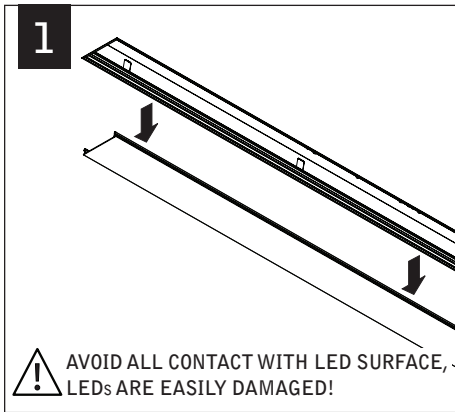

## EMERGENCY



SEE BATTERY MANUFACTURER  
INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT:  
19.00'