



Seem[®] 4 led direct/indirect suspended

FSM4BS



FOCAL POINT[™]

! CONFIGURATIONS ARE RUN SPECIFIC, PLEASE CONSULT FACTORY DRAWINGS BEFORE BEGINNING INSTALLATION. !

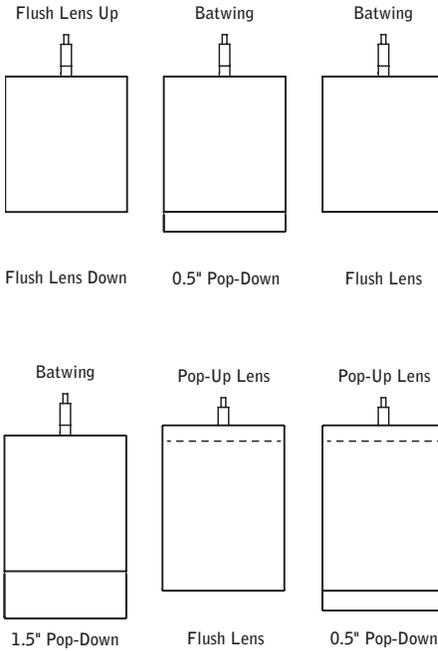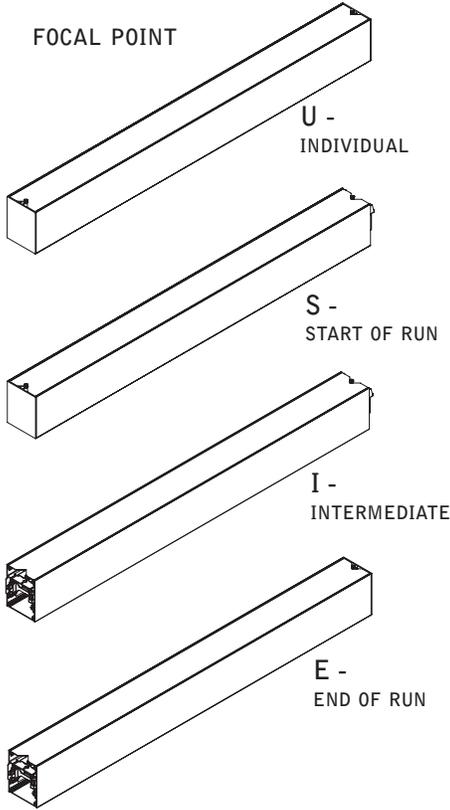

- KEY**
- POWER OFF
 - POWER ON
 - ATTENTION
 - SEE ADDITIONAL INSTRUCTIONS

! 9-12' LUMINAIRES SHIP ON 13' (157") PALLETS, FORK-LIFT EXTENSIONS OF 72" ARE REQUIRED TO AVOID DAMAGE. INDIVIDUAL INSTALLATIONS FOLLOW STEPS 1-3, 10 & 11

PARTS LISTS

SHIPPED INSTALLED	
	JOINER (72010) (6-32 X 5/16 PAN-HEAD MACHINE SCREW)
	TOP BRACKET JOINER (A38740)
	BOTTOM BRACKET JOINER (A42759-01)
	CABLE GRIPPER (73008)
	JOINER ASSEMBLY (A40688)

1

FOLLOW FOCAL POINT INSTRUCTIONS FOR UNIVERSAL SUSPENSION SYSTEM ASSEMBLY. SEE IS0166


2

! AVOID ALL CONTACT WITH LED SURFACE, LEDs ARE EASILY DAMAGED!









3

4


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation). To prevent electrical shock, disconnect electrical supply before installation or servicing.

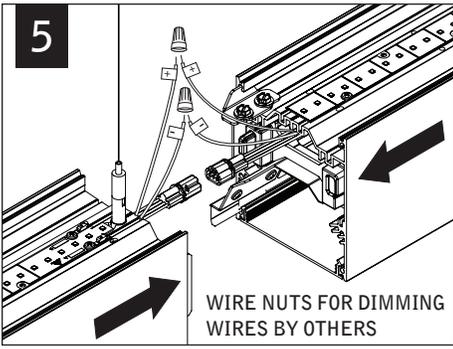

MAKE ELECTRICAL CONNECTIONS

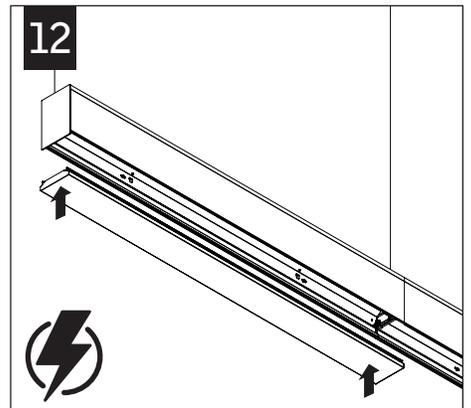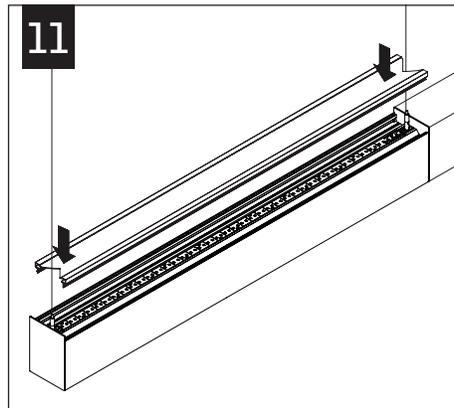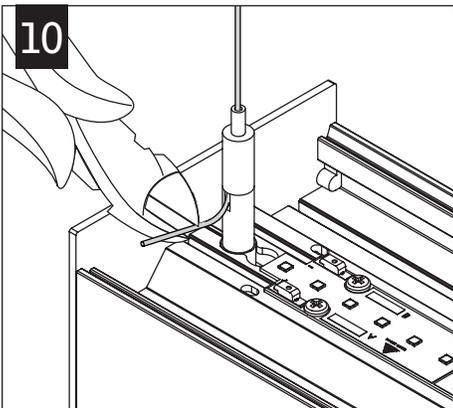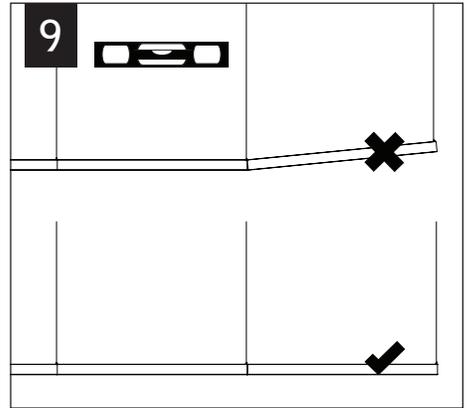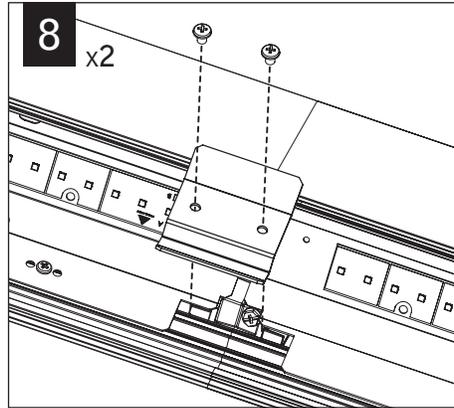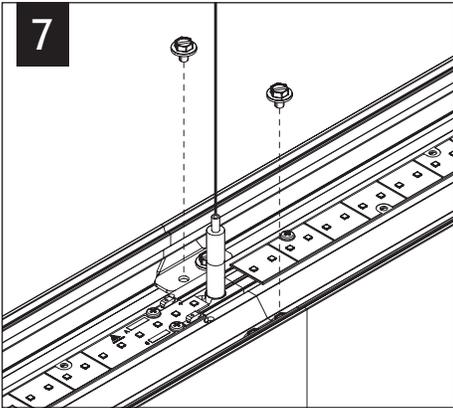
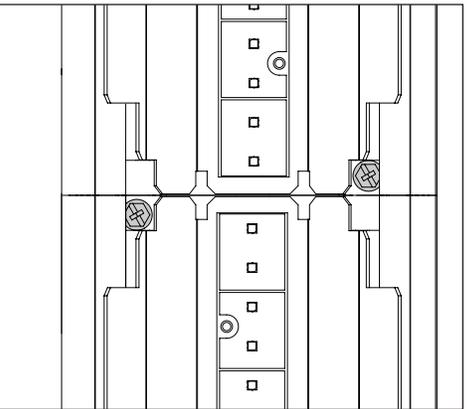
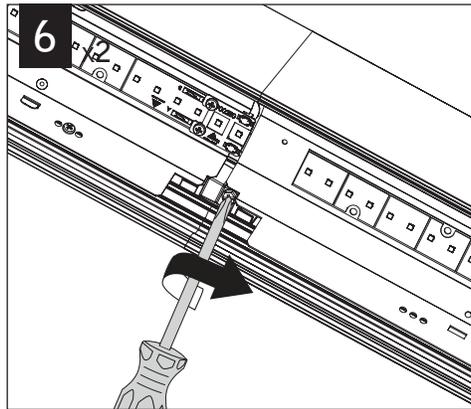


CORNER

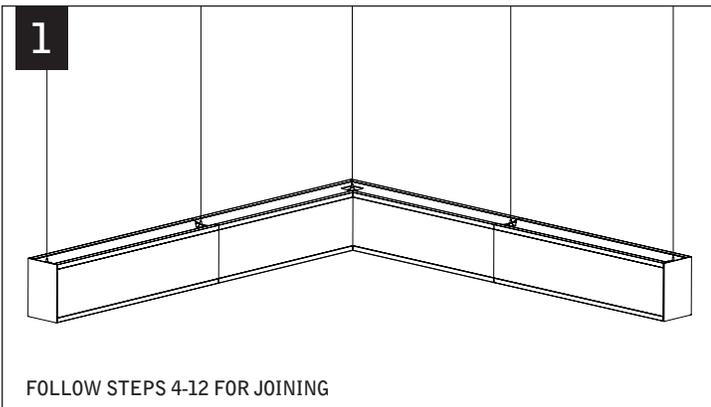

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

DRIVER SERVICE

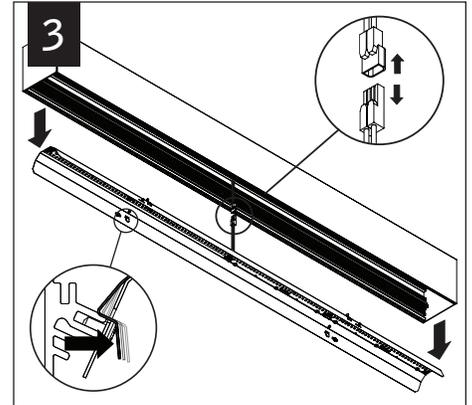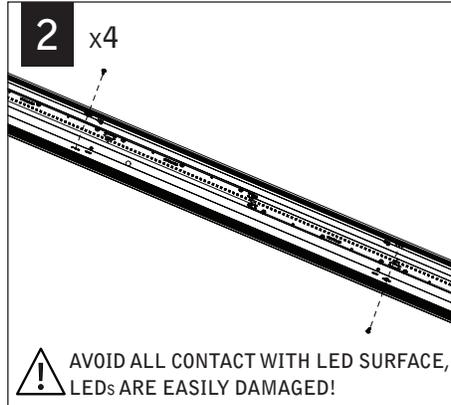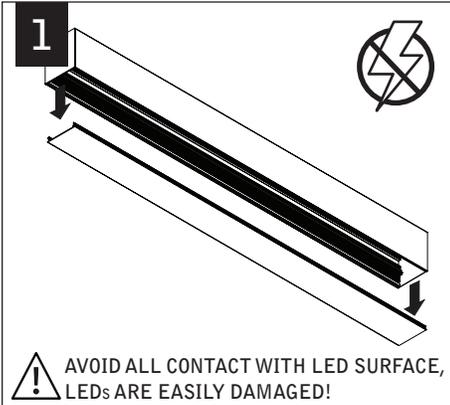

EMERGENCY

