seem 4[™] LED mud-in drywall FSM4L-XF

PARTS LISTS



POWER OFF

POWER ON


ATTENTION


KEY





CONFIGURATIONS ARE RUN SPECIFIC, PLEASE CONSULT FACTORY DRAWINGS BEFORE BEGINNING INSTALLATION.



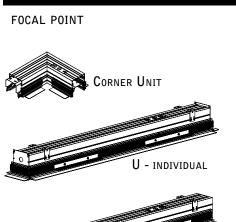


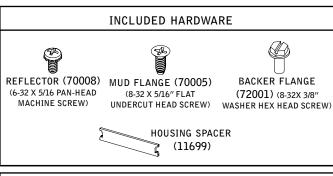


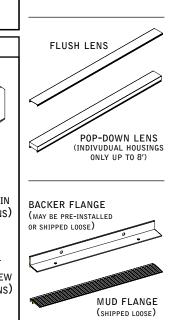




START OF RUN




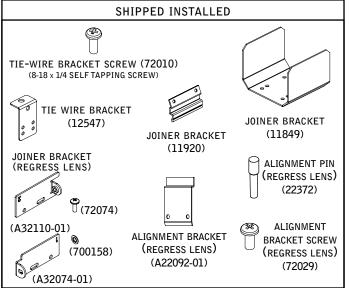


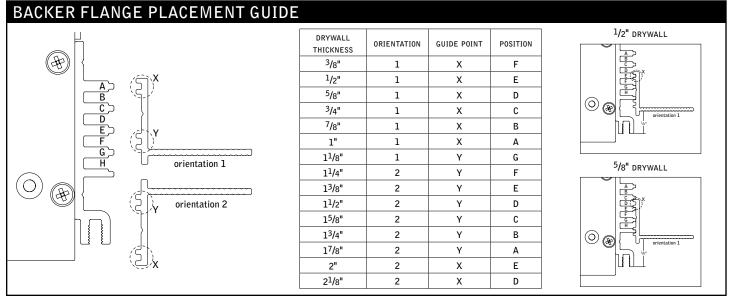


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation). To prevent electrical shock, disconnect electrical supply before installation or servicing.

CEILING INSTALLATION (SEE PAGE 4 FOR WALL INSTALLATION)

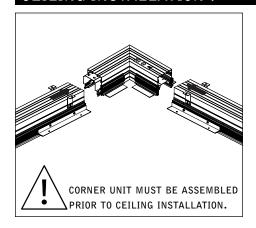


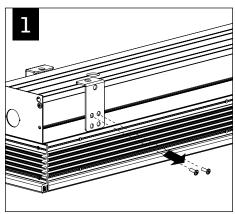

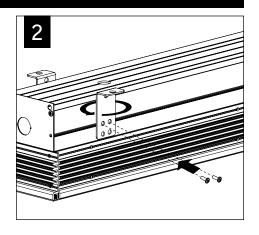



USING THE BACKER FLANGE
PLACEMENT GUIDE FROM
PAGE 1 DETERMINE THE
PROPER PLACEMENT OF THE
BACKER FLANGE FOR YOUR
DRYWALL THICKNESS.

IF BACKER FLANGES WERE PRE-INSTALLED SKIP TO STEP 5

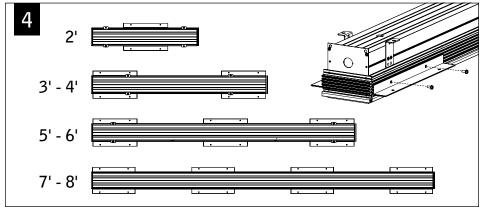




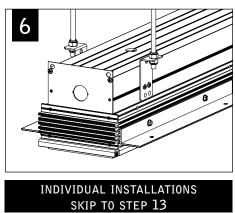


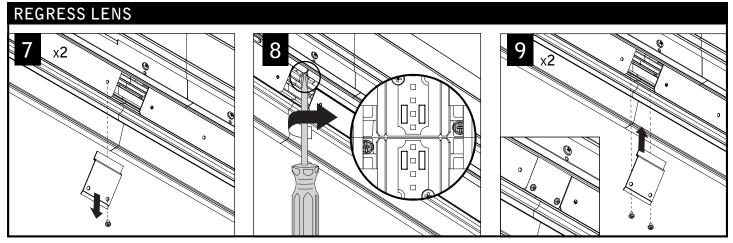

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).


To prevent electrical shock, disconnect electrical supply before installation or servicing.

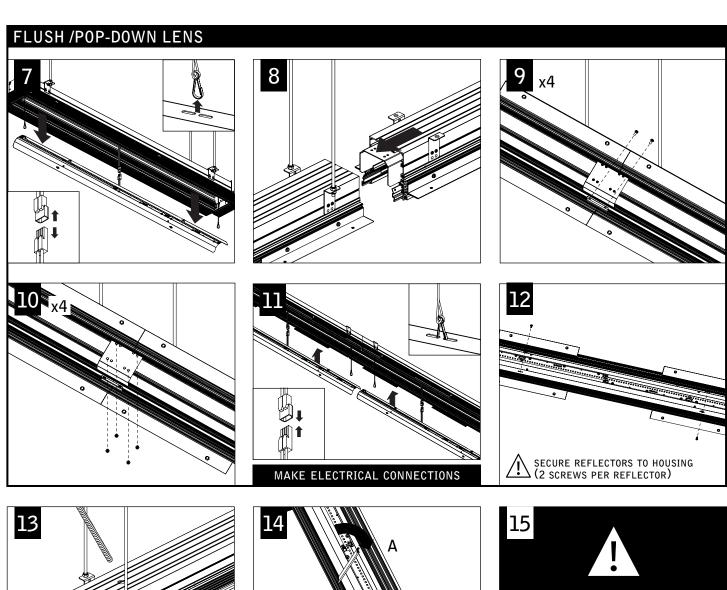


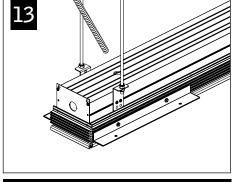


MAKE ELECTRICAL CONNECTIONS

DRYWALL

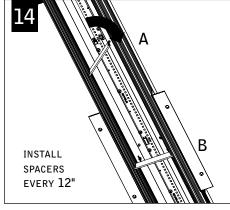

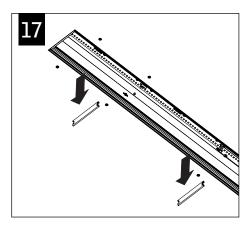




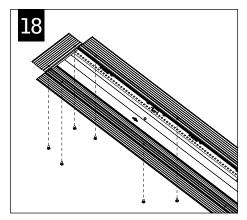


Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).

To prevent electrical shock, disconnect electrical supply before installation or servicing.

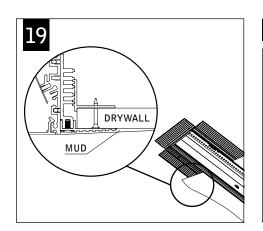



20


POP-DOWN LENS

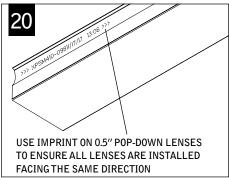

ASYMMETRIC LENS

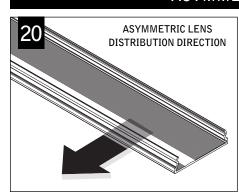

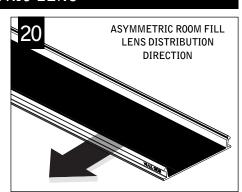

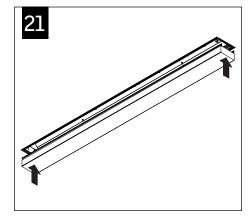


WALL INSTALLATION

1




2"x6" FRAMING REQUIRED ON BOTH SIDES OF OF HOUSING

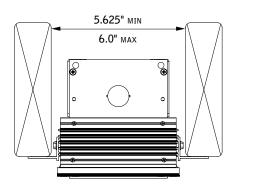

USING THE BACKER FLANGE
PLACEMENT GUIDE FROM
PAGE 1 DETERMINE THE
PROPER PLACEMENT OF THE
BACKER FLANGE FOR YOUR
DRYWALL THICKNESS.


IF BACKER FLANGES WERE PRE-INSTALLED SKIP TO STEP 4

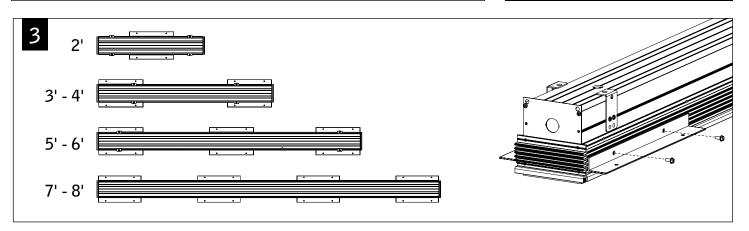



Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).


To prevent electrical shock, disconnect electrical supply before installation or servicing.




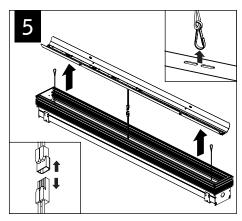


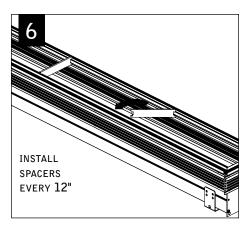


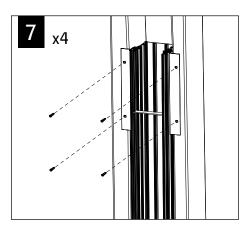


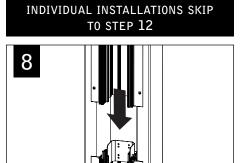


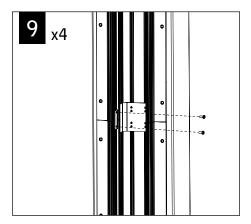


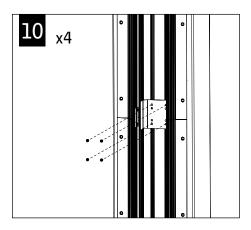

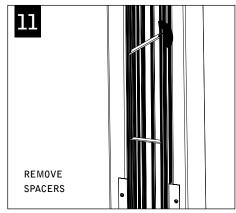

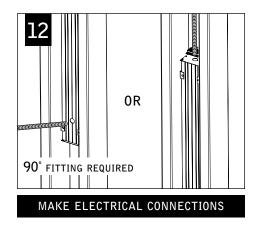

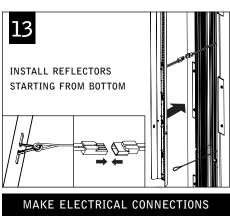


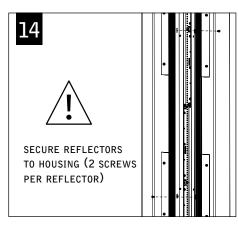





Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).


To prevent electrical shock, disconnect electrical supply before installation or servicing.

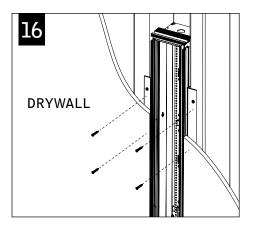

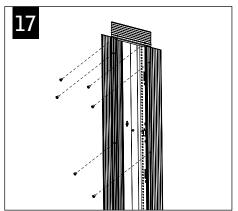


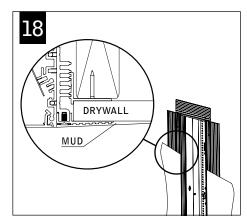


FLUSH LENS

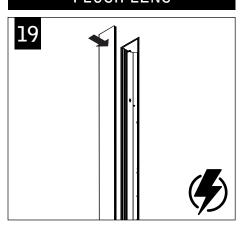



POP-DOWN LENS

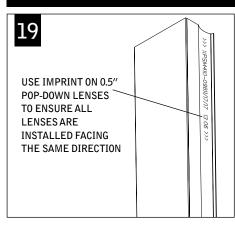

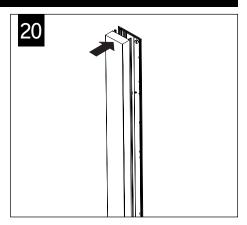

ASYMMETRIC LENS

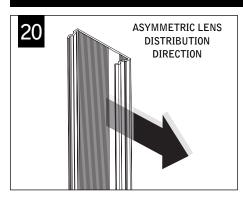

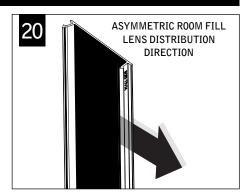


EMERGENCY





SEE BATTERY MANUFACTURER INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT: 13.00'

DRIVER SERVICE

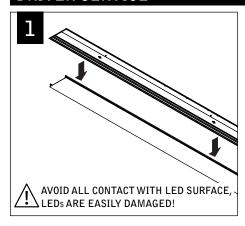

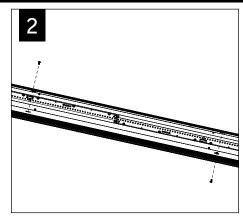

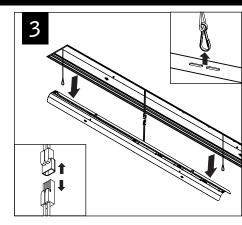

Contractor is responsible for adequately reinforcing walls and/or ceilings to support luminaire weight. Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings. The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.