Seem® 4 LED Perimeter confictions of

FSM4PR-XFF | MUD-IN DRYWALL









BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



POWER OFF



POWER ON

COMPONENT KEY

FOCAL POINT













INCLUDED HARDWARE



Reflector (70008) (6-32 X 5/16 Pan-Head Machine Screw)



Undercut Head Screw)



(72001) (8-32X 3/8" Washer Hex Head Screw)



Housing Spacer (11699)

SHIPPED INSTALLED



Tie Wire Bracket (12547)



Tie-Wire Bracket Screw (72010) (8-18 x 1/4 Self Tapping



Joiner Bracket (11849)




Joiner Bracket (11920)


ADDITIONAL PARTS






BACKER FLANGE PLACEMENT GUIDE

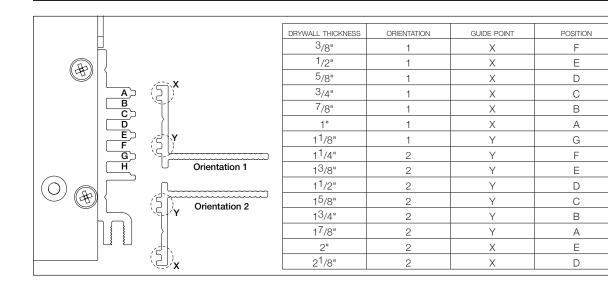

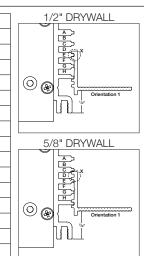

WALL/CEILING PREPARATION

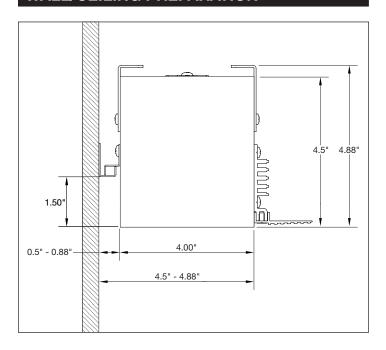






FOCAL POINT RECOMMENDS STARTING WITH CORNER INSTALLATION IF APPLICABLE


BASIC INSTALLATION, STEPS 1-22 ADJUSTABLE HOUSING, PAGE 5 CORNERS, PAGE 6

BASIC INSTALLATION

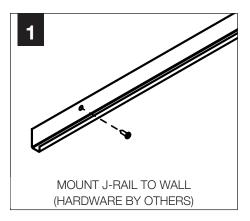

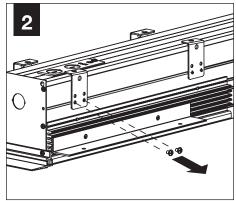


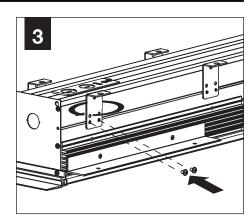





IF BACKER FLANGES WERE PRE-INSTALLED SKIP TO STEP 6


FOR YOUR DRYWALL THICKNESS.

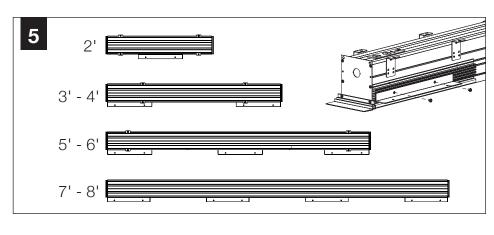


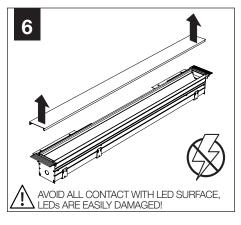


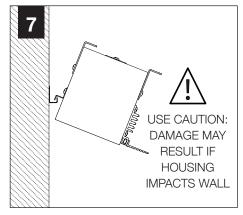





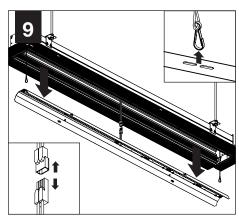


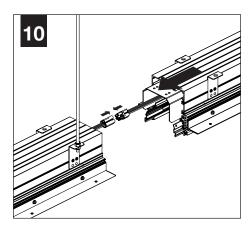

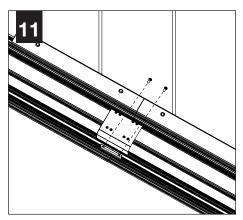


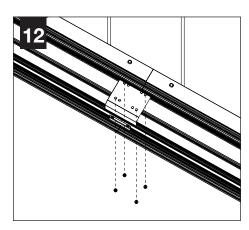


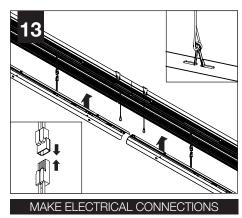


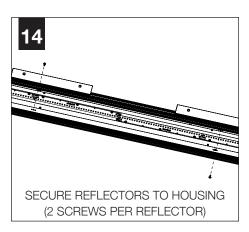



REPEAT STEPS 2 - 14 FOR EACH HOUSING SECTION

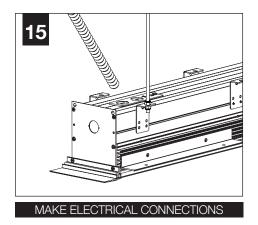


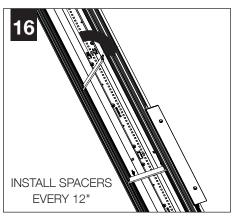


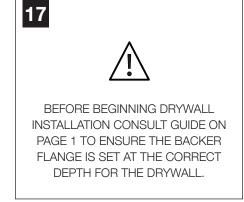


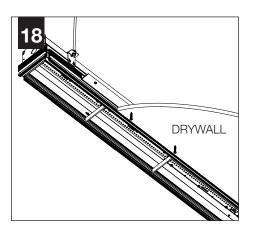

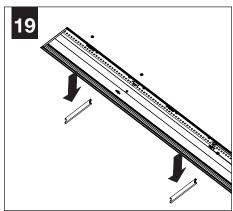

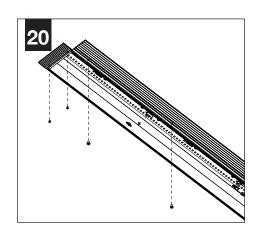

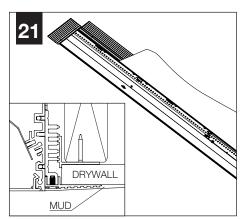

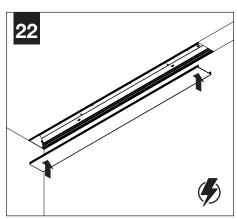



EMERGENCY



SEE BATTERY MANUFACTURER INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT FROM FLOOR TO SURFACE OF LENS:


19.00'


ADJUSTABLE HOUSING





USING THE BACKER FLANGE PLACEMENT GUIDE FROM PAGE 2 DETERMINE THE PROPER PLACE-MENT OF THE BACKER FLANGE FOR YOUR DRYWALL THICKNESS.


IF BACKER FLANGES WERE PRE-INSTALLED SKIP TO STEP 3

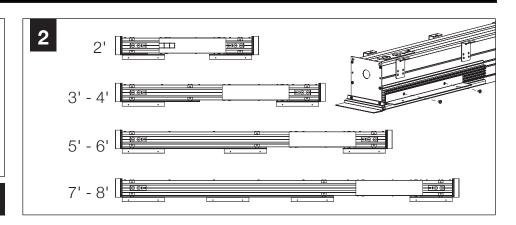


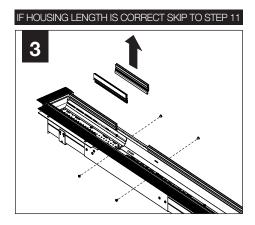


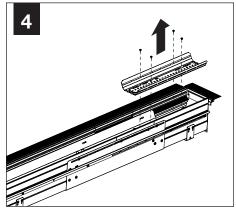


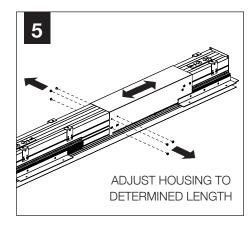


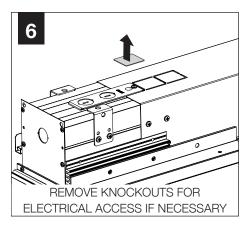

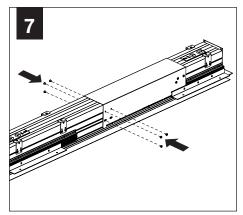

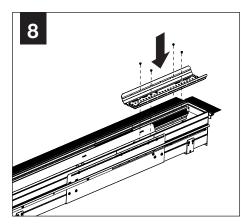


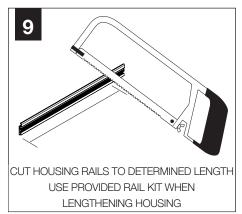


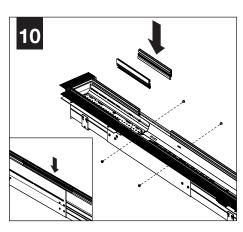






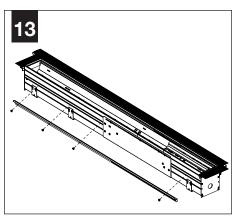


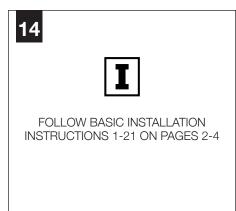





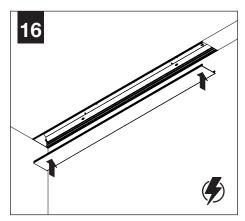



CORNERS

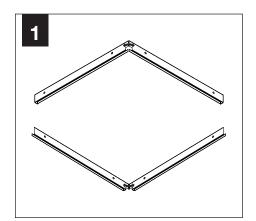


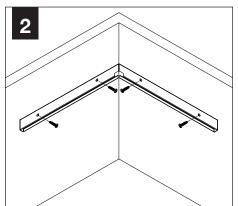


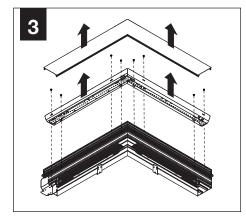


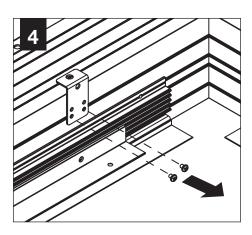


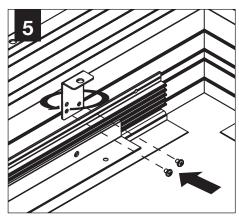

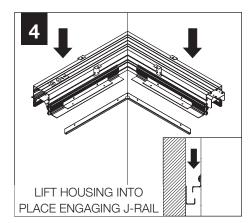


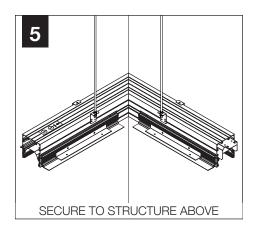


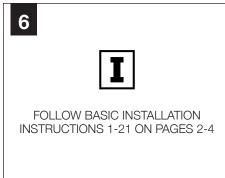


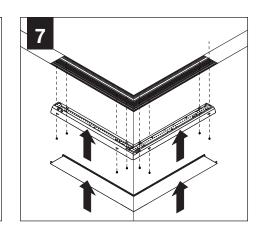

DRIVER SERVICE

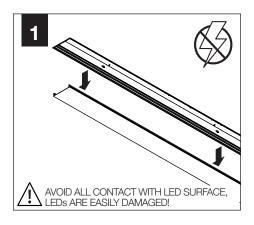


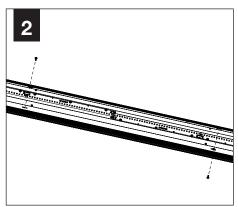


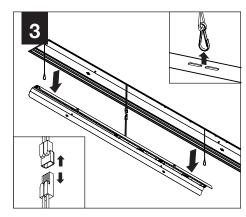






ACUITY nLIGHT

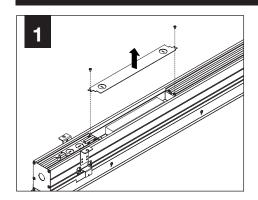

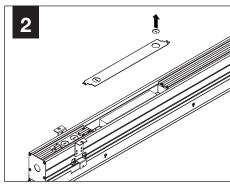

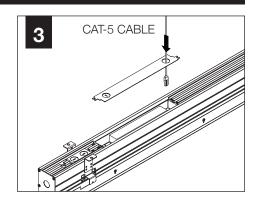

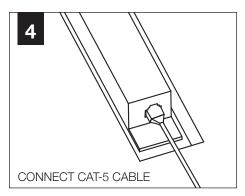

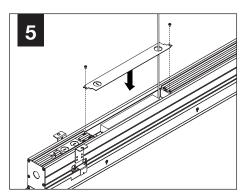

CONNECT CAT-5 CABLE