Seem[®] 6 LED

FSM6L-TF | FSM6L-NF | Trim Flange | No Flange



BEFORE YOU BEGIN

- · Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.





POWER OFF


POWER ON

5.625"

142.9mm

Ш ഹ

6.70" 170.27mm 5.00" 127mm

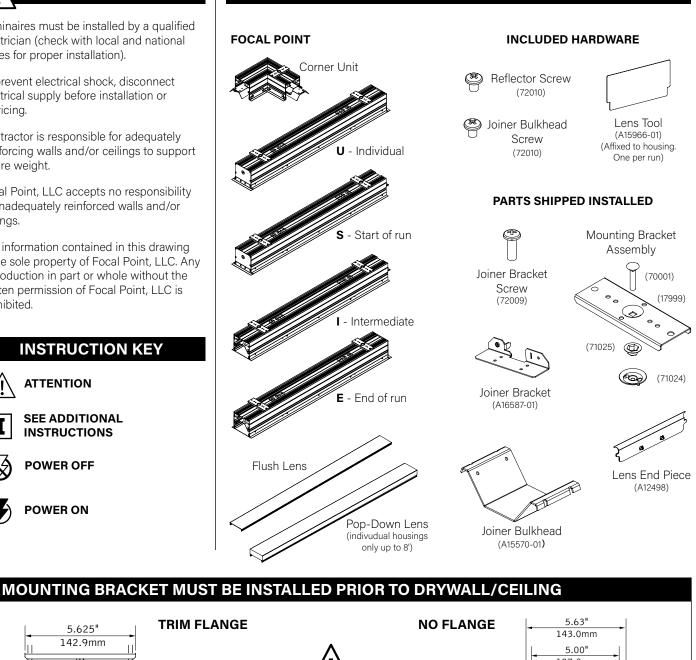


COMPONENT KEY





MOUNTING BRACKET MUST BE SECURED TO STRUCTURE ABOVE.

1/4" - 20 CARRIAGE BOLT MAY **BE SUPPLIED BY OTHERS FOR** GREATER ADJUSTABILITY.

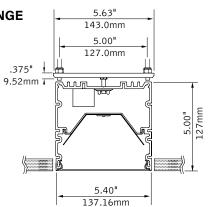

MOUNTING LOCATIONS

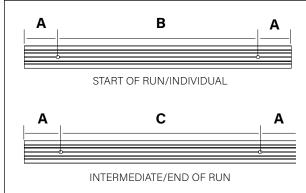


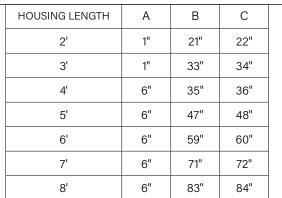


 \triangle

MOUNTING LOCATION CHART IS AN APPROXIMATE GUIDE ONLY.


CEILING CUTOUT - TRIM FLANGE

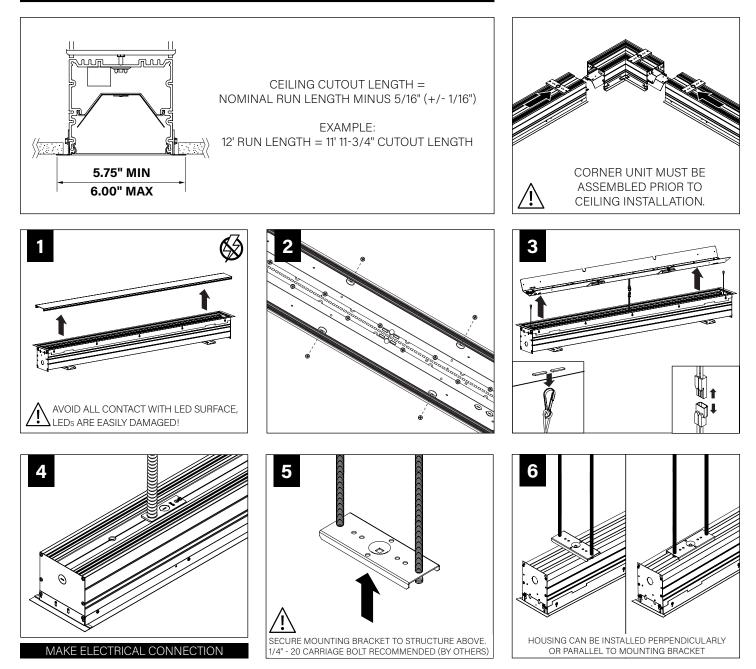

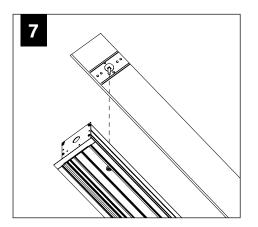



REPEAT STEPS 5-9 UNTIL ALL UNITS ARE IN THE CEILING


> INDIVIDUAL INSTALLATIONS SKIP TO STEP 13

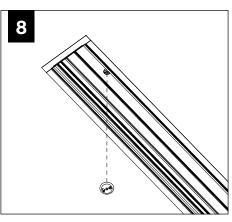



10

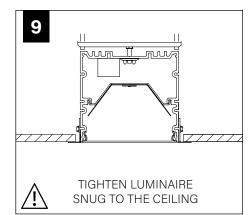


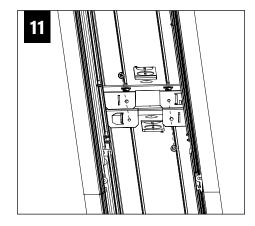


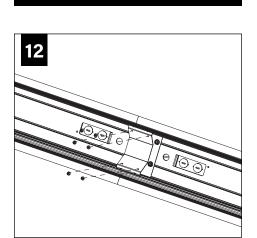

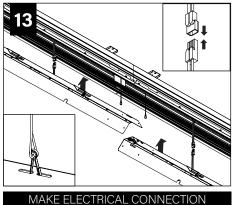

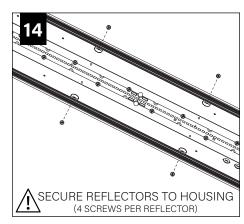

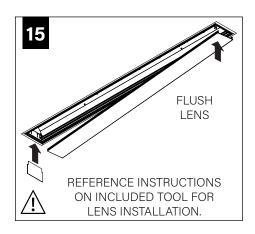

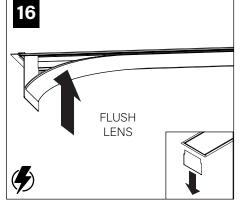



EMERGENCY



SEE BATTERY MANUFACTURER INSTRUCTIONS

EMERGENCY BATTERY MAXIMUM MOUNTING HEIGHT: 18.00' EMERGENCY CIRCUIT MAXIMUM MOUNTING HEIGHT: 21.00'

DRIVER SERVICE

