

Saros Duo™

FSR02E | FSR02R



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS





POWER OFF




POWER ON











COMPONENT KEY

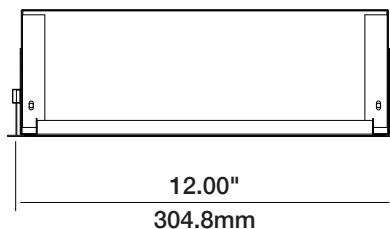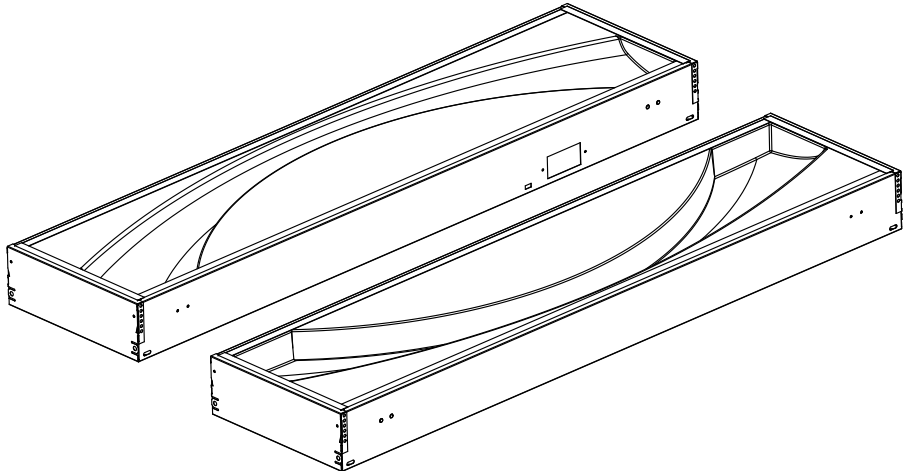

TEE SPACING

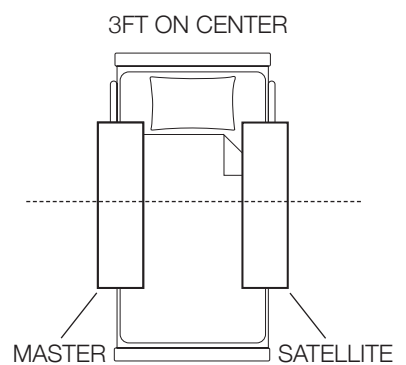


ALIGN LUMINAIRES TO CENTER OF BED

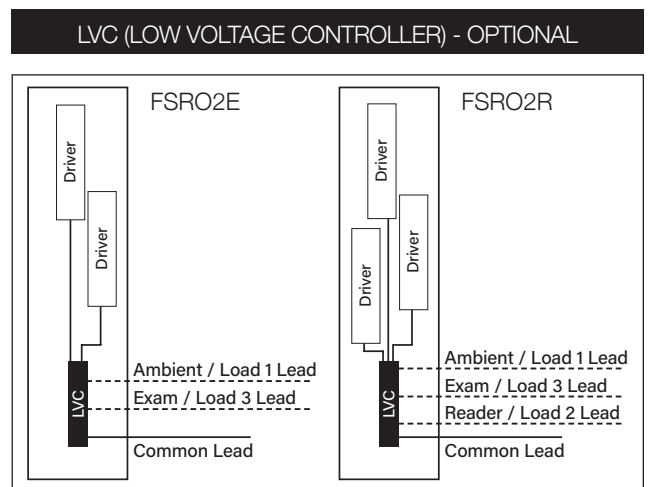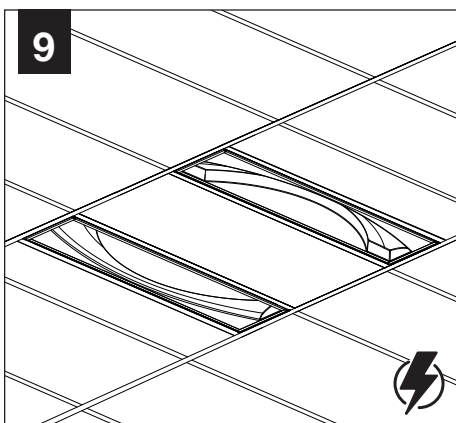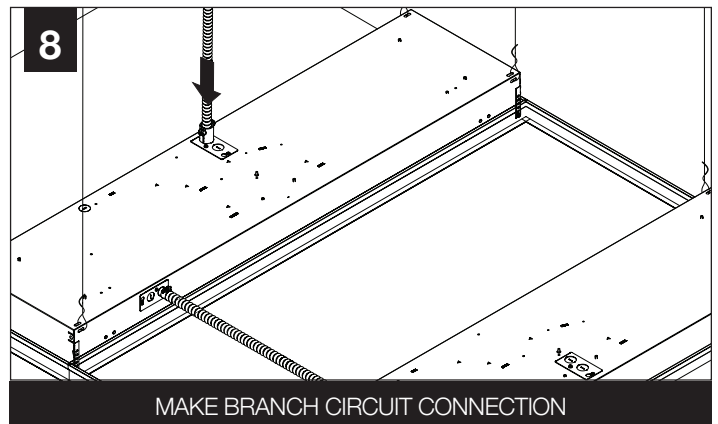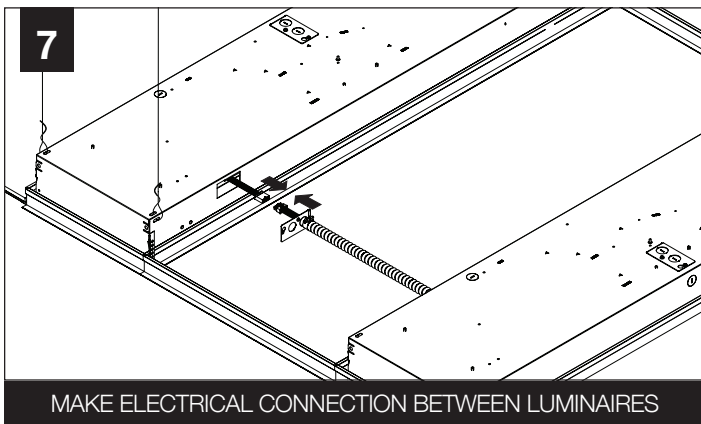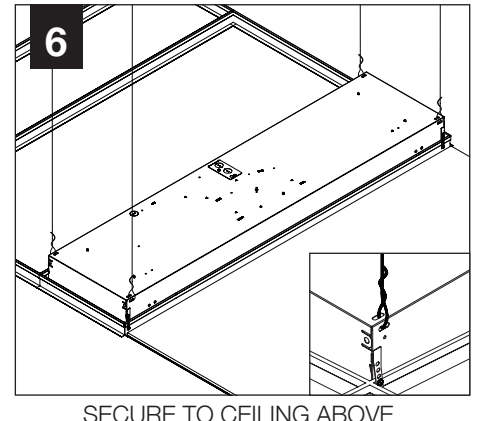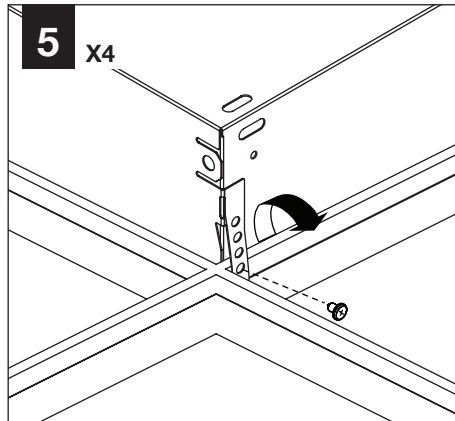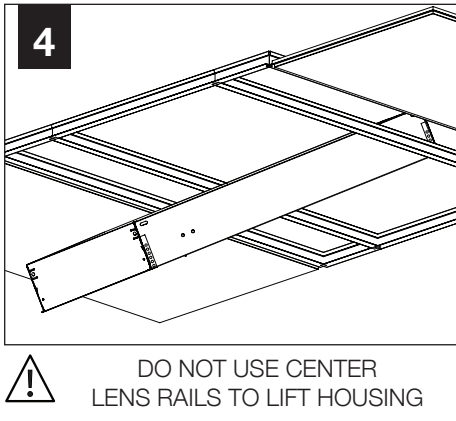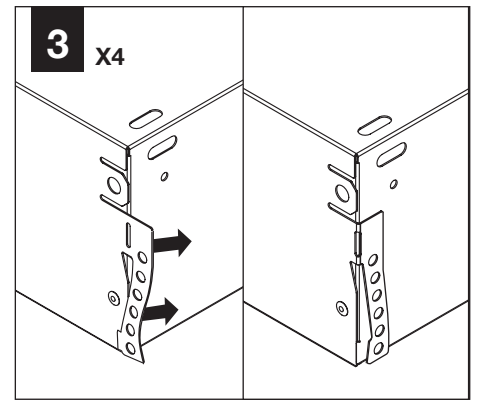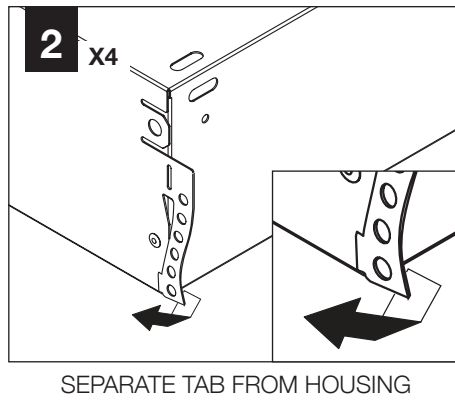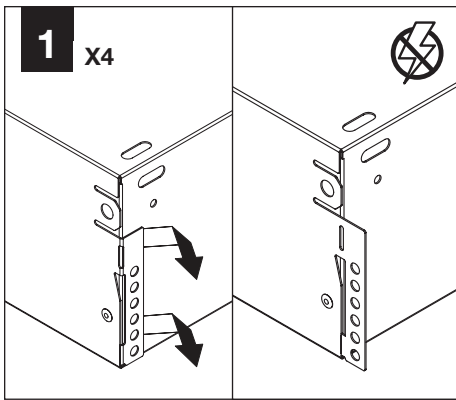


DRYWALL INSTALLATIONS

1 CEILING STUDS MAY NEED TO BE NOTCHED TO ACCOMMODATE ELECTRICAL FEEDS

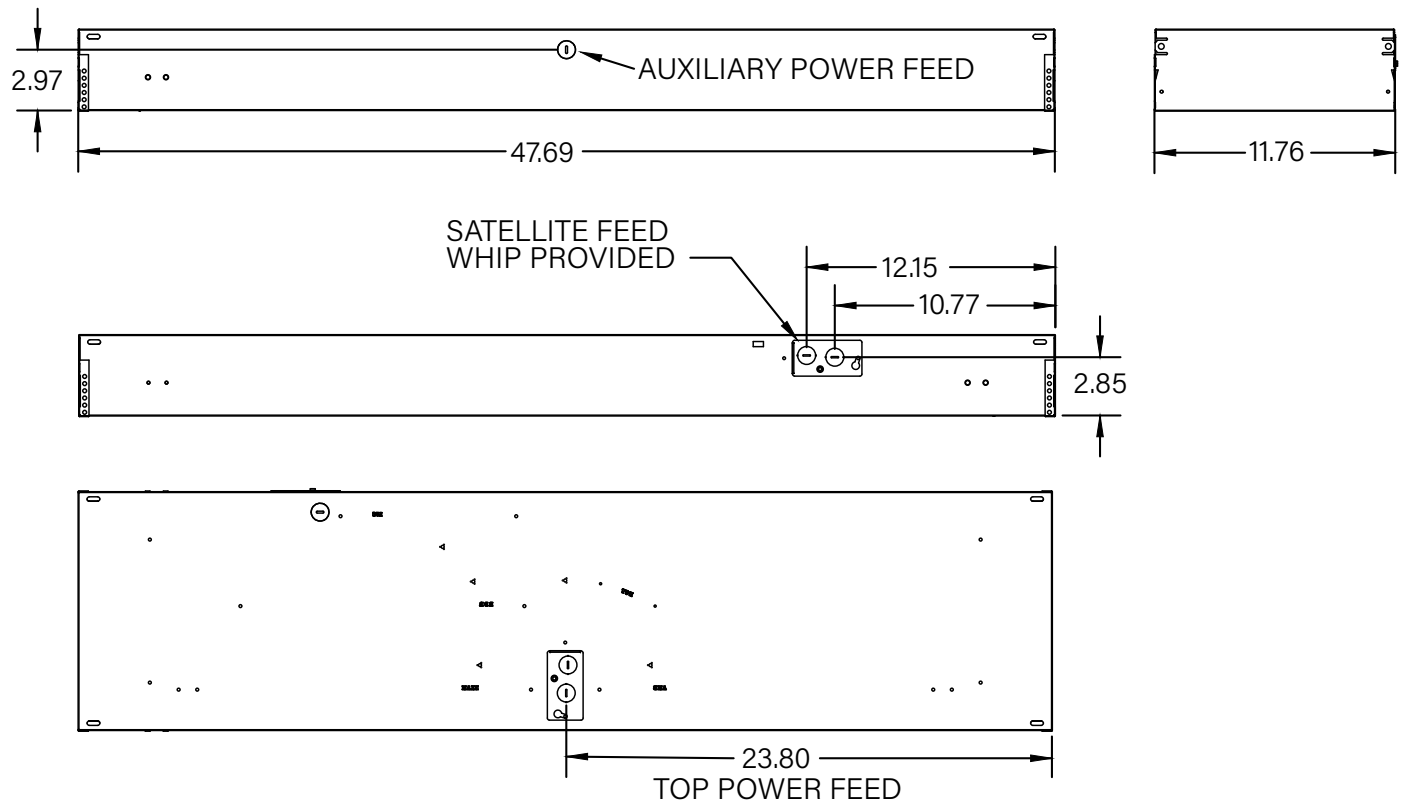

I SEE FOCAL POINT FRAME KIT INSTRUCTION SHEET IS160

2

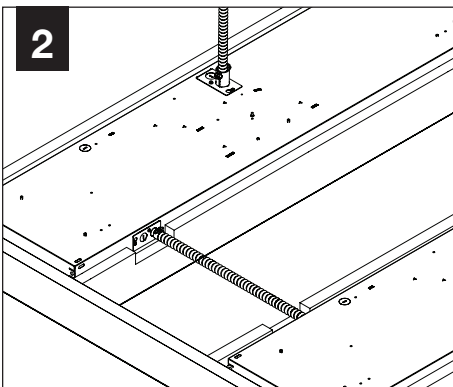

SERVICE

