




**DO NOT POWER LUMINAIRE UNTIL INSTALLATION IS COMPLETE.
SUSPENSION CABLES ARE POWERED. DO NOT ALLOW CABLES TO COME IN
CONTACT WITH CONDUCTIVE MATERIALS.**



**FRAGILE, HANDLE WITH CARE. GLOVES RECOMMENDED.
CLEAN WITH SOFT CLOTH & WATER ONLY.**



FOCAL POINT

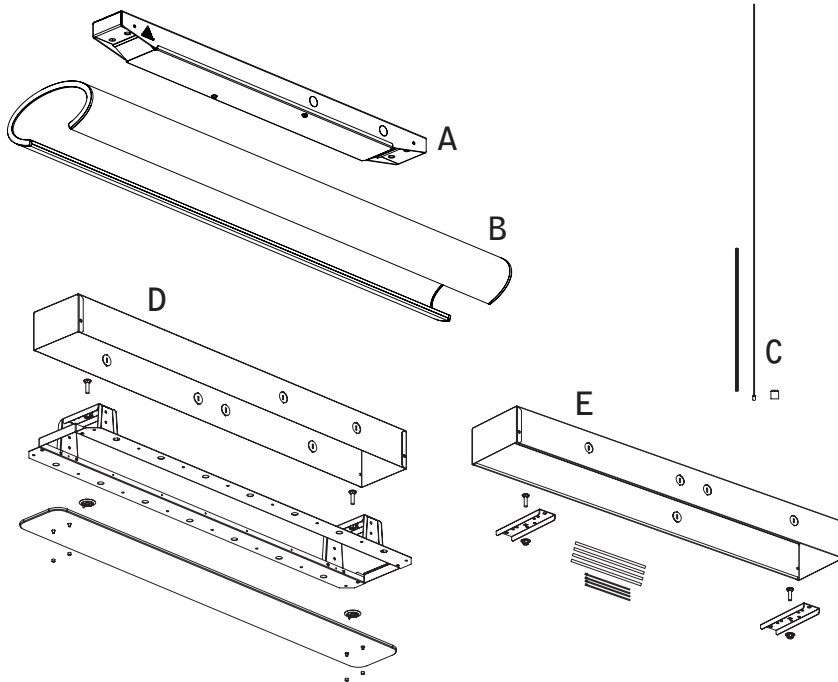

KEY



POWER OFF



POWER ON



ATTENTION

PARTS LIST

A - DRIVER COMPARTMENT

B - THEORY PENDANT



C - SUSPENSION ASSEMBLY (x4)
(CABLE, CABLE INSULATION (INSTALLED) &
GRIPPER CAP)

D - HARD SURFACE MOUNT
(MOUNTING YOKE & COVER, 1/4-20 WINGNUTS,
1/4-20 BOLTS, CANOPY & HARDWARE)

E - ACCESSIBLE CEILING MOUNT
(DRIVER COVER, CABLE SLEEVING, ZIP TIES,
MOUNTING BRACKETS, 1/4-20 WINGNUTS &
1/4-20 BOLTS)

ACCESSIBLE CEILING (G)











1

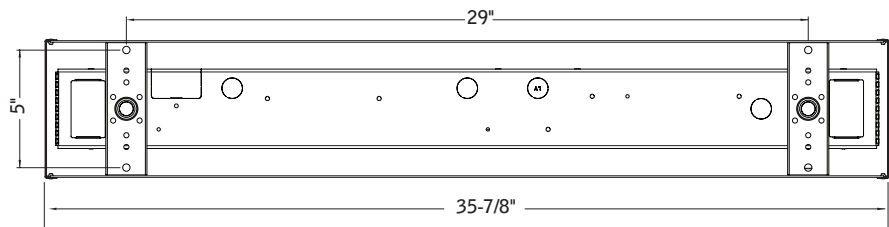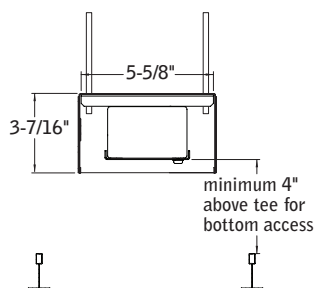

**SECURE DRIVER COMPARTMENT COVER AND MOUNTING BRACKETS TO
STRUCTURE ABOVE. MOUNTING BRACKETS INSTALL INSIDE COVER.
MOUNTING HARDWARE BY OTHERS**








Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

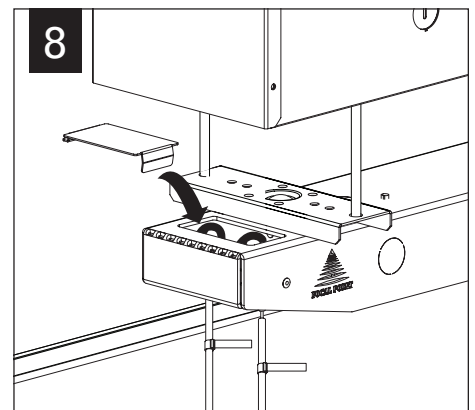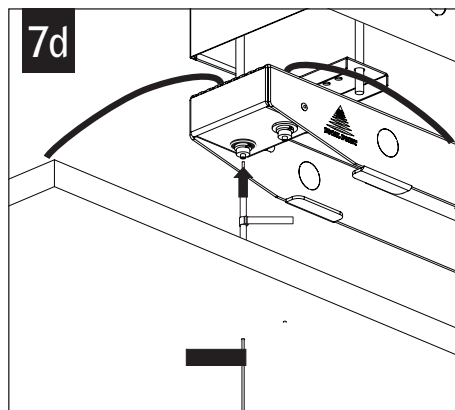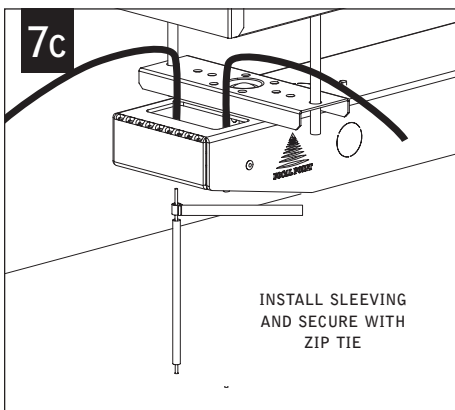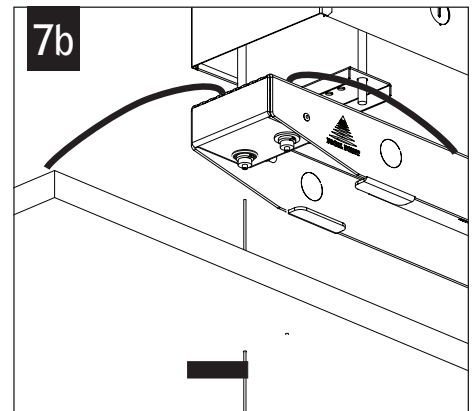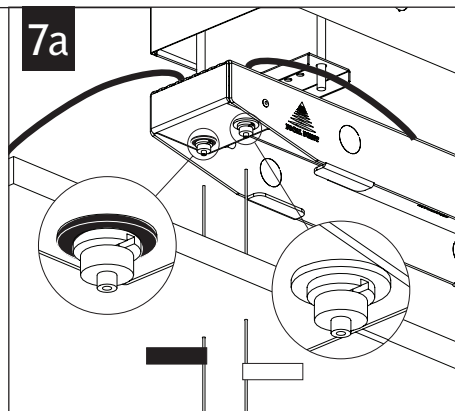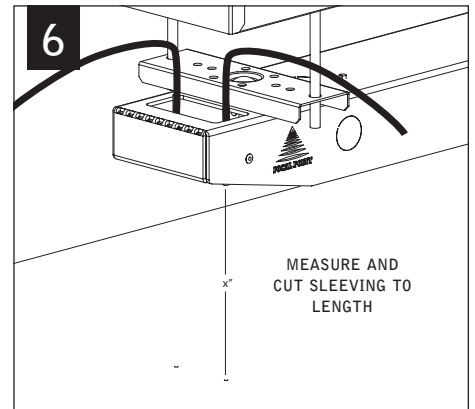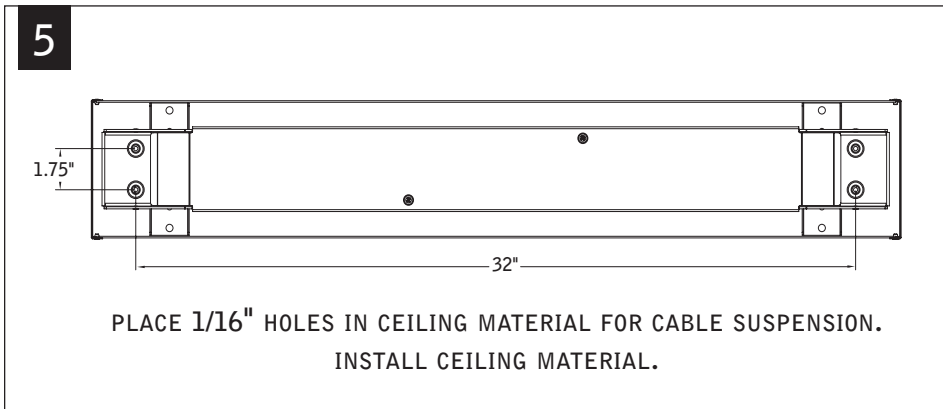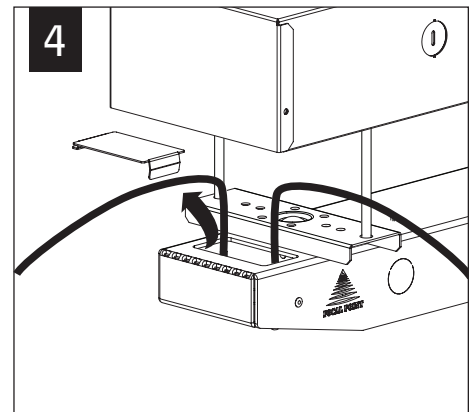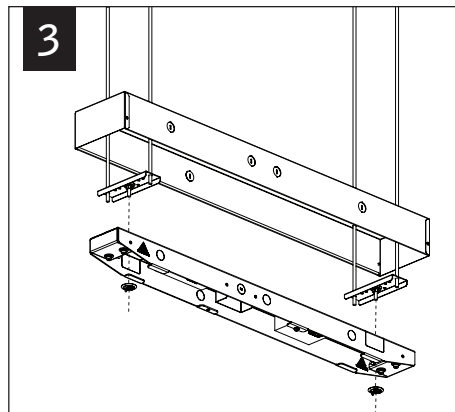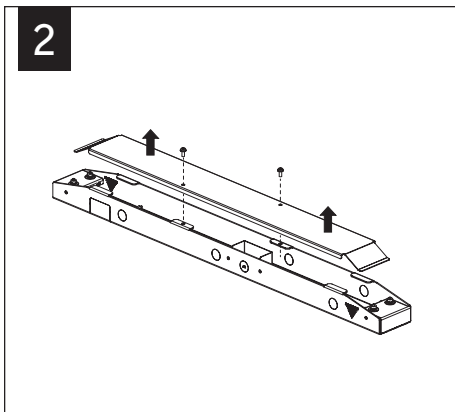


REPEAT STEPS 7A-7D FOR ALL SUSPENSION CABLES

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

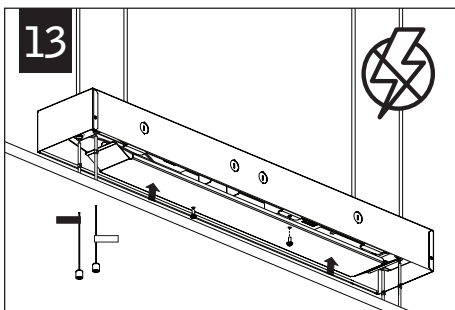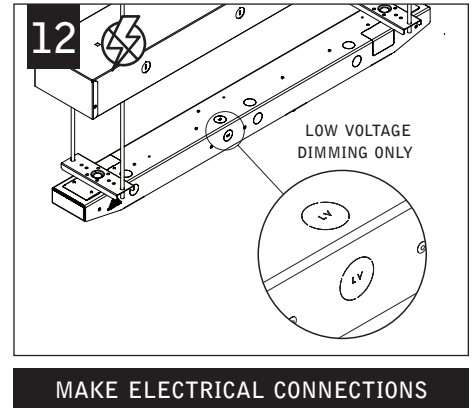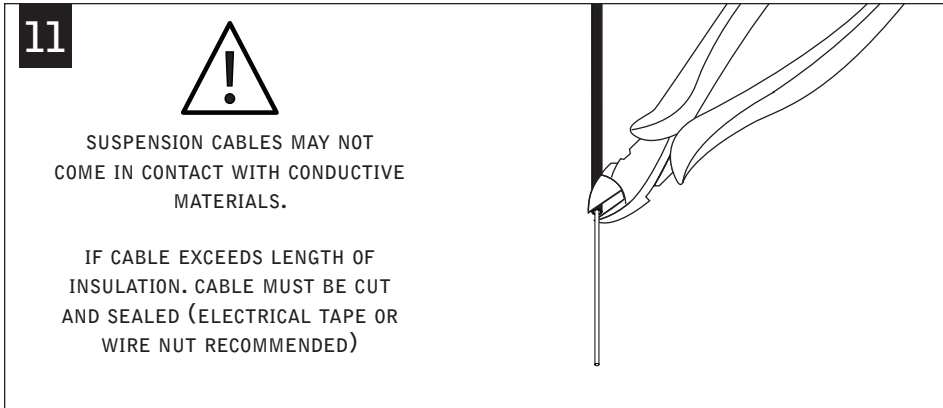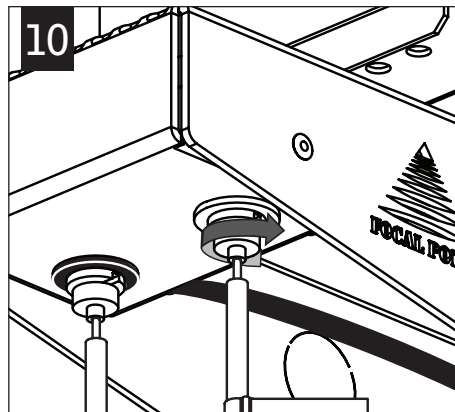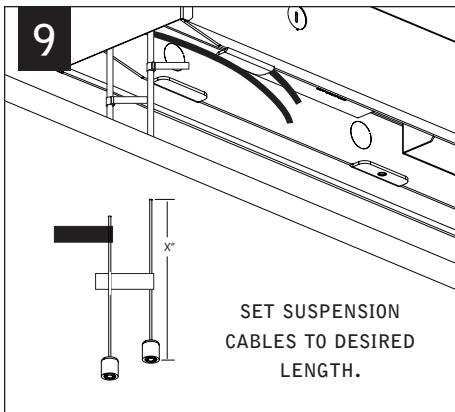












**PENDANT INSTALLATION
SEE PAGE 5**

HARD SURFACE (HS)

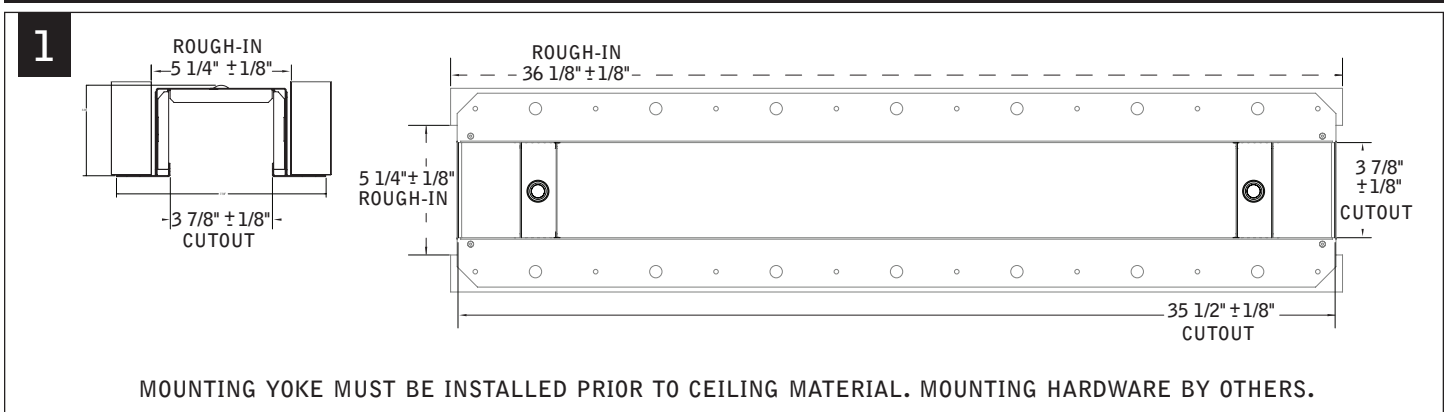


MOUNTING YOKE MUST BE INSTALLED PRIOR TO CEILING MATERIAL. MOUNTING HARDWARE BY OTHERS.

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

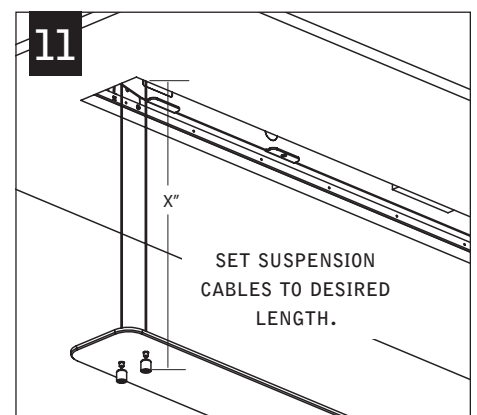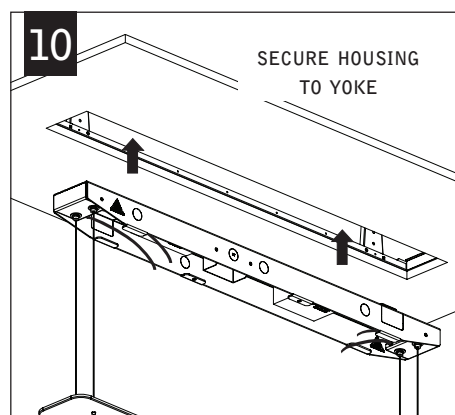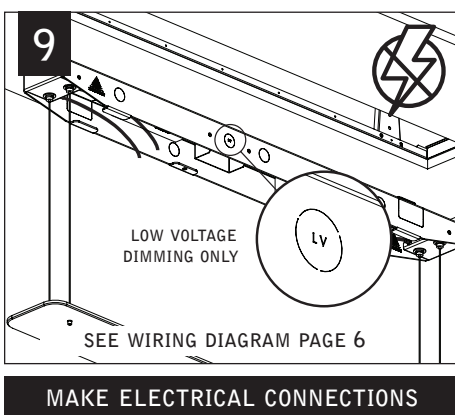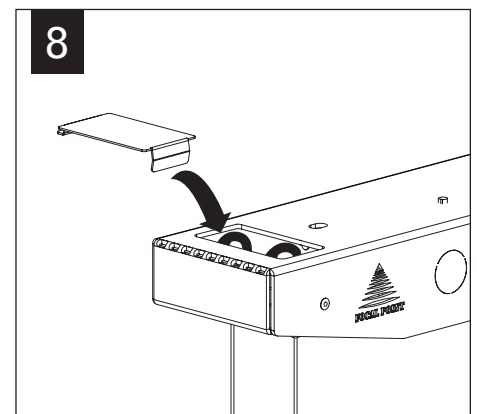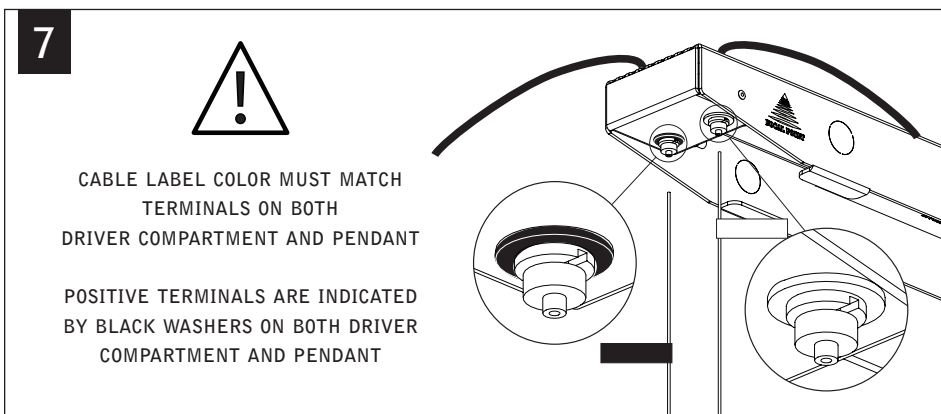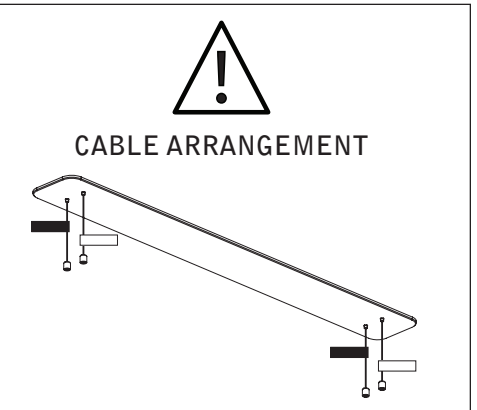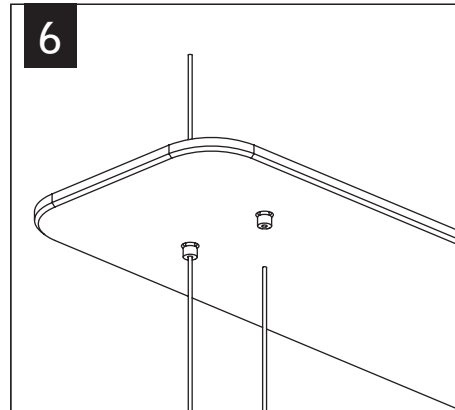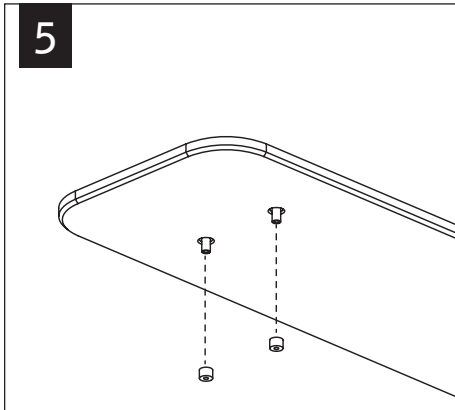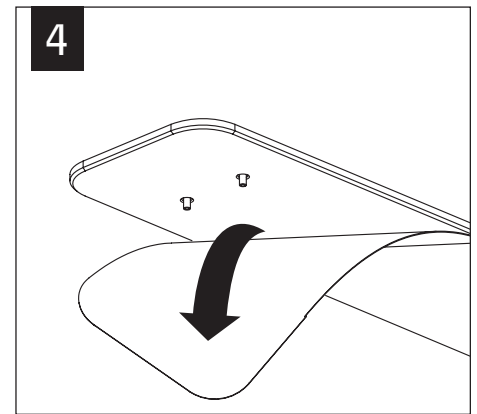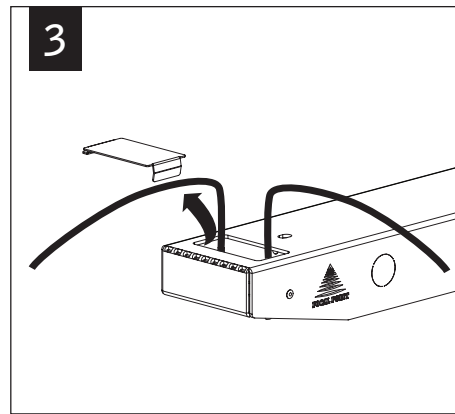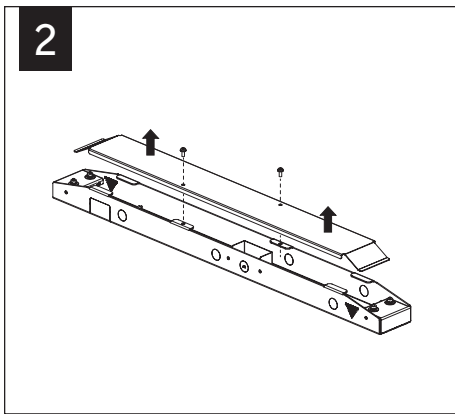



Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

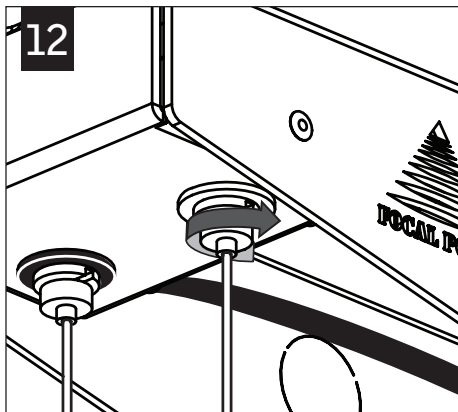

13

SUSPENSION CABLES MAY NOT COME IN CONTACT WITH CONDUCTIVE MATERIALS.

IF CABLE EXCEEDS LENGTH OF INSULATION. CABLE MUST BE CUT AND SEALED (ELECTRICAL TAPE OR WIRE NUT RECOMMENDED)

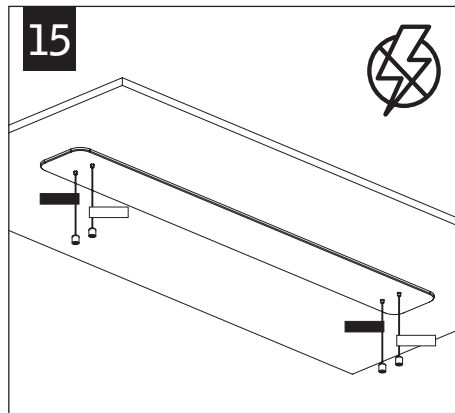
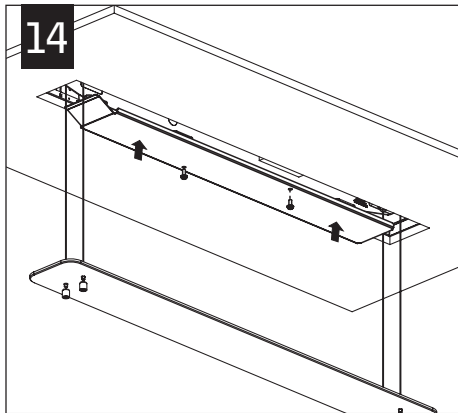


PENDANT INSTALLATION

FRAGILE, HANDLE WITH CARE. DO NOT TOUCH INSIDE OF PENDANT.

1

CABLE LABEL COLOR MUST MATCH TERMINAL COLOR ON PENDANT

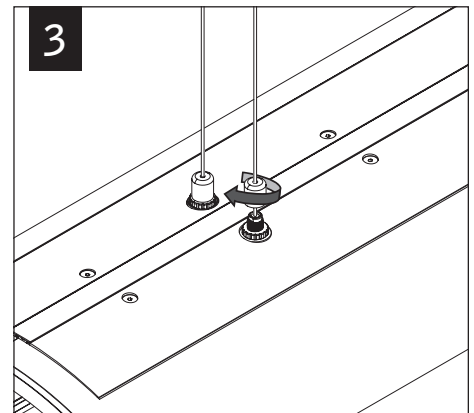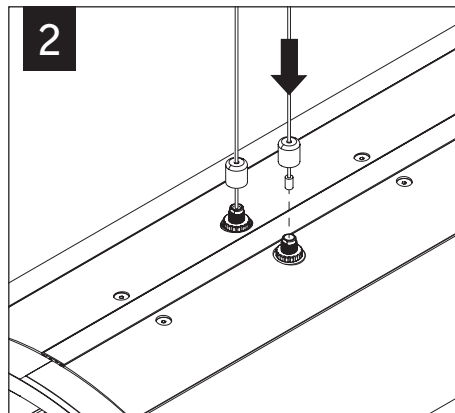

4

1/16 ALLEN WRENCH (BY OTHERS)

5

REMOVE LABELS FROM CABLES

CLEANING & CARE OF PENDANT




CLEAN WITH SOFT CLOTH & WATER ONLY!

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
To prevent electrical shock, disconnect electrical supply before installation or servicing.

DRIVER SERVICE



POWER OFF & REMOVE PENDANT PRIOR TO SERVICING.

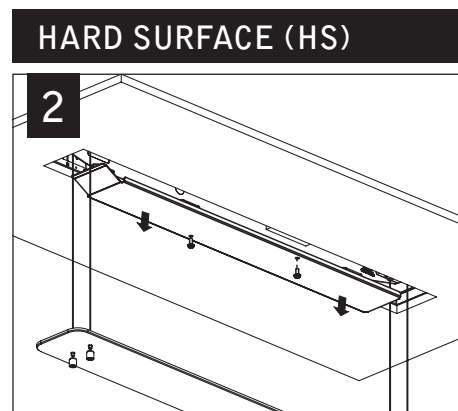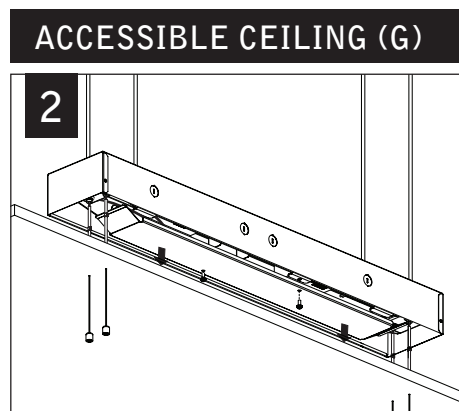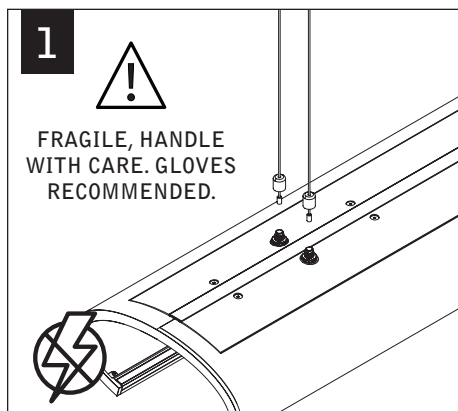

FOR PENDANT SERVICE CONSULT FACTORY.